

Material	Description	Brand
AP8104920	""Aprilia"" key with transpo. "	Piaggio spare parts (POP)
1E000853	"APE CLASSIC" STICKER	Piaggio spare parts (POP)
6380	"BALL 5/16""(824051603)"	Piaggio spare parts (POP)
14246	"BALL 5/32 "" (824053209)"	Piaggio spare parts (POP)
920040	"Ball Bearing 6001/C3(520AS00902) "	Piaggio spare parts (POP)
B003336	"C" CHANNEL ASSY ,WINDOW SLIDING GLASS	Piaggio spare parts (POP)
SST94203	"C"CLAMP FOR SECTOR & CONN.PLATE	Piaggio spare parts (POP)
L1175071	"CIRCLIP TYPE ""BENZING""	Piaggio spare parts (POP)
L1175070	"CIRCLIP TYPE ""BENZING""	Piaggio spare parts (POP)
L1175069	"CIRCLIP TYPE ""BENZING""	Piaggio spare parts (POP)
920039	"Circlip(520CC05102) "	Piaggio spare parts (POP)
920034	"Compression spring(520MD07102 "	Piaggio spare parts (POP)
604704	"FRONT LEFT PIPE FOR FRAME ""COVERING""	Piaggio spare parts (POP)
889971	"OR" GASKET	Piaggio spare parts (POP)
B011118	"OR" GASKET	Piaggio spare parts (POP)
888591	"OR" GASKET	Piaggio spare parts (POP)
888680	"OR" GASKET	Piaggio spare parts (POP)
L6502175	"PISTON SET STD ""C"" LDW 422 (BSII)"	Piaggio spare parts (POP)
L9501927	"PISTON""E":"	Piaggio spare parts (POP)
632568	"PLATE "" APE AUTO D 3 S""	Piaggio spare parts (POP)
632567	"PLATE "" APE CARGO 610 ""	Piaggio spare parts (POP)
643548	"PLATE ""1.3 TONNER""(601)"	Piaggio spare parts (POP)
920035	"Plate clutch(520JT05102) "	Piaggio spare parts (POP)
632949	"PU STCKER ""APE CARGO D 810 - LEAP""	Piaggio spare parts (POP)
632954	"PU STICKER ""DIESEL - LEAP""	Piaggio spare parts (POP)
920041	"Push Rod "	Piaggio spare parts (POP)
137235	"STEERING PIN ""APE 501-400""	Piaggio spare parts (POP)
660418	"T CONNECTOR ""QI 870""	Piaggio spare parts (POP)
662130	"WHEEL RIM ASSLY 13""	Piaggio spare parts (POP)
643099	(*) A.C.GENERATOR ASSY	Piaggio spare parts (POP)
614050	(*) BKT S/A,GEAR CTR PAWL	Piaggio spare parts (POP)
120302013	(*) BUSH	Piaggio spare parts (POP)
614113	(*) CABLE ASSY, SELE	Piaggio spare parts (POP)
613963	(*) CAP ASSY, FUEL T	Piaggio spare parts (POP)
940126	(*) CAP ASSY, FUEL T WITH KEY	Piaggio spare parts (POP)
613986	(*) COVER STEER.COLUMN LWR	Piaggio spare parts (POP)
613995	(*) DOOR, RESERVOIR	Piaggio spare parts (POP)
644839	(*) EARTH CABLE (VI-SON)	Piaggio spare parts (POP)
120271018	(*) FIBER WASHER DRAIN PLUG	Piaggio spare parts (POP)
B014997	(*) FIXED PAD	Piaggio spare parts (POP)
613650	(*) GLASS, FR DOOR,L	Piaggio spare parts (POP)
613648	(*) GLASS, FR DOOR,R	Piaggio spare parts (POP)
614004	(*) HEADREST ASSY,FR	Piaggio spare parts (POP)
811081025	(*) HEXAGONAL HEAD SCREW M8X10	Piaggio spare parts (POP)
614127	(*) HOSE FUEL DELIVERY	Piaggio spare parts (POP)
614128	(*) HOSE, FUEL, BACKFLOW	Piaggio spare parts (POP)

613848	(*) KEY RING	Piaggio spare parts (POP)
120212012	(*) NEEDLE BUSH	Piaggio spare parts (POP)
884222808	(*) NEEDLE BUSH 22X28X12	Piaggio spare parts (POP)
613993	(*) PANEL, INSTR.CLU	Piaggio spare parts (POP)
645137	(*) PANEL, INSTRUMENT	Piaggio spare parts (POP)
613988	(*) PANEL, INSTRUMENT	Piaggio spare parts (POP)
165121014	(*) PIN	Piaggio spare parts (POP)
127290013	(*) PLUNGER SHAFT ASSY	Piaggio spare parts (POP)
613319	(*) RESERVOIR A,MAST	Piaggio spare parts (POP)
614002	(*) SEAT ASSY, FR RH	Piaggio spare parts (POP)
613936	(*) SHELL ASSY, BODY	Piaggio spare parts (POP)
B002490WR	(*) SHELL ASSY, BODY 482(WITH DOOR) WR	Piaggio spare parts (POP)
822031942	(*) SPRING PIN 3 X 19	Piaggio spare parts (POP)
B017000	(*) TCCIC SCREW M6X12	Piaggio spare parts (POP)
B015019	(*) TIMING CROWN	Piaggio spare parts (POP)
613979	(*) WIRE ENGINE	Piaggio spare parts (POP)
613980	(*) WIRE ENGINE N2	Piaggio spare parts (POP)
613959ED	(*)C/MEMBER S/A,ENG. RR- CED	Piaggio spare parts (POP)
614096	(*)CABLE A,CLUTCH RELEASE	Piaggio spare parts (POP)
613845	(*)KEY, MASTER	Piaggio spare parts (POP)
615000	(*)METER ASSY,COMBINATION	Piaggio spare parts (POP)
614007	(*)PANEL ,FR DOOR TR	Piaggio spare parts (POP)
614231	(0) BEAM SPARE TYRE	Piaggio spare parts (POP)
614231ED	(0) BEAM SPARE TYRE- (CED)	Piaggio spare parts (POP)
614228	(0) CROSSM.S/A FUEL TANK FR	Piaggio spare parts (POP)
614228ED	(0) CROSSM.S/A FUEL TANK FR- (CED)	Piaggio spare parts (POP)
827000849	(12540) MULTI TOOTH LOCK WASHER M8	Piaggio spare parts (POP)
809000445	(16404) SPRING WASHER M4	Piaggio spare parts (POP)
120309011	(17702)SPRING PIN-R.C. LEVER	Piaggio spare parts (POP)
811051824	(567741) HEX HEAD SCREW M5 X 18	Piaggio spare parts (POP)
CM293902	(D) ENG. 230 4S/3V BSIV APÉ PAX CNG	Piaggio spare parts (POP)
B011810	(D) ENG.1000 BSIII BNA PORTER INDIA DIES	Piaggio spare parts (POP)
CM168803	(D) ENG.200 4S/3V BSIII APÉ PAX CNG	Piaggio spare parts (POP)
CM168806	(D) ENG.200 4S/3V BSIII APÉ PAX EXP PETR	Piaggio spare parts (POP)
CM168801	(D) ENG.200 4S/3V BSIII APÉ PAX INDIA PE	Piaggio spare parts (POP)
CM168802	(D) ENG.200 4S/3V BSIII APÉ PAX LPG	Piaggio spare parts (POP)
CM168812	(D)ENG.200 4S/3V BSIII APÉ PAX CNG MY'16	Piaggio spare parts (POP)
CM168811	(D)ENG.200 4S/3V BSIII APÉ PAX LPG MY'16	Piaggio spare parts (POP)
CM168810	(D)ENG.200 4S/3V BSIII APÉ PAX PET MY'16	Piaggio spare parts (POP)
CM168815	(D)ENG.200 4S/3V E2 APÉ PAX LAM LPG MY16	Piaggio spare parts (POP)
CM168814	(D)ENG.200 4S/3V E2 APÉ PAXLAMPETROLMY16	Piaggio spare parts (POP)
CM168805	(D)ENG.200 4S3V BSIII APÉ PAX LAM PETROL	Piaggio spare parts (POP)
1A009800	(D)GEARBOX ASSEMBLY (PORTER 1000)	Piaggio spare parts (POP)
1A009700	(D)GEARBOX ASSEMBLY (PORTER 700)	Piaggio spare parts (POP)
567459	(L) Type Spanner A/F 19	Piaggio spare parts (POP)
614116	*) SWITCH A, TURN S	Piaggio spare parts (POP)
LG1960028	*BREATHING DEVICE BUSH LGA280	Piaggio spare parts (POP)

LG6502221	*PISTON D.74 LGA280 AUTOMO.	Piaggio spare parts (POP)
KD1901030	*UNION BOLT M 10	Piaggio spare parts (POP)
950300404	.HREAD LOCKER	Piaggio spare parts (POP)
ESP650DFP001	.IP CAMSHAFT ASSEMBLY-IMRLS	Piaggio spare parts (POP)
L9346062	\TUBE RETURN INJECT PUMP	Piaggio spare parts (POP)
932221	`O' Ring(R-8106-420)Paxx200	Piaggio spare parts (POP)
929929	`O'Ring- K-0102-02-370	Piaggio spare parts (POP)
929946	`O'ring-K-0301-12-020	Piaggio spare parts (POP)
929947	`O'Ring-K-0301-12-040	Piaggio spare parts (POP)
929948	`O'ring-K-0301-12-060	Piaggio spare parts (POP)
929949	`O'ring-K-0301-12-070	Piaggio spare parts (POP)
920006	`O'Ring-R-8105-610	Piaggio spare parts (POP)
E500568043	`PRING	Piaggio spare parts (POP)
ESP650DFP014	`Y' CONNECTOR	Piaggio spare parts (POP)
E999120026	"O' ring	Piaggio spare parts (POP)
932301	"O" Ring K-0102-19-050	Piaggio spare parts (POP)
03A160040	03A160040MAIN CASING ASSEMBLY	Piaggio spare parts (POP)
B075844	1 WAY PIPE CLAMP	Piaggio spare parts (POP)
6A000754	10 Ltr PLASTIC FUEL TANK	Piaggio spare parts (POP)
B074034	10 LTR. PLASTIC FUEL TANK ASSLY	Piaggio spare parts (POP)
6D000479	10A MINIVAL FUSE RED	Piaggio spare parts (POP)
582690	12V-150A relay switch	Piaggio spare parts (POP)
652581R	155/80 R 13 TUBE	Piaggio spare parts (POP)
652580	155/80 R13 LT TYRE	Piaggio spare parts (POP)
B073092R	155/80 R13 LT TYRE	Piaggio spare parts (POP)
652580R	155/80 R13 LT TYRE	Piaggio spare parts (POP)
6D000481	15A MINIVAL FUSE BLUE	Piaggio spare parts (POP)
LG1157366	180W 1-PHASE INEL ALTERNATOR	Piaggio spare parts (POP)
LG8565119	180W 1-PHASE INEL ALTERNATOR	Piaggio spare parts (POP)
6D000486	1A BLADE TYPE FUSE	Piaggio spare parts (POP)
1A003603R	1st GEAR	Piaggio spare parts (POP)
L8026378	1ST PISTON RING	Piaggio spare parts (POP)
1A017329	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
B042559	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013331	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
B041213	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000590	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
889213	1st SPEED DRIVEN GEAR	Piaggio spare parts (POP)
8892144	1st-2nd SPEED SYNCHRONIZER GROUP	Piaggio spare parts (POP)
889196	1st-2nd SPEED SYNCHRONIZER RING	Piaggio spare parts (POP)
6A000811	2 STAGE CNG REGULATOR	Piaggio spare parts (POP)
B076434	2 STAGE CNG REGULATOR	Piaggio spare parts (POP)
932308	2 Stage CNG Regulator-(Paxx 200)	Piaggio spare parts (POP)
6A000802	2 STAGE LPG REGULATOR	Piaggio spare parts (POP)
932309	2 Stage LPG Regulator-(Paxx 200)	Piaggio spare parts (POP)
6A000810	2 STAGE LPG REGULATOR	Piaggio spare parts (POP)
643874	2 STAGE LPG REGULATOR(VANAZ PT NO R-8105	Piaggio spare parts (POP)

B077331	2 STAGE REGULATOR LPG	Piaggio spare parts (POP)
6D000483	20A MICRO RELAY	Piaggio spare parts (POP)
6D000478	20A MINIVAL FUSE YELLOW	Piaggio spare parts (POP)
6D000485	20A POWER RELAY	Piaggio spare parts (POP)
6A001215	20L CNG CYLINDER	Piaggio spare parts (POP)
1A003604R	2nd GEAR	Piaggio spare parts (POP)
940041	2ND LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
L8026379	2ND PISTON RING	Piaggio spare parts (POP)
1A017330	2nd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013332	2nd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
B041214	2nd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000461	2nd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013303	2nd SPEED DRIVING GEAR	Piaggio spare parts (POP)
L4990247	2ND SPEED GEAR	Piaggio spare parts (POP)
889218	2ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
920074	2-stage LPG Regulator Ape City LPG (R-81	Piaggio spare parts (POP)
920075	2-stage LPG Regulator BSIII LPG (R-8105-	Piaggio spare parts (POP)
SST94041	3 Bay Set	Piaggio spare parts (POP)
643846	3 STAGE REGULATOR(VANAZ PT NO R-8104)	Piaggio spare parts (POP)
587830	3 WAY CONNECTOR, BRAKE TUBE	Piaggio spare parts (POP)
888134	3.35DOWEL	Piaggio spare parts (POP)
6D000499	30A MAXIVAL FUSE GREEN	Piaggio spare parts (POP)
6D000501	30A MICRO POWER RELAY	Piaggio spare parts (POP)
6D000482	30A MICRO RELAY	Piaggio spare parts (POP)
6D000484	30A MINIVAL INLINE FUSE GREEN	Piaggio spare parts (POP)
496404	30A reed fuse	Piaggio spare parts (POP)
6B002790	36 MONTH SUPER WARRANTY STICKER	Piaggio spare parts (POP)
940042	3ND LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
1A003605R	3rd GEAR	Piaggio spare parts (POP)
B042561	3rd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013333	3rd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
B041215	3rd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000684	3RD SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000715	3rd SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013304	3rd SPEED DRIVING GEAR	Piaggio spare parts (POP)
889195	3rd-4th-5th-R SPEED SYNCHRONIZER RING	Piaggio spare parts (POP)
889220	3ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
8892214	3st-4nd SPEED SYNCHRONIZER GROUP	Piaggio spare parts (POP)
SST94127	3W APECITY P-600 Torque Chart Power Pack	Piaggio spare parts (POP)
B074170	3W BLINKER ASSLY UPGRADE (LH)	Piaggio spare parts (POP)
B074171	3W BLINKER ASSLY UPGRADE (RH)	Piaggio spare parts (POP)
B002524SY	3W LD CHASSIS (659788) - SAHARA YELLOW	Piaggio spare parts (POP)
B002524BW	3W LD CHASSIS (659788) - BIANCO WHITE	Piaggio spare parts (POP)
B002524BG	3W LD CHASSIS (659788) - BRILLIANT GREEN	Piaggio spare parts (POP)
B002524CB	3W LD CHASSIS (659788) - CHARMING BLUE	Piaggio spare parts (POP)
B002524CO	3W LD CHASSIS (659788) - CRIMSON ORANGE	Piaggio spare parts (POP)
B002524GY	3W LD CHASSIS (659788) - GOLDEN YELLOW	Piaggio spare parts (POP)

B002524PM	3W LD CHASSIS (659788) - PASSION MAROON	Piaggio spare parts (POP)
B002524WR	3W LD CHASSIS (659788)-WEST RED	Piaggio spare parts (POP)
B002520WR	3W PICKUP CHASSIS WITH DOORS-WEST RED	Piaggio spare parts (POP)
B002525BW	3W PICKUP LOAD BODY - BIANCO WHITE	Piaggio spare parts (POP)
B002525CB	3W PICKUP LOAD BODY - CHARMING BLUE	Piaggio spare parts (POP)
B002525GY	3W PICKUP LOAD BODY - GOLDEN YELLOW	Piaggio spare parts (POP)
B002525BG	3W PICKUP LOAD BODY -BRILLIANT GREEN	Piaggio spare parts (POP)
B002525PM	3W PICKUP LOAD BODY -PASSION MAROON	Piaggio spare parts (POP)
B002525SY	3W PICKUP LOAD BODY -SAHARA YELLOW	Piaggio spare parts (POP)
B002520BW	3W PU CHASSIS WITH DOORS-BIANCO WHITE	Piaggio spare parts (POP)
B002520BG	3W PU CHASSIS WITH DOORS-BRILLIANT GREEN	Piaggio spare parts (POP)
B002520GY	3W PU CHASSIS WITH DOORS-GOLDEN YELLOW	Piaggio spare parts (POP)
B002520PM	3W PU CHASSIS WITH DOORS-PASSION MAROON	Piaggio spare parts (POP)
SST94128	3W/APECITY/P-600&700 Torque Chart	Piaggio spare parts (POP)
KIT95064R	3WH diesel special Tool Kit-Full	Piaggio spare parts (POP)
KIT95065R	3WH diesel special Tool Kit-Mini	Piaggio spare parts (POP)
B002550	3WH WINDSCREEN FRAMEASSLY (CED)	Piaggio spare parts (POP)
661445GY	3WH WINDSCREEN FRAMEASSLY 501 BSIII GY	Piaggio spare parts (POP)
B002551	3WH WINDSCREEN FRAMEASSLY UPGRADE (CED)	Piaggio spare parts (POP)
6D000500	40A/30A POWER RELAY NO/NC	Piaggio spare parts (POP)
LG3700436	40N AIR FILTER ENGINE TECH	Piaggio spare parts (POP)
6B002791	42 MONTH SUPER WARRANTY STICKER	Piaggio spare parts (POP)
6B000249	42 MONTH SUPER WARRENTY STICKER	Piaggio spare parts (POP)
A2102001	422 WATER COOLED ENGINE & ACCESSORIES (B	Piaggio spare parts (POP)
587671R	4ST SOLOID RELAY	Piaggio spare parts (POP)
587671	4ST SOLOID RELAY	Piaggio spare parts (POP)
1F000685	4ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
889224	4ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A003606R	4th GEAR	Piaggio spare parts (POP)
940043	4TH LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
1A013334	4th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
B041216	4th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000716	4th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013305	4th SPEED DRIVING GEAR	Piaggio spare parts (POP)
660242ED	4W ENGINE INSPECTION DOOR CED	Piaggio spare parts (POP)
B002515	4WH CROSS MEMBER S/A ENGINE FR(CED)	Piaggio spare parts (POP)
B002517	4WH PANEL FR SIDE LH (CED)	Piaggio spare parts (POP)
B002521	4WH PANEL FR SIDE RH (CED)	Piaggio spare parts (POP)
661537	5 WAY TO FRONT RH WHEEL	Piaggio spare parts (POP)
940104	501 LD SUPER STRUCTURE CARRIER	Piaggio spare parts (POP)
940105	501 LD SUPER STRUCTURE HARDWARE	Piaggio spare parts (POP)
KIT96017	501 LD SUPER STRUCTURE KIT 1	Piaggio spare parts (POP)
KIT96018	501 LD SUPER STRUCTURE KIT 2	Piaggio spare parts (POP)
KIT96019	501 LD SUPER STRUCTURE KIT 3	Piaggio spare parts (POP)
KIT96020	501 LD SUPER STRUCTURE KIT 4	Piaggio spare parts (POP)
940098	501 LD SUPER STRUCTURE LH PANEL	Piaggio spare parts (POP)
940099	501 LD SUPER STRUCTURE RH PANEL	Piaggio spare parts (POP)

940159	501 LD V1 SUPER STRUCTURE CARRIER	Piaggio spare parts (POP)
940160	501 LD V1 SUPER STRUCTURE HARDWARE	Piaggio spare parts (POP)
940153	501 LD V1 SUPER STRUCTURE LH PANEL	Piaggio spare parts (POP)
940154	501 LD V1 SUPER STRUCTURE RH PANEL	Piaggio spare parts (POP)
KIT96029	501 LD V1 SUPER STRUCTURE SET 1	Piaggio spare parts (POP)
KIT96030	501 LD V1 SUPER STRUCTURE SET 2	Piaggio spare parts (POP)
KIT96031	501 LD V1 SUPER STRUCTURE SET 3	Piaggio spare parts (POP)
KIT96032	501 LD V1 SUPER STRUCTURE SET 4	Piaggio spare parts (POP)
B002518BY	501 PASS UPGRADE CHASSIS-BLACK	Piaggio spare parts (POP)
B002518GY	501 PASS UPGRADE CHASSIS-GOLDEN YELLOW	Piaggio spare parts (POP)
B076194	501 SOFT TOP ASSLY YELLOW (NON MAH)	Piaggio spare parts (POP)
B002518BW1	501PASS UPGRADE CHASSIS BIANCO WHITE NEW	Piaggio spare parts (POP)
523012017	523012017RING 1.7 MM THK	Piaggio spare parts (POP)
6D000480	5A MINIVAL FUSE BIEGE	Piaggio spare parts (POP)
1F000686	5ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
889226	5ST SPEED DRIVEN GEAR	Piaggio spare parts (POP)
940044	5TH LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
1A018761	5th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013575	5th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000717	5th SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1A013306	5th SPEED DRIVING GEAR	Piaggio spare parts (POP)
1A015210	5th SPEED DRIVING GEAR	Piaggio spare parts (POP)
8892274	5th-R SPEED SYNCHRONIZER GROUP	Piaggio spare parts (POP)
6B000207	6 FT CARGO FRONT STICKER	Piaggio spare parts (POP)
6B000208	6 FT CARGO SIDE PANEL STICKER	Piaggio spare parts (POP)
020655Y	62X68MM ADAPTER	Piaggio spare parts (POP)
940045	6TH LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
MER940074	750ml Black Glossy finish Sipper	Piaggio spare parts (POP)
MER940075	750ml Black Matt finish Sipper	Piaggio spare parts (POP)
970300616	970300616PROTECTION TOOL FLYWHEEL SIDE	Piaggio spare parts (POP)
E5604580169	A.C. PUMP GASKET 0.4 MM.	Piaggio spare parts (POP)
E5604580170	A.C. PUMP GASKET 0.8 MM	Piaggio spare parts (POP)
1D001848R	A.C.G.	Piaggio spare parts (POP)
1D001847	A.C.G.	Piaggio spare parts (POP)
1A014112	A.C.GENERATOR ASSY	Piaggio spare parts (POP)
1D002080	A.C.GENERATOR ASSY	Piaggio spare parts (POP)
B001634	ACC. CONTROL TRANSMISSION ASSLY(S.PIECE)	Piaggio spare parts (POP)
569060	ACCELERAT.CONTR.CABLE ASS	Piaggio spare parts (POP)
B003176	ACCELERATOR CABLE	Piaggio spare parts (POP)
B041025	ACCELERATOR CABLE	Piaggio spare parts (POP)
E34K120005	Accelerator cable 501 WC modi. 1.5mm	Piaggio spare parts (POP)
B042167	ACCELERATOR CABLE ASSLY	Piaggio spare parts (POP)
B018546	ACCELERATOR CONTROL TRASMISSION SIDE CAR	Piaggio spare parts (POP)
632538	ACCELERATOR PEDAL ASSEMBLY	Piaggio spare parts (POP)
B002601	ACCELERATOR PEDAL ASSLY	Piaggio spare parts (POP)
660638	ACCELERATOR PEDAL MODULE	Piaggio spare parts (POP)
6B000145	ACCELERATOR PEDAL SUPPORT	Piaggio spare parts (POP)

B078956	ACCELERATOR TUBE ASSLY	Piaggio spare parts (POP)
587902	ACCELERATOR TUBE ASSLY	Piaggio spare parts (POP)
6C000265	ACCELERATOR TUBE ASSLY	Piaggio spare parts (POP)
B078970	ACCELERATOR TUBE SUPPORT BKT LH	Piaggio spare parts (POP)
B079248	ACCELERATOR TUBE SUPPORT BKT RH	Piaggio spare parts (POP)
889146	ACCESS COVER	Piaggio spare parts (POP)
B011655	ACCESSORY BRACKET ASSY	Piaggio spare parts (POP)
B012359	ACCESSORY BRACKET ASSY	Piaggio spare parts (POP)
B073230	ACCL. PEDAL SUPPORT BRKT.	Piaggio spare parts (POP)
E87011621	ADAPTER OIL SEPERATOR PIPE	Piaggio spare parts (POP)
B024445	ADAPTER BKT. SHOCK ABS. MTG.	Piaggio spare parts (POP)
441019	ADAPTER FOR CRANK SHAFT BOTTOM COVER	Piaggio spare parts (POP)
B074970	ADAPTER FOR SNORKEL AIR INTAKE	Piaggio spare parts (POP)
B006900	ADAPTER GEAR BOX-(M/C)	Piaggio spare parts (POP)
E87027121A	ADAPTER OIL	Piaggio spare parts (POP)
E87008852A	ADAPTER SPIN ON	Piaggio spare parts (POP)
929985	Adapter-R-8104-740	Piaggio spare parts (POP)
E87106915	ADAPTOR - PIPE MODULATOR TO VACUUM PUMP	Piaggio spare parts (POP)
E07508880	Adaptor (spin on type lub oil filter)	Piaggio spare parts (POP)
E40010831	ADAPTOR FOR CARBURETTOR	Piaggio spare parts (POP)
E87008859	ADAPTOR FUEL PUMP	Piaggio spare parts (POP)
B041593	ADAPTOR FUEL TANK MTG	Piaggio spare parts (POP)
124141015R	ADAPTOR NYLON	Piaggio spare parts (POP)
124141015	ADAPTOR NYLON (VE)	Piaggio spare parts (POP)
E87031748	ADAPTOR OIL SEPARATOR (M30 x 2)	Piaggio spare parts (POP)
B075108	ADAPTOR PIGTAIL -ACCESSORIES(3WH)	Piaggio spare parts (POP)
E87011620	ADAPTOR PIPE OUTLET	Piaggio spare parts (POP)
2430134023	ADAPTOR PLATE	Piaggio spare parts (POP)
E87106914	ADAPTOR TPS MOUNTING (MACHINING)	Piaggio spare parts (POP)
B012467	ADAPTOR VALVE - EGR	Piaggio spare parts (POP)
B006930	ADAPTOR WIRING HARNESS (MINITRUK 441)	Piaggio spare parts (POP)
1E002553	ADAPTOR, FUEL TANK FILLER	Piaggio spare parts (POP)
ESP650DNB016	ADAPTOR-EGR VALVE	Piaggio spare parts (POP)
03G161810	AdaptorOil Filling Cap	Piaggio spare parts (POP)
402384	ADJUSTER	Piaggio spare parts (POP)
660123	ADJUSTER NUT	Piaggio spare parts (POP)
B011029	ADJUSTER NUT	Piaggio spare parts (POP)
E500985048	ADJUSTING SCREW	Piaggio spare parts (POP)
925813	ADJUSTING SCREW M5 X 30	Piaggio spare parts (POP)
B042048	ADPATOR CASTING (ROPE STARTING PULLEY)	Piaggio spare parts (POP)
662490	ADVANCE WARNING TRIANGLE	Piaggio spare parts (POP)
E5505066199	AIR BAFFLE (EXHAUST)	Piaggio spare parts (POP)
E5505066198	AIR BAFFLE (INLET)	Piaggio spare parts (POP)
E43531729	AIR BAFFLE EXHAUST SIDE	Piaggio spare parts (POP)
E43502755	AIR BAFFLE EXHAUST SIDE	Piaggio spare parts (POP)
E40031732	AIR BAFFLE EXHAUST SIDE(BLACK PAINTED)	Piaggio spare parts (POP)
E43531728	AIR BAFFLE INTAKE SIDE	Piaggio spare parts (POP)

E43502754	AIR BAFFLE INTAKE SIDE	Piaggio spare parts (POP)
E40031733	AIR BAFFLE INTAKE SIDE (BLACK PAINTED)	Piaggio spare parts (POP)
B017480	AIR BOX SNORKEL	Piaggio spare parts (POP)
1A014452	AIR BOX / THROTTLE BODY COUPLING	Piaggio spare parts (POP)
614590	AIR CL.BOX	Piaggio spare parts (POP)
615076	AIR CLEANER ASSLY	Piaggio spare parts (POP)
ED22108	AIR CLEANER ASSLY (NEW TYPE)	Piaggio spare parts (POP)
E40018632	AIR CLEANER ASSY. WITH BRACKET (CNG)	Piaggio spare parts (POP)
827831	AIR CLEANER BOX CAP	Piaggio spare parts (POP)
569291	AIR CLEANER BOX COMP	Piaggio spare parts (POP)
569691	AIR CLEANER COVER	Piaggio spare parts (POP)
614944	AIR CLEANER COVER	Piaggio spare parts (POP)
B024911	AIR CLEANER MTG BKT	Piaggio spare parts (POP)
1A006592	AIR CLEANER/VEHICLE MANIFOLD	Piaggio spare parts (POP)
1A006594	AIR CLEANER/VEHICLE MANIFOLD	Piaggio spare parts (POP)
1A007489	AIR CLEANER/VEHICLE MANIFOLD	Piaggio spare parts (POP)
KD2569767	AIR CONVEYER	Piaggio spare parts (POP)
KD2569766	AIR CONVEYER	Piaggio spare parts (POP)
E5202569563	AIR COWL	Piaggio spare parts (POP)
B042517ED	AIR DEFLECTOR ASSLY (CED)	Piaggio spare parts (POP)
B042517	AIR DEFLECTOR ASSLY.	Piaggio spare parts (POP)
B042816	AIR DEFLECTOR ASSLY.	Piaggio spare parts (POP)
KD2175291	AIR ELEMENT 15LD441	Piaggio spare parts (POP)
852944	Air filter	Piaggio spare parts (POP)
A01A140002	AIR FILTER ASSEMBLY	Piaggio spare parts (POP)
6A001702	AIR FILTER ASSEMBLY WITH MTG. BKT.	Piaggio spare parts (POP)
6A001675	AIR FILTER ASSEMBLY WITH MTG. BRACKET	Piaggio spare parts (POP)
E40018629	AIR FILTER ASSEMBLY FOR APE CITY	Piaggio spare parts (POP)
E34A140002	AIR FILTER ASSEMBLY_WC_pass.	Piaggio spare parts (POP)
ED42400	AIR FILTER ASSLY	Piaggio spare parts (POP)
B009193	AIR FILTER ASSLY	Piaggio spare parts (POP)
604753	AIR FILTER ASSLY	Piaggio spare parts (POP)
B041088	AIR FILTER ASSLY	Piaggio spare parts (POP)
B041406	AIR FILTER ASSLY (BNA)	Piaggio spare parts (POP)
B003605	AIR FILTER ASSLY (LGA 280) - PETROL	Piaggio spare parts (POP)
B008931	AIR FILTER ASSLY (PETROL)	Piaggio spare parts (POP)
B024450	AIR FILTER ASSLY (WITH MTG BKT)	Piaggio spare parts (POP)
B073677	AIR FILTER ASSLY (WITH MTG BKT)	Piaggio spare parts (POP)
B075642	AIR FILTER ASSLY COMPLETE - PTL LAM SNKL	Piaggio spare parts (POP)
6A000378	AIR FILTER ASSLY WITH MTG.BKT.	Piaggio spare parts (POP)
1E002568	AIR FILTER ASSLY, WITH MTG. BRT	Piaggio spare parts (POP)
6A000199	AIR FILTER ASSLY.	Piaggio spare parts (POP)
B073441	AIR FILTER ASSLY. (CLAMP TYPE)	Piaggio spare parts (POP)
B073679	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)
B075971	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)
B073678	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)
B075970	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)

B075972	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)
B078000	AIR FILTER ASSLY. (WITH MTG. BKT.)	Piaggio spare parts (POP)
6A000653	AIR FILTER ASSLY. WITH MTG. BKT.	Piaggio spare parts (POP)
B075387	AIR FILTER ASSLY.W MTG. BKT. -PTL SNORKL	Piaggio spare parts (POP)
B074379	AIR FILTER ASSY	Piaggio spare parts (POP)
E43518676	Air Filter Assy. (Sogefi	Piaggio spare parts (POP)
E60008668	Air filter assy. (plastic) Consisting of	Piaggio spare parts (POP)
E43518650	AIR FILTER ASSY. WITHOUT BRACKET	Piaggio spare parts (POP)
B008752	AIR FILTER ASSY-ENGINETECH (QI 870)	Piaggio spare parts (POP)
661636	AIR FILTER ASSY-LUMAX (QI-870)	Piaggio spare parts (POP)
E40018625	AIR FILTER ASSYPLASTIC MODIFIED SEALING	Piaggio spare parts (POP)
6A001461	AIR FILTER BRACKET MOUNTING ASSLY.	Piaggio spare parts (POP)
6A000096	AIR FILTER BRACKETS ASSY.	Piaggio spare parts (POP)
A01G140035	AIR FILTER COVER	Piaggio spare parts (POP)
940031	Air Filter Cover (Paxx 200)	Piaggio spare parts (POP)
920106	Air Filter Cover Assly. BS III	Piaggio spare parts (POP)
A01G140037	AIR FILTER COVER CLAMP	Piaggio spare parts (POP)
940070	Air filter Cover clamp-Paxx UG	Piaggio spare parts (POP)
A01S140001	AIR FILTER COVER GASKET	Piaggio spare parts (POP)
940032	Air Filter Cover Gasket (Paxx 200)	Piaggio spare parts (POP)
940069	Air Filter cover-Paxx UG	Piaggio spare parts (POP)
A01G140036	AIR FILTER DUST VALVE	Piaggio spare parts (POP)
E40008728	AIR FILTER ELEMENT	Piaggio spare parts (POP)
LG2175269	Air Filter Element	Piaggio spare parts (POP)
940094	Air filter element -501 BSIV	Piaggio spare parts (POP)
940094P	Air filter element -501 BSIV	Piaggio spare parts (POP)
A01G140013	AIR FILTER ELEMENT ASSEMBLY	Piaggio spare parts (POP)
920102A	Air Filter Element BS-III	Piaggio spare parts (POP)
6A000087	AIR FILTER INLET ADAPTER	Piaggio spare parts (POP)
940034	Air Filter Knob (Paxx 200)	Piaggio spare parts (POP)
940033	Air Filter Knob Gasket (Paxx 200)	Piaggio spare parts (POP)
6A000253	Air filter mounting bracket	Piaggio spare parts (POP)
B002471	AIR FILTER MTG BKT	Piaggio spare parts (POP)
B002873	AIR FILTER MTG BKT ASSLY	Piaggio spare parts (POP)
B008924	AIR FILTER MTG BRACKET	Piaggio spare parts (POP)
632229	AIR FILTER MTG. & AIR WARN INDICATOR KIT	Piaggio spare parts (POP)
B009311	AIR FILTER MTG. ASSLY - 501 DIESEL	Piaggio spare parts (POP)
B076536	AIR FILTER MTG. ASSLY - 501 DIESEL BSIV	Piaggio spare parts (POP)
6A000746	AIR FILTER MTG. BRACKET	Piaggio spare parts (POP)
B018978	AIR FILTER SPACER	Piaggio spare parts (POP)
6A000099	AIR FILTER SUPPORT BRACKETS	Piaggio spare parts (POP)
E40018626	Air Filter w/o BKT G435	Piaggio spare parts (POP)
E40018626P	Air Filter w/o BKT G435	Piaggio spare parts (POP)
E40008669	AIR FILTER WITH BRACKET	Piaggio spare parts (POP)
KD3700461	AIR FLT KFA-01-1-7270	Piaggio spare parts (POP)
642786	AIR PRESSURE SENSOR	Piaggio spare parts (POP)
58290R	AIR PRESSURE SENSOR	Piaggio spare parts (POP)

1A007492	AIR RESTRICTOR	Piaggio spare parts (POP)
6A000574	AIR RESTRICTOR	Piaggio spare parts (POP)
LG1585316	Air restrictor /Choke-Petrol	Piaggio spare parts (POP)
B016826	AIR SCREW KIT	Piaggio spare parts (POP)
KD5066420	AIR SHEET METAL FOR AIR SHROUD	Piaggio spare parts (POP)
E40001765	AIR SHROUD	Piaggio spare parts (POP)
E40001793	AIR SHROUD	Piaggio spare parts (POP)
E40031730	AIR SHROUD (BLACK PAINTED) GL-400 II A	Piaggio spare parts (POP)
LG3350136	AIR SHROUD DEFLECTOR	Piaggio spare parts (POP)
LG5066370	AIR SHROUD LGA PRESS.	Piaggio spare parts (POP)
E43531743	AIR SHROUD PLASTIC - BLUE COLOUR	Piaggio spare parts (POP)
6A000900	AIR VENT HOSE	Piaggio spare parts (POP)
E9411033412	AIR VENT SCREW	Piaggio spare parts (POP)
583956	AIR WARN SERVICE INDICATOR	Piaggio spare parts (POP)
B042059	ALLEN BOLT M10X65 CL 10.9	Piaggio spare parts (POP)
B024373	ALLEN BOLT M10X65 CL 10.9	Piaggio spare parts (POP)
B041271	ALLEN BOLT M8	Piaggio spare parts (POP)
E87000497	ALLEN BOLT BRACKET FULCRUM	Piaggio spare parts (POP)
E87000495	ALLEN BOLT CONTROL LEVER M5X16	Piaggio spare parts (POP)
E87000496	ALLEN BOLT COVER	Piaggio spare parts (POP)
E87000494	ALLEN BOLT LOCK GOVERNOR COLLAR M4X20	Piaggio spare parts (POP)
E87000498	ALLEN BOLT LUB OIL	Piaggio spare parts (POP)
6C000606	ALLEN BOLT M10X71	Piaggio spare parts (POP)
E87000499	ALLEN BOLT MID SUPPORT M8X508.8(TL28)	Piaggio spare parts (POP)
L9790166	ALLEN HEAD CAP SCREW M 6X35	Piaggio spare parts (POP)
L9730016	ALLEN HEAD CAP SCREW M 6X35	Piaggio spare parts (POP)
L9790154	ALLEN HEAD CAP SCREW M 8X65	Piaggio spare parts (POP)
B041511	ALLEN HEAD SCREW (M5X0.8X10)	Piaggio spare parts (POP)
E47973012	Allen head screw M6x1x20	Piaggio spare parts (POP)
L9790161	ALLEN HEAD SCREW M8X45	Piaggio spare parts (POP)
E422973030	ALLEN SCREW	Piaggio spare parts (POP)
B009585	ALLEN SCREW M12 x 1.25	Piaggio spare parts (POP)
B073942	Allen Screw M6x12	Piaggio spare parts (POP)
AP8150137	ALLEN SCREW M6X16 DA - 8.8 UNI 5931	Piaggio spare parts (POP)
643884	ALLEN SCREW(VANAZ PT NO K-0401-200)	Piaggio spare parts (POP)
264061	ALLOY WASHER	Piaggio spare parts (POP)
E60005456	Alternator	Piaggio spare parts (POP)
A01G140009	ALTERNATOR (with "V " groove pulley)	Piaggio spare parts (POP)
1F000589	ALTERNATOR + VACUUM PUMP	Piaggio spare parts (POP)
B010780	ALTERNATOR 70A	Piaggio spare parts (POP)
B012227	ALTERNATOR BOSCH (70A)	Piaggio spare parts (POP)
B012358	ALTERNATOR BRACKET	Piaggio spare parts (POP)
ESP650DBT006	ALTERNATOR BRACKET	Piaggio spare parts (POP)
B011028	ALTERNATOR BRACKET	Piaggio spare parts (POP)
B074488	ALTERNATOR PIG TAIL_ PORTER 1000 - PH II	Piaggio spare parts (POP)
LG8725075	ALTERNATOR SUPPORT	Piaggio spare parts (POP)
B006120	ALTERNATOR WIRE COOL	Piaggio spare parts (POP)

B074085	ALTERNATOR WITH VAC.PUMP 50A(LUCAS)	Piaggio spare parts (POP)
ESP650DST006	ALTERNATOR WITH VACUUM PUMP	Piaggio spare parts (POP)
E87005426	ALTERNATOR(F 002 G1A 199)	Piaggio spare parts (POP)
LG4258007	ALUMINIUM CABLE JUNCTION	Piaggio spare parts (POP)
E283141012	Aluminum push rod	Piaggio spare parts (POP)
A01G200002	AMBIENT TEMP.SENSOR	Piaggio spare parts (POP)
632409	AMMETER WITH SPACER RING ASSLY (MY)	Piaggio spare parts (POP)
605358	AMPERMETER	Piaggio spare parts (POP)
632407	AMPEROMETRO	Piaggio spare parts (POP)
E5006371045	ANCHOR PLATE	Piaggio spare parts (POP)
B002167	ANCHOR PLATE FOR SPARE TYRE ASSLY	Piaggio spare parts (POP)
LG2942207	ANG.INLET PIPE LGA280-340	Piaggio spare parts (POP)
6D000381	ANGLE BAR ASSEMBLY, BATTERY	Piaggio spare parts (POP)
604691	ANGLE BAR ASSLY	Piaggio spare parts (POP)
B001044	ANGLE BAR FLOOR TO HEAD STOCK ASSLY	Piaggio spare parts (POP)
569022	ANGLE CLIP	Piaggio spare parts (POP)
B003903	ANGLE PASS CARPET	Piaggio spare parts (POP)
L9865303	ANTI TAMPERING SCREW	Piaggio spare parts (POP)
AP8104509	Anti.v weight, black	Piaggio spare parts (POP)
1A013343	ANTIFRICTION BUSH	Piaggio spare parts (POP)
889272	ANTIFRICTION BUSH 1st-2nd SPEED	Piaggio spare parts (POP)
889271	ANTIFRICTION BUSH 5th-R SPEED	Piaggio spare parts (POP)
1A012159	ANTI-JUDDER SPRING	Piaggio spare parts (POP)
1A012160	ANTI-JUDDER WASHER	Piaggio spare parts (POP)
SST94120	APE (501)ENGINE EXPLODED VIEW - 3W	Piaggio spare parts (POP)
SST94122	Ape 3W (501) WIRING DIAGRAM (1 TONNER)	Piaggio spare parts (POP)
B073127	APE 501 CNG/LPG TOOL KIT	Piaggio spare parts (POP)
B078923	APE APE XTRA STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078878	APE AUTO DX STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078865	APE AUTO PLUS STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078920	APE AUTO STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078911	APE AUTO STICKER (SIDE PANEL)	Piaggio spare parts (POP)
B003358	APE CITY PLATE - STICKER	Piaggio spare parts (POP)
SST94163	Ape City BSIV Engine Holding Fixture	Piaggio spare parts (POP)
6B001674	APE CITY DLX BSVI HOOD STRUCTURE	Piaggio spare parts (POP)
6B001817	APE CITY E VEHICLE FRONT STICKER	Piaggio spare parts (POP)
SST94123	APE CITY ENGINE & G.B EXPLODED VIEW	Piaggio spare parts (POP)
6B001130	APE CITY EV DASHBOARD ASSY	Piaggio spare parts (POP)
KIT95124	APE CITY EV INSULATED & SPECIAL TOOL KIT	Piaggio spare parts (POP)
B078877	APE CITY HT STICKER (FRONT PANEL)	Piaggio spare parts (POP)
6B001172	APE CITY PLUS - TAIL GATE STICKER	Piaggio spare parts (POP)
6B001506	APE CITY PLUS SIDE PANEL DECAL LH	Piaggio spare parts (POP)
6B001309	APE CITY PLUS SIDE PANEL DECAL LH	Piaggio spare parts (POP)
6B001310	APE CITY PLUS SIDE PANEL DECAL RH	Piaggio spare parts (POP)
6B001507	APE CITY PLUS SIDE PANEL DECALS RH	Piaggio spare parts (POP)
B078874	APE CITY PLUS STICKER (FRONT PANEL)	Piaggio spare parts (POP)
KIT95060R	Ape' city special Tool Kit-Full	Piaggio spare parts (POP)

KIT95061R	Ape' city special Tool Kit-Mini	Piaggio spare parts (POP)
B074893	APE CITY STICKER	Piaggio spare parts (POP)
B078919	APE CITY STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078924	APE CITY STICKER (TAILGATE)	Piaggio spare parts (POP)
SST94124	APE CITY WIRING DIAGRAM - CNG	Piaggio spare parts (POP)
SST94125	APE CITY WIRING DIAGRAM - LPG	Piaggio spare parts (POP)
SST94126	APE CITY WIRING DIAGRAM - Petrol	Piaggio spare parts (POP)
6A000242	APE' CNG REGULATOR KIT ASSY	Piaggio spare parts (POP)
6B002573	APE E XTRA LDX - BADGE	Piaggio spare parts (POP)
SST94121	Ape GEAR BOX EXPLODED VIEW - 3W	Piaggio spare parts (POP)
SST94140	APE' GENUINE PARTS POSTER	Piaggio spare parts (POP)
6A000241	APE' LPG REGULATOR KIT ASSY	Piaggio spare parts (POP)
B024312BW	APE MINI 441 CHASSIS WITH DRS B WHITE	Piaggio spare parts (POP)
B024312CB	APE MINI 441 CHASSIS WITH DRS C BLUE	Piaggio spare parts (POP)
B024312CO	APE MINI 441 CHASSIS WITH DRS C ORANGE	Piaggio spare parts (POP)
B024312GY	APE MINI 441 CHASSIS WITH DRS G YELLOW	Piaggio spare parts (POP)
B024312SY	APE MINI 441 CHASSIS WITH DRS SAH YELLOW	Piaggio spare parts (POP)
B024312WR	APE MINI 441 CHASSIS WITH DRS W RED	Piaggio spare parts (POP)
B006300BW	APE MINI 441 LOAD BODY-B WHITE	Piaggio spare parts (POP)
B006300GY	APE MINI 441 LOAD BODY-GL YELLOW	Piaggio spare parts (POP)
B003102BW	APE MINI 441CHASSIS WITH OUT DOORS B WH	Piaggio spare parts (POP)
B003102GY	APE MINI 441CHASSIS WITH OUT DOORS G YLW	Piaggio spare parts (POP)
B003102WR	APE MINI 441CHASSIS WITH OUT DOORS W RED	Piaggio spare parts (POP)
B073082	APE PAX LPG KIT VEHICLE ASSLY	Piaggio spare parts (POP)
B024145	APE PAX LPG KIT VEHICLE ASSLY	Piaggio spare parts (POP)
B024124	APE PAX CNG KIT VEHICLE ASSLY	Piaggio spare parts (POP)
900203	APE SPECIAL TOOL BOX	Piaggio spare parts (POP)
900107	APE SPECIAL TOOL KIT WITH TOOL BOX	Piaggio spare parts (POP)
660175	APE STICKER FOR ROLLED BACK PANEL-RED	Piaggio spare parts (POP)
660176	APE STICKER FOR ROLLED BACK PANEL-YELLOW	Piaggio spare parts (POP)
B002490BW	APE TRUK CHASS. WITH DOORS-BIANCO WHITE	Piaggio spare parts (POP)
B002490CB	APE TRUK CHASS. WITH DOORS-CHARMING BLUE	Piaggio spare parts (POP)
B002490GY	APE TRUK CHASS. WITH DOORS-GOLDEN YELLOW	Piaggio spare parts (POP)
B002490PM	APE TRUK CHASS. WITH DOORS-PASS. MAROON	Piaggio spare parts (POP)
B002487BW	APE TRUK CHASSIS W/O DOORS-BIANCO WHITE	Piaggio spare parts (POP)
B002487CB	APE TRUK CHASSIS W/O DOORS-CHARMING BLUE	Piaggio spare parts (POP)
B002487GY	APE TRUK CHASSIS W/O DOORS-GOLDEN YELLOW	Piaggio spare parts (POP)
B002487PM	APE TRUK CHASSIS W/O DOORS-PASS. MAROON	Piaggio spare parts (POP)
B002552BW	APE TRUK LOAD BODY-BIANCO WHITE	Piaggio spare parts (POP)
B002552CB	APE TRUK LOAD BODY-CHARMING BLUE	Piaggio spare parts (POP)
B002552GY	APE TRUK LOAD BODY-GOLDEN YELLOW	Piaggio spare parts (POP)
B002552PM	APE TRUK LOAD BODY-PASS. MAROON	Piaggio spare parts (POP)
B078879	APE XTRA LD STICKER (FRONT PANEL)	Piaggio spare parts (POP)
B078876	APE XTRA LDX (FRONT PANEL)	Piaggio spare parts (POP)
B078929	APE XTRA X STICKER (FRONT PANEL)	Piaggio spare parts (POP)
940110	Ape' Mobile Holder	Piaggio spare parts (POP)
AP8720115	APRILIA IRON GUARD 10-150	Piaggio spare parts (POP)

897138	Aprilia Off Road S	Piaggio spare parts (POP)
899585	Aprilia Racing L	Piaggio spare parts (POP)
899589	Aprilia Touring S	Piaggio spare parts (POP)
645060	ARM ASSY WIPER NO. 1	Piaggio spare parts (POP)
6C000362	ARM ASSLY LH RR SUSP. WITH BUSH-REG	Piaggio spare parts (POP)
644898	ARM ASSLY LH RR SUSP. WITH BUSH-REG	Piaggio spare parts (POP)
B075807	ARM ASSLY LH SUSPENSION WITH BUSH	Piaggio spare parts (POP)
B009603	ARM ASSLY LH SUSPENSION WITH BUSH - PAX	Piaggio spare parts (POP)
B002481	ARM ASSLY LH SUSPENSION WITH BUSH-CITY	Piaggio spare parts (POP)
6C000363	ARM ASSLY RH RR SUSP. WITH BUSH-REG	Piaggio spare parts (POP)
644897	ARM ASSLY RH RR SUSP. WITH BUSH-REG	Piaggio spare parts (POP)
B075808	ARM ASSLY RH SUSPENSION WITH BUSH	Piaggio spare parts (POP)
B002482	ARM ASSLY RH SUSPENSION WITH BUSH-CITY	Piaggio spare parts (POP)
B009605	ARM ASSLY RH SUSPENSION WITH BUSH-PAX	Piaggio spare parts (POP)
632981	ARM ASSY RIGHT REAR SUSP	Piaggio spare parts (POP)
645061	ARM ASSY WIPER NO. 2	Piaggio spare parts (POP)
643736	ARM LEFT ASSLY REAR SUSP.LD WITH SILE	Piaggio spare parts (POP)
643737	ARM RH ASSLY REAR SUSP. LD WITH SILE	Piaggio spare parts (POP)
662522	ARM S/A SUSPENSION RR WITH BUSH 482 (OLD)	Piaggio spare parts (POP)
B073218	ARM S/A SUSP. RR WITH BUSH - PORTER 600	Piaggio spare parts (POP)
925847	ARM S/A SUSP. RR WITH BUSH 482 (SG IRON)	Piaggio spare parts (POP)
B003383	ARM S/A SUSP. RR WITH BUSH 870 (SG IRON)	Piaggio spare parts (POP)
B074266	ARM S/A SUSPENSION RR	Piaggio spare parts (POP)
645102	ARM S/A SUSPENSION RR	Piaggio spare parts (POP)
B006923	ARM S/A SUSPENSION RR	Piaggio spare parts (POP)
658237	ARM S/A SUSPENSION RR 482	Piaggio spare parts (POP)
661258	ARM S/A SUSPENSION RR 870	Piaggio spare parts (POP)
B041329	ARM S/A SUSPENSION Rr.	Piaggio spare parts (POP)
B075245	ARM S/A SUSPENSION Rr. (LSPV)	Piaggio spare parts (POP)
662499	ARM S/A SUSPENSION, LWR LH W/BUSH.	Piaggio spare parts (POP)
662448	ARM S/A SUSPENSION, LWR RH W/BUSH	Piaggio spare parts (POP)
B024582	ARM S/ASSLY LH REAR SUSP.MINI WITH BUSH	Piaggio spare parts (POP)
B024584	ARM S/ASSLY RH REAR SUSP.MINI WITH BUSH	Piaggio spare parts (POP)
262480	ARM STEERING	Piaggio spare parts (POP)
645048	ARM STEERING CENTRE	Piaggio spare parts (POP)
B002345	ARM SUB ASSL LH REAR SUSPENSION	Piaggio spare parts (POP)
652021	ARM SUB ASSLY - STEERING CENTER	Piaggio spare parts (POP)
645224	ARM SUB ASSLY LH REAR SUSP. LD WITH BUSH	Piaggio spare parts (POP)
645223	ARM SUB ASSLY RH REAR SUSP. LD WITH BUSH	Piaggio spare parts (POP)
B002369	ARM SUB ASSLY RH REAR SUSPENSION	Piaggio spare parts (POP)
6C000373	ARM SUB-ASSLY LH REAR	Piaggio spare parts (POP)
6C000372	ARM SUB-ASSLY RH REAR	Piaggio spare parts (POP)
1004011096	ARMATURE	Piaggio spare parts (POP)
F002G20034	ARMATURE	Piaggio spare parts (POP)
E1004011086	ARMATURE	Piaggio spare parts (POP)
F002G20254	ARMATURE	Piaggio spare parts (POP)
F002G20783	Armature	Piaggio spare parts (POP)

1004011212	ARMATURE	Piaggio spare parts (POP)
1A009588	ARMATURE ASSLY	Piaggio spare parts (POP)
925570	ARMATURE ASSLY (031000/ 12 V)	Piaggio spare parts (POP)
SM26256907	Armature Assy	Piaggio spare parts (POP)
SM26246042	Armature assy	Piaggio spare parts (POP)
03G160869	armselector mech	Piaggio spare parts (POP)
6D000950	ASEMBLY BRACKET, TELEMATICS UNIT MTG	Piaggio spare parts (POP)
ED42908	asket for casing water pump	Piaggio spare parts (POP)
6B002709BW	ASM DV WITH REAR HATCH_LDX_PU BS6-BW	Piaggio spare parts (POP)
6B002709CB	ASM DV WITH REAR HATCH_LDX_PU BS6-CB	Piaggio spare parts (POP)
6B002709CO	ASM DV WITH REAR HATCH_LDX_PU BS6-CO	Piaggio spare parts (POP)
6B002709EG	ASM DV WITH REAR HATCH_LDX_PU BS6-EG	Piaggio spare parts (POP)
6B002709GY	ASM DV WITH REAR HATCH_LDX_PU BS6-GY	Piaggio spare parts (POP)
6B002709PA	ASM DV WITH REAR HATCH_LDX_PU BS6-PA	Piaggio spare parts (POP)
6B002709PB	ASM DV WITH REAR HATCH_LDX_PU BS6-PB	Piaggio spare parts (POP)
6B002709WR	ASM DV WITH REAR HATCH_LDX_PU BS6-WR	Piaggio spare parts (POP)
6B002609BW	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-BW	Piaggio spare parts (POP)
6B002609CB	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-CB	Piaggio spare parts (POP)
6B002609CO	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-CO	Piaggio spare parts (POP)
6B002609EG	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-EG	Piaggio spare parts (POP)
6B002609GY	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-GY	Piaggio spare parts (POP)
6B002609PA	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-PA	Piaggio spare parts (POP)
6B002609PB	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-PB	Piaggio spare parts (POP)
6B002609WR	ASM DV WITH REAR HATCH_Xtra DX PU_BS6-WR	Piaggio spare parts (POP)
B010353	ASM SEAL SUPPORT	Piaggio spare parts (POP)
616558	ASPIRATORE ESTERNO	Piaggio spare parts (POP)
L79711008	ASS. SCHEME 482 BELLOWS	Piaggio spare parts (POP)
660766	ASSEMBLY - FUEL TANK 870	Piaggio spare parts (POP)
6B001891BL	ASSEMBLY PASSENGER BODY-BL	Piaggio spare parts (POP)
6B001891BW	ASSEMBLY PASSENGER BODY-BW	Piaggio spare parts (POP)
6B001891BY	ASSEMBLY PASSENGER BODY-BY	Piaggio spare parts (POP)
6B001891CB	ASSEMBLY PASSENGER BODY-CB	Piaggio spare parts (POP)
6B001891EG	ASSEMBLY PASSENGER BODY-EG	Piaggio spare parts (POP)
6B001891GY	ASSEMBLY PASSENGER BODY-GY	Piaggio spare parts (POP)
6B001891NB	ASSEMBLY PASSENGER BODY-NB	Piaggio spare parts (POP)
6B001891WR	ASSEMBLY PASSENGER BODY-WR	Piaggio spare parts (POP)
B041050	ASSEMBLY_ COOLING SYSTEM	Piaggio spare parts (POP)
B079402	ASSEMBLY 2 STAGE REGULATOR CNG	Piaggio spare parts (POP)
B024153	ASSEMBLY 2 STAGE REGULATOR LPG	Piaggio spare parts (POP)
B076438	ASSEMBLY 2 STAGE REGULATOR LPG	Piaggio spare parts (POP)
B079368	ASSEMBLY 2 STAGE REGULATOR LPG	Piaggio spare parts (POP)
E87117769	ASSEMBLY CATCON PM METALIT	Piaggio spare parts (POP)
643927	ASSEMBLY CENTRAL BRACKET- LPG	Piaggio spare parts (POP)
E43510766	Assembly Governor support – with split p	Piaggio spare parts (POP)
6A000639	ASSEMBLY HOSE AIR FILER TO ENGINE	Piaggio spare parts (POP)
E10A070003	ASSEMBLY MUFFLER	Piaggio spare parts (POP)
E10A070008	ASSEMBLY MUFFLER-Ape City BSIV	Piaggio spare parts (POP)

E43502709	ASSEMBLY ROCKER LEVER EXHAUST	Piaggio spare parts (POP)
E43502707	ASSEMBLY ROCKER LEVER INTAKE	Piaggio spare parts (POP)
96810333404	Assembly Sleeve	Piaggio spare parts (POP)
F002H301694	Assembly Tool	Piaggio spare parts (POP)
96890341234	Assembly Tool	Piaggio spare parts (POP)
96890341244	Assembly Tool	Piaggio spare parts (POP)
6A000767	ASSEMBLY TUBE, FUEL TANK FILLER	Piaggio spare parts (POP)
6A000988	ASSEMBLY, COOLANT PIPE WITH MTG BRACKET	Piaggio spare parts (POP)
03A160016	Assemblyclutch pack	Piaggio spare parts (POP)
03A160011	Assemblylubrication channel	Piaggio spare parts (POP)
E43507784	ASSEMBLYMUFFLER	Piaggio spare parts (POP)
6B002094ED	ASSLY ENGINE INSPECTION DOOR-ED	Piaggio spare parts (POP)
19136485	ASSLY &DIS-ASSLY EJECTOR OF STG.BRG.INT.	Piaggio spare parts (POP)
19136486	ASSLY &DIS-ASSLY FIXTURE FOR STG.LOW BRG	Piaggio spare parts (POP)
19135784	ASSLY &DIS-ASSLY PUNCH-BRG.NADELLA-	Piaggio spare parts (POP)
19136084	ASSLY &DIS-ASSLY WRENCH-STG.UPP.BRG.RING	Piaggio spare parts (POP)
6D000673	ASSLY BATTERY CARRIER	Piaggio spare parts (POP)
B006953	ASSLY BATTERY MTG BKT-1	Piaggio spare parts (POP)
B041200	ASSLY BATTERY_CARRIER	Piaggio spare parts (POP)
B024324	ASSLY BATTERY_CARRIER	Piaggio spare parts (POP)
B073655	ASSLY BKT BODY SUPPORT - LH	Piaggio spare parts (POP)
6A001127	ASSLY BRACKET, ENGINE LIFTING	Piaggio spare parts (POP)
6B002293BW	ASSLY CARGO BODY LDX + (C/L/P)_BW	Piaggio spare parts (POP)
6B002293CB	ASSLY CARGO BODY LDX + (C/L/P)_CB	Piaggio spare parts (POP)
6B002293CO	ASSLY CARGO BODY LDX + (C/L/P)_CO	Piaggio spare parts (POP)
6B002293EG	ASSLY CARGO BODY LDX + (C/L/P)_EG	Piaggio spare parts (POP)
6B002293GY	ASSLY CARGO BODY LDX + (C/L/P)_GY	Piaggio spare parts (POP)
6B002293LB	ASSLY CARGO BODY LDX + (C/L/P)_LB	Piaggio spare parts (POP)
6B002293NB	ASSLY CARGO BODY LDX + (C/L/P)_NB	Piaggio spare parts (POP)
6B002293PA	ASSLY CARGO BODY LDX + (C/L/P)_PA	Piaggio spare parts (POP)
6B002293PB	ASSLY CARGO BODY LDX + (C/L/P)_PB	Piaggio spare parts (POP)
6B002293WR	ASSLY CARGO BODY LDX + (C/L/P)_WR	Piaggio spare parts (POP)
6B002701BW	ASSLY CARGO BODY LDX+ BS6_BW	Piaggio spare parts (POP)
6B002701CB	ASSLY CARGO BODY LDX+ BS6_CB	Piaggio spare parts (POP)
6B002701CO	ASSLY CARGO BODY LDX+ BS6_CO	Piaggio spare parts (POP)
6B002701EG	ASSLY CARGO BODY LDX+ BS6_EG	Piaggio spare parts (POP)
6B002701GY	ASSLY CARGO BODY LDX+ BS6_GY	Piaggio spare parts (POP)
6B002701PA	ASSLY CARGO BODY LDX+ BS6_PA	Piaggio spare parts (POP)
6B002701PB	ASSLY CARGO BODY LDX+ BS6_PB	Piaggio spare parts (POP)
6B002701WR	ASSLY CARGO BODY LDX+ BS6_WR	Piaggio spare parts (POP)
659870	ASSLY CENTRAL BRACKET CNG	Piaggio spare parts (POP)
6B003177	ASSLY DASHBOARD WITH HINGE MTG PLATE	Piaggio spare parts (POP)
632238	ASSLY DOOR HINGE UPPER	Piaggio spare parts (POP)
6B002629GY	ASSLY E CARGO BODY FX-GY	Piaggio spare parts (POP)
6B002629LB	ASSLY E CARGO BODY FX-LB	Piaggio spare parts (POP)
6B002629NB	ASSLY E CARGO BODY FX-NB	Piaggio spare parts (POP)
6B002281BW	ASSLY FLAT CAR LDX-BW	Piaggio spare parts (POP)

6B002281CB	ASSLY FLAT CAR LDX-CB	Piaggio spare parts (POP)
6B002281CO	ASSLY FLAT CAR LDX-CO	Piaggio spare parts (POP)
6B002281EG	ASSLY FLAT CAR LDX-EG	Piaggio spare parts (POP)
6B002281GY	ASSLY FLAT CAR LDX-GY	Piaggio spare parts (POP)
6B002281PA	ASSLY FLAT CAR LDX-PA	Piaggio spare parts (POP)
6B002281PB	ASSLY FLAT CAR LDX-PB	Piaggio spare parts (POP)
6B002281WR	ASSLY FLAT CAR LDX-WR	Piaggio spare parts (POP)
B001502ED	ASSLY FRONT PART OF CENTRAL BEAM	Piaggio spare parts (POP)
B001502	ASSLY FRONT PART OF CENTRAL BEAM	Piaggio spare parts (POP)
632232	ASSLY FRT PART OF CENTRAL BEAM	Piaggio spare parts (POP)
B078964	ASSLY FUEL TANK (3L) WITH BKT	Piaggio spare parts (POP)
632643	ASSLY HEAD LAMP WITH LATERAL LAMP LH (LU	Piaggio spare parts (POP)
632642	ASSLY HEAD LAMP WITH LATERAL LAMP RH (LU	Piaggio spare parts (POP)
632478R	ASSLY HEADLAMP WITH LATERAL LAMP-LH	Piaggio spare parts (POP)
632477R	ASSLY HEADLAMP WITH LATERAL LAMP-RH	Piaggio spare parts (POP)
652595	ASSLY OF WHEEL RIM & REINFORCEMENT	Piaggio spare parts (POP)
652595R	ASSLY OF WHEEL RIM & REINFORCEMENT	Piaggio spare parts (POP)
660059	ASSLY OF WHEEL RIM & REINFORCEMENT	Piaggio spare parts (POP)
6B002299BL	ASSLY PASS BODY-BL	Piaggio spare parts (POP)
6B002299BW	ASSLY PASS BODY-BW	Piaggio spare parts (POP)
6B002299BY	ASSLY PASS BODY-BY	Piaggio spare parts (POP)
6B002299CB	ASSLY PASS BODY-CB	Piaggio spare parts (POP)
6B002299EG	ASSLY PASS BODY-EG	Piaggio spare parts (POP)
6B002299GY	ASSLY PASS BODY-GY	Piaggio spare parts (POP)
6B002299NB	ASSLY PASS BODY-NB	Piaggio spare parts (POP)
6B002299WR	ASSLY PASS BODY-WR	Piaggio spare parts (POP)
6B000965BW	ASSLY PASS. BODY CNG/LPG_BSVI-BW	Piaggio spare parts (POP)
6B000965BY	ASSLY PASS. BODY CNG/LPG_BSVI-BY	Piaggio spare parts (POP)
6B000965CB	ASSLY PASS. BODY CNG/LPG_BSVI-CB	Piaggio spare parts (POP)
6B000965EG	ASSLY PASS. BODY CNG/LPG_BSVI-EG	Piaggio spare parts (POP)
6B000965GY	ASSLY PASS. BODY CNG/LPG_BSVI-GY	Piaggio spare parts (POP)
6B000965NB	ASSLY PASS. BODY CNG/LPG_BSVI-NB	Piaggio spare parts (POP)
6B002634LB	ASSLY PASS. BODY E-CITY FIXED BATTERY_LB	Piaggio spare parts (POP)
6B000758BW	ASSLY PASS. BODY PETROL_BSVI-BW	Piaggio spare parts (POP)
6B000758BY	ASSLY PASS. BODY PETROL_BSVI-BY	Piaggio spare parts (POP)
6B000758CB	ASSLY PASS. BODY PETROL_BSVI-CB	Piaggio spare parts (POP)
6B000758EG	ASSLY PASS. BODY PETROL_BSVI-EG	Piaggio spare parts (POP)
6B000758GY	ASSLY PASS. BODY PETROL_BSVI-GY	Piaggio spare parts (POP)
6B000758NB	ASSLY PASS. BODY PETROL_BSVI-NB	Piaggio spare parts (POP)
6B001806BL	ASSLY PASS.BODY Auto+ 230cc LPG BS6-BL	Piaggio spare parts (POP)
6B001806BW	ASSLY PASS.BODY Auto+ 230cc LPG BS6-BW	Piaggio spare parts (POP)
6B001806BY	ASSLY PASS.BODY Auto+ 230cc LPG BS6-BY	Piaggio spare parts (POP)
6B001806CB	ASSLY PASS.BODY Auto+ 230cc LPG BS6-CB	Piaggio spare parts (POP)
6B001806EG	ASSLY PASS.BODY Auto+ 230cc LPG BS6-EG	Piaggio spare parts (POP)
6B001806GY	ASSLY PASS.BODY Auto+ 230cc LPG BS6-GY	Piaggio spare parts (POP)
6B001806NB	ASSLY PASS.BODY Auto+ 230cc LPG BS6-NB	Piaggio spare parts (POP)
6B001806WR	ASSLY PASS.BODY Auto+ 230cc LPG BS6-WR	Piaggio spare parts (POP)

6B000556BL	ASSLY PASS.BODY D+5 BS6 DSL-BL	Piaggio spare parts (POP)
6B000556BW	ASSLY PASS.BODY D+5 BS6 DSL-BW	Piaggio spare parts (POP)
6B000556BY	ASSLY PASS.BODY D+5 BS6 DSL-BY	Piaggio spare parts (POP)
6B000556CB	ASSLY PASS.BODY D+5 BS6 DSL-CB	Piaggio spare parts (POP)
6B000556EG	ASSLY PASS.BODY D+5 BS6 DSL-EG	Piaggio spare parts (POP)
6B000556GY	ASSLY PASS.BODY D+5 BS6 DSL-GY	Piaggio spare parts (POP)
6B000556WR	ASSLY PASS.BODY D+5 BS6 DSL-WR	Piaggio spare parts (POP)
6B000556	ASSLY PASSENGER BODY	Piaggio spare parts (POP)
6B001031LB	ASSLY PASSENGER BODY	Piaggio spare parts (POP)
6B000847	ASSLY PASSENGER BODY CALESSINO	Piaggio spare parts (POP)
6B000847ED	ASSLY PASSENGER BODY CALESSINO_ED	Piaggio spare parts (POP)
6B000965	ASSLY PASSENGER BODY CNG/LPG	Piaggio spare parts (POP)
6B000758	ASSLY PASSENGER BODY PETROL	Piaggio spare parts (POP)
6B001109BL	ASSLY PASSENGER BODY WITH TAIL GATE-BL	Piaggio spare parts (POP)
6B002271BL	ASSLY PASSENGER BODY WITH TAIL GATE-BL	Piaggio spare parts (POP)
6B001109BW	ASSLY PASSENGER BODY WITH TAIL GATE-BW	Piaggio spare parts (POP)
6B002271BW	ASSLY PASSENGER BODY WITH TAIL GATE-BW	Piaggio spare parts (POP)
6B001109BY	ASSLY PASSENGER BODY WITH TAIL GATE-BY	Piaggio spare parts (POP)
6B002271BY	ASSLY PASSENGER BODY WITH TAIL GATE-BY	Piaggio spare parts (POP)
6B001109CB	ASSLY PASSENGER BODY WITH TAIL GATE-CB	Piaggio spare parts (POP)
6B002271CB	ASSLY PASSENGER BODY WITH TAIL GATE-CB	Piaggio spare parts (POP)
6B001109EG	ASSLY PASSENGER BODY WITH TAIL GATE-EG	Piaggio spare parts (POP)
6B002271EG	ASSLY PASSENGER BODY WITH TAIL GATE-EG	Piaggio spare parts (POP)
6B002271GY	ASSLY PASSENGER BODY WITH TAIL GATE-GY	Piaggio spare parts (POP)
6B001109NB	ASSLY PASSENGER BODY WITH TAIL GATE-NB	Piaggio spare parts (POP)
6B002271NB	ASSLY PASSENGER BODY WITH TAIL GATE-NB	Piaggio spare parts (POP)
6B001109WR	ASSLY PASSENGER BODY WITH TAIL GATE-WR	Piaggio spare parts (POP)
6B002271WR	ASSLY PASSENGER BODY WITH TAIL GATE-WR	Piaggio spare parts (POP)
652019	ASSLY PIANO SWITCH	Piaggio spare parts (POP)
605375	ASSLY REAR BUMPER CENTRAL PANEL - REAR B	Piaggio spare parts (POP)
B073727	ASSLY REAR VIEW MIRROR-LH	Piaggio spare parts (POP)
B073728	ASSLY REAR VIEW MIRROR-RH	Piaggio spare parts (POP)
B076036	ASSLY REVERSE GEAR CONTROL CABLE	Piaggio spare parts (POP)
6A001069	ASSLY REVERSE GEAR CONTROL CABLE	Piaggio spare parts (POP)
B024707CED	ASSLY RR ENG MTG CROSS MEMBER (CED)	Piaggio spare parts (POP)
B075318CED	ASSLY RR ENG MTG CROSS MEMBER (CED)	Piaggio spare parts (POP)
B077970	ASSLY VISUAL BARRIER BSIV	Piaggio spare parts (POP)
B077970ED	ASSLY VISUAL BARRIER BSIV	Piaggio spare parts (POP)
B073602	ASSLY WINDSHIELD COMPLETE PAX UPGR	Piaggio spare parts (POP)
B073602GY	ASSLY WINDSHIELD COMPLETE PAX UPGR (SPD)	Piaggio spare parts (POP)
B073602BL	ASSLY WINDSHIELD COMPLTE PAX UPGR-BL SPD	Piaggio spare parts (POP)
B073602BW	ASSLY WINDSHIELD COMPLTE PAX UPGR-BW SPD	Piaggio spare parts (POP)
B073602CB	ASSLY WINDSHIELD COMPLTE PAX UPGR-CB SPD	Piaggio spare parts (POP)
B073602EG	ASSLY WINDSHIELD COMPLTE PAX UPGR-EG SPD	Piaggio spare parts (POP)
B073602NB	ASSLY WINDSHIELD COMPLTE PAX UPGR-NB SPD	Piaggio spare parts (POP)
B073602WR	ASSLY WINDSHIELD COMPLTE PAX UPGR-WR SPD	Piaggio spare parts (POP)
B006752	ASSLY WINDSHIELD WASHER TANK	Piaggio spare parts (POP)

632562	ASSLY WIPER MOTOR. 12V (RACK TYPE) 601	Piaggio spare parts (POP)
6A001204	ASSLY, AIR FILTER WITH MTG. BRACKET	Piaggio spare parts (POP)
B077259	ASSLY, BRACKET-AIR FILTER MTG	Piaggio spare parts (POP)
6A001065	ASSLY, BRACKET-AIR FILTER MTG	Piaggio spare parts (POP)
6A000786	ASSLY, ENGINE MTG. CROSS MEMBER	Piaggio spare parts (POP)
6A001196ED	ASSLY, REAR CROSS MBER ENGINE SUPT-ED	Piaggio spare parts (POP)
6A001242	ASSLY. HP TUBE CNG VALVE TO PR. REG.	Piaggio spare parts (POP)
6A000728	ASSLY. RADIATOR PIPE INLET/OUTLET	Piaggio spare parts (POP)
604547	ASSLY. TAIL LAMP LH.	Piaggio spare parts (POP)
604546	ASSLY. TAIL LAMP RH.	Piaggio spare parts (POP)
B024315BW	ASSLY.CHASSIS WITH DOORS COMPLETE-BW	Piaggio spare parts (POP)
B024315CB	ASSLY.CHASSIS WITH DOORS COMPLETE-CB	Piaggio spare parts (POP)
B024315CO	ASSLY.CHASSIS WITH DOORS COMPLETE-CO	Piaggio spare parts (POP)
B024315GY	ASSLY.CHASSIS WITH DOORS COMPLETE-GY	Piaggio spare parts (POP)
B024315SY	ASSLY.CHASSIS WITH DOORS COMPLETE-SY	Piaggio spare parts (POP)
B024315WR	ASSLY.CHASSIS WITH DOORS COMPLETE-WR	Piaggio spare parts (POP)
6A000278	ASSY BANJO BOLT (M14) WITH STRAINER	Piaggio spare parts (POP)
6A001652	ASSY BKT REAR, BATTERY DOCK MTG	Piaggio spare parts (POP)
B074016	Assy Bracket Plate& weldnut	Piaggio spare parts (POP)
B002795	ASSY CARTRIDGEGE (03 26 016 0)	Piaggio spare parts (POP)
B012143	ASSY CCV VALVE HOSE	Piaggio spare parts (POP)
652430	ASSY CHAIN TAIL GATE	Piaggio spare parts (POP)
B074373	ASSY CHAIN TAIL GATE	Piaggio spare parts (POP)
03G161206	Assy Cover Rear and Adaptor	Piaggio spare parts (POP)
6A001657	ASSY ELE. FUEL PUMP (PRICOL)	Piaggio spare parts (POP)
1A000831	ASSY FAN	Piaggio spare parts (POP)
B017327	ASSY FAN	Piaggio spare parts (POP)
B018993	ASSY FAN	Piaggio spare parts (POP)
B008809	ASSY FR. ENG. MTG. CROSS MEMBER-510	Piaggio spare parts (POP)
B073995	ASSY FR. ENG. MTG. CROSS MEMBER-650	Piaggio spare parts (POP)
B002828	ASSY FRONT BUMPER	Piaggio spare parts (POP)
B006790	ASSY FRONT BUMPER WITH CREST	Piaggio spare parts (POP)
6A001136	ASSY FUEL FEED PIPE (TANK TO ENGINE)	Piaggio spare parts (POP)
6A001243	ASSY FUEL FEED PIPE (TANK TO INTAKE)	Piaggio spare parts (POP)
6A000086	ASSY FUEL TANK	Piaggio spare parts (POP)
6A000578	ASSY FUEL TANK WITH TANK UNIT	Piaggio spare parts (POP)
B075879	ASSY HANDLE WINDOW WINDING	Piaggio spare parts (POP)
613767	ASSY HANDLE WINDOW WINDING	Piaggio spare parts (POP)
889619	ASSY RAIL SUPPORT BRACKET	Piaggio spare parts (POP)
6A000581	ASSY REVERSE CABLE	Piaggio spare parts (POP)
6A000582	ASSY REVERSE CABLE D5S	Piaggio spare parts (POP)
6A000652	ASSY STRAP, CNG CYLINDER MTG (30L)	Piaggio spare parts (POP)
B078821	ASSY TUBE FUEL TANK FILLER	Piaggio spare parts (POP)
B074323	ASSY, ECU SUPPORT	Piaggio spare parts (POP)
B023363	ASSY, ECU SUPPORT	Piaggio spare parts (POP)
B008849	ASSY,MUDGUARD & BAFFLE LH	Piaggio spare parts (POP)
661564	ASSY,MUDGUARD & BAFFLE LH	Piaggio spare parts (POP)

B008853	ASSY,MUDGUARD & BAFFLE RH	Piaggio spare parts (POP)
661567	ASSY,MUDGUARD & BAFFLE RH	Piaggio spare parts (POP)
03A160019	ASSY. RINGDOG & GEAR 2 L	Piaggio spare parts (POP)
03A160020	ASSY. RINGDOG & GEAR 4 L	Piaggio spare parts (POP)
6A001588	ASSY. BRACKET FOR RADIATOR GUARD	Piaggio spare parts (POP)
B077370	ASSY. BRACKET, CATCON SUPPORT	Piaggio spare parts (POP)
B023714	ASSY. BUMP STOP BRACKET LH	Piaggio spare parts (POP)
B023713	ASSY. BUMP STOP BRACKET RH	Piaggio spare parts (POP)
E43510715	ASSY. CRANKSHAFT WITH SLEEVE	Piaggio spare parts (POP)
E43510715P	ASSY. CRANKSHAFT WITH SLEEVE	Piaggio spare parts (POP)
03A160023	ASSY. CROSSGATE & NIPPLE	Piaggio spare parts (POP)
03A160027	ASSY. DRIVE SHAFT & CROSS PI	Piaggio spare parts (POP)
03A160026	ASSY. DRIVE SHAFT & CROSS PIN	Piaggio spare parts (POP)
6A001650	ASSY. FRONT BKT, BATTERY MTG DOCK	Piaggio spare parts (POP)
6A000476	ASSY. FUEL FEED PIPE (TANK TO ENGINE)	Piaggio spare parts (POP)
6A000955	ASSY. FUEL FEED PIPE (TANK TO ENGINE)	Piaggio spare parts (POP)
6A000896	ASSY. FUEL FILLER NECK	Piaggio spare parts (POP)
6A001120	ASSY. FUEL TANK COMPLETE (LIMP-HOME)	Piaggio spare parts (POP)
6A000527	ASSY. FUEL TANK W/O TANK UNIT	Piaggio spare parts (POP)
6A000528	ASSY. FUEL TANK WITH TANK UNIT	Piaggio spare parts (POP)
6A001095	ASSY. FUEL TANK WITH TANK UNIT	Piaggio spare parts (POP)
B076491	ASSY. OF BOX AND POCKET CONSOLE BOX	Piaggio spare parts (POP)
B003938	ASSY. OF BOX AND POCKET CONSOLE BOX	Piaggio spare parts (POP)
659926	ASSY. OF BOX AND POCKET, CONSOLE BOX	Piaggio spare parts (POP)
ED43350	ASSY. OF GOVERNOR LEVER AND PI	Piaggio spare parts (POP)
01A110002	ASSY. OIL SEPARATOR	Piaggio spare parts (POP)
6A001589	ASSY. PROTECTION GUARD FOR RADIATOR	Piaggio spare parts (POP)
B077287	ASSY. RADIATOR PIPE IN/OUTLET	Piaggio spare parts (POP)
B074103	ASSY. RADIATOR PIPE IN/OUTLET	Piaggio spare parts (POP)
B075422	ASSY. RADIATOR PIPE IN/OUTLET PORTER 600	Piaggio spare parts (POP)
B041055	ASSY. RADIATOR PIPE IN/OUTLET PORTER 600	Piaggio spare parts (POP)
03A160021	ASSY. RINGDOG & GEAR 5 LAY	Piaggio spare parts (POP)
E43506639	ASSY. ROCKER COVER	Piaggio spare parts (POP)
B074010	ASSY. RR. ENG. MTG. CROSS MEMBER.	Piaggio spare parts (POP)
B024707	ASSY. RR. ENG. MTG. CROSS MEMBER.	Piaggio spare parts (POP)
B074010ED	ASSY. RR. ENG. MTG. CROSS MEMBER-ED	Piaggio spare parts (POP)
03A160635	ASSY. RUBBER BOOT INSIDE & STIFFNESS TUB	Piaggio spare parts (POP)
B002861	ASSY. SPARE WHEEL SUPPORT	Piaggio spare parts (POP)
B006223	ASSY. STEERING WHEEL (DIA. 325)	Piaggio spare parts (POP)
6A000874	ASSY. STR. FOR CYL. MTG. (20.6/40.6 LTR)	Piaggio spare parts (POP)
6A001648	ASSY. STRAP UPPER, BATTERY DOCK MTG.	Piaggio spare parts (POP)
6A000918	ASSY. STRAP, CYLINDER MTG.	Piaggio spare parts (POP)
03A160022	ASSY.LEVERGEAR SELECTION	Piaggio spare parts (POP)
6A000874ED	ASSY.STR.FOR CYL.MTG.(20.6/40.6 LTR)-ED	Piaggio spare parts (POP)
E10A120005	ASSY-GOVERNOR SUPPORT (20 TO 32) WITH CI	Piaggio spare parts (POP)
LG3588038	Atomizer Type 08	Piaggio spare parts (POP)
B024061	ATTACHMENT REAR SUSPENSION S/A	Piaggio spare parts (POP)

644022	ATTACHMENT REAR SUSPENSION S/A	Piaggio spare parts (POP)
662577	ATTACHMENT REAR SUSPENSION S/A	Piaggio spare parts (POP)
6B002637	AUTO DX STICKER (SIDE PANEL)	Piaggio spare parts (POP)
B078872	AUTO DX STICKER (SIDE PANEL)	Piaggio spare parts (POP)
929919	Auto LPG Hose - 1 (Reg. To FCU)	Piaggio spare parts (POP)
643871	AUTO LPG HOSE-1(VANAZ PT NO K-0415-070)	Piaggio spare parts (POP)
643873	AUTO LPG HOSE-2(VANAZ PT NO K-0415-08)	Piaggio spare parts (POP)
B078857	AUTO PLUS STICKER (SIDE PANEL)	Piaggio spare parts (POP)
LG5755163	AUTOMOT.VALVE SPRING (6900rpm)	Piaggio spare parts (POP)
B041984	AVM EMC MOUNTING	Piaggio spare parts (POP)
6A001168	AVM ENGINE MOUNTING FRONT LH	Piaggio spare parts (POP)
6A001169	AVM ENGINE MOUNTING FRONT RH	Piaggio spare parts (POP)
6A001170	AVM ENGINE MOUNTING RR	Piaggio spare parts (POP)
889299	AXIAL ROLLER CAGE	Piaggio spare parts (POP)
611901	AXLE BOLT	Piaggio spare parts (POP)
L8050033	AXLE SHAFT	Piaggio spare parts (POP)
L8050040	AXLE SHAFT	Piaggio spare parts (POP)
L2920201	AXLE SHAFT ASSY LDW 482	Piaggio spare parts (POP)
L8050013	AXLE SHAFT WITH I.P.	Piaggio spare parts (POP)
L80500588	AXLE SHAFT WITH I.P.	Piaggio spare parts (POP)
568146	AXLE SPACER ASSEMBLY	Piaggio spare parts (POP)
587814	AXLE SPACER ASSEMBLY	Piaggio spare parts (POP)
SM26104208	B.G. Fixing Screw	Piaggio spare parts (POP)
KIT96052R	B.P KIT 230 CC BSVI GAS	Piaggio spare parts (POP)
KIT95126R	B.P KIT Ape 501_300 CC CNG & LPG BSVI	Piaggio spare parts (POP)
KIT95101R	B.P KIT Ape 501_300 CC PTL BSVI	Piaggio spare parts (POP)
KIT96041R	B.P KIT APE CITY+ BS4 230CC	Piaggio spare parts (POP)
930101689A	B.WHITE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B075336	B075336PE-FILTER TO ENGINE-CITY PTL	Piaggio spare parts (POP)
568111	BACK ASSLY PLATE	Piaggio spare parts (POP)
B008377	BACK COVER	Piaggio spare parts (POP)
193756	BACK DOOR COMPLETE PICK UP - OLD	Piaggio spare parts (POP)
940100	Back Panel with read hook attachment_HFI	Piaggio spare parts (POP)
940155	Back Panel V1 with read hook attachment	Piaggio spare parts (POP)
E5406370420	BACK PLATE	Piaggio spare parts (POP)
E10G110026	BACK PLATE	Piaggio spare parts (POP)
E53007998	BACK PLATE	Piaggio spare parts (POP)
E40001763	BACK PLATE	Piaggio spare parts (POP)
E40001792	BACK PLATE	Piaggio spare parts (POP)
E40031731	BACK PLATE (BLACK PAINTED) GL-400 II A	Piaggio spare parts (POP)
B001225	BACK PLATE ASSLY LH	Piaggio spare parts (POP)
B001228	BACK PLATE ASSLY RH	Piaggio spare parts (POP)
E43531740	Back plate for rope starter	Piaggio spare parts (POP)
605138	BACK REST ASSEMBLY	Piaggio spare parts (POP)
587848	BACK REST ASSLY	Piaggio spare parts (POP)
B001065	BACK REST PANEL	Piaggio spare parts (POP)
B001900	BACK REST SUPPORT TUBE ASSLY	Piaggio spare parts (POP)

B003897	BACK REST SUPPORT TUBE ASSLY	Piaggio spare parts (POP)
125411	BACKING COMMAND LEVER	Piaggio spare parts (POP)
1E002759	BACKREST 501	Piaggio spare parts (POP)
6B002578	BACKREST ASSEMBLY	Piaggio spare parts (POP)
6B001447	BACKREST ASSEMBLY - CARGO 501 BSVI	Piaggio spare parts (POP)
6B001458	BACKREST ASSEMBLY - CARGO 501 BSVI	Piaggio spare parts (POP)
LG5995023	BAFFLE FOR OIL COOLER	Piaggio spare parts (POP)
E03G100001	BAFFLE PLATE EXHAUST	Piaggio spare parts (POP)
E03G100003	BAFFLE PLATE INTAKE	Piaggio spare parts (POP)
645621	BAFFLE, RUBBE	Piaggio spare parts (POP)
E87020121	BAJO BOLT M6X1 (Piaggio spare parts (POP)
KD1111259	BALANCER SHAFT 15LD400-RY103	Piaggio spare parts (POP)
A01A080001	BALANCER SHAFT ASSY.	Piaggio spare parts (POP)
KD49362788	BALANCER SHFT CTRL GEAR	Piaggio spare parts (POP)
441006	BALENCER SHAFT BEARING EXTRACTOR	Piaggio spare parts (POP)
441005	BALENCER SHAFT BEARING PRESSING TOOL	Piaggio spare parts (POP)
E710825511	BALL	Piaggio spare parts (POP)
2139	BALL	Piaggio spare parts (POP)
L8255016	BALL	Piaggio spare parts (POP)
L8255014	BALL	Piaggio spare parts (POP)
E3824509	BALL	Piaggio spare parts (POP)
E25824511	Ball	Piaggio spare parts (POP)
436892	BALL BEARING	Piaggio spare parts (POP)
E87012210	BALL BEARING	Piaggio spare parts (POP)
485911	BALL BEARING	Piaggio spare parts (POP)
1F000671	BALL BEARING	Piaggio spare parts (POP)
1A017438R	BALL BEARING	Piaggio spare parts (POP)
1A007026	BALL BEARING	Piaggio spare parts (POP)
889292	BALL BEARING	Piaggio spare parts (POP)
1F000667	BALL BEARING	Piaggio spare parts (POP)
1F000668	BALL BEARING	Piaggio spare parts (POP)
007066R	BALL BEARING	Piaggio spare parts (POP)
L3010234	BALL BEARING	Piaggio spare parts (POP)
889293	BALL BEARING	Piaggio spare parts (POP)
30209	BALL BEARING - FRONT WHEEL HUB	Piaggio spare parts (POP)
B002664	BALL BEARING (6001/C3)	Piaggio spare parts (POP)
880255211R	BALL BEARING 25X52X15	Piaggio spare parts (POP)
1A013347	BALL BEARING 25x52x15	Piaggio spare parts (POP)
880204705	BALL BEARING 6204 (MAIN SHAFT)	Piaggio spare parts (POP)
L3010233	BALL BEARING 6305	Piaggio spare parts (POP)
LG3002086	BALL BEARING 6307 C3 35X80X21	Piaggio spare parts (POP)
KD3002077	BALL BEARING D35/15 11 THK	Piaggio spare parts (POP)
LG3001069	BALL BEARING D40/17 12 THK	Piaggio spare parts (POP)
B002093	BALL BEARING MAIN SHAFT	Piaggio spare parts (POP)
SST94176	Ball bearing puller for Ballencer shaft	Piaggio spare parts (POP)
660755	BALL BEARING PUNCH PRESSING HANDLE	Piaggio spare parts (POP)
970300544	Ball bearing removal dise for difterenti	Piaggio spare parts (POP)

970300596	BALL BEARING REMOVAL TOOL	Piaggio spare parts (POP)
880204717	BALL BEARING SKF/NRB 6204-Z	Piaggio spare parts (POP)
880204729	BALL BRG 6204-ZZ	Piaggio spare parts (POP)
880255209	BALL BRG 98205	Piaggio spare parts (POP)
E7500819	BALL BRG TATA 16010	Piaggio spare parts (POP)
243303	BALL BRG-RR WH AXLE-TATA 62/22	Piaggio spare parts (POP)
E500828022	BALL JOINT ASSLY	Piaggio spare parts (POP)
KIT95010	BALL KIT	Piaggio spare parts (POP)
KIT95010R	BALL KIT	Piaggio spare parts (POP)
1A011980R	BALLS BEARING	Piaggio spare parts (POP)
020895Y	BAND FOR PISTON RINGS	Piaggio spare parts (POP)
D7197387Z01	BAND, ENGINE SERVICE HOLE	Piaggio spare parts (POP)
D4553687205	BAND, STEERING RACK BOOT	Piaggio spare parts (POP)
D4553687502	BAND, STEERING RACK BOOT,	Piaggio spare parts (POP)
KD7270239	BANJO	Piaggio spare parts (POP)
604908	BANJO	Piaggio spare parts (POP)
E200190002	BANJO BOLT	Piaggio spare parts (POP)
E91901023	BANJO BOLT	Piaggio spare parts (POP)
E9190056	BANJO BOLT	Piaggio spare parts (POP)
604909	BANJO BOLT	Piaggio spare parts (POP)
E1441570056	BANJO BOLT	Piaggio spare parts (POP)
2911232700	BANJO BOLT	Piaggio spare parts (POP)
E260190067	BANJO BOLT	Piaggio spare parts (POP)
6A000769	BANJO BOLT	Piaggio spare parts (POP)
661229	BANJO BOLT (M10 X 1)	Piaggio spare parts (POP)
ESP650DFP029	BANJO BOLT -FEED PUMP	Piaggio spare parts (POP)
E91901030	BANJO BOLT -FEED PUMP	Piaggio spare parts (POP)
E07500822	Banjo bolt injector side	Piaggio spare parts (POP)
E60000831	BANJO BOLT M10X1	Piaggio spare parts (POP)
ESP650DFP027	BANJO BOLT M16X1.5	Piaggio spare parts (POP)
E274190059	BANJO BOLT M6	Piaggio spare parts (POP)
ESP650DFP003	BANJO BOLT M6x1x22	Piaggio spare parts (POP)
ESP650DFP004	BANJO BOLT M8x1.25x20(HOLEØ0.5)	Piaggio spare parts (POP)
E50000823	Banjo bolt M8x1x16	Piaggio spare parts (POP)
E50000812	BANJO BOLT-FEED PUMP	Piaggio spare parts (POP)
B042951	BANJO BOLT-FOR BANJO DIA 10X14&12THK	Piaggio spare parts (POP)
ESP650DFP028	BANJO BOLTM 10X1.5(FITTED ON VACUUM PUMP	Piaggio spare parts (POP)
E7101901012	BANJO BOLT-PUMP INLET	Piaggio spare parts (POP)
L7270250	BANJO FOR PRESSURE SWITCH	Piaggio spare parts (POP)
224565	BANJO UNION	Piaggio spare parts (POP)
231018	BANJO UNION M14 X 1.5	Piaggio spare parts (POP)
615557	BAR	Piaggio spare parts (POP)
ESP650DBP002	BARREL & PISTON ASSEMBLY KIT	Piaggio spare parts (POP)
ED41999	BARREL &PISTON KIT 530	Piaggio spare parts (POP)
A01A010018	BARREL AND PISTON ASSEMBLY KIT	Piaggio spare parts (POP)
6B000193	BARREL LOCK CLIP	Piaggio spare parts (POP)
ED41933	BARREL PISTON KIT	Piaggio spare parts (POP)

E870105206	BARREL PISTON KIT ASSEMBLY S	Piaggio spare parts (POP)
E87120590	Barrel Piston Kit Assy	Piaggio spare parts (POP)
E40020540	BARRELPISTONKITGL400AGENGINE	Piaggio spare parts (POP)
441040	BAS FOR DISMENTLING DIFF CAGE & SHAFT	Piaggio spare parts (POP)
B009682	BASE PLATE	Piaggio spare parts (POP)
B008060	BASE PLATE ASSLY.	Piaggio spare parts (POP)
652025	BASE S/A, SPARE WHEEL CARRIER	Piaggio spare parts (POP)
926509	BASE-DISMANTLING DIFF.CAGE &SHAFT PINION	Piaggio spare parts (POP)
660192	BASE-LH	Piaggio spare parts (POP)
632214	BASIN	Piaggio spare parts (POP)
B024948R	BAT + VE _BC SW -4ST REL(CITY 200 C/L)	Piaggio spare parts (POP)
B024948	BAT + VE _CUT OFF SW -4ST REL(PAX 200)	Piaggio spare parts (POP)
659925R	BAT +VE CABL-BAT_BC SW (CNG-GL-400AG)	Piaggio spare parts (POP)
B024949R	BAT CABLE +VE NO.-1(PAX200 PETROL)	Piaggio spare parts (POP)
B002457	BAT POSITIVE CABLE-CUT OFF SW -4ST RELAY	Piaggio spare parts (POP)
6D000812	BATTERY CABLE (BATT TO E-BOX)	Piaggio spare parts (POP)
B041880	BATT POSITIVE CABLE (CITY 200 GAS)	Piaggio spare parts (POP)
660800R	BATT +VE CABL- BATTERY TO CUTT OFF SW	Piaggio spare parts (POP)
643980R	BATT +VE CABLE -BATT TO CUT OFF SW	Piaggio spare parts (POP)
632351R	BATT CABLE POSITIVE (APE MP 601 CARGO)	Piaggio spare parts (POP)
587650R	BATTERIES FOR 3WH	Piaggio spare parts (POP)
6D000015R	BATTERY	Piaggio spare parts (POP)
587650	BATTERY (EK60L)	Piaggio spare parts (POP)
SST96023	Battery - BL1203	Piaggio spare parts (POP)
SST96019	Battery - BL2012	Piaggio spare parts (POP)
659791R	BATTERY POSITIVE CABLE - 501 LD	Piaggio spare parts (POP)
659791	BATTERY POSITIVE CABLE - APE DELUXE	Piaggio spare parts (POP)
6D000795	Battery (7.5KWh)	Piaggio spare parts (POP)
6D000769	BATTERY , AMARON (NMC)	Piaggio spare parts (POP)
940118	BATTERY , SPARE WHEEL LOCK WITH KEY	Piaggio spare parts (POP)
660800	BATTERY +VE - BATTERY TO CUTT OFF SWITCH	Piaggio spare parts (POP)
662566	BATTERY +VE CUT OFF SWITCH TO STARTER MO	Piaggio spare parts (POP)
659924	BATTERY +VE-CUT OFF SWITCH TO STARTER MO	Piaggio spare parts (POP)
6D000363	BATTERY 12V	Piaggio spare parts (POP)
639792	BATTERY 12V 10 Ah-YT12A-BS YUASA	Piaggio spare parts (POP)
652253	BATTERY 12V-35AH (CNG&LPG)	Piaggio spare parts (POP)
652253R	BATTERY 12V-35AH CNG/LPG	Piaggio spare parts (POP)
B006544	BATTERY 35 Ah	Piaggio spare parts (POP)
661308	BATTERY 50 AH - TATA	Piaggio spare parts (POP)
6D000189	BATTERY BASE PLATE ASSEMBLY	Piaggio spare parts (POP)
644837R	BATTERY CABLE +VE	Piaggio spare parts (POP)
B003188	BATTERY CABLE +VE (BATTERY TO STARTER M	Piaggio spare parts (POP)
B023620	BATTERY CABLE +VE (BNA)	Piaggio spare parts (POP)
B023620R	BATTERY CABLE +VE (BNA-BS-IV)	Piaggio spare parts (POP)
6D001033	BATTERY CABLE +VE (DIU DOCK-CONNECTOR	Piaggio spare parts (POP)
6D000343	BATTERY CABLE +VE (DIU DOCK-CONNECTOR)	Piaggio spare parts (POP)
B024846	BATTERY CABLE +VE (PORTER MINI)	Piaggio spare parts (POP)

644837	BATTERY CABLE +VE (VI-SON)	Piaggio spare parts (POP)
B078213	BATTERY CABLE +VE- 4ST TO ST.MOTOR(CITY)	Piaggio spare parts (POP)
B003188R	BATTERY CABLE +VE APE MINI 441	Piaggio spare parts (POP)
569145	BATTERY CABLE +VE WITHOUT RUBBER BOOT	Piaggio spare parts (POP)
B073355	BATTERY CABLE +VE(PORTER 1000-PHASE II)	Piaggio spare parts (POP)
B078212	BATTERY CABLE +VE-BATT. TO 4ST (CITY)	Piaggio spare parts (POP)
604892	BATTERY CABLE NEGATIVE	Piaggio spare parts (POP)
604892R	BATTERY CABLE NEGATIVE	Piaggio spare parts (POP)
660820R	BATTERY CABLE NEGATIVE	Piaggio spare parts (POP)
B042063	BATTERY CABLE NEGATIVE	Piaggio spare parts (POP)
660820	BATTERY CABLE NEGATIVE	Piaggio spare parts (POP)
6D000341	BATTERY CABLE NEGATIVE (DOCK TO DOCK)	Piaggio spare parts (POP)
6D000927	BATTERY CABLE NEGATIVE(JB TO E-BOX)	Piaggio spare parts (POP)
6D000198	BATTERY CABLE POSITIVE	Piaggio spare parts (POP)
6D000680	BATTERY CABLE POSITIVE	Piaggio spare parts (POP)
6D000664	BATTERY CABLE POSITIVE	Piaggio spare parts (POP)
605292	BATTERY CABLE POSITIVE (TAXI)	Piaggio spare parts (POP)
6D000342	BATTERY CABLE POSITIVE (DOCK TO DOCK)	Piaggio spare parts (POP)
1D002304	BATTERY CABLE POSITIVE NO.-1 BSIV HT	Piaggio spare parts (POP)
B074214	BATTERY CABLE POSITIVE NO.1 CITY CARGO P	Piaggio spare parts (POP)
B002182	BATTERY CABLE POSITIVE NO.1(APE CITY PE	Piaggio spare parts (POP)
B024949	BATTERY CABLE POSITIVE NO.1(APE PAX200 P	Piaggio spare parts (POP)
B002183	BATTERY CABLE POSITIVE NO.2 (APE CITY P	Piaggio spare parts (POP)
6D000926	BATTERY CABLE POSITIVE(JB TO E-BOX)	Piaggio spare parts (POP)
B003360	BATTERY CABLE -VE	Piaggio spare parts (POP)
644838R	BATTERY CABLE -VE	Piaggio spare parts (POP)
6D001034	BATTERY CABLE -VE (DIU DOCK-CONTROLLER)	Piaggio spare parts (POP)
6D000344	BATTERY CABLE -VE (DIU DOCK-CONTROLLER)	Piaggio spare parts (POP)
644838	BATTERY CABLE -VE (VI-SON)	Piaggio spare parts (POP)
6D000193	BATTERY CABLE -VE APE MID BODY	Piaggio spare parts (POP)
B003360R	BATTERY CABLE -VE APE MINI 441	Piaggio spare parts (POP)
6D000453	BATTERY CABLE -VE PIGTAIL, CONTROLLER	Piaggio spare parts (POP)
6D000805	BATTERY CABLE(BATTERY TO E-BOX)_E-CARGO	Piaggio spare parts (POP)
6D000475	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000476	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000477	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000474	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000817	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000662	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6D000743	BATTERY CABLE, POSITIVE	Piaggio spare parts (POP)
6B000031	BATTERY CARRIER ASSLY	Piaggio spare parts (POP)
6D000717	BATTERY CARRIER BASE ASSLY	Piaggio spare parts (POP)
6D000691	BATTERY CARRIER BASE ASSLY	Piaggio spare parts (POP)
6D000770	BATTERY CHARGER	Piaggio spare parts (POP)
6D000851	BATTERY CHARGER EXICOM	Piaggio spare parts (POP)
B003918	BATTERY COVER	Piaggio spare parts (POP)
605025	BATTERY COVER	Piaggio spare parts (POP)

568714	BATTERY COVER	Piaggio spare parts (POP)
B009483	BATTERY CUT OFF SW- (VE) - PAVNA	Piaggio spare parts (POP)
643996	BATTERY CUT OFF SWITCH	Piaggio spare parts (POP)
632223	BATTERY DIN55 MF - EXIDE (DOMESTIC)	Piaggio spare parts (POP)
B024576	BATTERY DIN55 MF - EXIDE (EXPORT)	Piaggio spare parts (POP)
6A001540	BATTERY DOCK ASSEMBLY - LH SIDE	Piaggio spare parts (POP)
6A001532	BATTERY DOCK ASSEMBLY - RH SIDE	Piaggio spare parts (POP)
6D000376	BATTERY DOCK MASTER	Piaggio spare parts (POP)
6D000377	BATTERY DOCK SLAVE	Piaggio spare parts (POP)
6D000850	BATTERY EXICOM	Piaggio spare parts (POP)
6A001561	BATTERY GLASS	Piaggio spare parts (POP)
6A001523	BATTERY GUIDE	Piaggio spare parts (POP)
6D000355	BATTERY HOLDING PLATE	Piaggio spare parts (POP)
B003978	BATTERY HOLDING PLATE	Piaggio spare parts (POP)
B079388	BATTERY MOUNTING ASSLY	Piaggio spare parts (POP)
6B000001	BATTERY MOUNTING ROD	Piaggio spare parts (POP)
567566	BATTERY NEGATIVE CABLE	Piaggio spare parts (POP)
6D000192	BATTERY PLATE ASSEMBLY	Piaggio spare parts (POP)
632351	Battery positive cable	Piaggio spare parts (POP)
643980	BATTERY POSITIVE CABLE - BATTERY TO CUT	Piaggio spare parts (POP)
6D000188	BATTERY PROTECTION COVER	Piaggio spare parts (POP)
6B000032	BATTERY SPACER	Piaggio spare parts (POP)
6D000357	BATTERY STAND S/A	Piaggio spare parts (POP)
B003415	BATTERY STAND S/A	Piaggio spare parts (POP)
B042895	BATTERY STAND S/A	Piaggio spare parts (POP)
6D001062	BATTERY SUN MOBILITY	Piaggio spare parts (POP)
B002921	BATTERY TRAY	Piaggio spare parts (POP)
6B000033	BATTERY TRAY	Piaggio spare parts (POP)
616649	BATTERY TRAY	Piaggio spare parts (POP)
568699	BATTERY(EK60L, EXP),ELECTROLYTE SP. GRAV	Piaggio spare parts (POP)
B006806	BATTERY(EXIDE _ EK 50 L)_ EXPORT (501)	Piaggio spare parts (POP)
B024474	BEADDING LINING	Piaggio spare parts (POP)
6B001160R	BEADING	Piaggio spare parts (POP)
6B001155R	Beading Dome Side Pillar	Piaggio spare parts (POP)
B074657	BEADING DOME SIDE PILLAR	Piaggio spare parts (POP)
B074637	BEADING DOME SIDE PILLAR	Piaggio spare parts (POP)
6B001159R	BEADING DOME SIDE PILLER	Piaggio spare parts (POP)
KD1611202	BEAERING	Piaggio spare parts (POP)
614432	BEAM SPARE FUEL TANK 870	Piaggio spare parts (POP)
125352	BEARING	Piaggio spare parts (POP)
D9004369004	BEARING	Piaggio spare parts (POP)
614429	BEARING	Piaggio spare parts (POP)
KD1611238	Bearing	Piaggio spare parts (POP)
614765	BEARING	Piaggio spare parts (POP)
03G160212	Bearing Input shaft	Piaggio spare parts (POP)
E87011780	BEARING ASSM MID	Piaggio spare parts (POP)
SM26246174	Bearing assy kit	Piaggio spare parts (POP)

E870101105	BEARING ASSY MID SUPPORT	Piaggio spare parts (POP)
970300559	Bearing collar pressing fixture	Piaggio spare parts (POP)
03G160612	Bearing Differential	Piaggio spare parts (POP)
020376Y	BEARING EXTRACTOR ADAPTOR HANDLE TOOL	Piaggio spare parts (POP)
441020	BEARING EXTRACTOR FOR MAIN SHAFT BEARING	Piaggio spare parts (POP)
441021	BEARING EXTRACTOR FOR PINION SHAFT	Piaggio spare parts (POP)
E07502290	Bearing half	Piaggio spare parts (POP)
E07509231	Bearing half u/s 0.25 mm	Piaggio spare parts (POP)
E07509232	Bearing half u/s 0.50mm	Piaggio spare parts (POP)
03G162003	BEARING KIT	Piaggio spare parts (POP)
ESP650DCR023	BEARING LARGE END- STD	Piaggio spare parts (POP)
B041962	BEARING LOCKING PLATE	Piaggio spare parts (POP)
B008502	BEARING LOCKING PLATE	Piaggio spare parts (POP)
B074521	BEARING LOCKING PLATE, LH	Piaggio spare parts (POP)
B074522	BEARING LOCKING PLATE, RH	Piaggio spare parts (POP)
888203	BEARING MAIN IDLER	Piaggio spare parts (POP)
E87012276	BEARING MID SUPPORT PAIR	Piaggio spare parts (POP)
03G160211	Bearing NJ Input and Drop shaft	Piaggio spare parts (POP)
03G160321	Bearing NJEGLayshaft and Drop gear	Piaggio spare parts (POP)
F000CD1011	Bearing Pedestal	Piaggio spare parts (POP)
1001328057	BEARING PEDESTAL	Piaggio spare parts (POP)
1001328055	BEARING PEDESTAL	Piaggio spare parts (POP)
03G160860	Bearing plain selector mech	Piaggio spare parts (POP)
03G160750	bearing plain shift rail	Piaggio spare parts (POP)
1F000774	BEARING RETAINING PLATE	Piaggio spare parts (POP)
882181	BEARING SECONDARY IDLER FRONT-SEMIFINISH	Piaggio spare parts (POP)
882182	BEARING SECONDARY IDLER REAR-SEMIFINISHE	Piaggio spare parts (POP)
L8061004	BEARING SET LDW 482	Piaggio spare parts (POP)
882955	BEARING SHELL - BIG END	Piaggio spare parts (POP)
B010387	BEARING SHELL - BIG END- UPPER AND LOWER	Piaggio spare parts (POP)
ESP650DCR024	BEARING STD	Piaggio spare parts (POP)
E07509235	Bearing std.	Piaggio spare parts (POP)
E07509234	Bearing STD.	Piaggio spare parts (POP)
E271171042	Bearing STD.	Piaggio spare parts (POP)
E07509225	Bearing u/s 0.5 mm	Piaggio spare parts (POP)
E07509248	Bearing u/s 0.5 mm	Piaggio spare parts (POP)
E60022261	BEARING U/S 0.5 mm (MAIN BEARING BUSH U/	Piaggio spare parts (POP)
E07509228	Bearing u/s 0.5mm	Piaggio spare parts (POP)
E07509226	Bearing u/s 1.0 mm	Piaggio spare parts (POP)
E07509249	Bearing u/s 1.0 mm	Piaggio spare parts (POP)
E07509229	Bearing u/s 1.0mm	Piaggio spare parts (POP)
L3010260	BEARING WITH SEAL	Piaggio spare parts (POP)
A01G030002	BEARING, MASS BALANCER	Piaggio spare parts (POP)
D9004364128	BEARING, NEEDLE ROLLER	Piaggio spare parts (POP)
D9004363147	BEARING, RADIAL BALL	Piaggio spare parts (POP)
E271164027	BEARING-LARGE END 75SR.	Piaggio spare parts (POP)
889247	BEARINGS RETAINING PLATE	Piaggio spare parts (POP)

B041171	BEARINGS RETAINING PLATE	Piaggio spare parts (POP)
1F000469	BEARINGS RETAINING PLATE	Piaggio spare parts (POP)
E60022264	BEARINGU/S1.0mm(MAINBEARINGBUSHU/S1.0mm)	Piaggio spare parts (POP)
B001721	BEEDING MUDGUARD REAR	Piaggio spare parts (POP)
L5715097	BEILEVILLE WASHER	Piaggio spare parts (POP)
L5715096	BEILEVILLE WASHER	Piaggio spare parts (POP)
L5715095	BEILEVILLE WASHER	Piaggio spare parts (POP)
LG7645005	BEL WASHER D10/6.4 0.7 THK	Piaggio spare parts (POP)
KD7555004	BEL WASHER D11/6.4 0.5 THK C70	Piaggio spare parts (POP)
KD7701227	BEL WASHER D11/6.4 0.5 THK C70	Piaggio spare parts (POP)
LG7645006	BEL WASHER D13/8.4 0.8 T	Piaggio spare parts (POP)
KD7555029	BEL WASHER D15/8.4 0.8 THK C70	Piaggio spare parts (POP)
E87001786A	BELL HOUSING	Piaggio spare parts (POP)
E87121785	Bell Housing (Machined)	Piaggio spare parts (POP)
B018464	BELLEVILLE SPRING	Piaggio spare parts (POP)
1A009089	BELLEVILLE SPRING	Piaggio spare parts (POP)
875970	BELLEVILLE WASHER	Piaggio spare parts (POP)
6C000016	BELLOW	Piaggio spare parts (POP)
6C000255	BELLOW	Piaggio spare parts (POP)
198618P	BELLOW	Piaggio spare parts (POP)
198618	BELLOW	Piaggio spare parts (POP)
587886	BELLOW AIR CLEANER	Piaggio spare parts (POP)
127012019	BELLOW CLUTCH ACTUATING	Piaggio spare parts (POP)
569460	BELLOW FOR A/FILTER (KUBOTA MAKE)	Piaggio spare parts (POP)
661489	BELLOW JOIN CONNECTOR- ENGINE	Piaggio spare parts (POP)
920015	Bellow Kit	Piaggio spare parts (POP)
MS254002	BELLOW PRESSING FIXTURE	Piaggio spare parts (POP)
130012018	BELLOW-PROP SHAFT	Piaggio spare parts (POP)
568608	BELLOWS	Piaggio spare parts (POP)
632855	BELLOWS	Piaggio spare parts (POP)
645649	BELLOWS, JOIN CONNECTOR-ENGINE	Piaggio spare parts (POP)
662562	BELLOW-TOOL BOX	Piaggio spare parts (POP)
E40006431	BELT	Piaggio spare parts (POP)
B010777	BELT - FEAD	Piaggio spare parts (POP)
E18G140015	BELT (Length=991mm)	Piaggio spare parts (POP)
ESP650DST004	BELT (Length=991mm)	Piaggio spare parts (POP)
566906R	BELT ASSY FR SEAT 3 POINTS ELR TYPE LH	Piaggio spare parts (POP)
566904R	BELT ASSY FR SEAT 3 POINTS ELR TYPE RH	Piaggio spare parts (POP)
660426R	BELT ASSY FR SEAT 3 PT LH (APE MINI)	Piaggio spare parts (POP)
B008734R	BELT ASSY FR SEAT 3 PT LH (APE TRUK)	Piaggio spare parts (POP)
B008735R	BELT ASSY FR SEAT 3 PT RH (APE TRUK)	Piaggio spare parts (POP)
660426	BELT ASSY FR SEAT 3 PT STATIC LH	Piaggio spare parts (POP)
660425	BELT ASSY FR SEAT 3 PT STATIC RH	Piaggio spare parts (POP)
E870051146A	BELT TENSIONER	Piaggio spare parts (POP)
E40005609	BELT TENSIONER ASSLY	Piaggio spare parts (POP)
L4110034	BELT TENSIONER WITH I.P.	Piaggio spare parts (POP)
970300602	BELT TENSIONER/ ADJUSTER TOOL	Piaggio spare parts (POP)

970300613	BELT TIMING PULLY LOCKING TOOL	Piaggio spare parts (POP)
587907	BELT,PASSENGER SEAT RETAINER	Piaggio spare parts (POP)
6B001774	BELT,PASSENGER SEAT RETAINER	Piaggio spare parts (POP)
1E000769	BELTS SEAT	Piaggio spare parts (POP)
B073963	BEND PIPE	Piaggio spare parts (POP)
587829	BENJO BOLT	Piaggio spare parts (POP)
E07500819	BENJO BOLT	Piaggio spare parts (POP)
E7101901013	BENJO BOLT	Piaggio spare parts (POP)
7608	BENT SPR WASHER DIA 6	Piaggio spare parts (POP)
16319	BENT SPR WASHER DIA 8	Piaggio spare parts (POP)
6965	BENT SPRING WASHER 5,3x20x0,5	Piaggio spare parts (POP)
LG9445012	Bent Tube	Piaggio spare parts (POP)
L1165006	BENZING RING D.7 UNI 743	Piaggio spare parts (POP)
B074433	BEZEL_HEADLAMP BLINKER (LH)	Piaggio spare parts (POP)
B074434	BEZEL_HEADLAMP BLINKER (RH)	Piaggio spare parts (POP)
B041882	BIDDING FOR HEAD LINING ROOF	Piaggio spare parts (POP)
894866	BIKE COVER RSV4	Piaggio spare parts (POP)
932311	BJ Boot Kit DRIVE SHAFT P1000	Piaggio spare parts (POP)
932310	BJ set LH & RH DRIVE SHAFT P1000	Piaggio spare parts (POP)
A01M100004	BKT - EGR SUPPORT - 2	Piaggio spare parts (POP)
B003809	BKT AIR FILTER MTG LGA280 ASSLY	Piaggio spare parts (POP)
126060019	BKT ASSLY	Piaggio spare parts (POP)
B001197	BKT ASSLY CLAMPSHELL FRONT	Piaggio spare parts (POP)
B073268	BKT CABIN LAMP MOUNTING	Piaggio spare parts (POP)
6A000333	BKT ENGINE MOUNT LH	Piaggio spare parts (POP)
604750	BKT FOR FILTER	Piaggio spare parts (POP)
615567	BKT INSTR. PANEL LWR LH S/A	Piaggio spare parts (POP)
113278	BKT RETENTION RING (41736)	Piaggio spare parts (POP)
614445	BKT S/A SPARE WHEEL CARR	Piaggio spare parts (POP)
B008712	BKT SILENCER	Piaggio spare parts (POP)
B006851	BKT SPRING MTG CROSSPIECE	Piaggio spare parts (POP)
B074040	BKT SPRING MTG CROSSPIECE	Piaggio spare parts (POP)
B006852	BKT SPRING MTG HANDLE BAR	Piaggio spare parts (POP)
ESP650DBT002	BKT WIRING HARNESS-INTAKE MANIFOLD	Piaggio spare parts (POP)
6D000672	BKT, BATTERY HOLDING	Piaggio spare parts (POP)
6D000838	BKT, CHARGER CONN MTG	Piaggio spare parts (POP)
6D001026	BKT, E-BOX MTG ASSLY	Piaggio spare parts (POP)
6D000829	BKT, E-BOX MTG ASSLY	Piaggio spare parts (POP)
6D000858	BKT, E-BOX MTG TUBE ASSLY	Piaggio spare parts (POP)
6D000253	BKT, FUSE BOX , ASSEMBLY	Piaggio spare parts (POP)
6D000265	BKT, FUSE BOX MOUNTING FRONT ASSEMBLY	Piaggio spare parts (POP)
6D000240	BKT, IP-MAIN CONNECTOR PARKING	Piaggio spare parts (POP)
6D000498	BKT, IP-MAIN CONNECTOR PARKING	Piaggio spare parts (POP)
B042765	BKT. BACKREST MTG. LH	Piaggio spare parts (POP)
B042766	BKT. BACKREST MTG. RH	Piaggio spare parts (POP)
B009428	BKT. CATCON MTG. ON ENGINE	Piaggio spare parts (POP)
127471019	BKT. CLUTCH CABLE GUIDE	Piaggio spare parts (POP)

604749	BKT. FILTER HOLDER	Piaggio spare parts (POP)
B006737	BKT. FOR CATCON SUPPORT	Piaggio spare parts (POP)
B073982	BKT. FOR DASHBOARD TOP MTG,	Piaggio spare parts (POP)
B041296	BKT. INSTR. PANEL LOWER LH S/A	Piaggio spare parts (POP)
B041297	BKT. INSTR. PANEL LOWER RH S/A	Piaggio spare parts (POP)
644488	BKT. INSTR. PANEL LWR RH S/A	Piaggio spare parts (POP)
E10M070014	BKT. MUFFLER ASSLY ENGINE SIDE Ape city	Piaggio spare parts (POP)
B076274	BKT. REVERSE CABLE CONSTRAINT	Piaggio spare parts (POP)
B008716	BKT. SILENCER SUPPORT ASSY	Piaggio spare parts (POP)
B041261	BKT. STEERING POST COVER MTG.S/A	Piaggio spare parts (POP)
B075593	BKT. SUB ASSLY. ENGINE SUPPORT REAR	Piaggio spare parts (POP)
6A001199	BKT. SUB ASSLY. ENGINE SUPPORT REAR	Piaggio spare parts (POP)
126050014	BKT. WITH ROLLER ASSLY	Piaggio spare parts (POP)
SP126050014	BKT. WITH ROLLER ASSLY - SPD	Piaggio spare parts (POP)
ED30302	BKT.STARTER MOUNTING	Piaggio spare parts (POP)
644806	BKT:- BATTERY CUT OFF SWITCH MTG.	Piaggio spare parts (POP)
B002219	BKT-BACKREST REINFORCEMEN	Piaggio spare parts (POP)
930101627A	BLACK TOUCH UP SPRAY PAINT	Piaggio spare parts (POP)
930101627	BLACK TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
645075	BLADE ASSY. WIPER RH.	Piaggio spare parts (POP)
604557	BLADE FUSE (10A)	Piaggio spare parts (POP)
662395	BLADE FUSE (40 AMP)	Piaggio spare parts (POP)
662396	BLADE FUSE 70 AMP	Piaggio spare parts (POP)
662394	BLADE MINI FUSE (20 AMP)	Piaggio spare parts (POP)
662392	BLADE- MINI FUSE(10AMP)	Piaggio spare parts (POP)
662391	BLADE MINI FUSE(5 AMP)	Piaggio spare parts (POP)
662393	BLADE-MINI FUSE (15 AMP)	Piaggio spare parts (POP)
ED33240	BLANKING PLATE FOR FIP	Piaggio spare parts (POP)
F002H24799	Bleed Screw	Piaggio spare parts (POP)
B003300	BLEEDER SCREW	Piaggio spare parts (POP)
E260908037	BLEEDING SCREW	Piaggio spare parts (POP)
925502	BLEEDING SCREW (KBX P 7633398)	Piaggio spare parts (POP)
B002591	BLEND VALVE	Piaggio spare parts (POP)
6B002261BL	BLIND BODY-BL	Piaggio spare parts (POP)
6B002261BW	BLIND BODY-BW	Piaggio spare parts (POP)
6B002261BY	BLIND BODY-BY	Piaggio spare parts (POP)
6B002261CB	BLIND BODY-CB	Piaggio spare parts (POP)
6B002261EG	BLIND BODY-EG	Piaggio spare parts (POP)
6B002261GY	BLIND BODY-GY	Piaggio spare parts (POP)
6B002261NB	BLIND BODY-NB	Piaggio spare parts (POP)
6B002261WR	BLIND BODY-WR	Piaggio spare parts (POP)
616515	BLIND RIVET	Piaggio spare parts (POP)
B078274	BLINKER HOUSING (LH)	Piaggio spare parts (POP)
B078272	BLINKER HOUSING (RH)	Piaggio spare parts (POP)
B009136	BLOCK ASSLY DOOR LOCK LH (MFD)	Piaggio spare parts (POP)
B009137	BLOCK ASSLY DOOR LOCK RH (MFD)	Piaggio spare parts (POP)
B003357	BLOCK ASSLY OF COLLISION DOOR LOCK LH	Piaggio spare parts (POP)

B003356	BLOCK ASSLY OF COLLISION DOOR LOCK RH	Piaggio spare parts (POP)
182663	BLOCK COMPLETE OF COLLISION DOOR LOCK LH	Piaggio spare parts (POP)
182662	BLOCK COMPLETE OF COLLISION DOOR LOCK RH	Piaggio spare parts (POP)
182659	BLOCK FOR LOCK STOPPER =LH. DOOR	Piaggio spare parts (POP)
182658	BLOCK FOR LOCK STOPPER- R H DOOR	Piaggio spare parts (POP)
1U000025	BLOCK PISTON KIT	Piaggio spare parts (POP)
KIT1U000025	BLOCK PISTON KIT	Piaggio spare parts (POP)
89281	BLOCK PLATE STRAP	Piaggio spare parts (POP)
L9080259	BLOIN PLUG	Piaggio spare parts (POP)
615667	BLOW BY HOSE	Piaggio spare parts (POP)
B006678	BLOW BY HOSE (BS-III)	Piaggio spare parts (POP)
B011918	BLOW-BY COVER	Piaggio spare parts (POP)
616817	BLOW-BY HOSE	Piaggio spare parts (POP)
B011178	BLOW-BY HOSE	Piaggio spare parts (POP)
612336	BLOW-BY HOSE	Piaggio spare parts (POP)
B010917	BLOW-BY OIL DRAIN PIPE	Piaggio spare parts (POP)
1F000417	BLOW-BY PIPE FROM COVER TO SEPARATOR	Piaggio spare parts (POP)
1F000508	BLOW-BY PIPE FROM SEPARATOR TO INTAKE	Piaggio spare parts (POP)
B011194	BLOW-BY SUPPORT BRACKET	Piaggio spare parts (POP)
1F000250	BNA BSIII 1000 DIESEL ENGINE	Piaggio spare parts (POP)
KIT95024	BNA+ CONVERSION KIT	Piaggio spare parts (POP)
632697	BODY CAP (FUEL TANK LOCK 601 TAXI)	Piaggio spare parts (POP)
B006913	BODY MOUNTING BRACKET ASSLY CENTRE	Piaggio spare parts (POP)
127177	BODY OF BLINKER (RIGHT)	Piaggio spare parts (POP)
127176	BODY OF THE BLINKER (LEFT)	Piaggio spare parts (POP)
B001216BW	BODY S/A RR(BIANCO WHITE)	Piaggio spare parts (POP)
B006437CB	BODY S/A MAIN 482 BSIII (WITH DR) C BLUE	Piaggio spare parts (POP)
B073442BW	BODY S/A MAIN, PORTER 1000 W/O DOOR_BW	Piaggio spare parts (POP)
B073442ED	BODY S/A MAIN, PORTER 1000 W/O DOOR_ED	Piaggio spare parts (POP)
B073442GY	BODY S/A MAIN, PORTER 1000 W/O DOOR_GY	Piaggio spare parts (POP)
B073442LB	BODY S/A MAIN, PORTER 1000 W/O DOOR_LB	Piaggio spare parts (POP)
B073442NB	BODY S/A MAIN, PORTER 1000 W/O DOOR_NB	Piaggio spare parts (POP)
B073442WR	BODY S/A MAIN, PORTER 1000 W/O DOOR_WR	Piaggio spare parts (POP)
B074909ED	BODY S/A MAIN, PORTER 700 W/O DOOR ED	Piaggio spare parts (POP)
B074909BW	BODY S/A MAIN, PORTER 700 W/O DOOR-BW	Piaggio spare parts (POP)
B074909CO	BODY S/A MAIN, PORTER 700 W/O DOOR-CO	Piaggio spare parts (POP)
B074909LB	BODY S/A MAIN, PORTER 700 W/O DOOR-LB	Piaggio spare parts (POP)
B074909NB	BODY S/A MAIN, PORTER 700 W/O DOOR-NB	Piaggio spare parts (POP)
B074909PA	BODY S/A MAIN, PORTER 700 W/O DOOR-PA	Piaggio spare parts (POP)
B074909PB	BODY S/A MAIN, PORTER 700 W/O DOOR-PB	Piaggio spare parts (POP)
B074909SY	BODY S/A MAIN, PORTER 700 W/O DOOR-SY	Piaggio spare parts (POP)
B074909WR	BODY S/A MAIN, PORTER 700 W/O DOOR-WR	Piaggio spare parts (POP)
B074223ED	BODY S/A RR PORTER 700 (DTL PANELS) ED	Piaggio spare parts (POP)
B074223BW	BODY S/A RR PORTER 700 (DTL PANELS)-BW	Piaggio spare parts (POP)
B074223CO	BODY S/A RR PORTER 700 (DTL PANELS)-CO	Piaggio spare parts (POP)
B074223LB	BODY S/A RR PORTER 700 (DTL PANELS)-LB	Piaggio spare parts (POP)
B074223NB	BODY S/A RR PORTER 700 (DTL PANELS)-NB	Piaggio spare parts (POP)

B074223PA	BODY S/A RR PORTER 700 (DTL PANELS)-PA	Piaggio spare parts (POP)
B074223PB	BODY S/A RR PORTER 700 (DTL PANELS)-PB	Piaggio spare parts (POP)
B074223SY	BODY S/A RR PORTER 700 (DTL PANELS)-SY	Piaggio spare parts (POP)
B074223WR	BODY S/A RR PORTER 700 (DTL PANELS)-WR	Piaggio spare parts (POP)
613937	BODY S/A, MAIN 482	Piaggio spare parts (POP)
B074419BW	BODY S/A, RR- 1000 P2_BW	Piaggio spare parts (POP)
B074419ED	BODY S/A, RR- 1000 P2_ED	Piaggio spare parts (POP)
B074419GY	BODY S/A, RR- 1000 P2_GY	Piaggio spare parts (POP)
B074419LB	BODY S/A, RR- 1000 P2_LB	Piaggio spare parts (POP)
B074419NB	BODY S/A, RR- 1000 P2_NB	Piaggio spare parts (POP)
B074419WR	BODY S/A, RR- 1000 P2_WR	Piaggio spare parts (POP)
932289	BODY(Paxx 200)	Piaggio spare parts (POP)
E238175502	Bolt	Piaggio spare parts (POP)
E245176006	BOLT	Piaggio spare parts (POP)
E202177002	BOLT	Piaggio spare parts (POP)
E1177001	BOLT	Piaggio spare parts (POP)
E91760028	BOLT	Piaggio spare parts (POP)
D9165140614	BOLT	Piaggio spare parts (POP)
E1177004	BOLT	Piaggio spare parts (POP)
D9004101587	BOLT	Piaggio spare parts (POP)
E9176003	BOLT	Piaggio spare parts (POP)
D9163140620	BOLT	Piaggio spare parts (POP)
E11770004	BOLT	Piaggio spare parts (POP)
D9111571030	BOLT	Piaggio spare parts (POP)
E9177006	BOLT	Piaggio spare parts (POP)
E07500430	Bolt	Piaggio spare parts (POP)
D9163140616	BOLT	Piaggio spare parts (POP)
D9165140616	BOLT	Piaggio spare parts (POP)
117412	BOLT	Piaggio spare parts (POP)
D9165160822	BOLT	Piaggio spare parts (POP)
E50000164	BOLT	Piaggio spare parts (POP)
E5177011	BOLT	Piaggio spare parts (POP)
E50000157	BOLT	Piaggio spare parts (POP)
646194	BOLT	Piaggio spare parts (POP)
E271186008	Bolt	Piaggio spare parts (POP)
882087	BOLT - FLYWEEL TO CRANKSHAFT	Piaggio spare parts (POP)
920018	Bolt Kit	Piaggio spare parts (POP)
E87020126	BOLT LOCK COMMON	Piaggio spare parts (POP)
A01B140005	BOLT - M14X1.5	Piaggio spare parts (POP)
B010402	BOLT - PULLEY - CRANKSHAFT	Piaggio spare parts (POP)
B076457	BOLT - REVERSE SWITCH ACTUATION	Piaggio spare parts (POP)
A01B140002	BOLT - ROCKER COVER (M6x1x40)	Piaggio spare parts (POP)
E1177007	BOLT - STARTER MTG.	Piaggio spare parts (POP)
E87020122	BOLT TENSION	Piaggio spare parts (POP)
E87120141	BOLT - VACUUM PUMP DRIVER	Piaggio spare parts (POP)
6C000348	BOLT (M14 X 250)	Piaggio spare parts (POP)
6C000334	BOLT (M5X38)	Piaggio spare parts (POP)

E87120143	BOLT ASSEMBLY MAX SPEED WITH NUT	Piaggio spare parts (POP)
E50020140	BOLT ASSLY (PUMPSET) (EXCESS FUEL)	Piaggio spare parts (POP)
E50000128	BOLT CON ROD	Piaggio spare parts (POP)
E07502809	BOLT- CRANKSHAFT PULLEY	Piaggio spare parts (POP)
A01B140004	BOLT- EXH. MANIFOLD AND EGR PIPE (M8x25)	Piaggio spare parts (POP)
A01B140001	BOLT FOR ALTERNATOR (M8x1.25x85)	Piaggio spare parts (POP)
652520	BOLT FOR AXLE (VE WHEEL RIM)	Piaggio spare parts (POP)
108215	BOLT FOR AXLE M12 X 40	Piaggio spare parts (POP)
120238016	BOLT FOR SCREW TERMINAL	Piaggio spare parts (POP)
B001301	BOLT FRONT HUB	Piaggio spare parts (POP)
E87021032	BOLT FUEL SETTING	Piaggio spare parts (POP)
E87021060	BOLT FUEL SETTING WITH NUT	Piaggio spare parts (POP)
1A012161	BOLT M5	Piaggio spare parts (POP)
E276176034	BOLT M6 X 1 X 25	Piaggio spare parts (POP)
E9176007	BOLT M6X1X25	Piaggio spare parts (POP)
E10B140001	BOLT M6X22_ Sogefi	Piaggio spare parts (POP)
E40002818	BOLT M8X1	Piaggio spare parts (POP)
E43520139	BOLT M8X1.25X35	Piaggio spare parts (POP)
6A001088	BOLT M8X115	Piaggio spare parts (POP)
E50000160A	BOLT M8X1X45 (CON. ROD)	Piaggio spare parts (POP)
E50000160	BOLT M8X1X45 (CON. ROD)	Piaggio spare parts (POP)
E210177009	BOLT M8X35	Piaggio spare parts (POP)
B002486	BOLT M8X35-6g CL 12.9	Piaggio spare parts (POP)
264064	BOLT PIPE FITTING	Piaggio spare parts (POP)
ED41602	Bolt PTO flange fixing	Piaggio spare parts (POP)
ESP650DFP017	BOLT PTO SIDE	Piaggio spare parts (POP)
128307019	BOLT R.C. SPRING RETAINING	Piaggio spare parts (POP)
B077460	BOLT REAR AXLE	Piaggio spare parts (POP)
B001319	BOLT REAR AXLE	Piaggio spare parts (POP)
14745	BOLT SCREW TERMINAL M5X5.5	Piaggio spare parts (POP)
E87020104	BOLT VALVE CAMSHAFT	Piaggio spare parts (POP)
E43520140	BOLT M8 X 1 (435-201-40)	Piaggio spare parts (POP)
D4544587505	BOLT, DRAG LINK, SET	Piaggio spare parts (POP)
D9004101583	BOLT, HEXAGON	Piaggio spare parts (POP)
D9004101537	BOLT, HEXAGON	Piaggio spare parts (POP)
D9004101388	BOLT, HEXAGON	Piaggio spare parts (POP)
D9004101457	BOLT, HEXAGON	Piaggio spare parts (POP)
6D000908	BOLT, M3	Piaggio spare parts (POP)
6A000947	BOLT, M5X20	Piaggio spare parts (POP)
B074420	BOLT, W/WASHER	Piaggio spare parts (POP)
D9165140610	BOLT, W/WASHER	Piaggio spare parts (POP)
D9004119537	BOLT, W/WASHER	Piaggio spare parts (POP)
D9161160612	BOLT, W/WASHER	Piaggio spare parts (POP)
D9004119260	BOLT, W/WASHER	Piaggio spare parts (POP)
D9162140610	BOLT, W/WASHER	Piaggio spare parts (POP)
D9162140614	BOLT, W/WASHER	Piaggio spare parts (POP)
D9004119341	BOLT, W/WASHER	Piaggio spare parts (POP)

D9165140620	BOLT, W/WASHER	Piaggio spare parts (POP)
D9165160614	BOLT, W/WASHER	Piaggio spare parts (POP)
D9166140616	BOLT, W/WASHER	Piaggio spare parts (POP)
E50000434	BOLT,FLYWHEEL	Piaggio spare parts (POP)
D9004105165	BOLT,WASHER BAS.HEAD HEX	Piaggio spare parts (POP)
643691	BOLT/LOCK PLATE	Piaggio spare parts (POP)
6A000376	BOLTABLE TYPE LH BRACKET	Piaggio spare parts (POP)
6A000377	BOLTABLE TYPE RH BRACKET	Piaggio spare parts (POP)
03G160879	BOLT-BREATHER	Piaggio spare parts (POP)
A01B040001	BOLT-CONNECTING ROD	Piaggio spare parts (POP)
E87020128	BoltIdling/Maxi Speed with Nut	Piaggio spare parts (POP)
E87000181	BOLTLOCK MID	Piaggio spare parts (POP)
01B080001	BoltMounting Bracket(M8X50)	Piaggio spare parts (POP)
E87020105	BOLTPULLEY	Piaggio spare parts (POP)
E40020135	BOLTS FOR FMA STARTOR	Piaggio spare parts (POP)
A01B140003	BOLT-WINDOW COVER (M6X1X25)	Piaggio spare parts (POP)
6A000608	BONDED SEAL WASHER, M14	Piaggio spare parts (POP)
6A000768	BONDED SEAL WASHER, M14	Piaggio spare parts (POP)
925800	BONNET(VANAZ PT NO R-8104-190)	Piaggio spare parts (POP)
03G160628	boot rubber stiffness plate	Piaggio spare parts (POP)
03G160627	boot rubberinside	Piaggio spare parts (POP)
03G160631	Boot rubber holder	Piaggio spare parts (POP)
D3355587Z01	BOOT SHIFT LEVER	Piaggio spare parts (POP)
D4553587507	BOOT, STEERING RACK	Piaggio spare parts (POP)
03G160636	BOOT-RUBBER-OUTSIDE	Piaggio spare parts (POP)
D7555287Z03	BORD PROTECTION	Piaggio spare parts (POP)
SST96025	BOSCH Make -GDx 14,4 V-EC (Bare Tool)	Piaggio spare parts (POP)
B041392	BOTTLE CARRIER STAND	Piaggio spare parts (POP)
645141	BOTTLE CARRIER STAND	Piaggio spare parts (POP)
B073947	Bottle Holder	Piaggio spare parts (POP)
9451035101	Bottom Bowl	Piaggio spare parts (POP)
F002H20340	Bottom Bowl (ape mini)	Piaggio spare parts (POP)
B002787	BOTTOM COVER (03 34 002 0)	Piaggio spare parts (POP)
ED40904	Bottom seat for valve spring	Piaggio spare parts (POP)
ESP650DCH017	BOTTOM SHEET FOR VALVE SPRING	Piaggio spare parts (POP)
661469	BOTTOM SUPPORT, HOOD FRAME	Piaggio spare parts (POP)
E40006815	BOTTON	Piaggio spare parts (POP)
615092	BOX CONSOLE	Piaggio spare parts (POP)
116333	BOX FOR GUIDE COMPLETE OF R.H. DOOR	Piaggio spare parts (POP)
613326	BOX FR ASH	Piaggio spare parts (POP)
613276	BOX GLOVE	Piaggio spare parts (POP)
B003935	BOX GLOVE COMPARTMENT	Piaggio spare parts (POP)
B076286	BOX PACKING APE CITY BSIV CNG/LPG DOM	Piaggio spare parts (POP)
B076380	BOX PACKING APE CITY BSIV CNGLPG DOM DLX	Piaggio spare parts (POP)
B076294	BOX PACKING APE CITY BSIV DIESEL	Piaggio spare parts (POP)
B076282	BOX PACKING APE CITY BSIV PETROL	Piaggio spare parts (POP)
B076377	BOX PACKING APE CITY BSIV PETROL DLX	Piaggio spare parts (POP)

B074692	BOX PACKING APE CITY UPGRADE CNG/LPG DOM	Piaggio spare parts (POP)
B076485	BOX PACKING GR. APE CITY DSL STD	Piaggio spare parts (POP)
B073567	BOX PACKING KIT - PORTER 700	Piaggio spare parts (POP)
6G000128	BOX PACKING KIT (501 EV CARGO)	Piaggio spare parts (POP)
B041376	BOX PACKING KIT (DOM) APE CITY DIESEL	Piaggio spare parts (POP)
B024573IMPD	BOX PACKING KIT (DOM) MH BSIII- BL S/TOP	Piaggio spare parts (POP)
B024575IMPD	BOX PACKING KIT (DOM) NONMH BSIII -BLSOF	Piaggio spare parts (POP)
B076615	BOX PACKING KIT (DOM) NONMH BSIV -BLSOF	Piaggio spare parts (POP)
B076615_D5-AF	BOX PACKING KIT (DOM)NONMHBSIV- D5S - AF	Piaggio spare parts (POP)
B076615_D5	BOX PACKING KIT (DOM)NONMHBSIV-BLSOF D5S	Piaggio spare parts (POP)
6G000075	BOX PACKING KIT 501 BS6 D+5 PASS	Piaggio spare parts (POP)
B077476	BOX PACKING KIT 501 CNG-BIV DOMESTIC	Piaggio spare parts (POP)
B042085IMPD	BOX PACKING KIT 501 CNG-BSIII DOMESTIC	Piaggio spare parts (POP)
6G000085	BOX PACKING KIT APE XTRA DX/LDX BS6 DSL	Piaggio spare parts (POP)
B077476_CITYPLUS	BOX PACKING KIT CNG/LPG CITY PLUS	Piaggio spare parts (POP)
B076615_CITYPLUSD	BOX PACKING KIT DSL CITY PLUS	Piaggio spare parts (POP)
6G000132	BOX PACKING KIT E-CITY FIXED BATTERY	Piaggio spare parts (POP)
6G000091	BOX PACKING KIT NON-MH 501 BS6 AF PASS	Piaggio spare parts (POP)
6G000071	BOX PACKING KIT NON-MH 501 BS6 PASS	Piaggio spare parts (POP)
B076615_CITYPLUSP	BOX PACKING KIT PTL CITY PLUS	Piaggio spare parts (POP)
B074506	BOX PACKING KIT(DOM)NONMH BSIII 5 SEATER	Piaggio spare parts (POP)
B076713	BOX PACKING KIT(DOM)NONMH BSIV-BLSOF (B)	Piaggio spare parts (POP)
6G000063	BOX PACKING KIT _BS6 CITY DLX (CNG & LPG)	Piaggio spare parts (POP)
6G000060	BOX PACKING KIT _BS6 CITY DLX PETROL	Piaggio spare parts (POP)
B076615MH	BOX PACKING KIT (MH)BSIV STD-BLK SFT TOP	Piaggio spare parts (POP)
B076713MH	BOX PACKING KIT (MH)BSIV-BL SOFT TOP (B)	Piaggio spare parts (POP)
B076993	BOX PACKING KIT NON-MH 501 BSIV-YLW SOFT TOP	Piaggio spare parts (POP)
ED21966	Box speed & stop control	Piaggio spare parts (POP)
ED42982	BP KIT	Piaggio spare parts (POP)
KD4898066	BP KIT	Piaggio spare parts (POP)
E40010747	BP Kit – GL 400 BS II *	Piaggio spare parts (POP)
KIT96056R	BP Kit Ape City BS6 LPG	Piaggio spare parts (POP)
KIT96054R	BP Kit Ape City & Ape city+_ (PTL BS6)	Piaggio spare parts (POP)
441037	BP KIT COMPRESSION (PISTON RING)	Piaggio spare parts (POP)
KD4898079	BP KIT KD441 [MENP]	Piaggio spare parts (POP)
E40020513A	BP KIT MOD BS-II	Piaggio spare parts (POP)
E40020513	BP KIT MOD BS-II	Piaggio spare parts (POP)
E40020513P	BP KIT MOD BS-II	Piaggio spare parts (POP)
L85463518	BRACK. FOR CATCON LDW482 BSIII	Piaggio spare parts (POP)
D4445787Z01	BRACKET	Piaggio spare parts (POP)
D5515287Z01	BRACKET	Piaggio spare parts (POP)
1A017948	BRACKET	Piaggio spare parts (POP)
587816	Bracket	Piaggio spare parts (POP)
L8510156	BRACKET	Piaggio spare parts (POP)
6A000741	BRACKET	Piaggio spare parts (POP)
E50010606	BRACKET	Piaggio spare parts (POP)
6B001140	BRACKET	Piaggio spare parts (POP)

632674	Bracket	Piaggio spare parts (POP)
616534	Bracket	Piaggio spare parts (POP)
604809	BRACKET	Piaggio spare parts (POP)
6B000144	BRACKET	Piaggio spare parts (POP)
6B000150	BRACKET	Piaggio spare parts (POP)
568991	BRACKET	Piaggio spare parts (POP)
616533	Bracket	Piaggio spare parts (POP)
L8545915	BRACKET	Piaggio spare parts (POP)
6A000332	BRACKET	Piaggio spare parts (POP)
020714Y	BRACKET	Piaggio spare parts (POP)
A01M100003	BRACKET - EGR SUPPORT -1	Piaggio spare parts (POP)
920017	Bracket Kit	Piaggio spare parts (POP)
660100	BRACKET - OIL COOLER MTG.	Piaggio spare parts (POP)
E43518074	BRACKET OXICAT (SUB ASSLY)	Piaggio spare parts (POP)
03G160005	bracket reverse shaft machining	Piaggio spare parts (POP)
03G161707	bracket speedo cable	Piaggio spare parts (POP)
ED31880	Bracket & lever assy.	Piaggio spare parts (POP)
661437	BRACKET (FOR STARTER SAFETY SWITCH)	Piaggio spare parts (POP)
E870106116A	BRACKET ALTERNATOR	Piaggio spare parts (POP)
ED22885	Bracket alternator mounting	Piaggio spare parts (POP)
6B000176	BRACKET ASSEMBLY	Piaggio spare parts (POP)
ESP650DBT005	BRACKET ASSEMBLY FOR EGR SWITCH	Piaggio spare parts (POP)
ESP650DBT001	BRACKET ASSEMBLY FOR EGR SWITCH	Piaggio spare parts (POP)
E43521729	BRACKET ASSEMBLY FOR EGR SWITCH	Piaggio spare parts (POP)
6A001640	BRACKET ASSEMBLY, DOCK MTG. LH SIDE	Piaggio spare parts (POP)
6A001641	BRACKET ASSEMBLY, DOCK MTG. RH SIDE	Piaggio spare parts (POP)
6B001137	BRACKET ASSEMBLY-REAR HSRP MTG	Piaggio spare parts (POP)
6B000582	BRACKET ASSLY	Piaggio spare parts (POP)
645073	BRACKET ASSLY - LEVEL INDICATOR & SELECT	Piaggio spare parts (POP)
661566ED	BRACKET ASSLY AIR FILTER MTG	Piaggio spare parts (POP)
661566	BRACKET ASSLY AIR FILTER MTG	Piaggio spare parts (POP)
6C000419	BRACKET ASSLY, SPANNER MTG.	Piaggio spare parts (POP)
6B001118	BRACKET ASSLY-REAR HSRP MTG	Piaggio spare parts (POP)
B003678	BRACKET ASSY REVERSE SELECTOR	Piaggio spare parts (POP)
1E001033	BRACKET ASSY, BOOSTER SUPPORT	Piaggio spare parts (POP)
6A000617	BRACKET ASSY, FUEL LINE	Piaggio spare parts (POP)
B005853	BRACKET ASSY, SUPPORT MUFFLER	Piaggio spare parts (POP)
B024791	BRACKET ASSY. CLUTCH CABLE HOLDER ENG.SI	Piaggio spare parts (POP)
662389	BRACKET ASSY. GEAR CONTROL PAWL	Piaggio spare parts (POP)
B001192	BRACKET BACKREST MTG	Piaggio spare parts (POP)
B006720	BRACKET -CATCON MOUNTING (MT-441)	Piaggio spare parts (POP)
L8546351	Bracket Catcon Support	Piaggio spare parts (POP)
L8545721	BRACKET CONSTRAINT ALTERNATOR	Piaggio spare parts (POP)
186888	BRACKET DASH BOARD RH	Piaggio spare parts (POP)
ED41642	Bracket decompression cable	Piaggio spare parts (POP)
B023342	BRACKET ENGINE LATERAL STOPPER	Piaggio spare parts (POP)
645990	BRACKET FIXING DOME BAR	Piaggio spare parts (POP)

LG8546336	BRACKET FOR AIR FILTER	Piaggio spare parts (POP)
020857Y	BRACKET FOR CRANKSHAFT	Piaggio spare parts (POP)
B024150	BRACKET FOR FILTER SOLENOID VALVE MTG	Piaggio spare parts (POP)
587948	BRACKET FOR HANDLE	Piaggio spare parts (POP)
E10G140041	Bracket for Oxicat-Elliptical shape com.	Piaggio spare parts (POP)
E87020634	BRACKET FOR OXYCAT MOUNTING (LEFT SIDE	Piaggio spare parts (POP)
B007589	BRACKET FRONT RIGHT, DIE CAST	Piaggio spare parts (POP)
E87030624	Bracket Fulcrum & FDC Lever Assembly	Piaggio spare parts (POP)
B003333	BRACKET GLASS FRONT DOOR APE MINI	Piaggio spare parts (POP)
662425	BRACKET GLASS FRONT DOOR.	Piaggio spare parts (POP)
662500	BRACKET MTG. LH SIDE INDICATOR	Piaggio spare parts (POP)
662533	BRACKET MTG. RH SIDE INDICATOR	Piaggio spare parts (POP)
E43520672	BRACKET MUFFFLER EXSIDE	Piaggio spare parts (POP)
E40020654	BRACKET OIL COOLER	Piaggio spare parts (POP)
E87011619	BRACKET OIL SEPERATOR	Piaggio spare parts (POP)
E43530651	BRACKET REMOTE STOP	Piaggio spare parts (POP)
ED41174	BRACKET REMOTE STOP-2NUT HOLES	Piaggio spare parts (POP)
L8506129	BRACKET RETAINING SHAFT	Piaggio spare parts (POP)
B074004	BRACKET S/A FUEL FILTER SUPPORT	Piaggio spare parts (POP)
B007735	BRACKET S/A FUEL FILTER SUPPORT	Piaggio spare parts (POP)
660235	BRACKET S/A STRUT BAR LH	Piaggio spare parts (POP)
1E001606	BRACKET S/A, FUEL HOSE SUPPORT	Piaggio spare parts (POP)
1E002554	BRACKET S/A, AIR FILTER SUPPORT	Piaggio spare parts (POP)
613234	BRACKET S/A, GEAR CTR PAWL	Piaggio spare parts (POP)
D4807487Z02	BRACKET S/A, STRUT BAR,LH	Piaggio spare parts (POP)
B002580	BRACKET SIDE PANEL	Piaggio spare parts (POP)
B041460	BRACKET SNORKEL MTG	Piaggio spare parts (POP)
B041426	BRACKET SNORKEL MTG	Piaggio spare parts (POP)
E50010664	BRACKET STARTER	Piaggio spare parts (POP)
632412	BRACKET STRAP HOLDING	Piaggio spare parts (POP)
644474	BRACKET SUB-ASSLY, STRUT BAR, RH	Piaggio spare parts (POP)
ESP650DBT007	BRACKET VACCUM MODULATOR	Piaggio spare parts (POP)
E87005606	BRACKET WATER PUMP	Piaggio spare parts (POP)
6C000275	BRACKET WHEEL CARRIER WITH ASSLY.	Piaggio spare parts (POP)
602290	BRACKET WHEEL CARRIER WITH ASSLY	Piaggio spare parts (POP)
616541	BRACKET WHEEL CARRIER WITH PI	Piaggio spare parts (POP)
175316	BRACKET WHEEL CARRIER WITH PI	Piaggio spare parts (POP)
ESP650DBT003	BRACKET WIRING HARNESS-CRANKCASE	Piaggio spare parts (POP)
ESP650DBT009	BRACKET WIRING HARNESS-FDB	Piaggio spare parts (POP)
ESP650DBT010	BRACKET WIRINGHARNESS- ROCKER COVER	Piaggio spare parts (POP)
ESP650DBT008	BRACKET' Y' CONNECTOR	Piaggio spare parts (POP)
D7818487Z02	BRACKET, ACCELERATOR CONT	Piaggio spare parts (POP)
6D001015	BRACKET, BATTERY CONNECTOR PARKING	Piaggio spare parts (POP)
6A000649	BRACKET, CNG CYLINDER MTG. 30LTR	Piaggio spare parts (POP)
6A000920	BRACKET, CYLINDER MTG SUPPORT	Piaggio spare parts (POP)
6D000417	BRACKET, ECU MOUTING ASSLY	Piaggio spare parts (POP)
B023339	BRACKET, ENGINE SIDE LIMIT	Piaggio spare parts (POP)

B079029	BRACKET, FUEL FILTER MTG (MIDBODY)	Piaggio spare parts (POP)
B077783	BRACKET, FUEL LINE GUARD	Piaggio spare parts (POP)
1E002550	BRACKET, FUEL PIPE SUPPORT	Piaggio spare parts (POP)
B000693	BRACKET, FUEL PUMP SUPPORT	Piaggio spare parts (POP)
B074787	BRACKET, GEARBOX SUPPORT	Piaggio spare parts (POP)
6C000413	BRACKET, JACK SUPPORT	Piaggio spare parts (POP)
6D000962	BRACKET, JUNCTION BOX MTG	Piaggio spare parts (POP)
1E000402	BRACKET, LICENCE PLATE N.2	Piaggio spare parts (POP)
B002687	BRACKET, REAR END PIECE	Piaggio spare parts (POP)
B002957	BRACKET, REAR END PIECE ASSLY	Piaggio spare parts (POP)
D6628887Z01	BRACKET, TAIL GATE CHAIN,	Piaggio spare parts (POP)
D6628787Z01	BRACKET, TAIL GATE CHAIN,	Piaggio spare parts (POP)
658188	BRACKET, TIE ROD ANCHOR	Piaggio spare parts (POP)
D4735587Z02	BRACKET, TUBE CONNECTOR	Piaggio spare parts (POP)
D5512787Z01	BRACKET, WASHER	Piaggio spare parts (POP)
6D000840	BRACKET, WIRING HARNESS CLAMP MTG	Piaggio spare parts (POP)
ED41100	BRACKET,EXHAUST MUFFLER	Piaggio spare parts (POP)
565970	BRACKET,FR BUMPER MOUNTIN	Piaggio spare parts (POP)
6D001030	BRACKET,HARNESS MOUNTING CLIP	Piaggio spare parts (POP)
566015	BRACKET,HEADLAMP LWR	Piaggio spare parts (POP)
03G161813	bracketclutch&gear lever cable	Piaggio spare parts (POP)
03G161803	bracketcrossgate	Piaggio spare parts (POP)
ESP650DBT012	BRACKET-OMS RETURN PIPE MTG	Piaggio spare parts (POP)
ESP650DBT015	BRACKET-SPEED SENSOR MTG-MACHINED	Piaggio spare parts (POP)
ESP650DBT004	BRACKET-WIRING HARNESS-NEAR LUB OIL FILT	Piaggio spare parts (POP)
ESP650DBT011	BRACKET-WIRING HARNESS-STARTER MOTOR	Piaggio spare parts (POP)
ESP650DBT013	BRACKETWIRINGHARNESS-WATER PUMP	Piaggio spare parts (POP)
B023606	Brack,t,hose support,s/a	Piaggio spare parts (POP)
B074009	Brack,t,hose support,s/a	Piaggio spare parts (POP)
KD5976004	BRAID FILTER	Piaggio spare parts (POP)
B073342	BRAKE ASSLY REAR ø220, LH	Piaggio spare parts (POP)
B073343	BRAKE ASSLY REAR ø220, RH	Piaggio spare parts (POP)
660866	BRAKE ASSLY. RR LH	Piaggio spare parts (POP)
660867	BRAKE ASSY RR RH	Piaggio spare parts (POP)
662447	BRAKE ASSY. FR LH	Piaggio spare parts (POP)
B006624	BRAKE ASSY. FR LH (NON ASBESTOS)	Piaggio spare parts (POP)
662452	BRAKE ASSY. FR RH	Piaggio spare parts (POP)
B006623	BRAKE ASSY. FR RH (NON ASBESTOS)	Piaggio spare parts (POP)
660037	BRAKE ASSY. RR LH	Piaggio spare parts (POP)
B006626	BRAKE ASSY. RR LH (NON ASBESTOS)	Piaggio spare parts (POP)
B074618	BRAKE ASSY. RR LH (NON ASBESTOS)	Piaggio spare parts (POP)
660036	BRAKE ASSY. RR RH	Piaggio spare parts (POP)
B006625	BRAKE ASSY. RR RH (NON ASBESTOS)	Piaggio spare parts (POP)
B074617	BRAKE ASSY. RR RH (NON ASBESTOS)	Piaggio spare parts (POP)
1E001111	BRAKE BACKING PLATE ø220, RR, LH	Piaggio spare parts (POP)
652591	BRAKE BUNDY TUBE (3 WAY TO FR RH FLEXIB	Piaggio spare parts (POP)
652592	BRAKE BUNDY TUBE (FRONT)	Piaggio spare parts (POP)

B075835	BRAKE BUNDY TUBE FOR LH REAR WHEEL	Piaggio spare parts (POP)
B074313	BRAKE BUNDY TUBE FOR REAR WHEEL	Piaggio spare parts (POP)
B075836	BRAKE BUNDY TUBE FOR RH REAR WHEEL	Piaggio spare parts (POP)
B074311	BRAKE BUNDY TUBE TMC TO FRONT WHEEL	Piaggio spare parts (POP)
B075490	BRAKE BUNDY TUBE TMC TO FRONT WHEEL	Piaggio spare parts (POP)
B075491	BRAKE BUNDY TUBE TMC TO REAR WHEEL	Piaggio spare parts (POP)
6C000385	BRAKE BUNDY TUBE TO REAR LH	Piaggio spare parts (POP)
6C000384	BRAKE BUNDY TUBE TO REAR RH	Piaggio spare parts (POP)
652590	BRAKE BUNDYTUBE (5 WAY TO FR LH FLEXIBL	Piaggio spare parts (POP)
587616	BRAKE CYLINDER FR ASSLY (DIA. 22.225)	Piaggio spare parts (POP)
1E001038	BRAKE DISC	Piaggio spare parts (POP)
152580	BRAKE DRUM	Piaggio spare parts (POP)
152580P	BRAKE DRUM	Piaggio spare parts (POP)
661245	BRAKE DRUM	Piaggio spare parts (POP)
B077245	BRAKE DRUM (CAST IRON)	Piaggio spare parts (POP)
B024375	BRAKE DRUM ASSLY COMPLETE	Piaggio spare parts (POP)
B001379	BRAKE DRUM ASSLY COMPLETE	Piaggio spare parts (POP)
B042438P	BRAKE DRUM ASSLY-EURO CITY	Piaggio spare parts (POP)
B042438	BRAKE DRUM ASSLY-EURO CITY	Piaggio spare parts (POP)
B008066	BRAKE DRUM-APE MINI	Piaggio spare parts (POP)
604877	BRAKE FLUID TANK	Piaggio spare parts (POP)
605183	BRAKE FLUID TANK FIX.KNOB	Piaggio spare parts (POP)
B042696	BRAKE HOSE ASSLY.	Piaggio spare parts (POP)
661200	BRAKE HOSE ASSLY.	Piaggio spare parts (POP)
587624	BRAKE HOSE FR, FLEXIBLE PIPE	Piaggio spare parts (POP)
B001581	BRAKE HOSE FR, FLEXIBLE PIPE.	Piaggio spare parts (POP)
851049	Brake lever	Piaggio spare parts (POP)
896346	Brake lever	Piaggio spare parts (POP)
AP8121221	Brake lever pin	Piaggio spare parts (POP)
AP8124288	Brake light switch	Piaggio spare parts (POP)
B073788	BRAKE OIL BOTTLE	Piaggio spare parts (POP)
1E002748	BRAKE OIL FEEDING HOSE, NO.1	Piaggio spare parts (POP)
1E002749	BRAKE OIL FEEDING HOSE, NO.2	Piaggio spare parts (POP)
B073870	Brake oil mtg. Bkt	Piaggio spare parts (POP)
1E002556	BRAKE OIL RESERVOIR BRACKET	Piaggio spare parts (POP)
587773	BRAKE OIL TANK	Piaggio spare parts (POP)
1E001948	BRAKE OIL TANK	Piaggio spare parts (POP)
AP8113499	Brake oil tank	Piaggio spare parts (POP)
605441	BRAKE OIL TANK	Piaggio spare parts (POP)
896254	BRAKE PAD	Piaggio spare parts (POP)
893969	BRAKE PAD	Piaggio spare parts (POP)
6C000586	BRAKE PEDAL ASSEMBLY	Piaggio spare parts (POP)
B073497	BRAKE PEDAL ASSLY	Piaggio spare parts (POP)
B075492	BRAKE PEDAL ASSLY	Piaggio spare parts (POP)
6C000247	BRAKE PEDAL ASSLY	Piaggio spare parts (POP)
B076847	BRAKE PEDAL ASSLY	Piaggio spare parts (POP)
6C000118	BRAKE PEDAL ASSLY	Piaggio spare parts (POP)

6C000124	BRAKE PEDAL ASSLY WITH FOOT REST	Piaggio spare parts (POP)
147120018	BRAKE PEDAL ASSLY.	Piaggio spare parts (POP)
147110013	BRAKE PEDAL MTG. BKT. ASSLY	Piaggio spare parts (POP)
B073800	BRAKE PEDAL RETURN SPRING	Piaggio spare parts (POP)
B009250	BRAKE PEDAL SWITCH SUB ASSY	Piaggio spare parts (POP)
604760	BRAKE PEDAL WITH FOOT REST ASSLY	Piaggio spare parts (POP)
B042203	BRAKE PEDAL WITH FOOT REST ASSLY	Piaggio spare parts (POP)
127928	BRAKE PLATE THK=1.0	Piaggio spare parts (POP)
B075949	BRAKE PUMP PROTECTIVE SHIELD	Piaggio spare parts (POP)
B041160	BRAKE -PUMP TUBE OF RIGHT REAR WHEEL	Piaggio spare parts (POP)
644812	BRAKE -PUMP TUBE OF RIGHT REAR WHEEL(VE	Piaggio spare parts (POP)
652361	BRAKE REAR RIGHT SHOE WITH LEVER	Piaggio spare parts (POP)
602118	BRAKE REAR RIGHT SHOE WITH LEVER	Piaggio spare parts (POP)
602050	BRAKE RR LEFT SHOE WITH LEVER	Piaggio spare parts (POP)
SST6016	Brake Setting Special tool Porter-600	Piaggio spare parts (POP)
1E001112	BRAKE SHOE PLATE RH	Piaggio spare parts (POP)
272029	BRAKE SHOES S/A	Piaggio spare parts (POP)
6C000023	BRAKE TUBE	Piaggio spare parts (POP)
6C000024	BRAKE TUBE	Piaggio spare parts (POP)
6C000022	BRAKE TUBE	Piaggio spare parts (POP)
6C000197	BRAKE TUBE	Piaggio spare parts (POP)
B075852	BRAKE TUBE FOR REAR WHEEL	Piaggio spare parts (POP)
568162	BRAKE TUBE FOR REAR WHEEL	Piaggio spare parts (POP)
B042599	BRAKE TUBE FOR REAR WHEEL	Piaggio spare parts (POP)
B076880	BRAKE TUBE FOR REAR WHEELS	Piaggio spare parts (POP)
660333	BRAKE TUBE FOR REAR WHEELS	Piaggio spare parts (POP)
6C000025	BRAKE TUBE FRONT CIRCUIT, TMC-6WAY	Piaggio spare parts (POP)
1E001078	BRAKE TUBE FRONT CIRCUIT, TMC-6WAY	Piaggio spare parts (POP)
6C000026	BRAKE TUBE REAR CIRCUIT, TMC - 6 WAY	Piaggio spare parts (POP)
1E001079	BRAKE TUBE REAR CIRCUIT, TMC - 6 WAY	Piaggio spare parts (POP)
272031	BRAKE, RR LH SHOE WITH LEVER	Piaggio spare parts (POP)
272030	BRAKE, RR RH SHOE WITH LEVER	Piaggio spare parts (POP)
567498	BRAKE/REVERSE LIGHT SW(INTEGRAL CAP)-PAV	Piaggio spare parts (POP)
567498R	BRAKE/REVERSE LIGHT SWITCH	Piaggio spare parts (POP)
B041161	BRAKE-PUMP TUBE OF LEFT REAR WHEEL	Piaggio spare parts (POP)
644813	BRAKE-PUMP TUBE OF LEFT REAR WHEEL(VE)	Piaggio spare parts (POP)
920033	Brass shim(520PL10002)	Piaggio spare parts (POP)
B073891	Break Oil Assy	Piaggio spare parts (POP)
616887	BREATER TUBE (CARGO)	Piaggio spare parts (POP)
B010371	BREATHER	Piaggio spare parts (POP)
B041177	BREATHER 510	Piaggio spare parts (POP)
B001540	BREATHER ASSLY (VANAZ P/NO(R-8101-11)	Piaggio spare parts (POP)
ED40927	BREATHER ASSLY(METALLIC)	Piaggio spare parts (POP)
E50000426	BREATHER CAP ASSLY	Piaggio spare parts (POP)
E50000466	BREATHER CAP ASSY	Piaggio spare parts (POP)
E40020417	Breather cover nylon	Piaggio spare parts (POP)
A01M110003	BREATHER COVER PLATE	Piaggio spare parts (POP)

LG3430172	BREATHER DISC PLUG	Piaggio spare parts (POP)
E6548960144	BREATHER EXTENSION	Piaggio spare parts (POP)
E60037102	Breather extension	Piaggio spare parts (POP)
E60037132	BREATHER EXTENSION	Piaggio spare parts (POP)
932227	BREATHER HOSE(R-8106-VII-380)Paxx200	Piaggio spare parts (POP)
ED43405	BREATHER KIT	Piaggio spare parts (POP)
E43522257	BREATHER KIT GL435 BSIII	Piaggio spare parts (POP)
614966	BREATHER PIPE	Piaggio spare parts (POP)
B041018	BREATHER PIPE	Piaggio spare parts (POP)
CM001222	BREATHER PIPE	Piaggio spare parts (POP)
E40027136	BREATHER PIPE ASSLY.	Piaggio spare parts (POP)
E60006640	Breather plug assy.(Metallic)	Piaggio spare parts (POP)
LG5096102	Breather Protection sheet	Piaggio spare parts (POP)
E260969504	BREATHER VALVE	Piaggio spare parts (POP)
LG2145075	BREATHER VALVE CAP	Piaggio spare parts (POP)
LG9695025	BREATHER X LGA280 PRESS.LUB.	Piaggio spare parts (POP)
932230	BREATHER-I(R-8106-VI-240)Paxx200	Piaggio spare parts (POP)
932288	BREATHING CAP(BNA)	Piaggio spare parts (POP)
AP8145034	BREVA FOOT PEG - RH	Piaggio spare parts (POP)
567993	BRG RACE L/B(TH)	Piaggio spare parts (POP)
567992	BRG RACE L/T (TH)	Piaggio spare parts (POP)
567990	BRG RACE U/B (TH)	Piaggio spare parts (POP)
567991	BRG RACE U/T (TH)	Piaggio spare parts (POP)
930101015	BRILLIANT GREEN TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101015A	BRILLIANT GREEN TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101053	BROWN TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
1A009587	BRUSH ASSLY KIT (+VE & -VE)	Piaggio spare parts (POP)
SM26246175	Brush box assy kit	Piaggio spare parts (POP)
925572	BRUSH CARD ASSLY (033300/PGO)	Piaggio spare parts (POP)
SM26240021	Brush Gear Assy	Piaggio spare parts (POP)
F002G21279	BRUSH GUIDE	Piaggio spare parts (POP)
F002G20167	BRUSH HOLDER	Piaggio spare parts (POP)
F002G20046	BRUSH HOLDER	Piaggio spare parts (POP)
E1004336820	BRUSH HOLDER	Piaggio spare parts (POP)
1004336526	BRUSH HOLDER	Piaggio spare parts (POP)
SM26255164	Brush Spring	Piaggio spare parts (POP)
SST94085	BSIV SERVICE POSTER - ASSAM	Piaggio spare parts (POP)
SST94078	BSIV SERVICE POSTER - ENG	Piaggio spare parts (POP)
SST94083	BSIV SERVICE POSTER - GUJ	Piaggio spare parts (POP)
SST94077	BSIV SERVICE POSTER - HINDI	Piaggio spare parts (POP)
SST94080	BSIV SERVICE POSTER - KA	Piaggio spare parts (POP)
SST94082	BSIV SERVICE POSTER - KL	Piaggio spare parts (POP)
SST94076	BSIV SERVICE POSTER - MH	Piaggio spare parts (POP)
SST94081	BSIV SERVICE POSTER - TEL	Piaggio spare parts (POP)
SST94079	BSIV SERVICE POSTER - TN	Piaggio spare parts (POP)
SST94086	BSIV SERVICE POSTER - URIAH	Piaggio spare parts (POP)
SST94084	BSIV SERVICE POSTER - WB	Piaggio spare parts (POP)

6B001978	BSVI - STICKER	Piaggio spare parts (POP)
6D000232	BSVI DIESEL INSTRUMENT CLUSTER	Piaggio spare parts (POP)
925683	BUCKLE ASSY (CABLE MOUNT LH)	Piaggio spare parts (POP)
925682	BUCKLE ASSY (CABLE MOUNT RH)	Piaggio spare parts (POP)
216738	BUFFER	Piaggio spare parts (POP)
109361	BUFFER	Piaggio spare parts (POP)
197100	BUFFER	Piaggio spare parts (POP)
127046	BUFFER	Piaggio spare parts (POP)
567732	BUFFER	Piaggio spare parts (POP)
263702	BUFFER	Piaggio spare parts (POP)
106853	BUFFER	Piaggio spare parts (POP)
830249	BUFFER	Piaggio spare parts (POP)
659947	BUFFER	Piaggio spare parts (POP)
265098	BUFFER	Piaggio spare parts (POP)
652448	BUFFER	Piaggio spare parts (POP)
661028	BUFFER - APE TRUK PLUS	Piaggio spare parts (POP)
1A017608	BUFFER DAMPER	Piaggio spare parts (POP)
B014063	BUFFER DAMPER	Piaggio spare parts (POP)
74414	BUFFER FOR COUPLING SHOCK ABSORBER	Piaggio spare parts (POP)
B041307	BUFFER FOR TAIL GATE	Piaggio spare parts (POP)
B042503	BUFFER FOR TAIL GATE	Piaggio spare parts (POP)
970300511	BUFFER HANDLE	Piaggio spare parts (POP)
B077358	BUFFER -RR & SIDE PANEL GATE STOPER	Piaggio spare parts (POP)
925651	BULB (LAMP ASSY RR TURN SIGNAL)	Piaggio spare parts (POP)
925650	BULB (LAMP ASSY. RR TAIL & BRAKE)	Piaggio spare parts (POP)
567700	BULB 10/5 W	Piaggio spare parts (POP)
925617	Bulb 12 v 21/5 w	Piaggio spare parts (POP)
925581	Bulb 12 v 21w Amber	Piaggio spare parts (POP)
925584	Bulb 12 v 21w Clear	Piaggio spare parts (POP)
181747	BULB 12 V 5W	Piaggio spare parts (POP)
181746	BULB 12 V,10 W	Piaggio spare parts (POP)
6D000427	BULB 12V P21/5W	Piaggio spare parts (POP)
6D000428	BULB 12V P21W	Piaggio spare parts (POP)
6D000429	BULB 12V PY21W	Piaggio spare parts (POP)
294353	BULB 12V-55W HT X9,B,ET125,LIB.	Piaggio spare parts (POP)
568727	BULB CLUSTER 12V 2W	Piaggio spare parts (POP)
925818	BULB HOLDER	Piaggio spare parts (POP)
182180015	BULB HOLDER ASSLY.	Piaggio spare parts (POP)
182170010	BULB HOLDER ASSLY. (SINGLE FILAMENT)	Piaggio spare parts (POP)
940162	bulb holder with pigtails	Piaggio spare parts (POP)
925808	BULB HOLDING SPRING	Piaggio spare parts (POP)
568728	BULB, FUEL GAUGE,AMMETER 12V 2W (BA9S)	Piaggio spare parts (POP)
925654	BULB-CABIN / COURTESY LAMP 12V,5W	Piaggio spare parts (POP)
925655	BULB-LICENSE PLATE 12V, 5W	Piaggio spare parts (POP)
925656	BULB-POSITION LAMP 12V, 5W	Piaggio spare parts (POP)
662397	BULBS -HEAD LAMP (12V ,60/55W (P4 3T))	Piaggio spare parts (POP)
925676	BULB-SIDE LAMP ASSY 12V, 5W	Piaggio spare parts (POP)

925657	BULB-TURN SIGNAL FRONT	Piaggio spare parts (POP)
B042444ED	BULKHEAD PROTECTION DTL PORTER 600-CED	Piaggio spare parts (POP)
644707	BULKHEAD PROTECTION S/A	Piaggio spare parts (POP)
644707ED	BULKHEAD PROTECTION S/A- (CED)	Piaggio spare parts (POP)
B074427ED	BULKHEAD PROTECTION S/A_ED	Piaggio spare parts (POP)
B075729ED	BULKHEAD PROTECTION S/A-ED	Piaggio spare parts (POP)
B002815	BUMPER	Piaggio spare parts (POP)
B006862	BUMPER FASTENING ASSLY LH	Piaggio spare parts (POP)
B006863	BUMPER FASTENING ASSLY RH	Piaggio spare parts (POP)
B006967	BUMPER FASTENING LH BRACKET WITH I.P.	Piaggio spare parts (POP)
291626	BUMPER FASTENING RH BRACKET WITH I.P.	Piaggio spare parts (POP)
652432	BUMPER FRONT	Piaggio spare parts (POP)
B008781	BUMPER FRONT SPRING (HARITA MAKE)	Piaggio spare parts (POP)
B025730	BUMPER S/A RR	Piaggio spare parts (POP)
B042502	BUMPER S/A RR PORTER 1000	Piaggio spare parts (POP)
261382	BUMPER SIDE COVER LH	Piaggio spare parts (POP)
261383	BUMPER SIDE COVER RH	Piaggio spare parts (POP)
658155R	BUMPER SPRING	Piaggio spare parts (POP)
658155	BUMPER SPRING -FRONT SHOCK ABSORBER	Piaggio spare parts (POP)
SST94062	BUMPING CLEARANCE CHECKING GAUGE	Piaggio spare parts (POP)
970300576	Bumping clearance checking gauge for cob	Piaggio spare parts (POP)
569199	BUNDY TUBE (MOTOR TO WHEEL BOX)	Piaggio spare parts (POP)
B003664	BUNDY TMC PRIMARY TO 3 WAY (FOR X-SPLIT)	Piaggio spare parts (POP)
632686	BUNDY TUBE 3 WAY	Piaggio spare parts (POP)
B003669	BUNDY TUBE BLEND VALVE TO FLEX HOSE -RR	Piaggio spare parts (POP)
632564	BUNDY TUBE (MOTOR TO WHEEL BOX)	Piaggio spare parts (POP)
632565	BUNDY TUBE (OUTER)	Piaggio spare parts (POP)
632285	BUNDY TUBE (MOTOR TO WHEEL BOX)	Piaggio spare parts (POP)
B076303	BUNDY TUBE (MOTOR TO WHEEL BOX)	Piaggio spare parts (POP)
B076573	BUNDY TUBE _MOTOR TO WHL BOX_(501-BASE)	Piaggio spare parts (POP)
B003666	BUNDY TUBE 3 WAY TO BLEND VALVE PRIMARY	Piaggio spare parts (POP)
B003667	BUNDY TUBE 3 WAY TO BLEND VALVE SECONDAR	Piaggio spare parts (POP)
B003670	BUNDY TUBE 3 WAY TO FRONT LH WHEEL HSG	Piaggio spare parts (POP)
B003671	BUNDY TUBE 3 WAY TO FRT RH WHEEL HSG	Piaggio spare parts (POP)
B074871	BUNDY TUBE 5 WAY TO 3 WAY	Piaggio spare parts (POP)
B041110	BUNDY TUBE 5 WAY TO 3 WAY	Piaggio spare parts (POP)
6C000431	BUNDY TUBE ASSY,TMC TO FRONT FLEX. HOSE	Piaggio spare parts (POP)
B003668	BUNDY TUBE BLEND VALVE TO FLEXI HOSE-RR	Piaggio spare parts (POP)
B077065	BUNDY TUBE CLIP	Piaggio spare parts (POP)
604506	BUNDY TUBE OUTER (368000)	Piaggio spare parts (POP)
B073821	BUNDY TUBE OUTER (UP)	Piaggio spare parts (POP)
B003665	BUNDY TUBE TMC SECONDARY TO 3 WAY	Piaggio spare parts (POP)
616790	BUNDY TUBE-TMC TO 3 WAY CONNECTOR (CARGO	Piaggio spare parts (POP)
616792	BUNDY TUBE-TMC TO 3 WAY CONNECTOR (TAXI-	Piaggio spare parts (POP)
B078506	BUSH	Piaggio spare parts (POP)
D9004386115	BUSH	Piaggio spare parts (POP)
D9004386117	BUSH	Piaggio spare parts (POP)

614585	BUSH	Piaggio spare parts (POP)
D9004386033	BUSH	Piaggio spare parts (POP)
D9004386105	BUSH	Piaggio spare parts (POP)
662237	BUSH	Piaggio spare parts (POP)
L1585227	BUSH	Piaggio spare parts (POP)
B024487	bush	Piaggio spare parts (POP)
B042486	BUSH	Piaggio spare parts (POP)
D9004386101	BUSH	Piaggio spare parts (POP)
B042692	BUSH	Piaggio spare parts (POP)
1A008559	BUSH	Piaggio spare parts (POP)
1A017364	BUSH	Piaggio spare parts (POP)
1A013301	BUSH	Piaggio spare parts (POP)
6A000976	BUSH	Piaggio spare parts (POP)
F002G21122	BUSH	Piaggio spare parts (POP)
KD1585234	Bush	Piaggio spare parts (POP)
KD1585311	Bush	Piaggio spare parts (POP)
03G161605	bush clutch release lever	Piaggio spare parts (POP)
03G161701	Bush external speedo drive	Piaggio spare parts (POP)
03G161702	bush internal speedo drive	Piaggio spare parts (POP)
E50009205	BUSH SMALL END CON.ROD. 500SR.	Piaggio spare parts (POP)
970300557	Bush & lipseal pressing fixture	Piaggio spare parts (POP)
124112014	BUSH (10951)	Piaggio spare parts (POP)
117401	BUSH (41735)	Piaggio spare parts (POP)
ESP650DCR018	BUSH (MAIN BEARING BUSH-STD)	Piaggio spare parts (POP)
ESP650DCR013	BUSH (SMALL END CON.ROD)	Piaggio spare parts (POP)
E40002264	BUSH 0.25 MM U/S	Piaggio spare parts (POP)
E53002208	BUSH 0.5 MM U/S	Piaggio spare parts (POP)
E53002203	BUSH 0.5 MM U/S	Piaggio spare parts (POP)
E40002265	BUSH 0.5 MM U/S	Piaggio spare parts (POP)
E40002266	BUSH 0.75 MM U/S	Piaggio spare parts (POP)
E40002267	BUSH 1 MM U/S	Piaggio spare parts (POP)
E53002205	BUSH 1.0 MM U/S	Piaggio spare parts (POP)
LG1611241	BUSH 2ND UNDERSIZE(-0.50)	Piaggio spare parts (POP)
E870101103A	BUSH ASSM GEAR	Piaggio spare parts (POP)
E870101103	BUSH ASSY GEAR SIDE	Piaggio spare parts (POP)
E87012254	Bush Centre Valve Camshaft(SF)	Piaggio spare parts (POP)
B006289	BUSH -CLUTCH SHAFT	Piaggio spare parts (POP)
E53002202	BUSH CRANKCASE U/S 0.25MM	Piaggio spare parts (POP)
E53002204	BUSH CRANKCASE U/S 0.75MM	Piaggio spare parts (POP)
E87012216	BUSH CRANKSHAFT SUPPORT GEAR SIDE S/F	Piaggio spare parts (POP)
LG3527430	BUSH D10/6.3 18LONG	Piaggio spare parts (POP)
KD1585215	BUSH D12/8 52 LONG SPECIAL	Piaggio spare parts (POP)
E53002207	BUSH F W E U/S 0.25MM	Piaggio spare parts (POP)
E53002209	BUSH F W E U/S 0.75MM	Piaggio spare parts (POP)
E53002210	BUSH F W E U/S 1.00MM	Piaggio spare parts (POP)
E40002268	BUSH F.W.E. SIDE	Piaggio spare parts (POP)
B024015	BUSH FIRST GEAR	Piaggio spare parts (POP)

E87012296	BUSH FLYWHEEL END ? VALVE CA	Piaggio spare parts (POP)
E87012288	BUSH FLYWHEEL END ? VALVE CA	Piaggio spare parts (POP)
E87012292	BUSH FLYWHEEL END ? VALVE CA	Piaggio spare parts (POP)
E87022203	BUSH FLYWHEEL END ?FUEL CAMS	Piaggio spare parts (POP)
E87022206	BUSH FLYWHEEL END ?FUEL CAMS	Piaggio spare parts (POP)
E87012299	BUSH FLYWHEEL END ?FUEL CAMS	Piaggio spare parts (POP)
B041396	BUSH FOR EMC	Piaggio spare parts (POP)
E40005592	BUSH FOR FMA CABLE	Piaggio spare parts (POP)
LG1611239	BUSH FOR OIL JET	Piaggio spare parts (POP)
L1585225	BUSH FOR SEAL RING	Piaggio spare parts (POP)
107732	BUSH FOR SILENT BLOCK	Piaggio spare parts (POP)
B024016	BUSH FOURTH GEAR	Piaggio spare parts (POP)
E87012251	Bush Front Fuel Camshaft(SF)	Piaggio spare parts (POP)
E87012253	Bush Front Valve Camshaft(SF)	Piaggio spare parts (POP)
E87022205	BUSH GEAR END ?FUEL CAMSHAFT	Piaggio spare parts (POP)
E87022202	BUSH GEAR END ?FUEL CAMSHAFT	Piaggio spare parts (POP)
E87012298	BUSH GEAR END ?FUEL CAMSHAFT	Piaggio spare parts (POP)
E87012294	BUSH GEAR ENDVALVE CAMSHAFT	Piaggio spare parts (POP)
E87012290	BUSH GEAR ENDVALVE CAMSHAFT	Piaggio spare parts (POP)
E87012286	BUSH GEAR ENDVALVE CAMSHAFT	Piaggio spare parts (POP)
1A010164	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
1A008652	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
1A015213	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
1A014686	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
1A009784	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
1A012846	BUSH GEAR SHIFTER	Piaggio spare parts (POP)
01G030017	BUSH ID15/OD17/L14.75	Piaggio spare parts (POP)
932256	BUSH LPR(K-0812-12-030)Paxx200	Piaggio spare parts (POP)
925834	BUSH LWR-ARM	Piaggio spare parts (POP)
E87012295	BUSH MIDVALVE CAMSHAFT	Piaggio spare parts (POP)
E87012291	BUSH MIDVALVE CAMSHAFT (0.2	Piaggio spare parts (POP)
E87012287	BUSH MIDVALVE CAMSHAFT (STD	Piaggio spare parts (POP)
970300553	Bush pressing tool for bearing plane	Piaggio spare parts (POP)
MS444032	Bush pressing tool for bush shaft rail	Piaggio spare parts (POP)
970300549	Bush pressing tool for bush speedo assly	Piaggio spare parts (POP)
E87012252	Bush Rear Fuel Camshaft(SF)	Piaggio spare parts (POP)
E87012255	Bush Rear Valve Camshaft(SF)	Piaggio spare parts (POP)
03G160406	bush reverse idler gear	Piaggio spare parts (POP)
B076448	BUSH REVERSE SWITCH MTG.	Piaggio spare parts (POP)
882539	BUSH ROCKER ARM	Piaggio spare parts (POP)
020896Y	BUSH SEGMENT DISASSEMBLY	Piaggio spare parts (POP)
D3354887Z01	BUSH SHIFT LEVER	Piaggio spare parts (POP)
A01M040002	BUSH SMALL END	Piaggio spare parts (POP)
E07509233	Bush small end.	Piaggio spare parts (POP)
E40002263	BUSH STD.	Piaggio spare parts (POP)
E53002201	BUSH STD.	Piaggio spare parts (POP)
B000985	BUSH, HINGE COVER FR PANEL	Piaggio spare parts (POP)

D9004380012	BUSH, SOLID	Piaggio spare parts (POP)
E53002206	BUSH,FWE STD.	Piaggio spare parts (POP)
LG1585288	BUSHING	Piaggio spare parts (POP)
L1970452	BUSHING	Piaggio spare parts (POP)
L1970454	BUSHING	Piaggio spare parts (POP)
E87012218	BUSHMID SUPPORT CRANKSHA	Piaggio spare parts (POP)
E07518639	Butterfly valve	Piaggio spare parts (POP)
142425	BUTTON	Piaggio spare parts (POP)
D6974787Z01	BUTTON, DOOR LOCKING	Piaggio spare parts (POP)
645147	BUZZER	Piaggio spare parts (POP)
SM26246050	C E Bkt & Bearing bush assy	Piaggio spare parts (POP)
SM26240977	C' Washer	Piaggio spare parts (POP)
930101665	C.BLUE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
SM26257285	C.E. Bearing Bush	Piaggio spare parts (POP)
SM26240012	C.E. Dust Cap	Piaggio spare parts (POP)
SM26240020	C.E.BKT ASSY.	Piaggio spare parts (POP)
B075505	C/S MEMBER S/A, BODY UPPER, REAR	Piaggio spare parts (POP)
B075505ED	C/S MEMBER S/A, BODY UPPER, REAR - ED	Piaggio spare parts (POP)
613959	C/S MEMBER S/A,ENG. RR 482 BSII	Piaggio spare parts (POP)
441016	C/SHAFT PTO COVER C/ CASE BUSH TOOL	Piaggio spare parts (POP)
6B002002	CABIN CARPET	Piaggio spare parts (POP)
6B002003	CABIN CARPET	Piaggio spare parts (POP)
6B002449	CABIN CARPET	Piaggio spare parts (POP)
6B002000	CABIN CARPET	Piaggio spare parts (POP)
6B002029	CABIN CARPET	Piaggio spare parts (POP)
B006329	CABIN CARPET (MINITRUK)	Piaggio spare parts (POP)
B075859	CABIN DOME - APE 501 BSIV	Piaggio spare parts (POP)
604868	CABIN FLOOR 501 CNG/LPG	Piaggio spare parts (POP)
B024844PC	CABIN FLOOR APE PAX-PC	Piaggio spare parts (POP)
604868PC	CABIN FLOOR CNG/LPG-PC	Piaggio spare parts (POP)
6B000332	CABIN FLOOR SUB ASSLY	Piaggio spare parts (POP)
B076334	CABIN FLOOR SUB ASSLY	Piaggio spare parts (POP)
B074435	CABIN FLOOR SUB ASSLY.	Piaggio spare parts (POP)
B074150	CABIN FLOOR SUB ASSLY.	Piaggio spare parts (POP)
B079078ED	CABIN FLOOR SUB-ASSY. (LPG / CNG)	Piaggio spare parts (POP)
6B000332PC	CABIN FLOOR SUB-ASSY. (LPG / CNG)_PC	Piaggio spare parts (POP)
587905PC	CABIN FLOOR-PC	Piaggio spare parts (POP)
1E000804	CABIN HEATER BRACKET S/ASSY	Piaggio spare parts (POP)
1D000729	CABIN HEATER WIRING	Piaggio spare parts (POP)
643616	CABIN LAMP	Piaggio spare parts (POP)
150041	CABIN LAMP ASSLY. (W/O BULB) - LUMAX	Piaggio spare parts (POP)
925701	CABIN LAMP LENS	Piaggio spare parts (POP)
940092	CABIN LAMP ASSEMBLY	Piaggio spare parts (POP)
B073715	CABIN LAMP(UPGRADE)	Piaggio spare parts (POP)
150041R	CABIN LIGHT ASSLY W/O BULB	Piaggio spare parts (POP)
B002982	CABIN REAR SLIDING WINDOW	Piaggio spare parts (POP)
659987	CABIN REAR SLIDING WINDOW	Piaggio spare parts (POP)

604751	CABIN REAR WINDOW	Piaggio spare parts (POP)
B002164	CABIN SHIELD - APE CITY	Piaggio spare parts (POP)
B076864	CABIN SHIELD - CALASSINO	Piaggio spare parts (POP)
B002164CED	CABIN SHIELD -CED- APE CITY	Piaggio spare parts (POP)
661453R	CABL GROUP OF INST. PANEL(V.E - CNG /LPG	Piaggio spare parts (POP)
632356	CABLE	Piaggio spare parts (POP)
632362	CABLE	Piaggio spare parts (POP)
020621Y	CABLE	Piaggio spare parts (POP)
B074663	CABLE - BATTERY +VE TO STARTER MOTOR	Piaggio spare parts (POP)
B023892	CABLE - BATTERY NEGATIVE (BNA)	Piaggio spare parts (POP)
B002456	CABLE - BATTERY TO CUT OFF SWITCH	Piaggio spare parts (POP)
652051	CABLE ACCEL.CONTROL ASSY	Piaggio spare parts (POP)
632708	CABLE ACCELERATOR CONTROL ASSLY (CARGO-R	Piaggio spare parts (POP)
632707	CABLE ACCELERATOR CONTROL ASSLY (TAXI-RH	Piaggio spare parts (POP)
E90600031	CABLE ANCHOR	Piaggio spare parts (POP)
6A001412	CABLE ASSEMBLY GASOLENEN CONTROLE	Piaggio spare parts (POP)
B000875	CABLE ASSEMBLY, PARKING BRAKE (PORTER)	Piaggio spare parts (POP)
LG3695102	CABLE ASSLY ACCELERATOR	Piaggio spare parts (POP)
662220	CABLE ASSLY ACCELERATOR CONTROL	Piaggio spare parts (POP)
6A001411	cable assly chok control	Piaggio spare parts (POP)
B008743	CABLE ASSLY CLUTCH RELEASE	Piaggio spare parts (POP)
B073041	CABLE ASSLY CLUTCH RELEASE	Piaggio spare parts (POP)
662201	CABLE ASSLY CLUTCH RELEASE 'NQP 870'	Piaggio spare parts (POP)
B023918	CABLE ASSLY GASOLENE	Piaggio spare parts (POP)
B042356	CABLE ASSLY GASOLENE CONTROL	Piaggio spare parts (POP)
B076871R	Cable Assly Gasoline Control	Piaggio spare parts (POP)
B076871	Cable Assly Gasoline Control	Piaggio spare parts (POP)
6A001068	CABLE ASSLY GEAR CONTROL (BLACK)	Piaggio spare parts (POP)
6A001067	CABLE ASSLY GEAR CONTROL (WHITE)	Piaggio spare parts (POP)
645264	CABLE ASSLY PARKING BRAKE NO.1	Piaggio spare parts (POP)
B073044	CABLE ASSLY SELECT	Piaggio spare parts (POP)
B008908	CABLE ASSLY SELECT	Piaggio spare parts (POP)
B073043	CABLE ASSLY SHIFT	Piaggio spare parts (POP)
B008907	CABLE ASSLY SHIFT	Piaggio spare parts (POP)
B023909	CABLE ASSLY. CHOKE CONTROL	Piaggio spare parts (POP)
B075565	CABLE ASSLY. CHOKE CONTROL	Piaggio spare parts (POP)
B042566	CABLE ASSLY. CHOKE CONTROL (SINGLE)	Piaggio spare parts (POP)
LG9695109	Cable Assly.Choke	Piaggio spare parts (POP)
613826	CABLE ASSY ACCELERATOR	Piaggio spare parts (POP)
B074856	CABLE ASSY PARKING BRAKE	Piaggio spare parts (POP)
652377	CABLE ASSY PARKING BRAKE	Piaggio spare parts (POP)
B073265	CABLE ASSY PARKING BRAKE	Piaggio spare parts (POP)
B073040	CABLE ASSY PARKING BRAKE	Piaggio spare parts (POP)
B041031	CABLE ASSY PARKING BRAKE	Piaggio spare parts (POP)
B041029	CABLE ASSY SELECT	Piaggio spare parts (POP)
B074342	CABLE ASSY SELECT	Piaggio spare parts (POP)
658603	CABLE ASSY SHIFT	Piaggio spare parts (POP)

6A001373	CABLE ASSY, ACCELERATOR	Piaggio spare parts (POP)
6A001066	CABLE ASSY, ACCELERATOR	Piaggio spare parts (POP)
6A001374	CABLE ASSY, ACCELERATOR	Piaggio spare parts (POP)
1E002514	CABLE ASSY, ACCELERATOR	Piaggio spare parts (POP)
660205	CABLE ASSY, SELECTOR '870'	Piaggio spare parts (POP)
614112	CABLE ASSY, SHIFT	Piaggio spare parts (POP)
B041170	CABLE ASSY, SHIFTER	Piaggio spare parts (POP)
B074319	CABLE ASSY, SHIFTER	Piaggio spare parts (POP)
660204	CABLE ASSY, SHIFTER '870'	Piaggio spare parts (POP)
661725	CABLE ASSY-SPEEDOMETER	Piaggio spare parts (POP)
E50009803	Cable Carburator (Choke)	Piaggio spare parts (POP)
E40009803	CABLE CARBURATOR(MC TOP) / CABLE CARBU	Piaggio spare parts (POP)
KD00375R0820	CABLE CLIP	Piaggio spare parts (POP)
KD375R0820	CABLE CLIP	Piaggio spare parts (POP)
LG375R082	CABLE CLIP	Piaggio spare parts (POP)
632363	CABLE CLUTCH CONTROL ASSLY (LWB)	Piaggio spare parts (POP)
B024774	CABLE CONNECTOR	Piaggio spare parts (POP)
568690	CABLE FAREMETER LIGHTING	Piaggio spare parts (POP)
B023912	CABLE GEAR CONTROL ASSLY BLACK	Piaggio spare parts (POP)
B023915	CABLE GEAR CONTROL ASSLY WHITE	Piaggio spare parts (POP)
602341	CABLE GEAR CONTROL PASSENGER	Piaggio spare parts (POP)
605363	CABLE GROUP FOR FAREMETER AND PASS. LIGH	Piaggio spare parts (POP)
604813	CABLE GROUP INST. PANEL	Piaggio spare parts (POP)
582453	CABLE GROUP INSTRUMENT PANEL	Piaggio spare parts (POP)
643607	CABLE GROUP INSTRUMENT PANEL	Piaggio spare parts (POP)
605285	CABLE GROUP INSTRUMENT PANEL(RHD)	Piaggio spare parts (POP)
604794	CABLE GROUP OF FRAME	Piaggio spare parts (POP)
604814	CABLE GROUP OF FRAME	Piaggio spare parts (POP)
604611	CABLE GROUP OF FRAME	Piaggio spare parts (POP)
652078	Cable Group Of Frame	Piaggio spare parts (POP)
661727	CABLE GROUP OF FRAME	Piaggio spare parts (POP)
644903	CABLE GROUP OF FRAME - (VE)	Piaggio spare parts (POP)
632352	CABLE GROUP OF FRAME (CARGO) (LWB)	Piaggio spare parts (POP)
605283	CABLE GROUP OF FRAME TAXI	Piaggio spare parts (POP)
660805	CABLE GROUP OF INST. PANEL (BATTERY CHA	Piaggio spare parts (POP)
661453	CABLE GROUP OF INST. PANEL (V.E - CNG /	Piaggio spare parts (POP)
B075330	CABLE GROUP OF INST. PANEL WITH H/L CONN	Piaggio spare parts (POP)
604536	CABLE GROUP OF INSTRUMENT PANEL	Piaggio spare parts (POP)
644902	CABLE GROUP OF INSTRUMENT PANEL - (VE)	Piaggio spare parts (POP)
KD9180011	CABLE GUIDE	Piaggio spare parts (POP)
E40016453	CABLE GUIDE ASSY.	Piaggio spare parts (POP)
B041729	CABLE HARNESS	Piaggio spare parts (POP)
6D000056	CABLE HARNESS	Piaggio spare parts (POP)
6D000053	CABLE HARNESS	Piaggio spare parts (POP)
B041728	CABLE HARNESS	Piaggio spare parts (POP)
6D000054	CABLE HARNESS	Piaggio spare parts (POP)
6D000229	CABLE HARNESS	Piaggio spare parts (POP)

ED43673	CABLE JUNCTION	Piaggio spare parts (POP)
6D000520	CABLE LINK 66MM	Piaggio spare parts (POP)
B076798R	CABLE- OIL PRESSURE SWITCH	Piaggio spare parts (POP)
LG4850097	CABLE PLASTIC GUIDE	Piaggio spare parts (POP)
925571	CABLE RACK (033200/PGO)	Piaggio spare parts (POP)
940161	Cable rack ape city	Piaggio spare parts (POP)
E45600016	CABLE RETAINER	Piaggio spare parts (POP)
602348	CABLE REVERSE GEAR CONTROL ASSLY PASS.	Piaggio spare parts (POP)
661767	CABLE REVERSE GEAR CONTROL ASSY	Piaggio spare parts (POP)
660358	CABLE REVERSE GEAR WITH TERMINAL	Piaggio spare parts (POP)
6A000937	CABLE REVERSE GEAR WITH TERMINAL	Piaggio spare parts (POP)
587822	CABLE REVERSE GEAR WITH TERMINALS	Piaggio spare parts (POP)
6A000936	CABLE REVERSE GEAR WITH TERMINALS	Piaggio spare parts (POP)
658269	CABLE SHIFT ASSY	Piaggio spare parts (POP)
LG5830169	CABLE SLEEVE	Piaggio spare parts (POP)
B003180	CABLE SPEEDOMETER	Piaggio spare parts (POP)
632304	CABLE STRAP	Piaggio spare parts (POP)
B073350	CABLE TIE (355 MM)	Piaggio spare parts (POP)
B076707	CABLE, GEAR CONTROL ASSLY (BLACK)	Piaggio spare parts (POP)
B076329	CABLE, GEAR CONTROL ASSLY (BLACK)	Piaggio spare parts (POP)
B006957	CABLE, GEAR CONTROL ASSLY (BLACK)	Piaggio spare parts (POP)
587628	CABLE, GEAR CONTROL ASSLY (DARK GREY)	Piaggio spare parts (POP)
587633	CABLE, REVERSE GEAR GEAR CONTROL ASSLY	Piaggio spare parts (POP)
B074850	CABLE, REVERSE GEAR GEAR CONTROL ASSLY	Piaggio spare parts (POP)
569061	CABLE,ENGINE STOP CONTROL ASSLY.	Piaggio spare parts (POP)
B073469	CABLE,GEAR CONTROL ASSLY NO.2	Piaggio spare parts (POP)
587919	CABLE,GEAR CONTROL ASSLY NO.2(LIGHT GREY	Piaggio spare parts (POP)
B076708	CABLE,GEAR CONTROL ASSLY NO.2(WHITE)	Piaggio spare parts (POP)
B076330	CABLE,GEAR CONTROL ASSLY NO.2(WHITE)	Piaggio spare parts (POP)
B006958	CABLE,GEAR CONTROL ASSLY NO.2(WHITE)	Piaggio spare parts (POP)
B075716	CABLE,GEAR CONTROL ASSLY -WHITE	Piaggio spare parts (POP)
567719	CABLE,HAND BRAKE CONTROL ASSLY	Piaggio spare parts (POP)
568715	CABLE-LOW OIL PRESSURE SWITCH	Piaggio spare parts (POP)
568715R	CABLE-LOW OIL PRESSURE SWITCH	Piaggio spare parts (POP)
6B001210	CAGE	Piaggio spare parts (POP)
632731	CAGE WITH NUT M8	Piaggio spare parts (POP)
661791	CALEX WINDSHIELD ASSLY	Piaggio spare parts (POP)
661791ED	CALEX WINDSHIELD ASSLY_CED	Piaggio spare parts (POP)
660865	CALIPER ASSLY. LH	Piaggio spare parts (POP)
1E001057	CALIPER ASSY, DISC BRAKE, FR LH	Piaggio spare parts (POP)
1E001058	CALIPER ASSY, DISC BRAKE, FR RH	Piaggio spare parts (POP)
660864	CALIPER ASSY. RH	Piaggio spare parts (POP)
660874	CALIPER MTG. PLATE, LH	Piaggio spare parts (POP)
660873	CALIPER MTG. PLATE, RH	Piaggio spare parts (POP)
B016158	CAM CLUTCH HUB	Piaggio spare parts (POP)
ED43409	CAM FOLLOWER KIT	Piaggio spare parts (POP)
E5005271054	CAM FOLLOWER LEVER	Piaggio spare parts (POP)

889444	CAM SENSOR	Piaggio spare parts (POP)
E400060112	CAM SHAFT	Piaggio spare parts (POP)
E500101150	CAM SHAFT	Piaggio spare parts (POP)
E07506098	Cam shaft	Piaggio spare parts (POP)
E10A060010	Cam shaft	Piaggio spare parts (POP)
970300609	CAM SHAFT BEARING REMOVAL &ASSYOIL SEAL	Piaggio spare parts (POP)
E40016044	CAMSHAFT	Piaggio spare parts (POP)
E500101050	CAMSHAFT	Piaggio spare parts (POP)
A01A060005	CAMSHAFT ASSEMBLY WITH GEAR	Piaggio spare parts (POP)
B011922	CAMSHAFT ASSY	Piaggio spare parts (POP)
B014760	CAMSHAFT CONTAINMENT SHEET-STEEL	Piaggio spare parts (POP)
LG6975330	CAMSHAFT GEAR PULLEY	Piaggio spare parts (POP)
LG9455134	CAMSHAFT LUB. PIPE LGA	Piaggio spare parts (POP)
LG9455132	CAMSHAFT LUB.PIPE LGA 280	Piaggio spare parts (POP)
KD1010046	CAMSHAFT MECH.TAPPETS	Piaggio spare parts (POP)
KD1011902	CAMSHAFT MECHTAPPETS	Piaggio spare parts (POP)
LG8580028	CAMSHAFT SUPPORT PRES.LUB.LGA	Piaggio spare parts (POP)
L8580023	CAMSHAFT SUPPORT SUB ASSLY	Piaggio spare parts (POP)
L8580030	CAMSHAFT SUPPORT SUB-ASSY	Piaggio spare parts (POP)
LG1011788	CAMSHAFT WITH DECOMPR SPRING	Piaggio spare parts (POP)
B017746	CAMSHAFT WITH I.P.	Piaggio spare parts (POP)
B018614	CAMSHAFT WITH I.P.	Piaggio spare parts (POP)
1A012422	CAMSHAFT WITH I.P.	Piaggio spare parts (POP)
L1011609	CAMSHAFT WITH I.P.	Piaggio spare parts (POP)
930101013	CANARY YELLOW TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
1B002848	CANISTER	Piaggio spare parts (POP)
441049	CANK CASE BUSH REMOVAL TOOL	Piaggio spare parts (POP)
660857	CANVAS ASSEMBLY (HOT SEALED)	Piaggio spare parts (POP)
644452	CAP	Piaggio spare parts (POP)
128010	CAP	Piaggio spare parts (POP)
138237	CAP	Piaggio spare parts (POP)
B025726	CAP	Piaggio spare parts (POP)
114122	CAP	Piaggio spare parts (POP)
107871	CAP	Piaggio spare parts (POP)
267404	CAP	Piaggio spare parts (POP)
218758	CAP	Piaggio spare parts (POP)
L9080249	CAP	Piaggio spare parts (POP)
L6400093	CAP	Piaggio spare parts (POP)
177559	CAP	Piaggio spare parts (POP)
LG2145080	Cap	Piaggio spare parts (POP)
160631	CAP	Piaggio spare parts (POP)
614593	CAP	Piaggio spare parts (POP)
L6410121	CAP	Piaggio spare parts (POP)
L9080250	CAP	Piaggio spare parts (POP)
B042170	CAP - SIDE PANEL	Piaggio spare parts (POP)
925501	CAP (KBX P 6450225)	Piaggio spare parts (POP)
925674	CAP ASSY FUEL TANK WITH KEY	Piaggio spare parts (POP)

1E002675	CAP ASSY, FUEL TANK	Piaggio spare parts (POP)
1E002796	Cap button for instrument panel	Piaggio spare parts (POP)
940121	CAP FUEL TANK LOCK (BODY CAP) WITH KEY	Piaggio spare parts (POP)
940125	CAP FUEL TANK LOCK WITH KEY	Piaggio spare parts (POP)
932302	Cap K-0133-I-430	Piaggio spare parts (POP)
LG9080140	CAP M 12	Piaggio spare parts (POP)
889134	CAP MAIN BEARING THRUST WITH I.P.	Piaggio spare parts (POP)
889135	CAP MAIN BEARING THRUST WITH I.P.	Piaggio spare parts (POP)
925828	CAP RESRVOIR	Piaggio spare parts (POP)
E50000406	Cap screw	Piaggio spare parts (POP)
E422973009	Cap screw M6x1x12	Piaggio spare parts (POP)
940119	CAP WHITH LOCK, FUEL WITH KEY	Piaggio spare parts (POP)
925729	CAP(FL-0103-070)	Piaggio spare parts (POP)
D4552487503	CAP, RACK GUIDE SPRING	Piaggio spare parts (POP)
604984	CAP-DASHBOARD (FUEL GAUGE)	Piaggio spare parts (POP)
B023970	CAP-DASHBOARD STOP CABLE	Piaggio spare parts (POP)
E500213572	CAP-INLET VALVE	Piaggio spare parts (POP)
MER940051	Caps with Piaggio Branding	Piaggio spare parts (POP)
E9980013	CAPSCREW	Piaggio spare parts (POP)
128009	CAPSULE	Piaggio spare parts (POP)
604631	CAP-VERTICAL MEMBER TO W/SHIELD	Piaggio spare parts (POP)
F000CD1063	Carbon Brush	Piaggio spare parts (POP)
F002G20047	CARBON BRUSH SET	Piaggio spare parts (POP)
F002G20178	CARBON BRUSH SET	Piaggio spare parts (POP)
899579	Carbon Flip Up M	Piaggio spare parts (POP)
1A014489	CARBURATOR /AIR BOX COUPLING	Piaggio spare parts (POP)
1A009554	CARBURATOR /AIR BOX COUPLING	Piaggio spare parts (POP)
1A007773	CARBURATOR /AIR BOX COUPLING	Piaggio spare parts (POP)
1A007488	CARBURATOR /AIR BOX COUPLING	Piaggio spare parts (POP)
1A009168	CARBURATOR /AIR BOX COUPLING	Piaggio spare parts (POP)
1A004223	CARBURATOR SPRINGS	Piaggio spare parts (POP)
1A004857	CARBURATOR/AIR BOX COUPLING	Piaggio spare parts (POP)
B018072	CARBURATOR/AIR BOX COUPLING	Piaggio spare parts (POP)
B017443	CARBURATOR/AIR BOX COUPLING	Piaggio spare parts (POP)
CM284102	CARBURETOR	Piaggio spare parts (POP)
CM271501	CARBURETOR	Piaggio spare parts (POP)
ED33595	CARBURETOR	Piaggio spare parts (POP)
E40006842	CARBURETOR CD-26	Piaggio spare parts (POP)
LG2151342	CARBURETOR FSY20 JET.75	Piaggio spare parts (POP)
1A002305	CARBURETOR UBT22	Piaggio spare parts (POP)
CM166101	CARBURETOR UVD 22	Piaggio spare parts (POP)
CM166105	CARBURETTOR	Piaggio spare parts (POP)
CM166110	CARBURETTOR	Piaggio spare parts (POP)
CM166109	CARBURETTOR	Piaggio spare parts (POP)
CM166106	CARBURETTOR	Piaggio spare parts (POP)
E40006847	CARBURETTOR	Piaggio spare parts (POP)
CM166104	CARBURETTOR	Piaggio spare parts (POP)

CM166103	CARBURETTOR UVD 22	Piaggio spare parts (POP)
CM166102	CARBURETTOR UVD 22	Piaggio spare parts (POP)
LG7968218	CARD "NO OIL" ANONIMOUS	Piaggio spare parts (POP)
B075251	CARGO 200 STICKER	Piaggio spare parts (POP)
B076050CO	CARGO BODY ASSLY - PETROL -CO	Piaggio spare parts (POP)
B076050EG	CARGO BODY ASSLY - PETROL -EG	Piaggio spare parts (POP)
B073531CO	CARGO BODY ASSLY APE CITY LPG/CNG-CO	Piaggio spare parts (POP)
B073531EG	CARGO BODY ASSLY APE CITY LPG/CNG-EG	Piaggio spare parts (POP)
643712	CARGO FUEL TANK ASSY.(VE)	Piaggio spare parts (POP)
587662	CARPET	Piaggio spare parts (POP)
605343	CARPET - PASSENGER FOOT	Piaggio spare parts (POP)
632437	CARPET - PICK UP PLATFORM	Piaggio spare parts (POP)
B076410	CARPET CABIN FRONT-APECITY BSIV-LPG	Piaggio spare parts (POP)
B076270	CARPET CABIN FRONT-APECITY CNG/LPG	Piaggio spare parts (POP)
B074061	CARPET CABIN FRONT-UPGRADE CNG/LPG	Piaggio spare parts (POP)
B074219	CARPET CABIN FRONT-UPGRADE DIESEL	Piaggio spare parts (POP)
B074060	CARPET CABIN FRONT-UPGRADE PETROL	Piaggio spare parts (POP)
B001480	CARPET PASSENGER FOOT REST	Piaggio spare parts (POP)
6B001994	CARPET PASSENGER FOOT REST	Piaggio spare parts (POP)
B041225	CARPET PASSENGER FOOT REST	Piaggio spare parts (POP)
B075986	CARPET PASSENGER FOOT REST APE CITY BSIV	Piaggio spare parts (POP)
567873	CARPET PASSENGER FOR STEP LH	Piaggio spare parts (POP)
567872	CARPET PASSENGER FOR STEP RH	Piaggio spare parts (POP)
B042695	CARPET_APE CLASSIC NEW	Piaggio spare parts (POP)
940157	Carrier Attachment Pipe V1	Piaggio spare parts (POP)
940102	Carrier Attachment Pipe_HFI	Piaggio spare parts (POP)
644484	CARRIER S/A, BATTERY	Piaggio spare parts (POP)
644484ED	CARRIER S/A, BATTERY-(CED)	Piaggio spare parts (POP)
SST96028	Carrying Case (Single Pack)	Piaggio spare parts (POP)
L2165118	CARTER COMPL.	Piaggio spare parts (POP)
03G160041	casing main casting	Piaggio spare parts (POP)
03G160040	CASING MAIN MACHINED	Piaggio spare parts (POP)
ED33233	Casing water pump	Piaggio spare parts (POP)
E40010839	CASING WATER PUMP	Piaggio spare parts (POP)
614056	CASING, GEAR CONTROL	Piaggio spare parts (POP)
03G160050	CASINGCLUTCH HOUSING MACHIN	Piaggio spare parts (POP)
SST94051	Catalogue 501 (BSII & BSIII)	Piaggio spare parts (POP)
SST94052	Catalogue 501 (CNG/LPG)	Piaggio spare parts (POP)
SST94054	Catalogue 501 (LPG)	Piaggio spare parts (POP)
SST94150	Catalogue 501 WC CNG/LPG_ common	Piaggio spare parts (POP)
SST94155	Catalogue Ape auto+ DSL_BSIV (D+5)	Piaggio spare parts (POP)
SST94151	Catalogue Ape city _BSIV_ Step-II(P/C/L)	Piaggio spare parts (POP)
SST94158	Catalogue Ape city + (PTL/CNG/LPG)	Piaggio spare parts (POP)
SST94156	Catalogue Ape city Cargo_ StepII(P/C/L)	Piaggio spare parts (POP)
SST94160	Catalogue Ape city Dlx BSIII (P/C/L)	Piaggio spare parts (POP)
SST94152	Catalogue Ape city Dlx BSIV(PTL/CNG/LPG)	Piaggio spare parts (POP)
SST94153	Catalogue Ape city Dlx DSL BSIV	Piaggio spare parts (POP)

SST94071	Catalogue Ape' City DLX_UG_DOM BS3_P/C/L	Piaggio spare parts (POP)
SST94073	Catalogue Ape' City DSL-BSIV	Piaggio spare parts (POP)
SST94154	Catalogue Ape city HT (CNG/LPG)	Piaggio spare parts (POP)
SST94161	Catalogue Ape City Petrol - Philippines	Piaggio spare parts (POP)
SST94074	catalogue Ape city-BS4 (P/C/L)-step-1	Piaggio spare parts (POP)
SST94053	Catalogue Compact Diesel)	Piaggio spare parts (POP)
SST94048	Catalogue Paxx-200 (CNG,LPG,PETROL)	Piaggio spare parts (POP)
SST94050	Catalogue Porter-1000	Piaggio spare parts (POP)
SST94157	Catalogue Porter-1000 BSIV Phase_ II	Piaggio spare parts (POP)
SST94049	Catalogue Porter-600	Piaggio spare parts (POP)
SST94075	Catalogue Porter-700(BSIV)	Piaggio spare parts (POP)
B009384	CATALYTIC CONVERTER ASSY BS-III	Piaggio spare parts (POP)
B006736	CATALYTIC CONVERTER ASSY BS-III	Piaggio spare parts (POP)
D7137087Z01	CATCH ASSY, FR SEAT CUSHI	Piaggio spare parts (POP)
B009214	CATCH ASSY, FR SEAT MINITRUK	Piaggio spare parts (POP)
B006522	CATCON - MINITRUK 441	Piaggio spare parts (POP)
B073957	CATCON ASSLY (MAKE ECOCAT)	Piaggio spare parts (POP)
L21800468	CATCON ASSY LDW482 BSIII	Piaggio spare parts (POP)
920305	CCLAMP FOR SECTOR &CONN. PLATE ASSLY	Piaggio spare parts (POP)
03G160807	C-CLIP SHIFT RAIL	Piaggio spare parts (POP)
03G160318	C-CLIP-AXIAL GEAR RETAINER	Piaggio spare parts (POP)
882310	CCV VALVE	Piaggio spare parts (POP)
B011180	CCV VALVE HOSE	Piaggio spare parts (POP)
ED13681	CDI UNIT	Piaggio spare parts (POP)
E40005463	CDS STARTER MOTOR	Piaggio spare parts (POP)
6B000257	CELEBRATION STICKER BIG	Piaggio spare parts (POP)
6B000258	CELEBRATION STICKER SMALL	Piaggio spare parts (POP)
B024452SL	CENTRAL COVER	Piaggio spare parts (POP)
B073872	CENTRAL FASCIA	Piaggio spare parts (POP)
6B001897	CENTRAL FASCIA APE E CITY	Piaggio spare parts (POP)
B006868	CENTRAL FLOOR ASSLY	Piaggio spare parts (POP)
227982	CENTRAL PART COVER STRIP	Piaggio spare parts (POP)
661419	CENTRAL PIPE (FRAME COVERING)	Piaggio spare parts (POP)
1E000400	CENTRAL PROFILE	Piaggio spare parts (POP)
662198	CENTRAL TUBE ASSLY.-HOOD FRAME- HI BODY	Piaggio spare parts (POP)
662344	CENTRAL TUBE ASSLY-HOOD FRAME	Piaggio spare parts (POP)
B006763	CENTRALSUPPORT PIPE HOOD FRAME	Piaggio spare parts (POP)
B014234	CENTRIFUGAL MASS	Piaggio spare parts (POP)
1A008397	CENTRIFUGAL MASS CONTAINMENT SHEET	Piaggio spare parts (POP)
B015043	CENTRIFUGAL MASS CONTAINMENT SHEET	Piaggio spare parts (POP)
KIT95012	CENTRIFUGAL MASS KIT	Piaggio spare parts (POP)
KIT95012R	CENTRIFUGAL MASS KIT	Piaggio spare parts (POP)
SPB019038	CENTRIFUGAL MASS WITH I.P HE VESPA SPD	Piaggio spare parts (POP)
1A005421	CENTRIFUGAL MASS WITH I.P.	Piaggio spare parts (POP)
B019038	CENTRIFUGAL MASS WITH I.P.	Piaggio spare parts (POP)
B014233	CENTRIFUGAL MASS WITH I.P.	Piaggio spare parts (POP)
B018056	CENTRIFUGAL MASS WITH I.P.	Piaggio spare parts (POP)

SP1A006405	CENTRIFUGAL MASS WITH I.P.- SPD	Piaggio spare parts (POP)
SP1A012741	Centrifugal mass with I.P._SPD	Piaggio spare parts (POP)
SPB014233	CENTRIFUGAL MASS WITH I.P.APE PAX - SPD	Piaggio spare parts (POP)
SP1A005421	CENTRIFUGAL MASS WITHIP PAX/HE VESPA SPD	Piaggio spare parts (POP)
B010564	CHAIN	Piaggio spare parts (POP)
882541	CHAIN GUIDE	Piaggio spare parts (POP)
B011981	CHAIN GUIDE	Piaggio spare parts (POP)
020855Y	CHAIN STRETCHER LEVER	Piaggio spare parts (POP)
847928	CHAIN SUPPORT GASKET	Piaggio spare parts (POP)
L4110001	CHAIN TENSIONER	Piaggio spare parts (POP)
B012259	CHAIN TENSIONER	Piaggio spare parts (POP)
882174	CHAIN TENSIONER	Piaggio spare parts (POP)
B011429	CHAIN TENSIONER	Piaggio spare parts (POP)
882542	CHAIN TENSIONER ARM	Piaggio spare parts (POP)
B011982	CHAIN TENSIONER ARM	Piaggio spare parts (POP)
82650R	CHAIN TENSIONER DEVICE	Piaggio spare parts (POP)
B017165	CHAIN TENSIONER DEVICE	Piaggio spare parts (POP)
847277	CHAIN TIGHTENING DEVICE	Piaggio spare parts (POP)
B014996	CHAIN TIGHTENING ROD	Piaggio spare parts (POP)
1A004875	CHAIN TIGHTENING ROD	Piaggio spare parts (POP)
1A006901	Chain tightening rod	Piaggio spare parts (POP)
LG3695103	chake cable assly	Piaggio spare parts (POP)
LG2100067	CHAMPION SPARK PLUG RC12YC	Piaggio spare parts (POP)
B024579	CHANGE CONTROL TUBE WITH IP	Piaggio spare parts (POP)
D6126287Z01	CHANNEL, ROOF DRIP SIDE, LH	Piaggio spare parts (POP)
B002721	CHANNEL, ROOF DRIP SIDE, LH (CED)	Piaggio spare parts (POP)
D6126187Z01	CHANNEL, ROOF DRIP SIDE, RH	Piaggio spare parts (POP)
B002720	CHANNEL, ROOF DRIP SIDE, RH (CED)	Piaggio spare parts (POP)
6D001002	CHARGER BAG	Piaggio spare parts (POP)
SST96024	Charger- BC1110-AP2	Piaggio spare parts (POP)
SST96020	Charger- BC1121	Piaggio spare parts (POP)
6D000834	CHARGER CABLE	Piaggio spare parts (POP)
6D000835	CHARGER CABLE	Piaggio spare parts (POP)
6B002687	CHARGER PROTECTION CAP	Piaggio spare parts (POP)
6B002688	CHARGER PROTECTION CAP MOUNTING HINGE	Piaggio spare parts (POP)
930101012	CHARMING BLUE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101012A	CHARMING BLUE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B008020LB	CHASSIS S/A MAIN, PORTER 1000 WITH DR LB	Piaggio spare parts (POP)
B041113BW	CHASSIS S/A, PORTER 600 W/O DOOR B WHITE	Piaggio spare parts (POP)
B041113CO	CHASSIS S/A, PORTER 600 W/O DOOR C ORANG	Piaggio spare parts (POP)
B041113LB	CHASSIS S/A, PORTER 600 W/O DOOR LT BLUE	Piaggio spare parts (POP)
B041113SY	CHASSIS S/A, PORTER 600 W/O DOOR S YELLO	Piaggio spare parts (POP)
B041113WR	CHASSIS S/A, PORTER 600 W/O DOOR W RED	Piaggio spare parts (POP)
B041114CO	CHASSIS S/A, PORTER 600 WITH DOOR C ORAN	Piaggio spare parts (POP)
B041114SY	CHASSIS S/A, PORTER 600 WITH DOOR S YELL	Piaggio spare parts (POP)
B041114WR	CHASSIS S/A, PORTER 600 WITH DOOR WEST R	Piaggio spare parts (POP)
B041114LB	CHASSIS S/A,PORTER 600 WITH DOOR LT BLUE	Piaggio spare parts (POP)

B002660BG	CHASSIS WITH CAB & DOORS COMPLETE-BR. GR	Piaggio spare parts (POP)
B002660EG	CHASSIS WITH CAB & DOORS COMPLETE-ECO GR	Piaggio spare parts (POP)
662581	CHASSIS WITH CAB AND DOORS ASSLY.	Piaggio spare parts (POP)
B042655ED	CHASSIS WITH CAB -APE CLASSIC 501VER-CED	Piaggio spare parts (POP)
B076729BW	CHASSIS WITH CAB DOOR 501 PUP-BSIV_BW	Piaggio spare parts (POP)
B076729CB	CHASSIS WITH CAB DOOR 501 PUP-BSIV_CB	Piaggio spare parts (POP)
B076729EG	CHASSIS WITH CAB DOOR 501 PUP-BSIV_EG	Piaggio spare parts (POP)
B076729GY	CHASSIS WITH CAB DOOR 501 PUP-BSIV_GY	Piaggio spare parts (POP)
B076729PA	CHASSIS WITH CAB DOOR 501 PUP-BSIV_PA	Piaggio spare parts (POP)
B076729PB	CHASSIS WITH CAB DOOR 501 PUP-BSIV_PB	Piaggio spare parts (POP)
B076729SY	CHASSIS WITH CAB DOOR 501 PUP-BSIV_SY	Piaggio spare parts (POP)
B076729WR	CHASSIS WITH CAB DOOR 501 PUP-BSIV_WR	Piaggio spare parts (POP)
B076728BW	CHASSIS WITH CAB DOOR 501LD-BSIV_BW	Piaggio spare parts (POP)
B076728CB	CHASSIS WITH CAB DOOR 501LD-BSIV_CB	Piaggio spare parts (POP)
B076728CO	CHASSIS WITH CAB DOOR 501LD-BSIV_CO	Piaggio spare parts (POP)
B076728EG	CHASSIS WITH CAB DOOR 501LD-BSIV_EG	Piaggio spare parts (POP)
B076728GY	CHASSIS WITH CAB DOOR 501LD-BSIV_GY	Piaggio spare parts (POP)
B076728PA	CHASSIS WITH CAB DOOR 501LD-BSIV_PA	Piaggio spare parts (POP)
B076728PB	CHASSIS WITH CAB DOOR 501LD-BSIV_PB	Piaggio spare parts (POP)
B076728SY	CHASSIS WITH CAB DOOR 501LD-BSIV_SY	Piaggio spare parts (POP)
B076728WR	CHASSIS WITH CAB DOOR 501LD-BSIV_WR	Piaggio spare parts (POP)
B076759BW	CHASSIS WITH CAB DOOR-BS(IV) STD_BW	Piaggio spare parts (POP)
B076756BW	CHASSIS WITH CAB DOOR-BS-(IV) STD_BW	Piaggio spare parts (POP)
B076759CB	CHASSIS WITH CAB DOOR-BS(IV) STD_CB	Piaggio spare parts (POP)
B076756CB	CHASSIS WITH CAB DOOR-BS-(IV) STD_CB	Piaggio spare parts (POP)
B076759EG	CHASSIS WITH CAB DOOR-BS(IV) STD_EG	Piaggio spare parts (POP)
B076756EG	CHASSIS WITH CAB DOOR-BS-(IV) STD_EG	Piaggio spare parts (POP)
B076759GY	CHASSIS WITH CAB DOOR-BS(IV) STD_GY	Piaggio spare parts (POP)
B076756GY	CHASSIS WITH CAB DOOR-BS-(IV) STD_GY	Piaggio spare parts (POP)
B076759PA	CHASSIS WITH CAB DOOR-BS(IV) STD_PA	Piaggio spare parts (POP)
B076756PA	CHASSIS WITH CAB DOOR-BS-(IV) STD_PA	Piaggio spare parts (POP)
B076759PB	CHASSIS WITH CAB DOOR-BS(IV) STD_PB	Piaggio spare parts (POP)
B076756PB	CHASSIS WITH CAB DOOR-BS-(IV) STD_PB	Piaggio spare parts (POP)
B076759SY	CHASSIS WITH CAB DOOR-BS(IV) STD_SY	Piaggio spare parts (POP)
B076756SY	CHASSIS WITH CAB DOOR-BS-(IV) STD_SY	Piaggio spare parts (POP)
B076759WR	CHASSIS WITH CAB DOOR-BS(IV) STD_WR	Piaggio spare parts (POP)
B076756WR	CHASSIS WITH CAB DOOR-BS-(IV) STD_WR	Piaggio spare parts (POP)
B076756CO	CHASSIS WITH CAB DOOR-BS(IV)_STD_CO	Piaggio spare parts (POP)
B076729ED	CHASSIS WITH CAB DOOR-BS-IV ED	Piaggio spare parts (POP)
B076728ED	CHASSIS WITH CAB DOOR-BS-IV ED	Piaggio spare parts (POP)
6B000348BL	CHASSIS WITH CAB DOOR-BS-IV_BL	Piaggio spare parts (POP)
6B000309BL	CHASSIS WITH CAB DOOR-BS-IV_BL	Piaggio spare parts (POP)
6B000348BW	CHASSIS WITH CAB DOOR-BS-IV_BW	Piaggio spare parts (POP)
6B000309BW	CHASSIS WITH CAB DOOR-BS-IV_BW	Piaggio spare parts (POP)
6B000314BW	CHASSIS WITH CAB DOOR-BS-IV_BW	Piaggio spare parts (POP)
6B000309CB	CHASSIS WITH CAB DOOR-BS-IV_CB	Piaggio spare parts (POP)
6B000314CB	CHASSIS WITH CAB DOOR-BS-IV_CB	Piaggio spare parts (POP)

6B000348CB	CHASSIS WITH CAB DOOR-BS-IV_CB	Piaggio spare parts (POP)
6B000314CO	CHASSIS WITH CAB DOOR-BS-IV_CO	Piaggio spare parts (POP)
B076756ED	CHASSIS WITH CAB DOOR-BS-IV_ED	Piaggio spare parts (POP)
6B000348EG	CHASSIS WITH CAB DOOR-BS-IV_EG	Piaggio spare parts (POP)
6B000309EG	CHASSIS WITH CAB DOOR-BS-IV_EG	Piaggio spare parts (POP)
6B000314EG	CHASSIS WITH CAB DOOR-BS-IV_EG	Piaggio spare parts (POP)
6B000314GY	CHASSIS WITH CAB DOOR-BS-IV_GY	Piaggio spare parts (POP)
6B000348GY	CHASSIS WITH CAB DOOR-BS-IV_GY	Piaggio spare parts (POP)
6B000309GY	CHASSIS WITH CAB DOOR-BS-IV_GY	Piaggio spare parts (POP)
6B000314LB	CHASSIS WITH CAB DOOR-BS-IV_LB	Piaggio spare parts (POP)
6B000314PA	CHASSIS WITH CAB DOOR-BS-IV_PA	Piaggio spare parts (POP)
6B000314PB	CHASSIS WITH CAB DOOR-BS-IV_PB	Piaggio spare parts (POP)
6B000348WR	CHASSIS WITH CAB DOOR-BS-IV_WR	Piaggio spare parts (POP)
6B000309WR	CHASSIS WITH CAB DOOR-BS-IV_WR	Piaggio spare parts (POP)
568730	CHASSIS WITH CAB DOORS	Piaggio spare parts (POP)
B003736EG	CHASSIS WITH CAB DOORS 501 CARGO (SPD)	Piaggio spare parts (POP)
B003736ED	CHASSIS WITH CAB DOORS 501 CARGO ED	Piaggio spare parts (POP)
D6861087Z01	CHECK ASSY, FR DOOR	Piaggio spare parts (POP)
801000528	CHECK NUT M 5	Piaggio spare parts (POP)
1A004225	CHECK PIECE	Piaggio spare parts (POP)
B003550	CHECKING PLATE NO-1	Piaggio spare parts (POP)
B003551	CHECKING PLATE NO-2	Piaggio spare parts (POP)
661909	CHEESE HEAD SCREW (VANAZ P.NO.R-8101-120	Piaggio spare parts (POP)
932220	Cheese Head Screw(R-8106-VI-280)Paxx200	Piaggio spare parts (POP)
B041027	CHOKE CABLE	Piaggio spare parts (POP)
B042056	CHOKE CABLE	Piaggio spare parts (POP)
E34K120006	Choke cable 501 WC modi. 1.5mm	Piaggio spare parts (POP)
B078531	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B076870R	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B078461	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B076870	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B006517	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B078533R	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
662567	CHOKE CONTROL CABLE ASSLY.	Piaggio spare parts (POP)
B001633	CHOKE CONTROL CABLE ASSLY.(SINGLE PIECE)	Piaggio spare parts (POP)
B018547	CHOKE CONTROL TRASMISSION SIDE CARBURETO	Piaggio spare parts (POP)
LG3360073	CHOKE D.11X7X15	Piaggio spare parts (POP)
LG1585306	CHOKE D.24X34.7 AIR FILTER	Piaggio spare parts (POP)
KD47309588	CIL.HEAD GASKET 0.7 15LD441	Piaggio spare parts (POP)
KD47309578	CIL.HEAD GASKET 0.75 15LD441	Piaggio spare parts (POP)
KD47309568	CIL.HEAD GASKET 0.8 15LD441	Piaggio spare parts (POP)
KD47309558	CIL.HEAD GASKET 0.85 15LD441	Piaggio spare parts (POP)
KD47309548	CIL.HEAD GASKET 0.9 15LD441	Piaggio spare parts (POP)
KD4730935	CIL.HEAD GASKET 0.95 15LD441	Piaggio spare parts (POP)
KD4730936	CIL.HEAD GASKET 1.00 15LD441	Piaggio spare parts (POP)
KD4730937	CIL.HEAD GASKET 1.05 15LD441	Piaggio spare parts (POP)
KD4730938	CIL.HEAD GASKET 1.10 15LD441	Piaggio spare parts (POP)

KD4730939	CIL.HEAD GASKET 1.15 15LD441	Piaggio spare parts (POP)
KD4730940	CIL.HEAD GASKET 1.20 15LD441	Piaggio spare parts (POP)
KD4730941	CIL.HEAD GASKET 1.25 15LD441	Piaggio spare parts (POP)
E999116503	CIRCLIP	Piaggio spare parts (POP)
5967	CIRCLIP	Piaggio spare parts (POP)
E312124013	Circlip	Piaggio spare parts (POP)
E07510901	Circlip	Piaggio spare parts (POP)
1A012388	CIRCLIP	Piaggio spare parts (POP)
E250124006	Circlip	Piaggio spare parts (POP)
E5201160056	CIRCLIP	Piaggio spare parts (POP)
6410	CIRCLIP	Piaggio spare parts (POP)
E500116011	CIRCLIP	Piaggio spare parts (POP)
L1175084	CIRCLIP	Piaggio spare parts (POP)
E47124004	CIRCLIP	Piaggio spare parts (POP)
E07510909	Circlip	Piaggio spare parts (POP)
LG1165038	Circlip	Piaggio spare parts (POP)
L11600670	CIRCLIP	Piaggio spare parts (POP)
L1301346	CIRCLIP	Piaggio spare parts (POP)
E3124017	CIRCLIP	Piaggio spare parts (POP)
E3124017A	CIRCLIP	Piaggio spare parts (POP)
E87010923	Circlip	Piaggio spare parts (POP)
9101	CIRCLIP	Piaggio spare parts (POP)
111353	CIRCLIP	Piaggio spare parts (POP)
132134	CIRCLIP	Piaggio spare parts (POP)
L1301347	CIRCLIP	Piaggio spare parts (POP)
03G160820	circlip internal spring seat	Piaggio spare parts (POP)
1A012687	Circlip - Standard DIN 472	Piaggio spare parts (POP)
121019015	CIRCLIP (CLUTCH BOX)	Piaggio spare parts (POP)
B002059	CIRCLIP (MAIN SHAFT)	Piaggio spare parts (POP)
KD1165010	CIRCLIP D.4 DIN.6799 UN	Piaggio spare parts (POP)
L1165010	CIRCLIP D.4 DIN.6799 UN	Piaggio spare parts (POP)
AP8150462	Circlip d9	Piaggio spare parts (POP)
842001002	CIRCLIP DIA 10(EXT)	Piaggio spare parts (POP)
569148	CIRCLIP DIA 16(INT)	Piaggio spare parts (POP)
567473	CIRCLIP DIA 42 INT (841004203)	Piaggio spare parts (POP)
5965	CIRCLIP DIA 5 E TYPE	Piaggio spare parts (POP)
6650	CIRCLIP DIA 50(INT)	Piaggio spare parts (POP)
5969	CIRCLIP DIA 9 E TYPE	Piaggio spare parts (POP)
842003000	CIRCLIP DIA. 30 (EXT.)	Piaggio spare parts (POP)
841005506	CIRCLIP DIA. 55 (INT)	Piaggio spare parts (POP)
842001507	CIRCLIP DIA.15(EXT)	Piaggio spare parts (POP)
842001600	CIRCLIP DIA.16(EXT)	Piaggio spare parts (POP)
842002006	CIRCLIP DIA.20(EXT)	Piaggio spare parts (POP)
842002501	CIRCLIP DIA.25(EXT)	Piaggio spare parts (POP)
841004708	CIRCLIP DIA.47(INT)	Piaggio spare parts (POP)
842004808	CIRCLIP DIA.48(EXT)	Piaggio spare parts (POP)
843000500	CIRCLIP DIA.5 (EXT) TYPEC	Piaggio spare parts (POP)

841005207	CIRCLIP DIA.52(INT)	Piaggio spare parts (POP)
843000809	CIRCLIP DIA.8(EXT) TYPEC	Piaggio spare parts (POP)
569937	CIRCLIP E TYPE FOR GROOVE	Piaggio spare parts (POP)
662433	CIRCLIP EXTERNAL (DIA 32)	Piaggio spare parts (POP)
963486	CIRCLIP FOR PISTON WRIST	Piaggio spare parts (POP)
970300592	CIRCLIP FOR SELECTOR SHAFT FITMENT TOOL	Piaggio spare parts (POP)
828050	CIRCLIP FOR SHAFT	Piaggio spare parts (POP)
1F000483	CIRCLIP FOR SHAFT	Piaggio spare parts (POP)
1A004221	CIRCLIP FOR SHAFT	Piaggio spare parts (POP)
6A000209	CIRCLIP FOR SHAFT ID 9.3	Piaggio spare parts (POP)
L1175068	CIRCLIP FOR SHAFTS	Piaggio spare parts (POP)
B002097	CIRCLIP INTERNAL	Piaggio spare parts (POP)
660386	CIRCLIP INTERNAL DIA 16 (LEVER S/A SELEC	Piaggio spare parts (POP)
E87010914	CIRCLIP PIN CONTROL LEVER	Piaggio spare parts (POP)
970300594	CIRCLIP REMOVAL TOOL-SCREW DRIVER	Piaggio spare parts (POP)
127754019	CIRCLIP-CLUTCH BOX	Piaggio spare parts (POP)
E7510901	CIRCLIPDECOMPRESSION SHAFT	Piaggio spare parts (POP)
ESP650DBP007	CIRCLIP-PISTON	Piaggio spare parts (POP)
03G160863	CirclipReverse ball body	Piaggio spare parts (POP)
L1200338	CIRCULAR SECTION PAKING	Piaggio spare parts (POP)
L1200339	CIRCULAR SECTION WASHER 4,47 X 1,78	Piaggio spare parts (POP)
L1200335	CIRCULAR SECTION WASHER 9,92 X 2,62	Piaggio spare parts (POP)
569696	CIRCULAR GASKET 422	Piaggio spare parts (POP)
L1200330	CIRCULAR SECTION PACKING 8,73 X 1,78	Piaggio spare parts (POP)
920031	Cl. shaft assly (161CE00201)	Piaggio spare parts (POP)
20812	CLAMP	Piaggio spare parts (POP)
E60018089	Clamp	Piaggio spare parts (POP)
244313	CLAMP	Piaggio spare parts (POP)
72515	CLAMP	Piaggio spare parts (POP)
109249	CLAMP	Piaggio spare parts (POP)
E6193361721	CLAMP	Piaggio spare parts (POP)
569504	CLAMP	Piaggio spare parts (POP)
D9004461193	CLAMP	Piaggio spare parts (POP)
216369	CLAMP	Piaggio spare parts (POP)
566300	CLAMP	Piaggio spare parts (POP)
D9004463179	CLAMP	Piaggio spare parts (POP)
D9004464108	CLAMP	Piaggio spare parts (POP)
D9004461718	CLAMP	Piaggio spare parts (POP)
6A000243	CLAMP	Piaggio spare parts (POP)
L3650105	CLAMP	Piaggio spare parts (POP)
L3650109	CLAMP	Piaggio spare parts (POP)
D9004464072	CLAMP	Piaggio spare parts (POP)
D9004463232	CLAMP	Piaggio spare parts (POP)
D9004463231	CLAMP	Piaggio spare parts (POP)
E6193361722	CLAMP	Piaggio spare parts (POP)
662360	CLAMP	Piaggio spare parts (POP)
D9004464719	CLAMP	Piaggio spare parts (POP)

D9004465038	CLAMP	Piaggio spare parts (POP)
CM001913	CLAMP	Piaggio spare parts (POP)
D9004465441	CLAMP	Piaggio spare parts (POP)
217280	CLAMP	Piaggio spare parts (POP)
1E002547	CLAMP	Piaggio spare parts (POP)
B041441	CLAMP	Piaggio spare parts (POP)
D9004462157	CLAMP	Piaggio spare parts (POP)
D9004464457	CLAMP	Piaggio spare parts (POP)
B041168	CLAMP	Piaggio spare parts (POP)
D9004461389	CLAMP	Piaggio spare parts (POP)
632864	CLAMP	Piaggio spare parts (POP)
660321	CLAMP	Piaggio spare parts (POP)
612459	CLAMP	Piaggio spare parts (POP)
CM001914	CLAMP	Piaggio spare parts (POP)
CM001904	CLAMP	Piaggio spare parts (POP)
D9004461420	CLAMP	Piaggio spare parts (POP)
D9004461468	CLAMP	Piaggio spare parts (POP)
ESK2924	CLAMP	Piaggio spare parts (POP)
577557	CLAMP	Piaggio spare parts (POP)
6A000244	CLAMP	Piaggio spare parts (POP)
644286	CLAMP	Piaggio spare parts (POP)
B075838	CLAMP	Piaggio spare parts (POP)
6A000486	CLAMP	Piaggio spare parts (POP)
KD3630225	Clamp	Piaggio spare parts (POP)
CM001915	CLAMP	Piaggio spare parts (POP)
645560	CLAMP	Piaggio spare parts (POP)
KD3630159	CLAMP	Piaggio spare parts (POP)
889755	CLAMP	Piaggio spare parts (POP)
LG36501130	CLAMP D.13-20	Piaggio spare parts (POP)
LG3630129	CLAMP D.13-20	Piaggio spare parts (POP)
B010677	CLAMP - INJECTOR TWIN	Piaggio spare parts (POP)
E87001020	CLAMP (CTC	Piaggio spare parts (POP)
ESP650DNB032	CLAMP (CTC)(OD-19mm)	Piaggio spare parts (POP)
932278	Clamp (R-8106-870) Paxe 200	Piaggio spare parts (POP)
271477	Clamp (starter motor)	Piaggio spare parts (POP)
614188	CLAMP 40-60	Piaggio spare parts (POP)
E60018078	CLAMP 501 BSIV	Piaggio spare parts (POP)
E40028002	Clamp Assembly	Piaggio spare parts (POP)
B074078	CLAMP ASSLY	Piaggio spare parts (POP)
E6193361720	CLAMP BREATHER VALVE	Piaggio spare parts (POP)
E87101058	CLAMP CTC (OD 19MM)	Piaggio spare parts (POP)
LG3630038	CLAMP d.32-50 SX9C W1	Piaggio spare parts (POP)
E40018082	CLAMP DIP STICK	Piaggio spare parts (POP)
ESP650DNB030	CLAMP DRAIN PIPE OIL SEPERATOR	Piaggio spare parts (POP)
E87001053	CLAMP DRAIN PIPE OIL SEPERATOR	Piaggio spare parts (POP)
6A001057	CLAMP FOR 10MM ID HOSE	Piaggio spare parts (POP)
E87018054	CLAMP FOR BYPASS PIPE	Piaggio spare parts (POP)

B076206	CLAMP FOR CABLE SUPPORT	Piaggio spare parts (POP)
925721	CLAMP FOR COPPER TUBE(K-0101-23)	Piaggio spare parts (POP)
925722	CLAMP FOR COPPER TUBE(K-0101-23)	Piaggio spare parts (POP)
B024194	CLAMP FOR FLEXIBLE HOSE	Piaggio spare parts (POP)
116105	CLAMP FOR FR MUDFLAP	Piaggio spare parts (POP)
B009618	CLAMP FOR FUEL FILTER MTG.	Piaggio spare parts (POP)
632481	CLAMP FOR FUEL FILTER MTG.	Piaggio spare parts (POP)
6A001064	CLAMP FOR FUEL TUBE	Piaggio spare parts (POP)
6A000495	CLAMP FOR HOSE PR. REG. TO DAMPNER	Piaggio spare parts (POP)
6A000904	CLAMP FOR METAL PIPE	Piaggio spare parts (POP)
6A000491	CLAMP FOR VACCUME HOSE	Piaggio spare parts (POP)
B076145	CLAMP HOSE PIPE	Piaggio spare parts (POP)
B009131	CLAMP HOSE PIPE	Piaggio spare parts (POP)
E87001052	CLAMP INLET PIPE OIL SEPERATOR	Piaggio spare parts (POP)
B001788	CLAMP MUDFLAP REAR	Piaggio spare parts (POP)
B042697	CLAMP RUBBER COATED	Piaggio spare parts (POP)
652312	CLAMP- S/A BATTERY	Piaggio spare parts (POP)
116113014	CLAMP SILENCER SILENCER MTG	Piaggio spare parts (POP)
932228	CLAMP(R-8106-VI-490)Paxx200	Piaggio spare parts (POP)
D7818787Z01	CLAMP, ACCELERATOR LINK F	Piaggio spare parts (POP)
B079310	CLAMP, BRAKE HOSE	Piaggio spare parts (POP)
615094	CLAMP, DOOR LOCK CYLINDER & SLEEVE	Piaggio spare parts (POP)
940130	CLAMP,DOOR LOCK CYL. & SLEEVE WITH KEY	Piaggio spare parts (POP)
645055	CLAMP,DOOR LOCK CYLINDER & SLEEVE	Piaggio spare parts (POP)
D9622130705	CLAMP,NO.4	Piaggio spare parts (POP)
940049	CLAMP_BNA AIR FILTER ASSY	Piaggio spare parts (POP)
920070	Clamp-Ape City CNG/LPG (R-8104-940)	Piaggio spare parts (POP)
920088	Clamp-BSIII	Piaggio spare parts (POP)
ESP650DNB014	CLAMP-HOSE SEPARATOR	Piaggio spare parts (POP)
ESP650DNB033	CLAMP-INLET PIPE OIL SEPERATOR	Piaggio spare parts (POP)
A01G140021	CLAMP-OMS RETURN HOSE (P CLAMP)	Piaggio spare parts (POP)
1F000418	CLEANER PIPE	Piaggio spare parts (POP)
567899	CLEVIS PIN	Piaggio spare parts (POP)
261336	CLIP	Piaggio spare parts (POP)
L8350023	CLIP	Piaggio spare parts (POP)
D9004467105	CLIP	Piaggio spare parts (POP)
D9004468200	CLIP	Piaggio spare parts (POP)
D9004468076	CLIP	Piaggio spare parts (POP)
D9004468117	CLIP	Piaggio spare parts (POP)
D9004467161	CLIP	Piaggio spare parts (POP)
D9004467076	CLIP	Piaggio spare parts (POP)
LG3650111	Clip	Piaggio spare parts (POP)
B024130	CLIP	Piaggio spare parts (POP)
D9004468075	CLIP	Piaggio spare parts (POP)
B024147	CLIP	Piaggio spare parts (POP)
03G161203	clip bearing input shaft	Piaggio spare parts (POP)
03G161204	clip bearing output shaft	Piaggio spare parts (POP)

184142	CLIP - CM017410	Piaggio spare parts (POP)
B006509	CLIP & PIN KIT LH	Piaggio spare parts (POP)
B006510	CLIP & PIN KIT RH	Piaggio spare parts (POP)
B075700	CLIP (14.5)	Piaggio spare parts (POP)
932270	Clip (K-0421-13-020) Paxx 200 LPG	Piaggio spare parts (POP)
661910	CLIP (VANAZ P.NO.K-0401-19-030)	Piaggio spare parts (POP)
6A000301	CLIP 2-WAY FOR PIPE OD 8-10	Piaggio spare parts (POP)
643864	CLIP FOR COPPER TUBE(VANAZ PT NO K-0101-	Piaggio spare parts (POP)
6A000621	CLIP FOR CORRUGATED HOSE	Piaggio spare parts (POP)
AP8102375	CLIP M5	Piaggio spare parts (POP)
925764	CLIP(K-0301-13-040)	Piaggio spare parts (POP)
932254	Clip(R-8106-VII-440)Paxx200	Piaggio spare parts (POP)
643869	CLIP(VANAZ PT NO K-0301-13-040)	Piaggio spare parts (POP)
D6786887Z01	CLIP,DOOR WHEATHER STRIP	Piaggio spare parts (POP)
E10B140003	CLIP_ Sogefi	Piaggio spare parts (POP)
1A011940	CLUTCH COVER GASKET	Piaggio spare parts (POP)
2000500077	CLOSING CAP	Piaggio spare parts (POP)
B002409	CLOSURE ASSLY	Piaggio spare parts (POP)
1000520074	CLOSURE CAP	Piaggio spare parts (POP)
567944	CLOSURE FRT LH	Piaggio spare parts (POP)
567943	CLOSURE FRT RH	Piaggio spare parts (POP)
605449	CLOSURE LAMP RR LH	Piaggio spare parts (POP)
605448	CLOSURE LAMP RR RH	Piaggio spare parts (POP)
B078178	CLUSTER ADAPTER (CNG/LPG)	Piaggio spare parts (POP)
6D000298	CLUSTER ADAPTER(CNG/LPG)-BS-VI	Piaggio spare parts (POP)
604793	CLUSTER ASSLY	Piaggio spare parts (POP)
660079	CLUSTER ASSLY WITH BATT.CHARGE IND.	Piaggio spare parts (POP)
B073937	Cluster Cover Assembly	Piaggio spare parts (POP)
1A015209	CLUSTER GEAR	Piaggio spare parts (POP)
122031010	CLUSTER GEAR	Piaggio spare parts (POP)
1A009438	CLUSTER GEAR	Piaggio spare parts (POP)
1A010698R	CLUSTER GEAR	Piaggio spare parts (POP)
127203010R	CLUSTER GEAR	Piaggio spare parts (POP)
1F000750	CLUSTER GEAR	Piaggio spare parts (POP)
1A013046	CLUSTER GEAR	Piaggio spare parts (POP)
1A002019	CLUSTER GEAR	Piaggio spare parts (POP)
B041220	CLUSTER GEAR	Piaggio spare parts (POP)
1A003607R	CLUSTER GEAR	Piaggio spare parts (POP)
127201012	CLUSTER GEAR	Piaggio spare parts (POP)
1A011044	CLUSTER GEAR	Piaggio spare parts (POP)
B002095	CLUSTER GEAR	Piaggio spare parts (POP)
127204014	CLUSTER GEAR	Piaggio spare parts (POP)
127202016	CLUSTER GEAR	Piaggio spare parts (POP)
B041039	CLUSTER GEAR	Piaggio spare parts (POP)
127203010	CLUSTER GEAR (VE)	Piaggio spare parts (POP)
127305519	CLUSTER GEAR (VE)	Piaggio spare parts (POP)
970300531	CLUSTER GEAR BALL BRG EXTRACTOR	Piaggio spare parts (POP)

441025	CLUSTER GEAR NR BEARING PRESS	Piaggio spare parts (POP)
441026	CLUSTER GEAR NR BEARING REMOVAL	Piaggio spare parts (POP)
1A009459	CLUSTER GEAR WITH I.P.	Piaggio spare parts (POP)
1A002020	CLUSTER GEAR WITH I.P.	Piaggio spare parts (POP)
1A015207	CLUSTER GEAR WITH I.P.	Piaggio spare parts (POP)
SP1A002020	CLUSTER GEAR WITH I.P. - SPD	Piaggio spare parts (POP)
SP1A015207	CLUSTER GEAR WITH I.P. SPD	Piaggio spare parts (POP)
SP1A009459	CLUSTER GEAR WITH I.P.- SPD	Piaggio spare parts (POP)
SP1A014870	Cluster gear with i.p._SPD	Piaggio spare parts (POP)
SST94185	Cluster Shaft Ball Brg Installer	Piaggio spare parts (POP)
SST94181	Cluster Shaft Ball Brg Removal Tool	Piaggio spare parts (POP)
SST94189	Cluster Shaft Bush Pressing Tool	Piaggio spare parts (POP)
SST94188	Cluster Shaft Bush Removal Tool	Piaggio spare parts (POP)
SST94192	Cluster Shaft Holding Fixture	Piaggio spare parts (POP)
SST96031	Cluster shaft Oil Seal Preessing Dolley	Piaggio spare parts (POP)
SST94190	Cluster Shaft NRB Brg Main Hsg. Rem.Tool	Piaggio spare parts (POP)
SST94191	Cluster Shaft NRB Brg Main Hsg.Installer	Piaggio spare parts (POP)
1A014338	CLUTCH ASSEMBLY	Piaggio spare parts (POP)
L4032112	CLUTCH ASSEMBLY	Piaggio spare parts (POP)
1A015065	CLUTCH ASSEMBLY	Piaggio spare parts (POP)
L4032114	CLUTCH ASSEMBLY	Piaggio spare parts (POP)
L4032127	CLUTCH ASSEMBLY (165KG)	Piaggio spare parts (POP)
441024	CLUTCH ASSEMBLY / DISSEMBLY TOOL	Piaggio spare parts (POP)
L4032113	CLUTCH ASSLY LDW 422	Piaggio spare parts (POP)
127730013SP	CLUTCH ASSLY COMP. 501 (IMPROVED)-SPD	Piaggio spare parts (POP)
127730013	CLUTCH ASSLY COMP.(IMPROVED)	Piaggio spare parts (POP)
127750013SP	CLUTCH ASSLY COMP.(Old) - SPD	Piaggio spare parts (POP)
B041096	CLUTCH ASSLY COMPLE WITH BIMETALLIC BUSH	Piaggio spare parts (POP)
127730014	CLUTCH ASSLY COMPLETE	Piaggio spare parts (POP)
127750013	CLUTCH ASSLY COMPLETE (OLD)	Piaggio spare parts (POP)
MS444278	Clutch assly tool for kobra engine	Piaggio spare parts (POP)
1A006004	CLUTCH ASSY	Piaggio spare parts (POP)
1A001456	CLUTCH ASSY	Piaggio spare parts (POP)
1F000832	CLUTCH ASSY	Piaggio spare parts (POP)
1F000846	CLUTCH ASSY	Piaggio spare parts (POP)
B016103	Clutch assy	Piaggio spare parts (POP)
1A010119	CLUTCH ASSY	Piaggio spare parts (POP)
1A015616	CLUTCH ASSY	Piaggio spare parts (POP)
1A013629	CLUTCH ASSY	Piaggio spare parts (POP)
SP1A001456	CLUTCH ASSY APE PAX - SPD	Piaggio spare parts (POP)
SPB016103	CLUTCH ASSY APE PAX OLD - SPD	Piaggio spare parts (POP)
SP1A006004	CLUTCH ASSY APE PAX UPGRADE- SPD	Piaggio spare parts (POP)
B002658	CLUTCH ASSY COMPLETE	Piaggio spare parts (POP)
SP1A007563	CLUTCH ASSY -SPD	Piaggio spare parts (POP)
970300550	Clutch assy tool for kobra engine	Piaggio spare parts (POP)
020849Y	CLUTCH BLOCK	Piaggio spare parts (POP)
03G161662	CLUTCH BOLT	Piaggio spare parts (POP)

127691011	CLUTCH BOX	Piaggio spare parts (POP)
127691011P	CLUTCH BOX	Piaggio spare parts (POP)
127753015	CLUTCH BOX	Piaggio spare parts (POP)
1F000663	CLUTCH BRACKET	Piaggio spare parts (POP)
889281	CLUTCH BRACKET WITH I.P.	Piaggio spare parts (POP)
B003171	CLUTCH CABLE	Piaggio spare parts (POP)
B041024	CLUTCH CABLE	Piaggio spare parts (POP)
6A000804	CLUTCH CABLE	Piaggio spare parts (POP)
B074343	CLUTCH CABLE	Piaggio spare parts (POP)
6A000127	CLUTCH CABLE	Piaggio spare parts (POP)
B006975	CLUTCH CABLE ASSLY WITHOUT NUT & ROLLER	Piaggio spare parts (POP)
B006972	CLUTCH CABLE ASSLY WITHOUT NUT & ROLLER	Piaggio spare parts (POP)
6A001230	CLUTCH CABLE ASSY	Piaggio spare parts (POP)
1A019644	clutch cable bracket	Piaggio spare parts (POP)
602338	CLUTCH CABLE CONTROL ASSLY PASS RHD	Piaggio spare parts (POP)
L2630001	CLUTCH CAP	Piaggio spare parts (POP)
03A160050	CLUTCH CASING ASSEMBLY	Piaggio spare parts (POP)
SST94066	CLUTCH CENTERING TOOL	Piaggio spare parts (POP)
569020	CLUTCH CONTROL CABLE ASSY	Piaggio spare parts (POP)
660141	CLUTCH CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
940407	DIESEL FILTER	Piaggio spare parts (POP)
659802	CLUTCH CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
L5271191	CLUTCH CONTROL LEVER	Piaggio spare parts (POP)
164906	CLUTCH CONTROL LEVER	Piaggio spare parts (POP)
B024581	CLUTCH CONTROL LEVER	Piaggio spare parts (POP)
1F000664	CLUTCH CONTROL LEVER WITH I.P.	Piaggio spare parts (POP)
888470	CLUTCH CONTROL LEVER WITH I.P.	Piaggio spare parts (POP)
1A012702	CLUTCH CONTROL SHAFT	Piaggio spare parts (POP)
B076807R	CLUTCH CONTROL TRANS. ASSLY 501 PASS	Piaggio spare parts (POP)
6A001046R	CLUTCH CONTROL TRANS. ASSLY 501 PASS	Piaggio spare parts (POP)
587630	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
660342	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B006955	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B023919	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B073467R	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B074183R	CLUTCH CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B076808R	CLUTCH CONTROL TRANSMISSION ASSLY 501 LD	Piaggio spare parts (POP)
6A001047R	CLUTCH CONTROL TRANSMISSION ASSLY 501 LD	Piaggio spare parts (POP)
B001544	CLUTCH CONTROL TRANSMISSION ASSLY WITHOU	Piaggio spare parts (POP)
920102	Filter Element with Cyclonic tube	Piaggio spare parts (POP)
B006956	CLUTCH CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
660140	CLUTCH CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
B075566	CLUTCH CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
B001545	CLUTCH CONTROL TRANSMISSION ASSLY.-WITHO	Piaggio spare parts (POP)
1A011662	CLUTCH COVER	Piaggio spare parts (POP)
1F000830	CLUTCH COVER	Piaggio spare parts (POP)
1A013915	CLUTCH COVER	Piaggio spare parts (POP)

1A005203	CLUTCH COVER	Piaggio spare parts (POP)
1A010136	CLUTCH COVER	Piaggio spare parts (POP)
B074912	CLUTCH COVER	Piaggio spare parts (POP)
1A006752	CLUTCH COVER	Piaggio spare parts (POP)
B015796	CLUTCH COVER	Piaggio spare parts (POP)
1A015491	Clutch Cover	Piaggio spare parts (POP)
L2165095	CLUTCH COVER	Piaggio spare parts (POP)
B001964	CLUTCH COVER (510GB)	Piaggio spare parts (POP)
L2630002	CLUTCH COVER (CLUTCH 200 KG)	Piaggio spare parts (POP)
L2630004	CLUTCH COVER (CLUTCH 200 KG)	Piaggio spare parts (POP)
127794019	CLUTCH COVER (IMPROVED)	Piaggio spare parts (POP)
127184018	CLUTCH COVER (MACHINING)	Piaggio spare parts (POP)
889899	CLUTCH COVER ASSEMBLY	Piaggio spare parts (POP)
B003732	CLUTCH COVER ASSLY (PRESSURE PLATE)	Piaggio spare parts (POP)
1A014760	CLUTCH COVER ASSY	Piaggio spare parts (POP)
SST94068	CLUTCH COVER BEARING REMOVAL	Piaggio spare parts (POP)
L2165093	CLUTCH COVER CASE	Piaggio spare parts (POP)
L2165153	CLUTCH COVER CASE WITH I.P.	Piaggio spare parts (POP)
1A006104	CLUTCH COVER GASKET	Piaggio spare parts (POP)
B018549	CLUTCH COVER GASKET	Piaggio spare parts (POP)
1A006857	Clutch cover gasket	Piaggio spare parts (POP)
1A017382	CLUTCH COVER GASKET	Piaggio spare parts (POP)
SST94069	CLUTCH COVER REMOVAL	Piaggio spare parts (POP)
SP1A015503	Clutch Cover with oil plug_SPD	Piaggio spare parts (POP)
B015863	CLUTCH COVER WITH P.I.	Piaggio spare parts (POP)
SP1A005202	CLUTCH COVER WITH P.I. APE PAX - SPD	Piaggio spare parts (POP)
SPB015863	CLUTCH COVER WITH P.I. APE PAX - SPD	Piaggio spare parts (POP)
L2165130	CLUTCH CRANKCASE WITH IP LDW 482	Piaggio spare parts (POP)
B003731	CLUTCH DISC ASSLY (FRICTION PLATE)	Piaggio spare parts (POP)
B012501	CLUTCH DISC ASSY	Piaggio spare parts (POP)
889900	CLUTCH DISC ASSY	Piaggio spare parts (POP)
1A012376	CLUTCH DRIVE SHAFT	Piaggio spare parts (POP)
1A012374	Clutch drive spring	Piaggio spare parts (POP)
970300509	CLUTCH EXTRACTOR	Piaggio spare parts (POP)
B003804	CLUTCH FLANGE (510)	Piaggio spare parts (POP)
L7992020	CLUTCH GEARS CROSS	Piaggio spare parts (POP)
SST96034	Clutch Holding Tool for Ape city BSIV	Piaggio spare parts (POP)
1A001455	CLUTCH HOUSING	Piaggio spare parts (POP)
1A017153	CLUTCH HOUSING	Piaggio spare parts (POP)
1F000694	CLUTCH HOUSING	Piaggio spare parts (POP)
B011881	CLUTCH HOUSING WITH I.P.	Piaggio spare parts (POP)
SPB0118814	CLUTCH HOUSING WITH I.P.- SPD	Piaggio spare parts (POP)
SP1F000709	CLUTCH HOUSING WITH I.P.-GB 1000 SPD	Piaggio spare parts (POP)
1F000755	CLUTCH HUB	Piaggio spare parts (POP)
B016033	CLUTCH HUB WITH P.I.	Piaggio spare parts (POP)
1A006005	CLUTCH HUB WITH P.I.	Piaggio spare parts (POP)
6A001637	CLUTCH LEVER	Piaggio spare parts (POP)

1A015505	CLUTCH LEVER	Piaggio spare parts (POP)
857314	CLUTCH LEVER	Piaggio spare parts (POP)
AP8113758	Clutch lever	Piaggio spare parts (POP)
888684	CLUTCH LEVER RECOVERY SPRING	Piaggio spare parts (POP)
1A019307	CLUTCH LEVER WITH I.P.	Piaggio spare parts (POP)
1A017160	CLUTCH LOCK PLATE	Piaggio spare parts (POP)
441023	CLUTCH LOCKING TOOL	Piaggio spare parts (POP)
1F000466	CLUTCH OUTPUT SHAFT	Piaggio spare parts (POP)
1F000660	CLUTCH OUTPUT SHAFT COVER	Piaggio spare parts (POP)
632553	CLUTCH PEDAL ASSLY	Piaggio spare parts (POP)
B006478	CLUTCH PEDAL ASSLY	Piaggio spare parts (POP)
L3380145	CLUTCH PLATE	Piaggio spare parts (POP)
L3380147	CLUTCH PLATE	Piaggio spare parts (POP)
940024	Clutch Plate Kit (Old)	Piaggio spare parts (POP)
940025	Clutch Plate Kit (New)	Piaggio spare parts (POP)
1A010561	CLUTCH PRESSURE BUSH	Piaggio spare parts (POP)
SP1A010560	CLUTCH PRESSURE BUSH WITH I.P._SPD	Piaggio spare parts (POP)
1A010540	CLUTCH PRESSURE PLATE	Piaggio spare parts (POP)
1F000741	CLUTCH RELEASE BEARING	Piaggio spare parts (POP)
889902	CLUTCH RELEASE BEARING	Piaggio spare parts (POP)
03G161610	CLUTCH RELEASE BEARING	Piaggio spare parts (POP)
SP1F000742	CLUTCH RELEASE BEARING ASSLY-GB 700 SPD	Piaggio spare parts (POP)
B003730	CLUTCH RELEASE BEARING (510GB)	Piaggio spare parts (POP)
B006211	CLUTCH RELEASE BEARING -GUIDE	Piaggio spare parts (POP)
1A005414R	CLUTCH RING	Piaggio spare parts (POP)
B024793	CLUTCH SHAFT & OPERATING LEVER ASSLY.	Piaggio spare parts (POP)
127760018	CLUTCH SHAFT ASSLY	Piaggio spare parts (POP)
SP1F000467	CLUTCH SHAFT ASSLY - GB 700 SPD	Piaggio spare parts (POP)
127790013	CLUTCH SHAFT ASSLY (MONTANO)	Piaggio spare parts (POP)
127740018	CLUTCH SHAFT ASSLY (IMPROVED)	Piaggio spare parts (POP)
127740018P	CLUTCH SHAFT ASSLY (IMPROVED)	Piaggio spare parts (POP)
1A017637	CLUTCH SPRING	Piaggio spare parts (POP)
1A017147	CLUTCH SPRING	Piaggio spare parts (POP)
B023890	CLUTCH SPRING	Piaggio spare parts (POP)
KIT95005	CLUTCH SPRING SET	Piaggio spare parts (POP)
KIT95005R	CLUTCH SPRING SET	Piaggio spare parts (POP)
920103	CLUTCH STRIPPING & ASSLY TOOL	Piaggio spare parts (POP)
03G161620	clutch support tube	Piaggio spare parts (POP)
03G161622	CLUTCH SUPPORT TUBE MACHIN	Piaggio spare parts (POP)
B024577	CLUTCH SWITCH (PAX 200)	Piaggio spare parts (POP)
1A005037	CLUTH COVER OIL BULKHEAD	Piaggio spare parts (POP)
B018358	CLUTH COVER OIL BULKHEAD	Piaggio spare parts (POP)
L9200998	CLY.HEAD ASSY.LDW482 BSII(EGR	Piaggio spare parts (POP)
659949R	CNG CYLINDER 40LTRS WITH OMB VALVE	Piaggio spare parts (POP)
B042657R	CNG CYLINDER 40LTRS WITH VANAZ VALVE	Piaggio spare parts (POP)
659949	CNG CYLINDER M/S EKC WITH OMB VALVE	Piaggio spare parts (POP)
B075201	CNG COVER INNER PLATE	Piaggio spare parts (POP)

B024654R	CNG CYLENDER (40LTR)	Piaggio spare parts (POP)
B003038	CNG CYLENDER VALVE	Piaggio spare parts (POP)
B024601R	CNG CYLINDER 30 LTR.	Piaggio spare parts (POP)
B002250R	CNG CYLINDER 30 LTRS	Piaggio spare parts (POP)
B002250	CNG CYLINDER 30 LTRS	Piaggio spare parts (POP)
6A000613	CNG CYLINDER WITH CYLINDER VALVE	Piaggio spare parts (POP)
6D000410	CNG GAS KIT HARNESS-APE_501 WC ENG	Piaggio spare parts (POP)
B077263	CNG GAS KIT HARNESS-APE_501 WC ENG	Piaggio spare parts (POP)
6A000482	CNG HIGH PRESSURE TUBE ASSLY.	Piaggio spare parts (POP)
6A001306	CNG KIT	Piaggio spare parts (POP)
B009134	CNG KIT (OFFLINE VEHICLE ASSLY)	Piaggio spare parts (POP)
B078471	CNG KIT VEHICLE ASSLY (APE 501 LD WG)	Piaggio spare parts (POP)
B003343	CNG KIT WIRE HARNESS (VANAZ) -LD	Piaggio spare parts (POP)
B003926EG	CNG LD CHASSIS WITH DOOR - ECO GREEN	Piaggio spare parts (POP)
6A000494	CNG LOW PRESSURE HOSE-PR. REG.TO DAMPNER	Piaggio spare parts (POP)
B009071BY	CNG PASS MAIN FRAME ASSLY. BLACK	Piaggio spare parts (POP)
B009071EG	CNG PASS MAIN FRAME ASSLY. EG	Piaggio spare parts (POP)
B009071WR	CNG PASS MAIN FRAME ASSLY.-W RED	Piaggio spare parts (POP)
6A000752	CNG PRESSURE GAUGE WITH LEVEL SENSOR	Piaggio spare parts (POP)
B041784	CNG PRESSURE GAUGE WITH SENSOR	Piaggio spare parts (POP)
6A000488	CNG PRESSURE REGULATOR	Piaggio spare parts (POP)
6A000487	CNG PRESSURE REGULATOR ASSLY.	Piaggio spare parts (POP)
6A000957	CNG PROTECTION BRACKET ASSEMBLY	Piaggio spare parts (POP)
6A000597	CNG STICKER	Piaggio spare parts (POP)
6A001075	CNG TANK VALVE	Piaggio spare parts (POP)
6A000481	CNG TANK VALVE SUB ASSLY.	Piaggio spare parts (POP)
6A001149	CNG TANK VALVE, 501 CARGO	Piaggio spare parts (POP)
B024443	CNG VALVE PASSENGER(VANAZ MAKE)	Piaggio spare parts (POP)
6A001256	CNG VALVE PROTECTION BKT. ASSLY	Piaggio spare parts (POP)
6D000411	CNG(LD) GAS KIT HARNESS-APE_501 WC ENG	Piaggio spare parts (POP)
B078475	CNG(LD) GAS KIT HARNESS-APE_501 WC ENG	Piaggio spare parts (POP)
6D000755	CNG, HIGH PRESSURE SOLENOID VALVE	Piaggio spare parts (POP)
B073327BY	CNG/LPG PASS BODY WITH TAIL GATE (DTL)BL	Piaggio spare parts (POP)
B073327EG	CNG/LPG PASS BODY WITH TAIL GATE (DTL)EG	Piaggio spare parts (POP)
B073327GY	CNG/LPG PASS BODY WITH TAIL GATE (DTL)GY	Piaggio spare parts (POP)
643600	CODRIVER SEAT	Piaggio spare parts (POP)
B009140	CO-DRIVER SEAT - APE MINI	Piaggio spare parts (POP)
257208	CO-DRIVER'S GRAB HANDLE INSIDE CABIN	Piaggio spare parts (POP)
L1425215	COGE-GIUDED NEEDLES	Piaggio spare parts (POP)
E07516405	Cogged "V" Belt	Piaggio spare parts (POP)
LG2440346	COGGED BELT	Piaggio spare parts (POP)
932273	Coil Assembly (K-0102-19-120) Paxx 200	Piaggio spare parts (POP)
AP8121133	Coil compress. spring	Piaggio spare parts (POP)
B016552	COIL SUPPORT BRACKET WITH I.P.	Piaggio spare parts (POP)
1A011407	COIL SUPPORT BRACKET WITH I.P.	Piaggio spare parts (POP)
940064	Coil Assembly-LPG(K-0440-03-I-170)	Piaggio spare parts (POP)
925677	COIL-SPRING-SEAT FRAME S/A	Piaggio spare parts (POP)

180431	COIN WASHER	Piaggio spare parts (POP)
644299	COLLAR	Piaggio spare parts (POP)
D9004389104	COLLAR	Piaggio spare parts (POP)
E50002805	Collar Bolt	Piaggio spare parts (POP)
E07502813	COLLAR BOLT M6X1X12	Piaggio spare parts (POP)
E43520166	COLLAR BOLT M8X1 (CON ROD)	Piaggio spare parts (POP)
E50002806	Collar Bolt M8x1.25x25x22	Piaggio spare parts (POP)
E07502804	COLLAR BOLT M8X1.25X30	Piaggio spare parts (POP)
E07502803	Collar Bolt rocker cover M8 lifting hook	Piaggio spare parts (POP)
E07502802	Collar Bolt rocker cover M8x40	Piaggio spare parts (POP)
LG5365183	COLLAR FOR AIR FILTER	Piaggio spare parts (POP)
B074155	COLLAR FOR STRUT_PIN WITH SPRING (SS)	Piaggio spare parts (POP)
B074154	COLLAR FOR STRUT_SCREW TYPE (SS)	Piaggio spare parts (POP)
E07502810	COLLAR NUT : M8X1.25	Piaggio spare parts (POP)
E07502812	COLLAR NUT M10X1.5	Piaggio spare parts (POP)
E07502811	COLLAR NUT M6X1	Piaggio spare parts (POP)
E40000242	Collar nut M8x1.25	Piaggio spare parts (POP)
MER940026	Collar T Shirt-Royal Blue-S_CV	Piaggio spare parts (POP)
B023459	Collar, electric fuel pump fixing	Piaggio spare parts (POP)
168065	COLLERED SCREW M10X18 CL 10.9	Piaggio spare parts (POP)
E87022231	COLLET ASSEMBLY	Piaggio spare parts (POP)
E43522242	COLLET ASSEMBLY SET	Piaggio spare parts (POP)
E500641036	COLLET ASSLY	Piaggio spare parts (POP)
882220	COLLET VALVE	Piaggio spare parts (POP)
E271805703	COLLETHALF	Piaggio spare parts (POP)
B042814	COLLISION FOR LEVER	Piaggio spare parts (POP)
182654	COLLISION FOR LEVER	Piaggio spare parts (POP)
B023762R	COMBI BOLT M12 x 1.25 x 35	Piaggio spare parts (POP)
B023762	COMBI BOLT M12 x 1.25 x 35 (CAPARO)	Piaggio spare parts (POP)
B074481	COMBI BOLT M12 x 1.25 x 35 (RTF)	Piaggio spare parts (POP)
605440	COMBI SWITCH ASSY RHD	Piaggio spare parts (POP)
614116R	COMBINATION SWITCH - APE TRUK	Piaggio spare parts (POP)
B003348	COMBINATION SWITCH - APE TRUK(GALACTIC)	Piaggio spare parts (POP)
B002816	COMBINATION SWITCH APE MINITRUK	Piaggio spare parts (POP)
L9080273	COMBUSTION PRE CHAMBER BUSH	Piaggio spare parts (POP)
L9080274	COMBUSTION PRE CHAMBER BUSH	Piaggio spare parts (POP)
L9080256	COMBUSTION PRE-CHAMBER BUSH	Piaggio spare parts (POP)
632997	COMM. DRIVER SEAT ASSY. DOMESTC	Piaggio spare parts (POP)
SST94201	Common Bearing Pressing Handle	Piaggio spare parts (POP)
SST94072	Common catalogue 501 BSIV	Piaggio spare parts (POP)
B008686	COMMON ECU WITH LED INDICATOR- CNG	Piaggio spare parts (POP)
B008436	COMMON ECU WITH LPG LEVEL INDICATOR	Piaggio spare parts (POP)
F002G20116	COMMUTATOR END COVER	Piaggio spare parts (POP)
F002G20261	COMMUTATOR END COVER	Piaggio spare parts (POP)
F002G20514	COMMUTATOR END SHIELD	Piaggio spare parts (POP)
F002G20774	Commutator End Shield	Piaggio spare parts (POP)
1005851073	COMMUTATOR END SHIELD	Piaggio spare parts (POP)

613841	COMMUTATORE ACC. E BLOCCASTERZO	Piaggio spare parts (POP)
272027	COMP FRT BRAKE SHOE	Piaggio spare parts (POP)
SPB018672	COMP. INVERTER LEVER SECTOR APE PAX SPD	Piaggio spare parts (POP)
SPB018667	COMP.DIFFERENTIAL GEAR COVER APE PAX-SPD	Piaggio spare parts (POP)
B074593	COMPACT FUEL STRAINER (3 L/H)	Piaggio spare parts (POP)
B003936	COMPARTMENT S/A GLOVE	Piaggio spare parts (POP)
615564	COMPARTMENT S/A GLOVE	Piaggio spare parts (POP)
B005363	COMPARTMENT S/A GLOVE	Piaggio spare parts (POP)
LG9201273	COMPL HEAD LGA 280 C.R.8,8:1	Piaggio spare parts (POP)
LG1051246	COMPL. CRANKSHAFT	Piaggio spare parts (POP)
LG1051463	COMPL. CRANKSHAFT	Piaggio spare parts (POP)
KD9201194	COMPL. CYLINDER HEAD 15LD401/441	Piaggio spare parts (POP)
1A007579	COMPL. INVERTER LEVER SECTOR	Piaggio spare parts (POP)
SPB017492	COMPL. INVERTER LEVER SECTOR APE PAX-SPD	Piaggio spare parts (POP)
SP1A007579	COMPL. INVERTER LEVER SECTOR(BSIV)- SPD	Piaggio spare parts (POP)
B0174924	COMPL. INVERTER LEVER SECTOR(wasB017492)	Piaggio spare parts (POP)
SP1A011344	COMPL. INVERTER LEVER SECTOR_SPD	Piaggio spare parts (POP)
LG9201204	COMPL.HEAD LGA 280 C.R. 8,8:1	Piaggio spare parts (POP)
KD25697518	COMPLET.AIR SHROUD A5LD401/441	Piaggio spare parts (POP)
58295R	COMPLETE A.C. GENERATOR	Piaggio spare parts (POP)
680095	COMPLETE A.C.GENERATOR	Piaggio spare parts (POP)
SP1A012446	Complete bearing shaft_SPD	Piaggio spare parts (POP)
1A010092	COMPLETE BODY FLOAT CHAMBER	Piaggio spare parts (POP)
662103	COMPLETE BRAKE SHOW WITH PIN	Piaggio spare parts (POP)
LG1011900	COMPLETE CAMSHAFT G83	Piaggio spare parts (POP)
CM284101	COMPLETE CARBURETOR PB18/20	Piaggio spare parts (POP)
1A012436	Complete Chain Tightening Rod	Piaggio spare parts (POP)
1A002705	COMPLETE CLUTCH CONTROL PLATE	Piaggio spare parts (POP)
KD1526302	COMPLETE CONNECTING ROD	Piaggio spare parts (POP)
876918	COMPLETE CONVEYOR FLYWHEEL SIDE	Piaggio spare parts (POP)
1A004821	COMPLETE COUPLING	Piaggio spare parts (POP)
SP1A000827	COMPLETE CRANKCASE	Piaggio spare parts (POP)
B016174	COMPLETE CRANKCASE	Piaggio spare parts (POP)
SPB016174	COMPLETE CRANKCASE APE PAX - SPD	Piaggio spare parts (POP)
LG6645818	COMPLETE CRANKCASE SIDE COVER	Piaggio spare parts (POP)
LG6645851	COMPLETE CRANKCASE SIDE COVER	Piaggio spare parts (POP)
SP1A007046	COMPLETE CRANKCASE- SPD	Piaggio spare parts (POP)
SP1A012361	COMPLETE CRANKCASE_SPD	Piaggio spare parts (POP)
1A016765	COMPLETE CYLINDER ASSEMBLY	Piaggio spare parts (POP)
6B002663	COMPLETE DASHBOARD ASSEMBLY	Piaggio spare parts (POP)
L7951208	COMPLETE DIFFERENTIAL BOX	Piaggio spare parts (POP)
L7951253	COMPLETE DIFFERENTIAL BOX	Piaggio spare parts (POP)
CM308405	COMPLETE DIFFERENTIAL GEAR	Piaggio spare parts (POP)
CM308403	COMPLETE DIFFERENTIAL GEAR	Piaggio spare parts (POP)
SPCM308406	COMPLETE DIFFERENTIAL GEAR - SPD	Piaggio spare parts (POP)
B016169	Complete differential gear cover	Piaggio spare parts (POP)
B018667	COMPLETE DIFFERENTIAL GEAR COVER	Piaggio spare parts (POP)

SPCM308401	COMPLETE DIFFERENTIAL GEAR- SPD	Piaggio spare parts (POP)
SP1A006804	COMPLETE DIFFERENTIAL GEAR- SPD	Piaggio spare parts (POP)
SPCM308404	COMPLETE DIFFERENTIAL GEAR_SPD	Piaggio spare parts (POP)
SPCM318401	COMPLETE DIFFERENTIAL GEAR_SPD	Piaggio spare parts (POP)
SPCM308405	COMPLETE DIFFERENTIAL GEAR_SPD	Piaggio spare parts (POP)
SPCM318404	COMPLETE DIFFERENTIAL GEAR_SPD	Piaggio spare parts (POP)
SPCM318407	COMPLETE DIFFERENTIAL GEAR_SPD	Piaggio spare parts (POP)
SPB016171	COMPLETE DIFFERENTIAL GEAR-SPD	Piaggio spare parts (POP)
SP1A009146	COMPLETE DIFFERENTIAL GEAR-SPD	Piaggio spare parts (POP)
SPCM308402	COMPLETE DIFFERENTIAL GEAR-SPD	Piaggio spare parts (POP)
L7951239	COMPLETE DIFFERENTIAL NQ	Piaggio spare parts (POP)
1A012426	Complete exhaust_intake rocker arm	Piaggio spare parts (POP)
1A012448	Complete Fan	Piaggio spare parts (POP)
1A020690	COMPLETE FAN	Piaggio spare parts (POP)
1A019600	COMPLETE FAN	Piaggio spare parts (POP)
1A020278	COMPLETE FAN	Piaggio spare parts (POP)
1A020136	COMPLETE FAN	Piaggio spare parts (POP)
1A021694	COMPLETE FAN	Piaggio spare parts (POP)
1A021672	COMPLETE FAN	Piaggio spare parts (POP)
1A008995	COMPLETE FAREMETER BODY	Piaggio spare parts (POP)
1A010091	COMPLETE FLOAT	Piaggio spare parts (POP)
B016387	COMPLETE FLOAT	Piaggio spare parts (POP)
B016389	COMPLETE FLOAT CHAMBER	Piaggio spare parts (POP)
B016822	COMPLETE FLOAT CHAMBER	Piaggio spare parts (POP)
KD9881602	COMPLETE FLYWHEEL RING GEAR	Piaggio spare parts (POP)
642888	COMPLETE FUEL PUMP	Piaggio spare parts (POP)
1B002072	COMPLETE FUEL TANK	Piaggio spare parts (POP)
LG8180195	COMPLETE GASKET SET	Piaggio spare parts (POP)
LG8180208	COMPLETE GASKET SET	Piaggio spare parts (POP)
LG8180200	COMPLETE GASKET SET	Piaggio spare parts (POP)
L78651298	COMPLETE GEAR CONTROL BOX ASSLY- BSIII	Piaggio spare parts (POP)
SP1A008485	COMPLETE GEAR LEVEL - SPD	Piaggio spare parts (POP)
632808	COMPLETE GEAR LEVER	Piaggio spare parts (POP)
1A001862	COMPLETE GEAR SHIFTER ASSY	Piaggio spare parts (POP)
1A003852	COMPLETE GEAR SHIFTER ASSY	Piaggio spare parts (POP)
SP1A003852	COMPLETE GEAR SHIFTER ASSY APE PAX-SPD	Piaggio spare parts (POP)
SP1A001862	COMPLETE GEAR SHIFTER ASSY APE PAX-SPD	Piaggio spare parts (POP)
SP1A007449	COMPLETE GEAR SHIFTER ASSY- SPD	Piaggio spare parts (POP)
SP1A011195	COMPLETE GEAR SHIFTER ASSY STEP 2- SPD	Piaggio spare parts (POP)
SPCM312301	COMPLETE GEAR SHIFTER ASSY_SPD	Piaggio spare parts (POP)
SP1A011650	COMPLETE GEAR SHIFTER ASSY-SPD	Piaggio spare parts (POP)
127640012	COMPLETE GEAR SHIFTER HSG ASSLY	Piaggio spare parts (POP)
127640012P	COMPLETE GEAR SHIFTER HSG ASSLY	Piaggio spare parts (POP)
SP1A006196	COMPLETE GEAR SHIFTER WO NEUTRAL SWITCH	Piaggio spare parts (POP)
KD5201332	COMPLETE GOVERNOR SPRING LEVER	Piaggio spare parts (POP)
L6250026	COMPLETE GRID OIL DRAUGHT	Piaggio spare parts (POP)
L62500330	COMPLETE GRID OIL DRAUGHT	Piaggio spare parts (POP)

1A001794	COMPLETE H.T. COIL	Piaggio spare parts (POP)
1A014751	COMPLETE H.T. COIL WITH CAP	Piaggio spare parts (POP)
B011566	COMPLETE HOSE COOLER COOLANT INPUT	Piaggio spare parts (POP)
B011565	COMPLETE HOSE-COOLANT INPUT EGR	Piaggio spare parts (POP)
F002C80009	Complete Injector	Piaggio spare parts (POP)
1A003720	COMPLETE INJECTOR SUPPORT	Piaggio spare parts (POP)
SP1A010496	COMPLETE INTAKE FITTING- SPD	Piaggio spare parts (POP)
B015543	COMPLETE INTAKE FITTING SUPPORT	Piaggio spare parts (POP)
SP1A015853	COMPLETE INTAKE FITTING_SPD	Piaggio spare parts (POP)
SP1A015638	COMPLETE INTAKE FITTING_SPD	Piaggio spare parts (POP)
B018020	COMPLETE INTAKE OIL FILTER	Piaggio spare parts (POP)
83065R	COMPLETE INTAKE OIL FILTER	Piaggio spare parts (POP)
1A006812	COMPLETE INTAKE OIL FILTER	Piaggio spare parts (POP)
B018672	COMPLETE INVERTER LEVER SECTOR	Piaggio spare parts (POP)
SP1A009310	COMPLETE INVERTER LEVER SECTOR- SPD	Piaggio spare parts (POP)
SP1A009309	COMPLETE INVERTER LEVER SECTOR-SPD	Piaggio spare parts (POP)
6D000420	COMPLETE LENS LH	Piaggio spare parts (POP)
6D000421	COMPLETE LENS RH	Piaggio spare parts (POP)
1A017140	Complete lever	Piaggio spare parts (POP)
889922	COMPLETE LEVER	Piaggio spare parts (POP)
SP1A012040	Complete lever_SPD	Piaggio spare parts (POP)
KD5201294	COMPLETE LEVER 18LD	Piaggio spare parts (POP)
SP1A016575	Complete lever_SPD	Piaggio spare parts (POP)
639088	COMPLETE LICENSE PLATE LAMP	Piaggio spare parts (POP)
6D000194	COMPLETE LICENSE PLATE LAMP	Piaggio spare parts (POP)
182661R	COMPLETE LOCK OF THE LH DOOR	Piaggio spare parts (POP)
182660R	COMPLETE LOCK OF THE RH DOOR	Piaggio spare parts (POP)
182660	COMPLETE LOCK OF THE RH DOOR	Piaggio spare parts (POP)
KD5271270	COMPLETE MANUAL DECOMPR.LEVER	Piaggio spare parts (POP)
LG3362036	COMPLETE MIXER CNG LGA	Piaggio spare parts (POP)
B019285	COMPLETE MUFFLER	Piaggio spare parts (POP)
B017921	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A006609	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A005024	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009652	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009650	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009706	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A015723R	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A015720R	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009102	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A015696	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A021042	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009125	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A021038R	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A021039R	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A017410	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009141	Complete Muffler	Piaggio spare parts (POP)

1A016057	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A009951	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A017400	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A017662	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A017652	COMPLETE MUFFLER	Piaggio spare parts (POP)
1A005170	COMPLETE OIL BULKHEAD	Piaggio spare parts (POP)
1A002947	COMPLETE OIL BULKHEAD	Piaggio spare parts (POP)
1F0006454	COMPLETE OIL DIPSTICK	Piaggio spare parts (POP)
1F000329	COMPLETE OIL DIPSTICK	Piaggio spare parts (POP)
B011806	COMPLETE OIL DIPSTICK	Piaggio spare parts (POP)
1A022934R	COMPLETE OIL FILTER	Piaggio spare parts (POP)
82635RP	COMPLETE OIL FILTER	Piaggio spare parts (POP)
B015400	COMPLETE OIL FILTER PLUG	Piaggio spare parts (POP)
B018448	COMPLETE OIL PUMP	Piaggio spare parts (POP)
B011017	COMPLETE OIL SUCTION PIPE	Piaggio spare parts (POP)
B041706	COMPLETE REAR COVER	Piaggio spare parts (POP)
602131	COMPLETE REAR SHOE (FRT.WHEEL)	Piaggio spare parts (POP)
LG4904038	COMPLETE RECOIL STARTER ROPE	Piaggio spare parts (POP)
LG4055045	COMPLETE RECOIL STARTER ROPE	Piaggio spare parts (POP)
1A014113	COMPLETE ROTOR	Piaggio spare parts (POP)
1A008672	COMPLETE ROTOR	Piaggio spare parts (POP)
1A009302	COMPLETE ROTOR	Piaggio spare parts (POP)
SP1A009458	COMPLETE SECONDARY GEAR SHAFT-SPD	Piaggio spare parts (POP)
1A017146	COMPLETE SECTOR ASSEMBLY WITH LEVER	Piaggio spare parts (POP)
SP1A017146	COMPLETE SECTOR ASSEMBLY WITH LEVER SPD	Piaggio spare parts (POP)
SP1A019555	COMPLETE SECTOR ASSEMBLY WITH LVR - SPD	Piaggio spare parts (POP)
1A010035	Complete sector with shaft	Piaggio spare parts (POP)
1A007451	COMPLETE SECTOR WITH SHAFT	Piaggio spare parts (POP)
1A016578	Complete sector with shaft	Piaggio spare parts (POP)
L3960018	COMPLETE SELECTION FORK	Piaggio spare parts (POP)
L3960016	Complete Selection Fork	Piaggio spare parts (POP)
L3960012	COMPLETE SELECTION FORK GEAR	Piaggio spare parts (POP)
L1055079	COMPLETE SHAFT GEAR	Piaggio spare parts (POP)
L1055101	COMPLETE SHAFT GEAR (5 SPEED)	Piaggio spare parts (POP)
L1034005	COMPLETE SHAFT WITH LEVER	Piaggio spare parts (POP)
L1034001	COMPLETE SHAFT WITH LEVER	Piaggio spare parts (POP)
1A009270	COMPLETE SHROUD INTAKE SIDE	Piaggio spare parts (POP)
B018023	COMPLETE SHROUD INTAKE SIDE	Piaggio spare parts (POP)
1A006743	COMPLETE SHROUD INTAKE SIDE	Piaggio spare parts (POP)
1D001846	COMPLETE STATOR	Piaggio spare parts (POP)
1A014114	COMPLETE STATOR	Piaggio spare parts (POP)
616536	COMPLETE STEERING BOX RHD	Piaggio spare parts (POP)
B011386	COMPLETE TURBOCHARGER	Piaggio spare parts (POP)
SPB011386	COMPLETE TURBOCHARGER DIESEL - SPD	Piaggio spare parts (POP)
B023722	COMPLETE UPPER PART OF WALL	Piaggio spare parts (POP)
B006472	COMPLIANCE PLATE LPG (APE CITY)	Piaggio spare parts (POP)
LG8026280	COMPR. RING S11 D.74 CHROM.PL.	Piaggio spare parts (POP)

B018433	COMPRESSION RING Ø62.6x1	Piaggio spare parts (POP)
1A012390	COMPRESSION RING Ø72x1 (1st)	Piaggio spare parts (POP)
1A012391	COMPRESSION RING Ø72x1.2 (2nd)	Piaggio spare parts (POP)
LG8026264	COMPRESSION RING S57 D.74X1,5	Piaggio spare parts (POP)
L5801594	COMPRESSION SPRING	Piaggio spare parts (POP)
1A012156	COMPRESSION SPRING	Piaggio spare parts (POP)
9411034635	COMPRESSION SPRING	Piaggio spare parts (POP)
LG5660102	COMPRESSION SPRING	Piaggio spare parts (POP)
3414619005	COMPRESSION SPRING	Piaggio spare parts (POP)
2434614020	COMPRESSION SPRING	Piaggio spare parts (POP)
660630	COMPUTER ASSY, ENGINE CONTROL	Piaggio spare parts (POP)
L9080272	COMUBUSTION PRE CHAMBER BUSH	Piaggio spare parts (POP)
E87009035	CON ROD ASSEMBLY	Piaggio spare parts (POP)
ED42396	CON ROD BOLT KIT	Piaggio spare parts (POP)
E50010710	CON ROD BOLT KIT	Piaggio spare parts (POP)
E50010710P	CON ROD BOLT KIT	Piaggio spare parts (POP)
128633	CONE	Piaggio spare parts (POP)
178193	CONE	Piaggio spare parts (POP)
L2524015	CONE	Piaggio spare parts (POP)
L2524014	CONE	Piaggio spare parts (POP)
658275	CONE (HUB)	Piaggio spare parts (POP)
285846	CONE HALF	Piaggio spare parts (POP)
645630	CONIC CONNECTOR AIR CLEANER-ENGINE	Piaggio spare parts (POP)
568606	CONIC CONNECTOR AIR-CLEAN	Piaggio spare parts (POP)
1A000373	CONIC NEEDLE	Piaggio spare parts (POP)
B019342	CONIC NEEDLE	Piaggio spare parts (POP)
B019343	CONIC NEEDLE	Piaggio spare parts (POP)
889787	CONIC THREADED PLUG	Piaggio spare parts (POP)
807000647	CONICAL LOCK WASHER M6	Piaggio spare parts (POP)
LG8350024	Conical Needle Type N70	Piaggio spare parts (POP)
B019420	CONICAL SPRING KNURLED WASHER	Piaggio spare parts (POP)
604929	CONN TUBE OIL TANK TO BRAKE PUMP	Piaggio spare parts (POP)
616731	CONN TUBE OIL TANK BRAKE PUMP	Piaggio spare parts (POP)
LG1770204	CONN.CONROD SCREW M7X1X35	Piaggio spare parts (POP)
L1640136	CONN.ROD MAIN BEARING LDW 482	Piaggio spare parts (POP)
616823	CONNECT.TUBE EXP.TANK ENG	Piaggio spare parts (POP)
1A012676	CONNECTING PIPE	Piaggio spare parts (POP)
1A012675	Connecting pipe	Piaggio spare parts (POP)
A01A040001	CONNECTING ROD ASSEMBLY	Piaggio spare parts (POP)
E87009032	CONNECTING ROD ASSEMBLY	Piaggio spare parts (POP)
ESP650DCR017	CONNECTING ROD ASSEMBLY	Piaggio spare parts (POP)
E07509020	Connecting Rod Assembly consisting of sr	Piaggio spare parts (POP)
B010604	CONNECTING ROD ASSY	Piaggio spare parts (POP)
L1526234	CONNECTING ROD ASSY	Piaggio spare parts (POP)
E43509046	CONNECTING ROD ASSY - FRACTURED	Piaggio spare parts (POP)
E43509046P	CONNECTING ROD ASSY - FRACTURED	Piaggio spare parts (POP)
LG1526293	Connecting Rod Assy w/o LE Brg	Piaggio spare parts (POP)

E07509003	CONNECTING ROD ASSY WITH LOCK	Piaggio spare parts (POP)
E50009023	CONNECTING ROD ASSY.CONSISTING OF	Piaggio spare parts (POP)
L8061554	CONNECTING ROD BEARING UPPER	Piaggio spare parts (POP)
B010427	CONNECTING ROD BOLD	Piaggio spare parts (POP)
KD1770202	CONNECTING ROD BOLT M8X1X42	Piaggio spare parts (POP)
E87002416	CONNECTING ROD FORGING	Piaggio spare parts (POP)
882954	CONNECTING ROD SMALL END	Piaggio spare parts (POP)
1A008613	CONNECTING ROD WITH IP-CRANK PIN GROUP	Piaggio spare parts (POP)
L1526304	Connecting Rod-Modified	Piaggio spare parts (POP)
662327	CONNECTING TUBE FRONT	Piaggio spare parts (POP)
632698	CONNECTION	Piaggio spare parts (POP)
B007590	CONNECTION BKT,ENGINE RIGHT SILENTBLOCK	Piaggio spare parts (POP)
878941	CONNECTION PIPE	Piaggio spare parts (POP)
1A012368	Connection pipe from water pump to cyl.	Piaggio spare parts (POP)
L9602193	CONNECTOR	Piaggio spare parts (POP)
L9602202	CONNECTOR	Piaggio spare parts (POP)
KD5830119	CONNECTOR 'FV C10	Piaggio spare parts (POP)
ESP650DFP021	CONNECTOR (FIP INLET PIPE)	Piaggio spare parts (POP)
920073	Connector Ape City CNG (K-0156-III-120)	Piaggio spare parts (POP)
LG716A036	CONNECTOR M.8X1X20	Piaggio spare parts (POP)
E07500821	Connector on injector	Piaggio spare parts (POP)
B009187	CONNECTOR PIPA S/A	Piaggio spare parts (POP)
B011241	CONROD	Piaggio spare parts (POP)
L1640119	CONROD BIG END BEARING std	Piaggio spare parts (POP)
L8061460	CONROD BIG END HALF BEARING	Piaggio spare parts (POP)
LG1526267	CONROD PRES.LUB.LGA 2 NU	Piaggio spare parts (POP)
L1770101	CONROD SCREW FL 8X1X42 R	Piaggio spare parts (POP)
LG1630047	CONROD SMALL END BEAR NU	Piaggio spare parts (POP)
LG1630057	CONROD SMALL END BEAR NU	Piaggio spare parts (POP)
L1526290	CONROD WITH CAP LDW 482	Piaggio spare parts (POP)
L1526265	CONROD WITH CAP LDW 482	Piaggio spare parts (POP)
SM26640656	Contact Return Spring	Piaggio spare parts (POP)
B023727R	CONTACTOR	Piaggio spare parts (POP)
6D000522	CONTACTOR ASSY	Piaggio spare parts (POP)
L2535032	CONTAINER	Piaggio spare parts (POP)
652055	CONTAINER	Piaggio spare parts (POP)
B077513	CONTENT GAUGE	Piaggio spare parts (POP)
940091	CONTENT GAUGE LPG '0' deg(V-5406-450-IX)	Piaggio spare parts (POP)
925742	CONTENT GAUGE(V-5406-450)	Piaggio spare parts (POP)
E87010813	CONTINUOUS EGR	Piaggio spare parts (POP)
889269	CONTROL BUSH 1st-2nd SPEED	Piaggio spare parts (POP)
889267	CONTROL BUSH 5th-R SPEED	Piaggio spare parts (POP)
643140	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1D001781	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
680164	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
680165	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1D001591	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)

1A009251	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1A009352	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1A009353	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1A011743	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
1A011795	CONTROL DEVICE IGNITION	Piaggio spare parts (POP)
L7860011	CONTROL GEAR BOX ASS.Y	Piaggio spare parts (POP)
B011035	CONTROL GUARD	Piaggio spare parts (POP)
E500520295	CONTROL LEVER	Piaggio spare parts (POP)
E50005192	CONTROL LEVER	Piaggio spare parts (POP)
E870051134	CONTROL LEVER	Piaggio spare parts (POP)
E87000934	CONTROL PIN	Piaggio spare parts (POP)
L7200734	CONTROL ROD	Piaggio spare parts (POP)
889231	CONTROL ROD	Piaggio spare parts (POP)
F002F21043	CONTROL ROD	Piaggio spare parts (POP)
3416300001	CONTROL SLEEVE	Piaggio spare parts (POP)
1F000481	CONVERTER PIPE ASSY (CC POC)	Piaggio spare parts (POP)
L2565093	CONVEYER OIL SUMP COOLING	Piaggio spare parts (POP)
L2569698	CONVEYOR	Piaggio spare parts (POP)
643745	Conveyor	Piaggio spare parts (POP)
L2569699	Conveyor	Piaggio spare parts (POP)
834476	CONVEYOR COVER	Piaggio spare parts (POP)
6A000282	coolant filler unit	Piaggio spare parts (POP)
6A000380	coolant filler unit	Piaggio spare parts (POP)
6A001359	COOLANT HOSE (RADIATOR INLET)	Piaggio spare parts (POP)
6A001360	COOLANT HOSE (RADIATOR OUTLET)	Piaggio spare parts (POP)
B073596	COOLANT OVERFLOW PIPE	Piaggio spare parts (POP)
6A000343	COOLANT PIPE ASSY	Piaggio spare parts (POP)
B077445	COOLANT RECOVERY TANK ASSY.	Piaggio spare parts (POP)
B006562	COOLANT RECOVERY TANK ASSY.	Piaggio spare parts (POP)
B074360	COOLANT RECOVERY TANK ASSY.	Piaggio spare parts (POP)
6A001583	COOLANT RESERVOIR TANK ASSLY	Piaggio spare parts (POP)
6A000357	COOLANT TANK	Piaggio spare parts (POP)
940054	coolant Tank Cap (poter-600)	Piaggio spare parts (POP)
6A001101	COOLANT TANK WITH MTG. BRACKET	Piaggio spare parts (POP)
B023824	COOLANT TANK(FOR BNA)	Piaggio spare parts (POP)
A03G100002	COOLANT TEMPERATURE SENSOR	Piaggio spare parts (POP)
E60003403	COOLANT TEMPERATURE SENSOR	Piaggio spare parts (POP)
ESP650DCH019	COOLANT TEMPERATURE SENSOR	Piaggio spare parts (POP)
SST94177	Coolant temperature sensor removal	Piaggio spare parts (POP)
605474	COOLER	Piaggio spare parts (POP)
605474R	COOLER	Piaggio spare parts (POP)
L8900593	Cooling Fan support	Piaggio spare parts (POP)
B042754	COOLING PIPE MTG. BRACKET (SINGLE PIECE)	Piaggio spare parts (POP)
B041599	COOLING SYSTEM BRKT. ON CHASSIS S/A	Piaggio spare parts (POP)
B041598	COOLING SYSTEM BRKT. S/A	Piaggio spare parts (POP)
L2750381	COP VALVE TAPPET	Piaggio spare parts (POP)
615080	COPERCH.IS	Piaggio spare parts (POP)

615079	COPERCH.ISP	Piaggio spare parts (POP)
898467	Coperchi testa	Piaggio spare parts (POP)
661914	COPPER TUBE (VANAZ P.NO.K-0415-03-010)	Piaggio spare parts (POP)
661735	COPPER TUBE ASSLY. (FILTER TO REGULATOR	Piaggio spare parts (POP)
643867	COPPER TUBE ASSLY. (MFV TO FILTER)	Piaggio spare parts (POP)
925746	COPPER TUBE ASSLY.(K-0415-03)	Piaggio spare parts (POP)
643880	COPPER TUBE ASSY FOR REFUELLING(VANAZ PT	Piaggio spare parts (POP)
643913	COPPER TUBE FROM FILTER TO REGULATOR	Piaggio spare parts (POP)
925740	COPPER TUBE(K-0415-16-030)	Piaggio spare parts (POP)
E50006105	COPPER WASHER	Piaggio spare parts (POP)
B076747	COPPER WASHER	Piaggio spare parts (POP)
L4670119	COPPER WASHER 14 X 19 X 1.5	Piaggio spare parts (POP)
L4670027	COPPER WASHER 22,5X30X1,	Piaggio spare parts (POP)
L4350001	COPPER WASHER 22,5X30X1,5	Piaggio spare parts (POP)
LG4670058	COPPER WASHER 8,2X12X1,5	Piaggio spare parts (POP)
KD4670058	COPPER WASHER 8,2X12X1,5	Piaggio spare parts (POP)
KD4670062	COPPER WASHER D10/6.2 1.5 THK	Piaggio spare parts (POP)
LG4670001	COPPER WASHER D10/6.2 1THK	Piaggio spare parts (POP)
KD4670059	COPPER WASHER D14/10.2 1.5 THK	Piaggio spare parts (POP)
L4670118	COPPER WASHER D14/10.31	Piaggio spare parts (POP)
KD4670101	COPPER WASHER D16/7.5 0.5 THK	Piaggio spare parts (POP)
KD4670099	COPPER WASHER D16/7.5 1.0 THK	Piaggio spare parts (POP)
KD4670102	COPPER WASHER D16/7.5 1.5 THK	Piaggio spare parts (POP)
LG4670061	COPPER WASHER D19/14.2 1.5 THK	Piaggio spare parts (POP)
KD4670061	COPPER WASHER D19/14.2 1.5 THK	Piaggio spare parts (POP)
L4670117	COPPER WASHER FOR INJECT.PUMP	Piaggio spare parts (POP)
612455	COPPER WASHER M10	Piaggio spare parts (POP)
224644	COPPER WASHER M14	Piaggio spare parts (POP)
B041604	COPPER WASHER M8	Piaggio spare parts (POP)
ESP650DNB036	COPPER WASHERM 16	Piaggio spare parts (POP)
E40020418	CORE PLUG	Piaggio spare parts (POP)
E87000493	CORE PLUG (CYLINDER HEAD WATER JET HOLE)	Piaggio spare parts (POP)
ESP650DNB023	CORE PLUG(Ø25)	Piaggio spare parts (POP)
6A001181	CORE WITH TANK ASSEMBLY	Piaggio spare parts (POP)
6A001182	CORE WITH TANK ASSEMBLY	Piaggio spare parts (POP)
6A000864	CORE WITH TANK ASSEMBLY	Piaggio spare parts (POP)
6A000822	CORE WITH TANK ASSLY	Piaggio spare parts (POP)
6A000620	CORRUGATED EXPANDABLE HOSE	Piaggio spare parts (POP)
970300612	COTTER ASSEMBLY & DIS ASSEMBLY TOOL	Piaggio spare parts (POP)
616543	COUNTER - FLANGE	Piaggio spare parts (POP)
1003421014	COUNTER SUNK SCREW	Piaggio spare parts (POP)
B006458	COUNTER SUNK SOCKET HEAD SCREW M5	Piaggio spare parts (POP)
B009053	COUNTER SUNK SOCKET HEAD SCREW M6	Piaggio spare parts (POP)
632158	COUNTERSUNK HEAD SCREW (812 0312 35)	Piaggio spare parts (POP)
B017043	COUNTERSUNK SCREW M6X18	Piaggio spare parts (POP)
B018946	COUNTERSUNK SCREW M6X18	Piaggio spare parts (POP)
6B001654	COUNTERSUNK SCREW M8 X 15	Piaggio spare parts (POP)

B012023	COUNTERSUNK SOCKED HEAD SCREW	Piaggio spare parts (POP)
840542	COUNTERSUNK SOCKED HEAD SCREW	Piaggio spare parts (POP)
B017088	COUNTERSUNK SOCKET HEAD SCREW M6x16	Piaggio spare parts (POP)
1A016964	COUNTERSUNK SOCKET HEAD SCREW M6x16	Piaggio spare parts (POP)
B018598	COUPLED CRANKCASE	Piaggio spare parts (POP)
1A000828	COUPLED CRANKCASE	Piaggio spare parts (POP)
1A006750	COUPLED CRANKCASE	Piaggio spare parts (POP)
940037	COUPLED CRANKCASE WITH STUB BEARING	Piaggio spare parts (POP)
SP940037	COUPLED CRANKCASE WITH STUB BEARING-SPD	Piaggio spare parts (POP)
SP940097	COUPLED CRANKCASE WITH STUB BRG BSIV-SPD	Piaggio spare parts (POP)
568591	COUPLING	Piaggio spare parts (POP)
1A017581	COUPLING	Piaggio spare parts (POP)
1A004805	COUPLING	Piaggio spare parts (POP)
228302	COUPLING	Piaggio spare parts (POP)
268253	COUPLING	Piaggio spare parts (POP)
940021	Coupling Assy.(truk plus)	Piaggio spare parts (POP)
1A012683	COUPLING ENTRAINER	Piaggio spare parts (POP)
1A012441	Coupling entrainer (Engine side)	Piaggio spare parts (POP)
605439	COUPLING RING	Piaggio spare parts (POP)
932234	Coupling Screw (L.H.)(R-2101-120)Paxx200	Piaggio spare parts (POP)
661913	COUPLING SCREW (VANAZ P.NO.K-0401-03-010	Piaggio spare parts (POP)
925756	COUPLING SCREW(K-0113-01-020)	Piaggio spare parts (POP)
925784	COUPLING SCREW(K-0113-170)	Piaggio spare parts (POP)
925734	COUPLING SCREW(K-0801-04-020)	Piaggio spare parts (POP)
615049	COUPLING, JOIN SIDE LH. MEMBER-AIR CLEAN	Piaggio spare parts (POP)
632650	COVER	Piaggio spare parts (POP)
632576	COVER	Piaggio spare parts (POP)
225814	COVER	Piaggio spare parts (POP)
580188	COVER	Piaggio spare parts (POP)
604543	COVER	Piaggio spare parts (POP)
111356	COVER	Piaggio spare parts (POP)
186456	COVER	Piaggio spare parts (POP)
E50007596	COVER	Piaggio spare parts (POP)
1A017345	COVER	Piaggio spare parts (POP)
615233	COVER	Piaggio spare parts (POP)
615234	COVER	Piaggio spare parts (POP)
6D000458	COVER	Piaggio spare parts (POP)
632425	COVER (ENGINETECH AIR FILTER)	Piaggio spare parts (POP)
E53011748	COVER (PTO)	Piaggio spare parts (POP)
03G161681	COVER ASSEMBLY-CLUTCH	Piaggio spare parts (POP)
E50010174	COVER ASSLY.	Piaggio spare parts (POP)
E50010127	COVER ASSY	Piaggio spare parts (POP)
615078	COVER ASSY ENGINE SERVICE HOLE MAIN, LH	Piaggio spare parts (POP)
615077	COVER ASSY ENGINE SERVICE HOLE MAIN,RH	Piaggio spare parts (POP)
940052	COVER ASSY_BNA AIR FILTER ASSY	Piaggio spare parts (POP)
B009022	COVER BRAKE OIL RESERVOIR	Piaggio spare parts (POP)
B041122	COVER BRAKE OIL RESERVOIR	Piaggio spare parts (POP)

6B002021	COVER CAP	Piaggio spare parts (POP)
B024056	COVER CDI UNIT	Piaggio spare parts (POP)
889288	COVER CLUTCH SHEET WITH I.P.	Piaggio spare parts (POP)
F002G21971	COVER DISC	Piaggio spare parts (POP)
615675	COVER DUST	Piaggio spare parts (POP)
925671	COVER FAN MOTOR	Piaggio spare parts (POP)
B009411	COVER FOR BRAKE OIL RESERVOIR	Piaggio spare parts (POP)
B003075	COVER FOR STEERING LIINK	Piaggio spare parts (POP)
B025683	COVER FRONT BUMPER	Piaggio spare parts (POP)
1A012690	COVER GASKET	Piaggio spare parts (POP)
B073810	COVER GLOVE BOX	Piaggio spare parts (POP)
E50010175	COVER HAND THROTTLE ASSY	Piaggio spare parts (POP)
B041600	COVER HANDLE BAR	Piaggio spare parts (POP)
6C000453	COVER HANDLE BAR TOP	Piaggio spare parts (POP)
E40015408	COVER IGNITION SYSTEM	Piaggio spare parts (POP)
E40015460	COVER IGNITION SYSTEM	Piaggio spare parts (POP)
B041398	COVER INNER MUDGUARD LH	Piaggio spare parts (POP)
B078477	COVER INNER MUDGUARD LH	Piaggio spare parts (POP)
B041397	COVER INNER MUDGUARD RH	Piaggio spare parts (POP)
B078478	COVER INNER MUDGUARD RH	Piaggio spare parts (POP)
616896	COVER LIGHT SOCKET LEFT	Piaggio spare parts (POP)
616897	COVER LIGHT SOCKET RIGHT	Piaggio spare parts (POP)
643912	COVER PIPE (FROM VALVE TO REAR WALL)	Piaggio spare parts (POP)
B075953	COVER PLASTIC PLATE PASS BODY	Piaggio spare parts (POP)
B075952	COVER PLASTIC PLATE PASS BODY	Piaggio spare parts (POP)
6B001807	COVER PLATE	Piaggio spare parts (POP)
520221019R	COVER PLATE	Piaggio spare parts (POP)
B006894	COVER PLATE	Piaggio spare parts (POP)
220364010	COVER PLATE (DIFF.COVER) -VE	Piaggio spare parts (POP)
B075002	COVER PLATE (DIFF.COVER) -VE (WHITE)	Piaggio spare parts (POP)
E50006809	COVER PLATE WITH RUBBER GASKET	Piaggio spare parts (POP)
B075960	COVER REVERSE GEAR CONTROL	Piaggio spare parts (POP)
B024007	COVER REVERSE IDLER	Piaggio spare parts (POP)
B075374	COVER REVERSE IDLER	Piaggio spare parts (POP)
B025717	COVER S/A FRONT PANEL	Piaggio spare parts (POP)
D4520387Z01	COVER S/A, DUST	Piaggio spare parts (POP)
B003076	COVER SHOCKER MTG HOLE	Piaggio spare parts (POP)
B001426	COVER SIDE GATE - LH	Piaggio spare parts (POP)
B001427	COVER SIDE GATE - RH	Piaggio spare parts (POP)
E270269042	Cover speed control box	Piaggio spare parts (POP)
B003937	COVER STEER. COLUMN LWR	Piaggio spare parts (POP)
6B001813	COVER STEERING COLUMN	Piaggio spare parts (POP)
B073811	COVER STEERING COLUMN	Piaggio spare parts (POP)
B005910	COVER STEERING COLUMN LWR	Piaggio spare parts (POP)
B003030	COVER TAIL LAMP GAP	Piaggio spare parts (POP)
B074143	COVER TERMINAL D22 (SS)	Piaggio spare parts (POP)
D4868487502	COVER, BEARING DUST	Piaggio spare parts (POP)

B004113	COVER, BRACKET STEERING COLUMN UPR	Piaggio spare parts (POP)
B042613	COVER, DOOR HINGE (APE CLASSIC)	Piaggio spare parts (POP)
B042640	COVER, DOOR HINGE UPPER (APE CLASSIC)	Piaggio spare parts (POP)
D4522287505	COVER, DUST	Piaggio spare parts (POP)
B074322	COVER, ECU	Piaggio spare parts (POP)
B023359	COVER, ECU	Piaggio spare parts (POP)
6D000550	COVER, ECU PROTECTION	Piaggio spare parts (POP)
D6783287Z01	COVER, FR DOOR SERVICE HOLE LH	Piaggio spare parts (POP)
D6783187Z01	COVER, FR DOOR SERVICE HOLE RH	Piaggio spare parts (POP)
D5317587Z02	COVER, HEADLAMP SERV.HOLE	Piaggio spare parts (POP)
D9004874058	COVER, HOLE	Piaggio spare parts (POP)
D9004874011	COVER, HOLE	Piaggio spare parts (POP)
613813	COVER, INSTRUMENT PANEL	Piaggio spare parts (POP)
D8794587Z01	COVER, OUTER MIRROR,	Piaggio spare parts (POP)
D8791587Z01	COVER, OUTER MIRROR,RH	Piaggio spare parts (POP)
B075880	COVER, PARKING BRAKE	Piaggio spare parts (POP)
615091	COVER, PARKING BRAKE LH	Piaggio spare parts (POP)
1A017254	COVER, REVERSE GEAR CONTROL	Piaggio spare parts (POP)
D4855987Z01	COVER, SHOCK ABSORBER	Piaggio spare parts (POP)
D4534287502	COVER, STEERING GEAR HOUS	Piaggio spare parts (POP)
D4534287503	COVER, STEERING GEAR HOUS	Piaggio spare parts (POP)
D4523387Z01	COVER, STERING UNIVERSAL	Piaggio spare parts (POP)
E10P140001	COVER_ Sogefi	Piaggio spare parts (POP)
940050	COVER_BNA AIR FILTER ASSY	Piaggio spare parts (POP)
03G161205	CoverRear Oil	Piaggio spare parts (POP)
1A000612	COVEX HEAD SCREW WITH TORX IMPRESSION	Piaggio spare parts (POP)
L2920196	COWLING ASSLY.(L2920188)	Piaggio spare parts (POP)
L2920178	COWLING ASSY	Piaggio spare parts (POP)
L2920199	COWLING ASSY WITH BEARING	Piaggio spare parts (POP)
L2610081	COWLING COVER	Piaggio spare parts (POP)
L3902359	COWLINGS SUPPORTING FLANGE	Piaggio spare parts (POP)
E40028039	CP CLAMP	Piaggio spare parts (POP)
KD1511241	CR CASE ASSLY	Piaggio spare parts (POP)
L1580290	CR. CASE JOURNAL BUSH	Piaggio spare parts (POP)
KD9080899	CR.CASE BOTTOM COVER GR19	Piaggio spare parts (POP)
KD10513168	CR.SHAFT+BUSH 15LD401	Piaggio spare parts (POP)
KD1051403	CR.SHAFT+BUSH 15LD401	Piaggio spare parts (POP)
6C000153	CRADLE ASSLY FOR POWERPACK	Piaggio spare parts (POP)
6C000222	CRADLE SUPPORT ASSLY FOR DOCK/BATTERY	Piaggio spare parts (POP)
E40002560	CRANK CASE	Piaggio spare parts (POP)
E40002569	CRANK CASE - ASSLY WITH BUSH	Piaggio spare parts (POP)
E40002578	CRANK CASE - ASSY WITH BUSH	Piaggio spare parts (POP)
E10A010006	CRANK CASE ASSLY WITH BUSH (WITH AVM PAD	Piaggio spare parts (POP)
E87112543	Crank Case Assy with plug and bushes	Piaggio spare parts (POP)
KD1511219	CRANK CASE ASSY.	Piaggio spare parts (POP)
E40002586	Crank Case BSIII	Piaggio spare parts (POP)
441048	CRANK CASE BUSH FITMENT TOOL	Piaggio spare parts (POP)

KD6645816	CRANK CASE COVER ASSY	Piaggio spare parts (POP)
LG1511258	CRANK CASE LGA280 AUTOMOTIVE	Piaggio spare parts (POP)
E53002543	CRANK CASE WITH PIN	Piaggio spare parts (POP)
ESP650DCR002	CRANK SENSOR	Piaggio spare parts (POP)
L4896004	CRANK SHAFT	Piaggio spare parts (POP)
L1051180	CRANK SHAFT ASS.Y	Piaggio spare parts (POP)
A03A030012	CRANK SHAFT ASSEMBLY WITH WOODRUF KEY	Piaggio spare parts (POP)
L1051319	CRANK SHAFT ASSY.	Piaggio spare parts (POP)
ESP650DCR008	CRANK SHAFT ASSY.WITH PLUG	Piaggio spare parts (POP)
MS422624	Crank shaft gear removal tool (puller)	Piaggio spare parts (POP)
970300580	Crank shaft gear removal tool(puller)	Piaggio spare parts (POP)
441043	CRANK SHAFT HOLDING TOOL	Piaggio spare parts (POP)
E40010711	CRANK SHAFT KIT GL 400	Piaggio spare parts (POP)
ED32907	Crank shaft pulley	Piaggio spare parts (POP)
970300601	CRANK SHAFT REMOVAL TOOL	Piaggio spare parts (POP)
E50007508	CRANK SHAFT SUPPORT ASSLY.	Piaggio spare parts (POP)
E40011772	CRANK SHAFT SUPPORT ASSY	Piaggio spare parts (POP)
E40011772P	CRANK SHAFT SUPPORT ASSY	Piaggio spare parts (POP)
E50006060	CRANK SHAFT(SPLINED)	Piaggio spare parts (POP)
E50006060P	CRANK SHAFT(SPLINED)	Piaggio spare parts (POP)
B011703	CRANKCASE COUPLED	Piaggio spare parts (POP)
SP1F000331	CRANKCASE COUPLED - SPD	Piaggio spare parts (POP)
CM304800	Crankcase - Cylinder gasket	Piaggio spare parts (POP)
KD1511189	CRANKCASE 15LD441	Piaggio spare parts (POP)
SP1F000332	CRANKCASE ASSEMBLY - SPD	Piaggio spare parts (POP)
SPB011732	CRANKCASE ASSEMBLY - SPD	Piaggio spare parts (POP)
E40012578	CRANKCASE Assembly (BUSH and CF Pin L.H)	Piaggio spare parts (POP)
A01A010001	CRANKCASE ASSEMBLY WITH BUSH AND GRUB SC	Piaggio spare parts (POP)
E87012102	CRANKCASE ASSY	Piaggio spare parts (POP)
A01A010020	CRANKCASE ASSY W/BUSH & CAP SCREW,WASHER	Piaggio spare parts (POP)
E87002593	CRANKCASE ASSY WITH PLUG & B	Piaggio spare parts (POP)
E40012525	CRANKCASE ASSY. WITH STD BUSH & CF PIN	Piaggio spare parts (POP)
E40012524	CRANKCASE ASSY. WITH STD BUSH & CF PIN	Piaggio spare parts (POP)
SPB011703	CRANKCASE COUPLED BNA OLD - SPD	Piaggio spare parts (POP)
KD6645852	CRANKCASE COVER 15LD441	Piaggio spare parts (POP)
KD6645785	CRANKCASE COVER 15LD441 M&M	Piaggio spare parts (POP)
A01A010030	Crankcase kit with 3.3 GEN tappet bolt	Piaggio spare parts (POP)
LG1511185	CRANKCASE LGA 280 AUTOMOTIVE	Piaggio spare parts (POP)
LG6645817	CRANKCASE SIDE COVER LGA 280	Piaggio spare parts (POP)
E07512529	Crankcase with STD bush & pin	Piaggio spare parts (POP)
CM166200	CRANKCASE/CYLINDER GASKET	Piaggio spare parts (POP)
CM284004	CRANKCASE/CYLINDER GASKET (1.0)	Piaggio spare parts (POP)
CM304801	Crankcase/cylinder gasket (0.4)	Piaggio spare parts (POP)
CM284001	CRANKCASE/CYLINDER GASKET (0.4)	Piaggio spare parts (POP)
CM304802	Crankcase/cylinder gasket (0.6)	Piaggio spare parts (POP)
CM284002	CRANKCASE/CYLINDER GASKET (0.6)	Piaggio spare parts (POP)
CM304803	Crankcase/cylinder gasket (0.8)	Piaggio spare parts (POP)

CM284003	CRANKCASE/CYLINDER GASKET (0.8)	Piaggio spare parts (POP)
CM304804	Crankcase/cylinder gasket (1.0)	Piaggio spare parts (POP)
CM284005	CRANKCASE/CYLINDER GASKET (1.2)	Piaggio spare parts (POP)
CM304805	Crankcase/cylinder gasket (1.2)	Piaggio spare parts (POP)
CM166201	CRANKCASE/CYLINDER GASKET 0.4mm	Piaggio spare parts (POP)
CM166202	CRANKCASE/CYLINDER GASKET 0.6mm	Piaggio spare parts (POP)
CM166203	CRANKCASE/CYLINDER GASKET 0.8mm	Piaggio spare parts (POP)
B015943	CRANKCASE/OIL PUMP GASKET	Piaggio spare parts (POP)
ESP650DCR007	CRANKCASEASSEMBLYWITHBUSHANDPLUG	Piaggio spare parts (POP)
1A001108R	CRANKSHAFT	Piaggio spare parts (POP)
E43516083	CRANKSHAFT	Piaggio spare parts (POP)
E43516066	CRANKSHAFT	Piaggio spare parts (POP)
B018601	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
1A010150	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
1A012439	Crankshaft Assembly	Piaggio spare parts (POP)
1A008651	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
1A006000	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
1A011066	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
B0123314	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
B012331	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
B010424	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
B011664	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
B011667	CRANKSHAFT ASSEMBLY	Piaggio spare parts (POP)
SP1A007011	CRANKSHAFT ASSEMBLY WITH OIL DOWEL	Piaggio spare parts (POP)
1A008092	CRANKSHAFT ASSEMBLY WITH THREADED CAP	Piaggio spare parts (POP)
SP1A008092	CRANKSHAFT ASSEMBLY WITH THREADED CAP	Piaggio spare parts (POP)
1F000020R	CRANKSHAFT ASSY	Piaggio spare parts (POP)
E87016056	CRANKSHAFT ASSY WITH KEY	Piaggio spare parts (POP)
E43503011	CRANKSHAFT ASSY.	Piaggio spare parts (POP)
E07516071	Crankshaft assy. With plugs & keys	Piaggio spare parts (POP)
970300620	CRANKSHAFT BALL BEARING PRESSING TOOL	Piaggio spare parts (POP)
SST94193	Crankshaft bearing bush puller for crank	Piaggio spare parts (POP)
KIT95007	CRANKSHAFT BEARING SET	Piaggio spare parts (POP)
KIT95007B	CRANKSHAFT BEARING SET_Blue colour	Piaggio spare parts (POP)
KIT95007R	CRANKSHAFT BEARING SET_RED	Piaggio spare parts (POP)
KIT95007Y	CRANKSHAFT BEARING SET_Yellow colour	Piaggio spare parts (POP)
LG1611240	CRANKSHAFT BUSHING -0.25 MM	Piaggio spare parts (POP)
E50006023	Crankshaft Dia. 28 Con.	Piaggio spare parts (POP)
970300622	CRANKSHAFT JOURNAL BEARING ASSLY TOOL	Piaggio spare parts (POP)
970300621	CRANKSHAFT JOURNAL BRG REMOVING TOOL	Piaggio spare parts (POP)
1F000764	CRANKSHAFT PULLEY	Piaggio spare parts (POP)
A01M030007	CRANKSHAFT PULLEY "V" GROOVE	Piaggio spare parts (POP)
1A007664R	CRANKSHAFT STUB LOWER HALF BEARING	Piaggio spare parts (POP)
B015873	CRANKSHAFT STUB LOWER HALF BEARING	Piaggio spare parts (POP)
1A007663R	CRANKSHAFT STUB UPPER HALF BEARING	Piaggio spare parts (POP)
B015872	CRANKSHAFT STUB UPPER HALF BEARING	Piaggio spare parts (POP)
E40011797	CRANKSHAFT SUPPORT ASSEMBLY	Piaggio spare parts (POP)

ESP650DCR001	CRANKSHAFT SUPPORT ASSEMBLY	Piaggio spare parts (POP)
E10A110007	CRANKSHAFT SUPPORT ASSY.	Piaggio spare parts (POP)
E07511763	Crankshaft support assy. with bush	Piaggio spare parts (POP)
894863	CRASH PADS RSV4 FACTORY	Piaggio spare parts (POP)
F002H301564	Crimping Tool	Piaggio spare parts (POP)
F002H321934	crimping tool	Piaggio spare parts (POP)
930101014	CRIMSON ORANGE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101014A	CRIMSON ORANGE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B003924	CROSS	Piaggio spare parts (POP)
1A010166	CROSS	Piaggio spare parts (POP)
614456	CROSS M. S/A FUEL TANK	Piaggio spare parts (POP)
127306018	CROSS (ALT.CONST. 221569)	Piaggio spare parts (POP)
6B002740	CROSS MEM ENGINE INSPECTION DOOR LOCKING	Piaggio spare parts (POP)
6A000797	CROSS MEMBER	Piaggio spare parts (POP)
B006200	CROSS MEMBER ASSLY BODY MTG.	Piaggio spare parts (POP)
6C000169	CROSS MEMBER ASSLY REAR POWERPACK MTG	Piaggio spare parts (POP)
6C000102	CROSS MEMBER ASSLY TRAILING ARM	Piaggio spare parts (POP)
6A000693	CROSS MEMBER ENGINE MOUNTING ASM	Piaggio spare parts (POP)
B008921	CROSS MEMBER ENGINE MTG ASSLY FRONT	Piaggio spare parts (POP)
B024416	CROSS MEMBER ENGINE MTG ASSLY FRONT	Piaggio spare parts (POP)
B075595	CROSS MEMBER ENGINE MTG REAR	Piaggio spare parts (POP)
B008893	CROSS MEMBER ENGINE MTG REAR	Piaggio spare parts (POP)
B009144	CROSS MEMBER ENGINE SUPP. RR.SUB ASSLY.	Piaggio spare parts (POP)
B077284	CROSS MEMBER ENGINE SUPP. RR.SUB ASSLY.	Piaggio spare parts (POP)
B001648	CROSS MEMBER ENGINE SUPP. RR.SUB ASSLY.	Piaggio spare parts (POP)
587523PC	CROSS MEMBER ENGINE SUPPORT REAR S/A	Piaggio spare parts (POP)
661573ED	CROSS MEMBER ENGINE SUPPORT REAR - ED	Piaggio spare parts (POP)
587523	CROSS MEMBER ENGINE SUPPORT REAR S/A	Piaggio spare parts (POP)
661573	CROSS MEMBER ENGINE SUPPORT REAR SUB ASS	Piaggio spare parts (POP)
B078355	CROSS MEMBER ENGINE SUPPORT REAR SUB ASS	Piaggio spare parts (POP)
B001656	CROSS MEMBER ENGINE SUPPORT RR	Piaggio spare parts (POP)
B001656ED	CROSS MEMBER ENGINE SUPPORT RR	Piaggio spare parts (POP)
B002362	CROSS MEMBER FRONT	Piaggio spare parts (POP)
614457	CROSS MEMBER FUEL TANK- 870	Piaggio spare parts (POP)
B023882ED	CROSS MEMBER FUEL TANK CED	Piaggio spare parts (POP)
643711R	CROSS MEMBER MOUNTING -ENGINE S/ ASSLY	Piaggio spare parts (POP)
643711	CROSS MEMBER MOUNTING -ENGINE SUB ASSLY	Piaggio spare parts (POP)
B075573	CROSS MEMBER MUDGUARD CONNECTOR	Piaggio spare parts (POP)
B023474	CROSS MEMBER N°3 S/A	Piaggio spare parts (POP)
B002363	CROSS MEMBER REAR	Piaggio spare parts (POP)
B002511	CROSS MEMBER REAR ASSLY	Piaggio spare parts (POP)
B078538	CROSS MEMBER REAR ENG MTG	Piaggio spare parts (POP)
B002436	CROSS MEMBER REAR ENG MTG	Piaggio spare parts (POP)
B003372	CROSS MEMBER REAR ENG MTG	Piaggio spare parts (POP)
B001754	CROSS MEMBER REAR ENG. SUPPORT SUB ASSLY	Piaggio spare parts (POP)
646034	CROSS MEMBER REINFORCEMENT TRANVERSAL	Piaggio spare parts (POP)
B001754ED	CROSS MEMBER RR ENG. SUPPORT S/A (CED)	Piaggio spare parts (POP)

B024556	CROSS MEMBER S/A _ AIR FILTER BNA	Piaggio spare parts (POP)
662141ED	CROSS MEMBER S/A ENGINE 'NQP 870' (CED)	Piaggio spare parts (POP)
B075459	CROSS MEMBER S/A ENGINE SUPPORT FRONT	Piaggio spare parts (POP)
6A001201	CROSS MEMBER S/A ENGINE SUPPORT FRONT	Piaggio spare parts (POP)
B023522	CROSS MEMBER S/A FUEL TANK FR	Piaggio spare parts (POP)
B023522ED	CROSS MEMBER S/A FUEL TANK FRONT CED	Piaggio spare parts (POP)
662560	CROSS MEMBER S/A 'QI 870'	Piaggio spare parts (POP)
B075863	CROSS MEMBER S/A RADIATOR MTG	Piaggio spare parts (POP)
B024809	CROSS MEMBER S/A RADIATOR MTG	Piaggio spare parts (POP)
6A000105ED	CROSS MEMBER SUB-ASSY-ED	Piaggio spare parts (POP)
03G160607	CROSS PIN	Piaggio spare parts (POP)
03G160726	Cross pin differential	Piaggio spare parts (POP)
03G161726	CROSS PIN DIFFERENTIAL	Piaggio spare parts (POP)
662579	CROSS S/ A ENGINE SUPPORT FR ' QI 870 '	Piaggio spare parts (POP)
B024301	CROSS S/ A ENGINE SUPPORT FR '870-III '	Piaggio spare parts (POP)
B075238	CROSSM.S/A FUEL TANK FR	Piaggio spare parts (POP)
B002716	CROSSMEMBER S/A 482 (CED)	Piaggio spare parts (POP)
662153	CROSSMEMBER S/A ENG. RR 'NQP 870'	Piaggio spare parts (POP)
B006037	CROSSMEMBER S/A ENGINE FR. MOUNTING	Piaggio spare parts (POP)
D5120787Z02	CROSSMEMBER S/A FR SUSPEN	Piaggio spare parts (POP)
1E001660	Crossmember S/A, Engine Fr. Mounting	Piaggio spare parts (POP)
1E001072	CROSSMEMBER S/A, FR. SUSPENSION	Piaggio spare parts (POP)
L4990191	CROW WHEEL	Piaggio spare parts (POP)
LG2816106	Crown Gear (Ring Gear)	Piaggio spare parts (POP)
B023976	CSK PHILIPS HEAD SCREW M5X15	Piaggio spare parts (POP)
812061656	CSK PHILIPS HEAD SCREW M6X16	Piaggio spare parts (POP)
569156	CSK SCREW M6 X 30 CL 8.8 ZN-BLACK	Piaggio spare parts (POP)
569157	CSK SCREW M6 X 40 CL 8.8 ZN-BLACK	Piaggio spare parts (POP)
14628	CSK SELF TP SCREW 6SGX16AB	Piaggio spare parts (POP)
15846	CSK SELF TP SCREW 6SGX9.5	Piaggio spare parts (POP)
645027	CSK, PHI HEAD SCREW M8 X 20 CL 8.8 W/SER	Piaggio spare parts (POP)
E87001043	CTC CLAMP	Piaggio spare parts (POP)
ESP650DNB031	CTC CLAMP	Piaggio spare parts (POP)
E87101059	CTC OD11	Piaggio spare parts (POP)
B019425	Cum clutch hub	Piaggio spare parts (POP)
1A017995	CUM CLUTCH HUB	Piaggio spare parts (POP)
1A008715	CUM CLUTCH HUB	Piaggio spare parts (POP)
1A018212	CUM CLUTCH HUB	Piaggio spare parts (POP)
116232	CUP	Piaggio spare parts (POP)
L8000235	CUP	Piaggio spare parts (POP)
L7200720	CUP	Piaggio spare parts (POP)
175493	CUP	Piaggio spare parts (POP)
127757011	CUP - CLUTCH SPRING	Piaggio spare parts (POP)
KD6410136	CUP COLLET SET	Piaggio spare parts (POP)
L6400094	CUP FOR SPRING OF MAX.	Piaggio spare parts (POP)
1A012736	Cup plug	Piaggio spare parts (POP)
E87020416	CUP PLUG DIA 38	Piaggio spare parts (POP)

604502	CUP RETAINING SPRING (41733)	Piaggio spare parts (POP)
B042693	CUP RETAINING SPRING (SPLIT TYPE)	Piaggio spare parts (POP)
KIT95006	CUP SET	Piaggio spare parts (POP)
KIT95006R	CUP SET	Piaggio spare parts (POP)
B024384	CUP SPACER - INNER	Piaggio spare parts (POP)
B024385	CUP SPACER -OUTER	Piaggio spare parts (POP)
1A006634	CUP SPRING	Piaggio spare parts (POP)
B041653	CUP WASHER	Piaggio spare parts (POP)
E1967980064	CUP WASHER	Piaggio spare parts (POP)
L6231249	CURSOR	Piaggio spare parts (POP)
D9004541171	CUSHION	Piaggio spare parts (POP)
B074115	CUSHION	Piaggio spare parts (POP)
614860	CUSHION	Piaggio spare parts (POP)
602252	CUSHION DRIVER SEAT ASSLY.	Piaggio spare parts (POP)
6632187201	CUSHION RUBBER	Piaggio spare parts (POP)
D4867487201	CUSHION, STRUT BAR	Piaggio spare parts (POP)
568106	CUT GROMMET	Piaggio spare parts (POP)
568159	CUT GROMMET (+ CABLE)	Piaggio spare parts (POP)
568154	CUT GROMMET FOR HORN	Piaggio spare parts (POP)
L9201007	CYLINDER HEAD WITH IP	Piaggio spare parts (POP)
1F000428	CYCLONIC OIL SEPARATOR	Piaggio spare parts (POP)
LG1970419	CYL DOWEL D11/8.5 14 LONG	Piaggio spare parts (POP)
LG1970140	CYL DOWEL D13/11 15 LONG	Piaggio spare parts (POP)
KD9200979	CYL HEAD	Piaggio spare parts (POP)
E40018345	CYL HEAD ASSB. GL400 IIA WITH EXH. STEM	Piaggio spare parts (POP)
L9201136	CYL HEAD LDW 422 BS - II	Piaggio spare parts (POP)
KD1970338	CYL. DOWEL D11/8 18 LONG	Piaggio spare parts (POP)
1E002723	CYL. HEAD SCREW, WITH CROSS MOULD	Piaggio spare parts (POP)
B078342	CYL. MTG. BKT 40LTR	Piaggio spare parts (POP)
KD7770172	CYL. PIN D3X15.8L	Piaggio spare parts (POP)
KD7770171	CYL. PIN D3X27.8L	Piaggio spare parts (POP)
E43502770	CYL.BARRAL (GRADE 'B')	Piaggio spare parts (POP)
ESP650DCH009	CYL.HEAD ASSY WITH VAL SEAT & GUIDE	Piaggio spare parts (POP)
L92003008	CYL.HEAD LDW482 WITH 4mm EGR	Piaggio spare parts (POP)
L92003010	CYL.HEAD LDW482 WITH 4mm EGR	Piaggio spare parts (POP)
B019317	CYLINDER	Piaggio spare parts (POP)
B017383	CYLINDER	Piaggio spare parts (POP)
B0173834	CYLINDER	Piaggio spare parts (POP)
L2380604	CYLINDER	Piaggio spare parts (POP)
L2380606	CYLINDER	Piaggio spare parts (POP)
L2380614	CYLINDER	Piaggio spare parts (POP)
E43502705	CYLINDER GRADE "A "	Piaggio spare parts (POP)
E43502705A	CYLINDER GRADE "A "BSIII	Piaggio spare parts (POP)
E43502770A	CYLINDER GRADE "B"BSIII	Piaggio spare parts (POP)
E40008384	CYLINDER HEAD ASSLY	Piaggio spare parts (POP)
B074485	CYLINDER & KEY SET	Piaggio spare parts (POP)
B075061	CYLINDER & KEY SET	Piaggio spare parts (POP)

B074486	CYLINDER & KEY SET PORTER 1000	Piaggio spare parts (POP)
E07502070	Cylinder & piston kit.	Piaggio spare parts (POP)
E40020562	CYLINDER & PISTON ASSLY KIT	Piaggio spare parts (POP)
E40010730	Cylinder & Piston Assy. Kit	Piaggio spare parts (POP)
E10A050007	CYLINDER & PISTON ASSY. KIT	Piaggio spare parts (POP)
E10A050007P	CYLINDER & PISTON ASSY. KIT	Piaggio spare parts (POP)
E10A050007A	CYLINDER & PISTON ASSY. KIT GRADE	Piaggio spare parts (POP)
E5402380457	CYLINDER (GRADE B) RED COLOUR MARK	Piaggio spare parts (POP)
KD2381118	CYLINDER 15LD441-MACHINED	Piaggio spare parts (POP)
KD2381123	CYLINDER 15LD441-MACHINED	Piaggio spare parts (POP)
652446	CYLINDER AND KEY SET	Piaggio spare parts (POP)
645051	CYLINDER AND KEY SET	Piaggio spare parts (POP)
E43510714	CYLINDER AND PISTON ASSY KIT	Piaggio spare parts (POP)
E43510714P	CYLINDER AND PISTON ASSY KIT	Piaggio spare parts (POP)
E43510714A	CYLINDER AND PISTON ASSY KIT-BSIII	Piaggio spare parts (POP)
SP1A017607	CYLINDER APE PAX BS6 SPD	Piaggio spare parts (POP)
SPB019317	CYLINDER APE PAX SPD	Piaggio spare parts (POP)
SP1A005855	CYLINDER APE PAX SPD	Piaggio spare parts (POP)
E87002064	CYLINDER ASSEMBLY	Piaggio spare parts (POP)
ESP650DBP001	CYLINDER ASSEMBLY	Piaggio spare parts (POP)
E87002087	CYLINDER ASSEMBLY	Piaggio spare parts (POP)
614099	CYLINDER ASSY, BRAKE	Piaggio spare parts (POP)
E07502068	Cylinder assy. (Grade A)	Piaggio spare parts (POP)
E07502069	Cylinder assy. (Grade B)	Piaggio spare parts (POP)
E40002075	CYLINDER BARREL	Piaggio spare parts (POP)
A01A010002	CYLINDER BARREL ASSEMBLY	Piaggio spare parts (POP)
E40002096	CYLINDER BARREL WITH CORE PLUG GRADE "A"	Piaggio spare parts (POP)
L2380613	CYLINDER CL A	Piaggio spare parts (POP)
B076200	CYLINDER COVER - CENTRAL	Piaggio spare parts (POP)
6B001321	CYLINDER COVER - CENTRAL CITY BSVI	Piaggio spare parts (POP)
B076203	CYLINDER COVER - CNG LH	Piaggio spare parts (POP)
B076202	CYLINDER COVER - LPG LH	Piaggio spare parts (POP)
B076201	CYLINDER COVER - RH	Piaggio spare parts (POP)
6B000334	CYLINDER COVER MTG BKT	Piaggio spare parts (POP)
B009060	CYLINDER COVER WITH HINGE LH	Piaggio spare parts (POP)
B009061	CYLINDER COVER WITH HINGE RH	Piaggio spare parts (POP)
645053	CYLINDER DOOR LOCK ASSY , RH	Piaggio spare parts (POP)
940128	CYLINDER DOOR LOCK ASSY , RH WITH KEY	Piaggio spare parts (POP)
645054	CYLINDER DOOR LOCK ASSY LH	Piaggio spare parts (POP)
925666	CYLINDER DOOR LOCK ASSY LH WITH KEY	Piaggio spare parts (POP)
940129	CYLINDER DOOR LOCK ASSY LH WITH KEY	Piaggio spare parts (POP)
925667	CYLINDER DOOR LOCK ASSY RH WITH KEY	Piaggio spare parts (POP)
613843	CYLINDER DOOR LOCK ASSY, LH	Piaggio spare parts (POP)
613842	CYLINDER DOOR LOCK ASSY, RH	Piaggio spare parts (POP)
E10M030003A	CYLINDER GRADE 'B' "-BSIV	Piaggio spare parts (POP)
E5402380456	CYLINDER GRADE A	Piaggio spare parts (POP)
E10M030002	CYLINDER GRADE 'A'	Piaggio spare parts (POP)

E5402380456A	CYLINDER GRADE A-BSII	Piaggio spare parts (POP)
E10M030002A	CYLINDER GRADE 'A'-BSIV	Piaggio spare parts (POP)
E5402380457A	CYLINDER GRADE B -BSII	Piaggio spare parts (POP)
E5402380458	CYLINDER GRADE C	Piaggio spare parts (POP)
E40018334	CYLINDER HEAD	Piaggio spare parts (POP)
SP1A009271R	CYLINDER HEAD	Piaggio spare parts (POP)
KD92009788	CYLINDER HEAD 15LD401/441	Piaggio spare parts (POP)
KD9201211	CYLINDER HEAD 15LD401/441	Piaggio spare parts (POP)
E870101106B	CYLINDER HEAD ASSEMBLY	Piaggio spare parts (POP)
B011830	CYLINDER HEAD ASSEMBLY	Piaggio spare parts (POP)
B011378	CYLINDER HEAD ASSEMBLY	Piaggio spare parts (POP)
E10A020001	CYLINDER HEAD ASSEMBLY CONSISTING OF 2,3	Piaggio spare parts (POP)
E10A020002	CYLINDER HEAD ASSEMBLY WITH VALVES	Piaggio spare parts (POP)
E53008339	CYLINDER HEAD ASSLY	Piaggio spare parts (POP)
E40028324	CYLINDER HEAD ASSLY	Piaggio spare parts (POP)
L9200902	CYLINDER HEAD ASSLY	Piaggio spare parts (POP)
L9200877	CYLINDER HEAD ASSLY WITH I.P.	Piaggio spare parts (POP)
B018501	CYLINDER HEAD ASSY	Piaggio spare parts (POP)
1A003190	CYLINDER HEAD ASSY	Piaggio spare parts (POP)
B018309	CYLINDER HEAD ASSY	Piaggio spare parts (POP)
1A003936R	CYLINDER HEAD ASSY	Piaggio spare parts (POP)
1A012394	CYLINDER HEAD ASSY	Piaggio spare parts (POP)
SP1A003936R	CYLINDER HEAD ASSY APE PAX SPD	Piaggio spare parts (POP)
SP1A012928	Cylinder head assy Apepax -SPD	Piaggio spare parts (POP)
L92009708	CYLINDER HEAD ASSY WITH PC BUSH	Piaggio spare parts (POP)
A01A020001	CYLINDER HEAD ASSY WITH VALVE AND SPRING	Piaggio spare parts (POP)
E07518324	Cylinder head assy. Consisting of sr.no	Piaggio spare parts (POP)
E40008363	CYLINDER HEAD ASSY.CONSISTING OF SR.NO.	Piaggio spare parts (POP)
SP1A012956	Cylinder head assy_SPD	Piaggio spare parts (POP)
SP1A017573	Cylinder head assy_SPD	Piaggio spare parts (POP)
B011343	CYLINDER HEAD COVER ASSY	Piaggio spare parts (POP)
B018533	CYLINDER HEAD COVER GASKET	Piaggio spare parts (POP)
830820	Cylinder head cover gasket	Piaggio spare parts (POP)
879532	CYLINDER HEAD COVER GASKET ASSY	Piaggio spare parts (POP)
E87016191A	Cylinder head Gasket	Piaggio spare parts (POP)
CM040001	CYLINDER HEAD GASKET	Piaggio spare parts (POP)
CM040002	CYLINDER HEAD GASKET	Piaggio spare parts (POP)
CM040003	CYLINDER HEAD GASKET	Piaggio spare parts (POP)
A01S020001	CYLINDER HEAD GASKET - MLS,THK 1.2 mm	Piaggio spare parts (POP)
ESP650DGS013	Cylinder head gasket 1.4 mm	Piaggio spare parts (POP)
E87016191	Cylinder head gasket 1.4 mm	Piaggio spare parts (POP)
LG4730619	CYLINDER HEAD GASKET LGA 280	Piaggio spare parts (POP)
E43536107	CYLINDER HEAD JOINT 0.2MM	Piaggio spare parts (POP)
E43536108	CYLINDER HEAD JOINT 0.3MM	Piaggio spare parts (POP)
E43536109	CYLINDER HEAD JOINT 0.4MM	Piaggio spare parts (POP)
E40010712	CYLINDER HEAD KIT GL 400 BS I	Piaggio spare parts (POP)
E40010713	CYLINDER HEAD KIT GL 400 BS II	Piaggio spare parts (POP)

E40010713P	CYLINDER HEAD KIT GL 400 BS II	Piaggio spare parts (POP)
E43510733	CYLINDER HEAD KIT GL435 BS-III	Piaggio spare parts (POP)
E43510733P	CYLINDER HEAD KIT GL435 BS-III	Piaggio spare parts (POP)
970300524	CYLINDER HEAD MOUNTING STAND	Piaggio spare parts (POP)
KD68502150	CYLINDER HEAD STUD 15LD4	Piaggio spare parts (POP)
KD68502158	CYLINDER HEAD STUD 15LD4	Piaggio spare parts (POP)
1A004939	CYLINDER HEAD WITH I.P.	Piaggio spare parts (POP)
L9200780	CYLINDER HEAD WITH I.P.	Piaggio spare parts (POP)
SP1A004939	CYLINDER HEAD WITH I.P.APE PAX SPD	Piaggio spare parts (POP)
L9200796	CYLINDER HEAD WITH IP	Piaggio spare parts (POP)
L9200884	CYLINDER HEAD WITH IP	Piaggio spare parts (POP)
434716	CYLINDER HEAD/MUFFLER GASKET	Piaggio spare parts (POP)
E43512268	CYLINDER HEADVALVE GUIDE &SEATG435	Piaggio spare parts (POP)
L2381115	CYLINDER LDW 482 (DIA 86)	Piaggio spare parts (POP)
6A001214	CYLINDER MOUNTING BRACKET	Piaggio spare parts (POP)
B073768	CYLINDER MTG BKT ASSLY	Piaggio spare parts (POP)
6A000430	CYLINDER MTG BKT ASSY	Piaggio spare parts (POP)
925505	CYLINDER PACKING SEAL	Piaggio spare parts (POP)
632134	CYLINDER PROTECTION FRAME	Piaggio spare parts (POP)
6B000850	CYLINDER SUPPORT BRACKET ASSLY	Piaggio spare parts (POP)
643708	CYLINDER WITH CNG VALVE	Piaggio spare parts (POP)
B041567	CYLINDRICAL HEADED SCREW(M4 X 22)	Piaggio spare parts (POP)
B018851	CYLINDRICAL HEAD METRICAL SCREW M5x16	Piaggio spare parts (POP)
B018852	CYLINDRICAL HEAD METRICAL SCREW M5x30	Piaggio spare parts (POP)
6C000269	CYLINDRICAL HEAD SCREW WITH CROSS SLOT	Piaggio spare parts (POP)
1A000404	CYLINDRICAL HEAD WITH CROSS MOULD SCREW	Piaggio spare parts (POP)
B042694	CYLINDRICAL ROLLER BEARING NJ-205	Piaggio spare parts (POP)
604516	D.C.CABLE CONTROL BKT.	Piaggio spare parts (POP)
B001518	D.COMP CNTRL.CABLE ASSLY -XTRA LD (WIT	Piaggio spare parts (POP)
SM26242547	D.E. Dust Cap	Piaggio spare parts (POP)
662223	D.E. SPANNER(19X20)	Piaggio spare parts (POP)
B024170	D.T.CAP ASSLY WITH KEY	Piaggio spare parts (POP)
KD3230030	DADO CIECO/CAP NUT 'SV C10	Piaggio spare parts (POP)
20105	DADO ESAGONALE M5	Piaggio spare parts (POP)
KD326R0380	DADO/NUT	Piaggio spare parts (POP)
613316	DAMPER	Piaggio spare parts (POP)
615593	DAMPER	Piaggio spare parts (POP)
615594	DAMPER	Piaggio spare parts (POP)
6C000447	DAMPER COIL SPRING	Piaggio spare parts (POP)
898410	Damper drift	Piaggio spare parts (POP)
1A017157	DAMPER SPRING	Piaggio spare parts (POP)
1A017158	DAMPER SPRING RETAINER	Piaggio spare parts (POP)
932258	DAMPER(K-0812-12-040)Paxx200	Piaggio spare parts (POP)
1A011292	DAMPING MASS	Piaggio spare parts (POP)
B041059	DAMPING MASS	Piaggio spare parts (POP)
B011662	DAMPING MASS	Piaggio spare parts (POP)
1A007620	DAMPING RING	Piaggio spare parts (POP)

1A007635	DAMPING RING	Piaggio spare parts (POP)
1A007634	DAMPING RING	Piaggio spare parts (POP)
B041257	DASH BOARD BOTTOM SUPPORT S/A	Piaggio spare parts (POP)
662239	DASH BOARD BOTTOM SUPPORT S/A	Piaggio spare parts (POP)
644949	DASH BOARD SUPPORT BRKT -TOP	Piaggio spare parts (POP)
B041259	DASH BOARD SUPPORT BRKT -TOP S/A	Piaggio spare parts (POP)
B073809	DASHBOARD	Piaggio spare parts (POP)
B041738	DASHBOARD	Piaggio spare parts (POP)
B041119	DASHBOARD - MINI porter 510	Piaggio spare parts (POP)
632447	DASHBOARD (CARGO) (GSR-400)	Piaggio spare parts (POP)
B003934	DASHBOARD (INSTRUMENT PANEL)	Piaggio spare parts (POP)
6B002434	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
6B002435	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
6B002503	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
6B002504	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
6B002424	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
6B002425	DASHBOARD ASSEMBLY COMPLETE	Piaggio spare parts (POP)
B076162	DASHBOARD ASSL COMPLETE 501 BS IV DIESEL	Piaggio spare parts (POP)
B076843	DASHBOARD ASSL COMPLETE CALESSINO EURO4	Piaggio spare parts (POP)
B077072	DASHBOARD ASSL COMPLETE CLASSIC EURO4	Piaggio spare parts (POP)
6B001483	DASHBOARD ASSLY - (D+3) BSVI CNG	Piaggio spare parts (POP)
6B001484	DASHBOARD ASSLY - (D+3) BSVI LPG	Piaggio spare parts (POP)
6B001705	DASHBOARD ASSLY - (D+5) BSVI CNG	Piaggio spare parts (POP)
6B001704	DASHBOARD ASSLY - (D+5) BSVI DSL	Piaggio spare parts (POP)
6B001706	DASHBOARD ASSLY - (D+5) BSVI DSL	Piaggio spare parts (POP)
B002621	DASHBOARD ASSLY - APE CITY CNG/LPG	Piaggio spare parts (POP)
6B001756	DASHBOARD ASSLY - CITY PLUS BSVI CNG	Piaggio spare parts (POP)
6B001755	DASHBOARD ASSLY - CITY PLUS BSVI DSL	Piaggio spare parts (POP)
6B001757	DASHBOARD ASSLY - CITY PLUS BSVI LPG	Piaggio spare parts (POP)
6B001754	DASHBOARD ASSLY - CITY PLUS BSVI PTL	Piaggio spare parts (POP)
632515	DASHBOARD ASSLY (CARGO) (GSR-400)	Piaggio spare parts (POP)
B078151	DASHBOARD ASSLY (APE CITY) CNG DLX	Piaggio spare parts (POP)
B078152	DASHBOARD ASSLY (APE CITY) LPG DLX	Piaggio spare parts (POP)
659757	DASHBOARD ASSLY (CARGO)	Piaggio spare parts (POP)
B076119	DASHBOARD ASSLY (PAX UPG) CNG/LPG DLX	Piaggio spare parts (POP)
B078314	DASHBOARD ASSLY 501 (WATER COOLED)	Piaggio spare parts (POP)
B073297	DASHBOARD ASSLY 501 CNG/LPG	Piaggio spare parts (POP)
B073298	DASHBOARD ASSLY 501 DOMESTIC	Piaggio spare parts (POP)
6B000241	DASHBOARD ASSLY COMPLETE	Piaggio spare parts (POP)
6B000914	DASHBOARD ASSLY COMPLETE	Piaggio spare parts (POP)
B074279	DASHBOARD ASSLY COMPLETE PAX UPG CNG/LPG	Piaggio spare parts (POP)
B078458	DASHBOARD ASSLY COMPLETE-CITY H TECH LPG	Piaggio spare parts (POP)
B078457	DASHBOARD ASSLY COMPLETE-CITY HTECH CNG	Piaggio spare parts (POP)
B041523	DASHBOARD ASSLY PAX 200cc CNG/LPG	Piaggio spare parts (POP)
B041536	DASHBOARD ASSLY PAX 200cc PETROL	Piaggio spare parts (POP)
B078153	DASHBOARD ASSLY. (APE CITY) PETROL DLX	Piaggio spare parts (POP)
B078330	DASHBOARD ASSLY. (CITY E4-PHILIPPINES)	Piaggio spare parts (POP)

B074037	DASHBOARD ASSLY. (PETROL) DLX	Piaggio spare parts (POP)
B077469	DASHBOARD ASSLY. CITY CARGO PETROL BSIV	Piaggio spare parts (POP)
6B000579	DASHBOARD ASSLY. COMPLETE	Piaggio spare parts (POP)
B041483	DASHBOARD ASSLY. COMPLETE	Piaggio spare parts (POP)
6B000915	DASHBOARD ASSLY. COMPLETE	Piaggio spare parts (POP)
6B001217	DASHBOARD ASSLY. COMPLETE	Piaggio spare parts (POP)
B077535	DASHBOARD ASSLY. COMPLETE (D+5 DIESEL)	Piaggio spare parts (POP)
B074736	DASHBOARD ASSLY.(PAX UP.DIESEL) DLX	Piaggio spare parts (POP)
6B003032	DASHBOARD ASSLY.COMPLETE	Piaggio spare parts (POP)
6B002447	DASHBOARD ASSLY.COMPLETE	Piaggio spare parts (POP)
B077479	DASHBOARD ASSLY.COMPLETE (MONOFUEL)	Piaggio spare parts (POP)
6B000213	DASHBOARD ASSLY.COMPLETE CNG	Piaggio spare parts (POP)
6B000212	DASHBOARD ASSLY.COMPLETE DIESEL	Piaggio spare parts (POP)
6B000214	DASHBOARD ASSLY.COMPLETE LPG	Piaggio spare parts (POP)
6B000211	DASHBOARD ASSLY.COMPLETE PTL	Piaggio spare parts (POP)
6B002751	DASHBOARD ASSY COMPLETE	Piaggio spare parts (POP)
B077470	DASHBOARD ASSY CITY CARGO BSIV CNG/LPG	Piaggio spare parts (POP)
6B002754	DASHBOARD ASSY COMPLETE	Piaggio spare parts (POP)
B073887	DASHBOARD ASSY RHD	Piaggio spare parts (POP)
B074908	DASHBOARD ASSY RHD	Piaggio spare parts (POP)
B073867	Dashboard Centre Mtg Brt Assy	Piaggio spare parts (POP)
604549	DASHBOARD OBJECT & INSTRUMENT HOLDER	Piaggio spare parts (POP)
652013	Dashboard Objects & Instrument Holder601	Piaggio spare parts (POP)
660322	DASHBOARD OBJECTS AND INSTRUMENT HOLDER	Piaggio spare parts (POP)
602480	DASHBOARD RHD	Piaggio spare parts (POP)
B041524	DASHBOARD S/A WITH GLOVE BOX COVER	Piaggio spare parts (POP)
B073863	Dashboard Side Mtg brt LH Assy	Piaggio spare parts (POP)
B073862	Dashboard Side Mtg brt RH Assy	Piaggio spare parts (POP)
632849	DASHBOARD SUB ASSLY	Piaggio spare parts (POP)
6B000175	DASHBOARD SUPPORT	Piaggio spare parts (POP)
B009034	DASHBOARD WITH GLOVE BOX COVER ASSY -441	Piaggio spare parts (POP)
B003027	DASHBOARD-APE MINITRUK	Piaggio spare parts (POP)
6C000228	DC DC CONVERTOR MTG BKT	Piaggio spare parts (POP)
6D000378	DC-DC CONVERTOR	Piaggio spare parts (POP)
567455	DE SPANNER 10/13	Piaggio spare parts (POP)
192009013	DE SPANNER 10X13 IS:2018(ZN PLATING)	Piaggio spare parts (POP)
567456	DE SPANNER 12/14	Piaggio spare parts (POP)
567457	DE SPANNER 17/19	Piaggio spare parts (POP)
192012010	DE SPANNER 17X19 IS:2028(ZN PLATING)	Piaggio spare parts (POP)
567454	DE SPANNER 7/8	Piaggio spare parts (POP)
6A001584	DEAERATION HOSE	Piaggio spare parts (POP)
6A000993	DE-AERATION HOSE	Piaggio spare parts (POP)
B077248	DE-AERATION HOSE	Piaggio spare parts (POP)
B041053	DE-AERATION HOSE	Piaggio spare parts (POP)
B074241	DE-AERATION HOSE	Piaggio spare parts (POP)
643791	DECK MAT 1.3 TONNER PICK UP	Piaggio spare parts (POP)
ED40580	DECOMP. LEVER ASSY	Piaggio spare parts (POP)

632167	DECOMPRESSION CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
E43510767	Decompression Lever Assembly Kit	Piaggio spare parts (POP)
KD547R0210	DECOMPRESSION LEVER SPRING	Piaggio spare parts (POP)
ED41619	Decompression shaft assy.	Piaggio spare parts (POP)
E500568046	DECOMPRESSION SPRING	Piaggio spare parts (POP)
B015483	DECOMPRESSION SPRING	Piaggio spare parts (POP)
B001505	DECOMPRESSION TRANSMISSION ASSLY FOR ST	Piaggio spare parts (POP)
660351	DECOMPRESSOR CONTROL CABLE	Piaggio spare parts (POP)
604508	DECOMPRESSOR CONTROL CABLE INNER	Piaggio spare parts (POP)
604514	DECOMPRESSOR CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
660359	DECOMPRESSOR CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
KIT95019	DECOMPRESSOR KIT_GL400 BSII	Piaggio spare parts (POP)
E505985052	DECOMPRESSOR OPERATING SCREW	Piaggio spare parts (POP)
B016956	DEEP GROOVE BALL BEARING	Piaggio spare parts (POP)
83040R	DEEP GROOVE BALL BEARING	Piaggio spare parts (POP)
83041R	DEEP GROOVE BALL BEARING	Piaggio spare parts (POP)
833701	DEEP GROOVE BALL BEARING	Piaggio spare parts (POP)
B003746P	DEEP GROOVE BALL BEARING (510GB)	Piaggio spare parts (POP)
B003746	DEEP GROOVE BALL BEARING (510GB)	Piaggio spare parts (POP)
30209R	DEEP GROOVE BALL BEARING (CLUSTER GEAR)	Piaggio spare parts (POP)
880305509R	DEEP GROOVE BALL BEARING (PINION SHAFT)	Piaggio spare parts (POP)
880255211	DEEP GROOVE BALL BEARING 25X52X15	Piaggio spare parts (POP)
880305509	DEEP GROOVE BALL BEARING 30 X 55 X 13	Piaggio spare parts (POP)
243303R	DEEP GROOVE BALL BRG-RR WH AXLE	Piaggio spare parts (POP)
149027	DEFL CLOSING LEVER LH	Piaggio spare parts (POP)
B003865	DEFL CLOSING LEVER LH (PLASTIC)	Piaggio spare parts (POP)
149028	DEFL CLOSING LEVER RH	Piaggio spare parts (POP)
B003864	DEFL CLOSING LEVER RH -(PLASTIC)	Piaggio spare parts (POP)
163784	DEFLECTOR PANE RABBET FRONT GASKET	Piaggio spare parts (POP)
163659	DEFLECTOR PANE RABBET LOWER GASKET	Piaggio spare parts (POP)
163782	DEFLECTOR PANE RABBET REAR GASKET	Piaggio spare parts (POP)
163660	DEFLECTOR PANE RABBET UPPER GASKET	Piaggio spare parts (POP)
E500509599	DEFLECTOR PLATE	Piaggio spare parts (POP)
604844	DEL VAN ASSLY WITH REAR UPPER HATCH	Piaggio spare parts (POP)
632438	DEL VAN WIRING HARNESS GROUP - LWB	Piaggio spare parts (POP)
568164	DEL. VAN WIRING HARNESS GROUP	Piaggio spare parts (POP)
F002B70032	DELIVERY VALVE	Piaggio spare parts (POP)
F002B70057	DELIVERY VALVE BS-2	Piaggio spare parts (POP)
9411033342	DELIVERY VALVE HOLDER	Piaggio spare parts (POP)
B002574BG	DELIVERY VAN CHASSIS S/A BRILLIANT GREEN	Piaggio spare parts (POP)
B002574CB	DELIVERY VAN CHASSIS S/A CHARMING BLUE	Piaggio spare parts (POP)
B002574GY	DELIVERY VAN CHASSIS S/A GOLDEN YELLOW	Piaggio spare parts (POP)
B002574PM	DELIVERY VAN CHASSIS S/A PASSION MAROON	Piaggio spare parts (POP)
B002574SY	DELIVERY VAN CHASSIS S/A SAHARA YELLOW	Piaggio spare parts (POP)
B006878ED	DELIVERY VAN S/A WITH RR HATCH-BSIII ED	Piaggio spare parts (POP)
568164R	DELIVERY VAN WIRING HARNESS GROUP	Piaggio spare parts (POP)
B006878BG	DELIVERY VAN WITH REAR HATCH (GL435) BG	Piaggio spare parts (POP)

B006878BW	DELIVERY VAN WITH REAR HATCH (GL435) BW	Piaggio spare parts (POP)
B006878CB	DELIVERY VAN WITH REAR HATCH (GL435) CB	Piaggio spare parts (POP)
B006878GY	DELIVERY VAN WITH REAR HATCH (GL435) GY	Piaggio spare parts (POP)
B006878SY	DELIVERY VAN WITH REAR HATCH (GL435) SY	Piaggio spare parts (POP)
B006878WR	DELIVERY VAN WITH REAR HATCH (GL435) WR	Piaggio spare parts (POP)
F002F21019	DELIVERY-VALVE HOLDER	Piaggio spare parts (POP)
A01G200001	DELTA P-SENSOR	Piaggio spare parts (POP)
03G160824	detent ball into gear detent	Piaggio spare parts (POP)
03G160805	detent ball reverse	Piaggio spare parts (POP)
03G160333	DETENT BALL-SYNCHRONISER	Piaggio spare parts (POP)
932215	DIA.PHRAGM SUB ASSY(R-8106-VI-04)Paxx200	Piaggio spare parts (POP)
569071	DIAPHRAGM,VALVE AIR-	Piaggio spare parts (POP)
940163	Diagnosis Interface cable - DE512222	Piaggio spare parts (POP)
932262	Diagnosis tool kit for BNA	Piaggio spare parts (POP)
940185	Diagnostic Tool 501 BSVI	Piaggio spare parts (POP)
940210	Diagnostic Tool for 501/City + DSL BSVI	Piaggio spare parts (POP)
970300526	DIAL STAND	Piaggio spare parts (POP)
900501	DIAL STAND WITH DIAL	Piaggio spare parts (POP)
E40006818	DIAPHRAGM	Piaggio spare parts (POP)
E50006813	DIAPHRAGM ASSLY	Piaggio spare parts (POP)
929971	Diaphragm sub assly -R-8104-09	Piaggio spare parts (POP)
925741	DIAPHRAGM SUB ASSLY(R-8105-01)	Piaggio spare parts (POP)
932207	DIAPHRAGM SUB ASSY(R-8106-VI-01)Paxx200	Piaggio spare parts (POP)
925774	DIAPHRAGM SUB. ASSLY.(R-8104-08)	Piaggio spare parts (POP)
929972	Diaphragm subassembly.R-8104-10	Piaggio spare parts (POP)
929992	Diaphragm Subassembly-R-8105-02	Piaggio spare parts (POP)
ED43751	DIAPHRAM(SAFETY VALVE)	Piaggio spare parts (POP)
E1969695019	DIAPHRAM	Piaggio spare parts (POP)
B003359	DIESEL PLATE - STICKER	Piaggio spare parts (POP)
B006960	DIESEL CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
1F000470	DIESEL ENGINE BNA 1000 VACUUM PUMP (P)	Piaggio spare parts (POP)
B012500	DIESEL ENGINE COMPLETE BNA 1000 CC (P)	Piaggio spare parts (POP)
F002H24593	DIESEL FILTER	Piaggio spare parts (POP)
ED42244P	OIL FILTER ELEMENT (SPIN ON TYPE)	Piaggio spare parts (POP)
9451037407	DIESEL FILTER	Piaggio spare parts (POP)
9451037405	DIESEL FILTER ELEMENT	Piaggio spare parts (POP)
9451037407A	DIESEL FILTER-501 BS-II & BS-III	Piaggio spare parts (POP)
604789	DIESEL PLATE	Piaggio spare parts (POP)
SST94197	Diff Ball Brg Removal Tool	Piaggio spare parts (POP)
MS254003	DIFF CAGE BOX EXTRACTOR	Piaggio spare parts (POP)
SST94180	Diff Cover Pinion Shaft Ball Brg Removal	Piaggio spare parts (POP)
B006318	DIFF. CASE COVER ASSLY.	Piaggio spare parts (POP)
B006318SP	DIFF. CASE COVER ASSLY.PORTER 600-SPD	Piaggio spare parts (POP)
03A161724	DIFF. HOUSING AND SPEEDO GEA	Piaggio spare parts (POP)
SST94199	Diff.Ball Brg Installer	Piaggio spare parts (POP)
970300523	DIFF.CAGE EXTRACTOR	Piaggio spare parts (POP)
SST94184	Diff.Cover Pinion Shaft Ball brg Install	Piaggio spare parts (POP)

SST94108	DIFFCASE BEARING DEPTH MEASURING TOOL	Piaggio spare parts (POP)
B011883	DIFFERENTIAL BOX ASSEMBLY	Piaggio spare parts (POP)
B041576	DIFFERENTIAL & F.D.GEAR ASSLY	Piaggio spare parts (POP)
B041576SP	DIFFERENTIAL & F.D.GEAR ASSLY-PO 600-SPD	Piaggio spare parts (POP)
B011884	DIFFERENTIAL BOX	Piaggio spare parts (POP)
1F000619	DIFFERENTIAL BOX	Piaggio spare parts (POP)
L7951275	DIFFERENTIAL BOX	Piaggio spare parts (POP)
L7950103	DIFFERENTIAL BOX	Piaggio spare parts (POP)
SP1F000620	DIFFERENTIAL BOX ASSEMBLY- SPD	Piaggio spare parts (POP)
1F000730	DIFFERENTIAL BOX ASSEMBLY	Piaggio spare parts (POP)
SP1F000730	DIFFERENTIAL BOX ASSEMBLY - SPD	Piaggio spare parts (POP)
SPCM308703	DIFFERENTIAL BOX ASSEMBLY_SPD	Piaggio spare parts (POP)
SPCM308701	DIFFERENTIAL BOX ASSEMBLY_SPD	Piaggio spare parts (POP)
SPCM308702	DIFFERENTIAL BOX ASSEMBLY_SPD	Piaggio spare parts (POP)
1A017263	DIFFERENTIAL CAGE	Piaggio spare parts (POP)
288730	DIFFERENTIAL CAGE (APE 501)	Piaggio spare parts (POP)
SST94107	DIFFERENTIAL CAGE HOLDING BASE PLATE	Piaggio spare parts (POP)
B019214	DIFFERENTIAL COVER	Piaggio spare parts (POP)
1F000623	DIFFERENTIAL COVER	Piaggio spare parts (POP)
SPCM304201	DIFFERENTIAL COVER ASSEMBLY_SPD	Piaggio spare parts (POP)
SPCM304202	DIFFERENTIAL COVER ASSEMBLY_SPD	Piaggio spare parts (POP)
SPCM304203	DIFFERENTIAL COVER ASSEMBLY_SPD	Piaggio spare parts (POP)
B015875	DIFFERENTIAL COVER GASKET	Piaggio spare parts (POP)
SP1F000624	DIFFERENTIAL COVER WITH I.P.- GB 700 SPD	Piaggio spare parts (POP)
SP1A016696	DIFFERENTIAL COVER WITH I.P._SPD	Piaggio spare parts (POP)
SP1A013387	DIFFERENTIAL COVER WITH I.P._SPD	Piaggio spare parts (POP)
1A011810	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A006805	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A008545	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308305	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308301	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308302	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308304	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A014034	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A014032	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A008669R	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308303	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM318501	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A014033	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
B015818	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
B017135	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM318504	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM308306	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
CM318507	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
1A008665R	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
L2816207	DIFFERENTIAL CROWN	Piaggio spare parts (POP)
L2816222	DIFFERENTIAL CROWN 62 TEETH	Piaggio spare parts (POP)

L28162390	DIFFERENTIAL CROWN 62 TEETH	Piaggio spare parts (POP)
B011843	DIFFERENTIAL CROWN WHEEL	Piaggio spare parts (POP)
1F000468	DIFFERENTIAL CROWN WHEEL	Piaggio spare parts (POP)
1F000692	DIFFERENTIAL CROWN WHEEL	Piaggio spare parts (POP)
165155R	DIFFERENTIAL GEAR	Piaggio spare parts (POP)
165155	DIFFERENTIAL GEAR	Piaggio spare parts (POP)
SPB016170	DIFFERENTIAL GEAR COVER I.P.APE PAX -SPD	Piaggio spare parts (POP)
SPB018674	DIFFERENTIAL GEAR COVER P.I.APE PAX -SPD	Piaggio spare parts (POP)
B018674	DIFFERENTIAL GEAR COVER WITH P.I.	Piaggio spare parts (POP)
B016170	DIFFERENTIAL GEAR COVER WITH P.I.	Piaggio spare parts (POP)
B001962	DIFFERENTIAL SIDE CASE COVER (510GB)	Piaggio spare parts (POP)
CM167903	DIFFUSER	Piaggio spare parts (POP)
CM167902	DIFFUSER	Piaggio spare parts (POP)
CM167901	DIFFUSER	Piaggio spare parts (POP)
020331Y	DIGITAL MULTIMETER TOOL	Piaggio spare parts (POP)
6B000263	DIN STORAGE	Piaggio spare parts (POP)
6D001081	DIODE MODULE,IN4007, 1A (TTP-24MNB)	Piaggio spare parts (POP)
E43508924	DIP STICK	Piaggio spare parts (POP)
E07516084	DIP STICK (ENG 510)	Piaggio spare parts (POP)
127016015	DIP STICK -SEALING WASHER	Piaggio spare parts (POP)
B041174	DIP STICK-510	Piaggio spare parts (POP)
940167	Dip Tube Assembly-V-5411-11	Piaggio spare parts (POP)
E52008924	DIPSTICK	Piaggio spare parts (POP)
E10G090002	DIPSTICK	Piaggio spare parts (POP)
E40009712	DIPSTICK	Piaggio spare parts (POP)
03G161805	DIPSTICK	Piaggio spare parts (POP)
E87016040	DIPSTICK	Piaggio spare parts (POP)
ED41974	Dipstick	Piaggio spare parts (POP)
LG1400483	Dipstick	Piaggio spare parts (POP)
ESP650DLB013	DIPSTICK (WITH'O'RING)	Piaggio spare parts (POP)
KD1400538	DIPSTICK 15LD401/441	Piaggio spare parts (POP)
KD1400501	DIPSTICK 15LD401/441	Piaggio spare parts (POP)
1F000726	DIPSTICK ASSY	Piaggio spare parts (POP)
889966	DIPSTICK ASSY	Piaggio spare parts (POP)
A01A090006	DIPSTICK ASSY (with O ring)	Piaggio spare parts (POP)
01S090007	DIPSTICK HANDLE O	Piaggio spare parts (POP)
KD9330158	DIPSTICK TUBE 15LD401/441	Piaggio spare parts (POP)
KD9330173	DIPSTICK TUBE 15LD401/441	Piaggio spare parts (POP)
221280	DISC	Piaggio spare parts (POP)
E5003430070	DISC	Piaggio spare parts (POP)
271171	DISC	Piaggio spare parts (POP)
614406	DISC	Piaggio spare parts (POP)
E07500609	Disc	Piaggio spare parts (POP)
03G161680	DISC ASSEMBLY-CLUTCH	Piaggio spare parts (POP)
03G160845	Disc plug selector assy	Piaggio spare parts (POP)
150418	DISC, THK=1.8	Piaggio spare parts (POP)
646535	DISMANTLED CLAMP	Piaggio spare parts (POP)

E500755006	DISTANCE PIECE	Piaggio spare parts (POP)
2430136166	DISTANCE PIECE	Piaggio spare parts (POP)
6D000556	DOCK DOOR ASSEMBLY	Piaggio spare parts (POP)
6D000559	DOCK FUSE 100A	Piaggio spare parts (POP)
6D000736	DOCKER HOOK	Piaggio spare parts (POP)
MS254005	DOLLY	Piaggio spare parts (POP)
MS254004	DOLLY CR SHAFT OIL SEAL	Piaggio spare parts (POP)
B077719	DOME BEADING	Piaggio spare parts (POP)
B073614	DOME LOGO -APE JALDOOT	Piaggio spare parts (POP)
E500323026	DOME NUT	Piaggio spare parts (POP)
ED40165	DOME NUT	Piaggio spare parts (POP)
569165	DOME NUT	Piaggio spare parts (POP)
568713	DOME NUT (GARUDA PT.NO.803 0005 2 2)	Piaggio spare parts (POP)
568273	DOOR ASSLY	Piaggio spare parts (POP)
B074508	DOOR ASSLY, FRONT LEFT (SS)	Piaggio spare parts (POP)
6B001331ED	DOOR ASSLY_ED-LH	Piaggio spare parts (POP)
6B001332ED	DOOR ASSLY_ED-RH	Piaggio spare parts (POP)
6B001204	DOOR BEADING CARGO LH	Piaggio spare parts (POP)
6B001207	DOOR BEADING CARGO RH	Piaggio spare parts (POP)
255323	Door button	Piaggio spare parts (POP)
B077013	DOOR DECAL 1 - LH	Piaggio spare parts (POP)
B077015	DOOR DECAL 1 - RH	Piaggio spare parts (POP)
B076889	DOOR DECAL 1 LH P1000	Piaggio spare parts (POP)
B076891	DOOR DECAL 1 RH P1000	Piaggio spare parts (POP)
B077014	DOOR DECAL 2 - LH	Piaggio spare parts (POP)
B077016	DOOR DECAL 2 - RH	Piaggio spare parts (POP)
6B000250	DOOR DECAL LH	Piaggio spare parts (POP)
662135	DOOR DECAL LH FOR DARK COLOUR SHADES OF	Piaggio spare parts (POP)
662133	DOOR DECAL LH FOR LIGHT COLOUR SHADES OF	Piaggio spare parts (POP)
6B000251	DOOR DECAL RH	Piaggio spare parts (POP)
662134	DOOR DECAL RH FOR DARK COLOUR SHADES OF	Piaggio spare parts (POP)
662132	DOOR DECAL RH FOR LIGHT COLOUR SHADES OF	Piaggio spare parts (POP)
6D000557	DOOR GASKET	Piaggio spare parts (POP)
B075878	Door Handle (opening & pulling)	Piaggio spare parts (POP)
B003260	DOOR HANDLE ASSY	Piaggio spare parts (POP)
B025723	DOOR HEADLAMP ASSY. LH	Piaggio spare parts (POP)
B025721	DOOR HEADLAMP ASSY. RH	Piaggio spare parts (POP)
615274	DOOR HEADLAMP S/A LH (FRAME LIGHT LH)	Piaggio spare parts (POP)
615275	DOOR HEADLAMP S/A RH (FRAME LIGHT RH)	Piaggio spare parts (POP)
569136	DOOR HINGE ASSLY	Piaggio spare parts (POP)
6B001520	DOOR HINGE ASSLY UPPER	Piaggio spare parts (POP)
264182	DOOR HINGE COVER LOWER	Piaggio spare parts (POP)
264863ED	DOOR LH ASSLY MINI TRUK - CED	Piaggio spare parts (POP)
B006646	DOOR LOCK ASSEMBLY LH (MFD)	Piaggio spare parts (POP)
B006645	DOOR LOCK ASSEMBLY RH (MFD)	Piaggio spare parts (POP)
B003090	DOOR LOCK ASSLY. LH	Piaggio spare parts (POP)
B003091	DOOR LOCK ASSLY. RH	Piaggio spare parts (POP)

B073607R	DOOR LOCK ASSY	Piaggio spare parts (POP)
B009174	DOOR LOCK INNER CABLE	Piaggio spare parts (POP)
B074112	DOOR LOCK STIKER - RR - LF (SS)	Piaggio spare parts (POP)
B074113	DOOR LOCK STRIKER - FR - RH (SS)	Piaggio spare parts (POP)
B074096	DOOR LOCK STRIKER - FR LF (SS)	Piaggio spare parts (POP)
B074114	DOOR LOCK STRIKER - RR - RH (SS)	Piaggio spare parts (POP)
B002978	DOOR OPENING PACKING	Piaggio spare parts (POP)
257651	DOOR PAD LH	Piaggio spare parts (POP)
257650	DOOR PAD RH	Piaggio spare parts (POP)
B003933	DOOR RESERVOIR SERV. HOLE	Piaggio spare parts (POP)
264864ED	DOOR RH ASSLY MINI TRUK -CED	Piaggio spare parts (POP)
660792	DOOR STICKER XTRA LD (DARK COLOUR)	Piaggio spare parts (POP)
660791	DOOR STICKER XTRA LD (LIGHT COLOR)	Piaggio spare parts (POP)
193705	DOOR UPPER PACKING	Piaggio spare parts (POP)
264863	DOOR, LH ASSLY MINI REG	Piaggio spare parts (POP)
614794	DOOR, RESERVOICE SERVICE HOLE	Piaggio spare parts (POP)
KD1213548	DOUBLE LIP OIL SEAL RING 28*38*10	Piaggio spare parts (POP)
614765R	DOUBLE ROW ANGULAR CONTACT BALL BRG	Piaggio spare parts (POP)
1A009339	DOWEL	Piaggio spare parts (POP)
1A019344	DOWEL	Piaggio spare parts (POP)
141666	DOWEL	Piaggio spare parts (POP)
889956	DOWEL	Piaggio spare parts (POP)
1A006002	DOWEL	Piaggio spare parts (POP)
L4320050	DOWEL	Piaggio spare parts (POP)
1A007774	DOWEL	Piaggio spare parts (POP)
888468	DOWEL	Piaggio spare parts (POP)
B010407	DOWEL	Piaggio spare parts (POP)
133238	DOWEL	Piaggio spare parts (POP)
888298	DOWEL	Piaggio spare parts (POP)
B010646	DOWEL	Piaggio spare parts (POP)
844582	DOWEL	Piaggio spare parts (POP)
B010729	DOWEL	Piaggio spare parts (POP)
411209	DOWEL	Piaggio spare parts (POP)
888122	DOWEL	Piaggio spare parts (POP)
L4320049	DOWEL	Piaggio spare parts (POP)
B019246	DOWEL	Piaggio spare parts (POP)
615550	DOWEL	Piaggio spare parts (POP)
E87000968	DOWEL - INJECTOR	Piaggio spare parts (POP)
1A000708	DOWEL (Ø7,5, H=12)	Piaggio spare parts (POP)
277916	DOWEL (Ø7,5, H=12)	Piaggio spare parts (POP)
L4307017	DOWEL BOLT	Piaggio spare parts (POP)
L4307020	DOWEL BOLT	Piaggio spare parts (POP)
01G030015	DOWEL CLUTCH	Piaggio spare parts (POP)
01G110005	DOWEL CLUTCH HOUSING	Piaggio spare parts (POP)
E87000946	DOWEL CYLINDER	Piaggio spare parts (POP)
E500843036	DOWEL PIN	Piaggio spare parts (POP)
E276846055	DOWEL PIN	Piaggio spare parts (POP)

ED41524	Dowel pin	Piaggio spare parts (POP)
B011945	DOWEL PIN	Piaggio spare parts (POP)
E10M120003	Dowel pin	Piaggio spare parts (POP)
A01M010009	DOWEL PIN for PTO cover (Dia 8 mm)	Piaggio spare parts (POP)
E87000944	DOWEL PIN GOVERNOR	Piaggio spare parts (POP)
E50000911	DOWEL PIN Ø6x14	Piaggio spare parts (POP)
L77702770	DOWEL PIN SKF RC 3X5	Piaggio spare parts (POP)
L7770259	DOWEL PIN SKF RC 3X5	Piaggio spare parts (POP)
ESP650DNB027	DOWELPIN(Ø4X8FORTHTRUSTWASHER)	Piaggio spare parts (POP)
ESP650DNB013	DOWEL-PTO(Ø8x12)	Piaggio spare parts (POP)
920016	Drag link sub. Assy Kit	Piaggio spare parts (POP)
LG9863008	Drain Plug	Piaggio spare parts (POP)
E50000447	DRAIN PLUG	Piaggio spare parts (POP)
E07500407	DRAIN PLUG	Piaggio spare parts (POP)
932276	Drain Plug (K-0102-19-010) Paxx 200	Piaggio spare parts (POP)
B074723	DRAIN PLUG BOLT (M14X1.5X27)	Piaggio spare parts (POP)
940039	DRAIN PLUG PROTECTIVE CAP_PORTER 600	Piaggio spare parts (POP)
020364Y	DRIFT X FITTING GEARBOX BEARINGS (24 mm)	Piaggio spare parts (POP)
B011086	DRILLED BOLT	Piaggio spare parts (POP)
SM26246057	Drive assy	Piaggio spare parts (POP)
SM26256904	Drive Assy	Piaggio spare parts (POP)
SM26246178	Drive assy kit	Piaggio spare parts (POP)
E1005821607	DRIVE END SHIELD	Piaggio spare parts (POP)
F002G20117	DRIVE END SHIELD	Piaggio spare parts (POP)
F002G20258	DRIVE END SHIELD	Piaggio spare parts (POP)
F002G20325	DRIVE END SHIELD	Piaggio spare parts (POP)
F002G20778	Drive End Shield	Piaggio spare parts (POP)
F002G20869	DRIVE END SHIELD	Piaggio spare parts (POP)
F002G20617	DRIVE END SHIELD -STARTER MOTOR	Piaggio spare parts (POP)
F002G20941	DRIVE END SHIELD; PDC	Piaggio spare parts (POP)
L1055090	DRIVE SHAFT	Piaggio spare parts (POP)
03A160606	DRIVE SHAFT ASSEMBLY	Piaggio spare parts (POP)
B076723	DRIVE SHAFT ASSLY, LH	Piaggio spare parts (POP)
B077547	DRIVE SHAFT ASSLY, LH (TJ22 - BJ21)	Piaggio spare parts (POP)
B076725	DRIVE SHAFT ASSLY, RH	Piaggio spare parts (POP)
B077548	DRIVE SHAFT ASSLY, RH (TJ22 - BJ21)	Piaggio spare parts (POP)
B025572	Drive shaft assy, LH	Piaggio spare parts (POP)
B074607	Drive shaft assy, LH	Piaggio spare parts (POP)
B025571	Drive shaft assy, RH	Piaggio spare parts (POP)
B074608	Drive shaft assy, RH	Piaggio spare parts (POP)
1F000586	DRIVEN IDLE GEAR	Piaggio spare parts (POP)
1A017159	DRIVEN PLATE	Piaggio spare parts (POP)
1A004836	DRIVEN PLATE	Piaggio spare parts (POP)
1A017156	DRIVEN PLATE	Piaggio spare parts (POP)
127530011	DRIVEN PLATE ASLY	Piaggio spare parts (POP)
127780018	DRIVEN PLATE ASSLY (MONTANO)	Piaggio spare parts (POP)
KIT95023R	DRIVEN PLATE_PAX 200	Piaggio spare parts (POP)

KIT95023	DRIVEN PLATE_PAX 200	Piaggio spare parts (POP)
880622	DRIVEN PULLEY SHAFT	Piaggio spare parts (POP)
567563	DRIVER SEAT ASSLY (COMM)	Piaggio spare parts (POP)
644852	DRIVER BACK REST (CARGO) (VE)	Piaggio spare parts (POP)
B003699	DRIVER BACK REST ASSLY APE CITY	Piaggio spare parts (POP)
B042635	DRIVER BACK REST_APE CLASSIC NEW	Piaggio spare parts (POP)
661627	DRIVER BACK REST-501 PASS (DOM)	Piaggio spare parts (POP)
604580	DRIVER BACK REST-501 PASS (EXPORT)	Piaggio spare parts (POP)
6B001138	DRIVER BACKREST	Piaggio spare parts (POP)
6B002681	DRIVER BACKREST ASSEMBLY	Piaggio spare parts (POP)
6B001531	DRIVER BACKREST S/A - APE PAX BSVI	Piaggio spare parts (POP)
B074594	DRIVER BACKREST S/A - PAX UPGRADE	Piaggio spare parts (POP)
B024542	DRIVER BACKREST S/A PAX	Piaggio spare parts (POP)
1A017155	DRIVER PLATE	Piaggio spare parts (POP)
B009139	DRIVER SEAT- APE MINI	Piaggio spare parts (POP)
6B002679	DRIVER SEAT ASSEMBLY	Piaggio spare parts (POP)
6B002047	DRIVER SEAT ASSEMBLY	Piaggio spare parts (POP)
6B001057	DRIVER SEAT ASSLY	Piaggio spare parts (POP)
6B000485	DRIVER SEAT ASSLY	Piaggio spare parts (POP)
B076226	DRIVER SEAT ASSLY (CARGO) (VE)	Piaggio spare parts (POP)
B008637	DRIVER SEAT ASSLY (COMM.) P&C EXPORT	Piaggio spare parts (POP)
6B001463	DRIVER SEAT ASSLY 501 CARGO CNG/LPG	Piaggio spare parts (POP)
659940	DRIVER SEAT ASSLY 501 LD	Piaggio spare parts (POP)
B002974	DRIVER SEAT ASSLY- CNG CARGO	Piaggio spare parts (POP)
B024520	DRIVER SEAT ASSLY COMPLETE	Piaggio spare parts (POP)
B041123	DRIVER SEAT ASSLY COMPLETE	Piaggio spare parts (POP)
B041288	DRIVER SEAT ASSLY COMPLETE	Piaggio spare parts (POP)
6B001815	DRIVER SEAT ASSLY COMPLETE - APE CITY	Piaggio spare parts (POP)
6B000811	DRIVER SEAT ASSLY COMPLETE - APE CITY	Piaggio spare parts (POP)
B075614	DRIVER SEAT ASSLY COMPLETE - PAX	Piaggio spare parts (POP)
6B000526	DRIVER SEAT ASSLY COMPLETE -APE CITY	Piaggio spare parts (POP)
B077027	DRIVER SEAT ASSLY COMPLETE BSIV P&C EXPO	Piaggio spare parts (POP)
B074505	DRIVER SEAT ASSLY COMPLETE PAX UPGRADE	Piaggio spare parts (POP)
6B003040	DRIVER SEAT ASSLY.	Piaggio spare parts (POP)
6B002580	DRIVER SEAT ASSLY.	Piaggio spare parts (POP)
6B000728	DRIVER SEAT ASSLY.	Piaggio spare parts (POP)
B042636	DRIVER SEAT ASSMLY-APE CLASSIC NEW	Piaggio spare parts (POP)
B078519	DRIVER SEAT ASSY- AUTO PLUS CNG LPG	Piaggio spare parts (POP)
6B001821	DRIVER SEAT COMPLETE ASSLY- NON FR	Piaggio spare parts (POP)
B024521	DRIVER SEAT PIPE ASSLY	Piaggio spare parts (POP)
587849	DRIVER SEATSUPPORT PIPE (PASS)	Piaggio spare parts (POP)
127701012	DRIVING PLATE	Piaggio spare parts (POP)
KIT95004	DRIVING PLATE SET	Piaggio spare parts (POP)
127692015	DRIVING PLATE THK. 2.0 MM	Piaggio spare parts (POP)
03G160520	DROP GEAR 1	Piaggio spare parts (POP)
E87009678	Drop Gear 1 4SHHSP	Piaggio spare parts (POP)
644492	DRUM BRAKE ASSY WITH SCREWS	Piaggio spare parts (POP)

F002C40536079	DSLA148P1133 Nozzle	Piaggio spare parts (POP)
265091	DUMPER ENGINE MOUNTING	Piaggio spare parts (POP)
265091P	DUMPER ENGINE MOUNTING	Piaggio spare parts (POP)
6A001015	DUMPER ENGINE MOUNTING - FRONT	Piaggio spare parts (POP)
6A001016	DUMPER ENGINE MOUNTING - REAR	Piaggio spare parts (POP)
932283	DUST CAP(BNA)	Piaggio spare parts (POP)
109265	DUST COVER	Piaggio spare parts (POP)
109064	DUST COVER	Piaggio spare parts (POP)
615430	DUST COVER	Piaggio spare parts (POP)
B002796	DUST COVER (03 34 007 0)	Piaggio spare parts (POP)
E43531725	Dust cover for rear brake (engine side)	Piaggio spare parts (POP)
B006689	DUST COVER FRONT	Piaggio spare parts (POP)
B006690	DUST COVER REAR	Piaggio spare parts (POP)
661399	DUST PLUG	Piaggio spare parts (POP)
A01S120002	Dust seal for Inline Pump _501 DSL BSVI	Piaggio spare parts (POP)
920087	Dust Valve-BSIII	Piaggio spare parts (POP)
E40018393	Dust Valve	Piaggio spare parts (POP)
ED42500	DUST VALVE	Piaggio spare parts (POP)
632426	DUST VALVE (ENGINETECH AIR FILTER)	Piaggio spare parts (POP)
940071	Dust valve-Paxx UG	Piaggio spare parts (POP)
L1261109	DUSTPROOF RING FROM INJECTOR	Piaggio spare parts (POP)
KIT96043	DV Box - CKD kit	Piaggio spare parts (POP)
6D000383	E BOX	Piaggio spare parts (POP)
6B002574	E XTRA LDX STICKER	Piaggio spare parts (POP)
920071	E.C.U BSIII CNG ,APE CITY CNG(K-0122-05-	Piaggio spare parts (POP)
920077	E.C.U BSIII LPG (K-0401-16-I)	Piaggio spare parts (POP)
E87020408A	E87020408APLUG OIL HOLE	Piaggio spare parts (POP)
E87020635	E87020635E87020635 MOUNTING (RIGHT SIDE	Piaggio spare parts (POP)
L4896538	EARTH BRAID INSTALLATION	Piaggio spare parts (POP)
SM26254768	Earth Brush	Piaggio spare parts (POP)
644839R	EARTH CABLE	Piaggio spare parts (POP)
567703R	EARTH CABLE _DELIVERY WAGON	Piaggio spare parts (POP)
604632	EARTHING CABLE (BRAIDED TYPE)	Piaggio spare parts (POP)
6D001174	E-BOX	Piaggio spare parts (POP)
6D001175	E-BOX	Piaggio spare parts (POP)
6D001188	E-BOX	Piaggio spare parts (POP)
6D000794	EBOX ASSLY	Piaggio spare parts (POP)
6D000887	E-BOX ASSLY	Piaggio spare parts (POP)
6D001203	E-BOX ASSLY	Piaggio spare parts (POP)
6D001043	E-BOX ASSLY	Piaggio spare parts (POP)
6D001194	E-BOX ASSLY	Piaggio spare parts (POP)
6D000888	E-BOX ASSLY	Piaggio spare parts (POP)
6D000523	E-BOX COVER	Piaggio spare parts (POP)
6C000360	E-BOX MTG BKT-2 LH ASSLY	Piaggio spare parts (POP)
6C000359	E-BOX MTG BKT-2 RH ASSLY	Piaggio spare parts (POP)
6D001170	EBOX,PIGTAIL	Piaggio spare parts (POP)
6D001025	E-BOX,PIGTAIL	Piaggio spare parts (POP)

3413180000	ECCENTRIC BOLT	Piaggio spare parts (POP)
B074032	ECU (BOSCH) _ PORTER 700	Piaggio spare parts (POP)
932277	ECU (K-0122-I-05-IV) Paxx 200	Piaggio spare parts (POP)
932268	ECU (K-0401-16-II)Paxx 200 LPG	Piaggio spare parts (POP)
B041489	ECU WITH CNG LEVEL INDICATOR	Piaggio spare parts (POP)
6D000407	ECU WITH CNG LEVEL INDICATOR	Piaggio spare parts (POP)
660245	ECU WITH LED INDICATOR	Piaggio spare parts (POP)
B075862	ECU_(W/O LED & SW)_CITY BS IV_ CNG	Piaggio spare parts (POP)
B075861	ECU_(W/O LED & SW)_CITY BS IV_ LPG	Piaggio spare parts (POP)
A01G190006	ECU_501 Diesel BSVI	Piaggio spare parts (POP)
E43521753	EGR SWITCH	Piaggio spare parts (POP)
E87110848	EGR ASSEMBLY WITH POTENTIOMETER	Piaggio spare parts (POP)
E10G130002	EGR CONTROL UNIT, VOLTAGE REGULATOR	Piaggio spare parts (POP)
E10G130006	EGR CONTROLLER UNIT-Ape city DLS	Piaggio spare parts (POP)
E10G130005	EGR CONTROLLER UNIT-Cargo	Piaggio spare parts (POP)
E10G130018	EGR controller-Cargo/Pass./Ape city	Piaggio spare parts (POP)
A01G070005	EGR COOLER	Piaggio spare parts (POP)
ESP650DIN004	EGR COOLER	Piaggio spare parts (POP)
B010642	EGR COOLER	Piaggio spare parts (POP)
889916	EGR COOLER	Piaggio spare parts (POP)
B011751	EGR COOLERPIPE	Piaggio spare parts (POP)
1F000054	EGR PIPE ASSY	Piaggio spare parts (POP)
A01T070001	EGR PIPE ASSY - EGR COOLER TO INTAKE MAN	Piaggio spare parts (POP)
A01T070002	EGR PIPE ASSY - EXHAUST MANIFOLD TO EGR	Piaggio spare parts (POP)
ESP650DIN001	EGR PIPE ASSY. WITH EGR COOLER FLANGE	Piaggio spare parts (POP)
A01G070009	EGR PIPE INTERMEDIATE	Piaggio spare parts (POP)
1F000009	EGR Pipe Support Bracket with I.P.	Piaggio spare parts (POP)
E87110850	EGR PIPE WITH FLANGE	Piaggio spare parts (POP)
E07510837	EGR pipe with flange assy.	Piaggio spare parts (POP)
E10T070010	EGR PIPE-for all BSIV model	Piaggio spare parts (POP)
E10G070001	EGR SOLENOID VALVE (NORMALLY OFF)	Piaggio spare parts (POP)
B012469	EGR SUPPORT BRACKET	Piaggio spare parts (POP)
B011236	EGR SUPPORT BRACKET	Piaggio spare parts (POP)
E43521778	Egr Switch With Wire Harness	Piaggio spare parts (POP)
E43521744	EGR VALVE	Piaggio spare parts (POP)
ESP650DIN005	EGR VALVE	Piaggio spare parts (POP)
B011660	EGR VALVE	Piaggio spare parts (POP)
B011761	EGR VALVE SUPPORT	Piaggio spare parts (POP)
B012097	EGR VALVE SUPPORT	Piaggio spare parts (POP)
605246	ELASTIC BUFFER	Piaggio spare parts (POP)
616822	ELASTIC COUPLE	Piaggio spare parts (POP)
B073421	ELASTIC COUPLING	Piaggio spare parts (POP)
660759	ELASTIC COUPLING PULLER	Piaggio spare parts (POP)
111498	ELASTIC HUB	Piaggio spare parts (POP)
587617	ELASTIC JOINT CONNCTION HUB (WHL.SIDE)	Piaggio spare parts (POP)
6C000571	ELASTIC JOINT CONNECTION HUB (WHEEL SIDE)	Piaggio spare parts (POP)
1A019553	ELASTIC PIN	Piaggio spare parts (POP)

1A000742	ELASTIC PIN	Piaggio spare parts (POP)
889279	ELASTIC PIN	Piaggio spare parts (POP)
436600	ELASTIC PIN	Piaggio spare parts (POP)
LG8430129	ELASTIC PIN 3X32 ISO 8752	Piaggio spare parts (POP)
181351	ELASTIC PLATE	Piaggio spare parts (POP)
107870	ELASTIC RING	Piaggio spare parts (POP)
242364	ELASTIC RING	Piaggio spare parts (POP)
L1175072	ELASTIC RING FOR SHAFT	Piaggio spare parts (POP)
B002130	ELASTIC SMALL BLOCK	Piaggio spare parts (POP)
615602	ELASTIC SMALL BLOCK	Piaggio spare parts (POP)
ED33733	ELEC.FEED PUMP	Piaggio spare parts (POP)
6D000466	ELECTRIC CABLE U	Piaggio spare parts (POP)
6D000464	ELECTRIC CABLE W	Piaggio spare parts (POP)
B023456	ELECTRIC FUEL PUMP	Piaggio spare parts (POP)
6B002675	ELECTRIC FX LEFT SIDE STICKER	Piaggio spare parts (POP)
6B002676	ELECTRIC FX RIGHT SIDE STICKER	Piaggio spare parts (POP)
6B001818	ELECTRIC LEFT SIDE STICKER	Piaggio spare parts (POP)
6D000799	ELECTRIC MOTOR (9.5KW)	Piaggio spare parts (POP)
6A001421	ELECTRIC MOTOR MTG. BKT.	Piaggio spare parts (POP)
6B001935	ELECTRIC RIGHT SIDE STICKER	Piaggio spare parts (POP)
1A012712	Electric Starter intermed. Gear with P.I	Piaggio spare parts (POP)
B017189	ELECTRIC STARTER INTERMED. GEAR WITH P.I	Piaggio spare parts (POP)
1A018642R	ELECTRIC STARTER MOTOR	Piaggio spare parts (POP)
B041167	ELECTRICAL AIR WARN	Piaggio spare parts (POP)
B002630	ELECTRICAL FEED PUMP LGA 280 PETROL ENGI	Piaggio spare parts (POP)
A01G070006	ELECTRICAL MOTORIZED EGR VALVE (with H-	Piaggio spare parts (POP)
6D000952	ELECTRONIC AUDIO SYSTEM	Piaggio spare parts (POP)
E87103501	ELECTRONIC CONTROL UNIT - EGR	Piaggio spare parts (POP)
643842	ELECTRONIC CONTROL UNIT (VANAZ PT NO K-	Piaggio spare parts (POP)
643876	ELECTRONIC CONTROL UNIT(VANAZ PT NO K-04	Piaggio spare parts (POP)
CM301419	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM301407	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM301405	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309513	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309511	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309502	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309505	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309506	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317802	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317804	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317806	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317801	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317803	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM317805	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309507	ELECTRONIC DEVICE	Piaggio spare parts (POP)
CM309508	ELECTRONIC DEVICE	Piaggio spare parts (POP)
632479	ELECTRONIC FLASHER 12 V	Piaggio spare parts (POP)

B023727	ELECTRONIC FLASHER (BG LIN)	Piaggio spare parts (POP)
E87006825	ELECTRONIC FUEL FEED PUMP	Piaggio spare parts (POP)
6D000405	ELECTRONIC HAND THROTTLE	Piaggio spare parts (POP)
6D000405R	ELECTRONIC HAND THROTTLE	Piaggio spare parts (POP)
B078100	ELECTRONIC HAND THROTTLE	Piaggio spare parts (POP)
1D000535	ELECTRONIC INJECTOR DEVICE	Piaggio spare parts (POP)
1D001418	ELECTRONIC STARTER UNIT	Piaggio spare parts (POP)
1D000510	ELECTRONIC STARTER UNIT	Piaggio spare parts (POP)
E9451037407	ELEMENT	Piaggio spare parts (POP)
ED41752	ELEMENT	Piaggio spare parts (POP)
ED42502	ELEMENT	Piaggio spare parts (POP)
F002B10538	ELEMENT	Piaggio spare parts (POP)
F002B10580	ELEMENT	Piaggio spare parts (POP)
ED41745	ELEMENT ASSLY	Piaggio spare parts (POP)
E43508735	ELEMENT FOR AIR FILTER	Piaggio spare parts (POP)
E60008721	Element for air filter	Piaggio spare parts (POP)
B076112	ELEMENT WITH C-TUBE-CLAMP TYPE AIR FILTR	Piaggio spare parts (POP)
B076112P	ELEMENT WITH C-TUBE-CLAMP TYPE AIR FILTR	Piaggio spare parts (POP)
CM309501	ELETTRONIC DEVICE	Piaggio spare parts (POP)
CM278918	ELETTRONIC INJECTOR DEVICE	Piaggio spare parts (POP)
622055	Elettroventole	Piaggio spare parts (POP)
E87117771	ELLIPTICAL CATALYTIC CONVERTER	Piaggio spare parts (POP)
925681	ELR ASSY LH	Piaggio spare parts (POP)
925680	ELR ASSY RH	Piaggio spare parts (POP)
B008732	ELR COVER LH	Piaggio spare parts (POP)
B008728	ELR COVER RH	Piaggio spare parts (POP)
B006778	EMBLEM PIAGGIO	Piaggio spare parts (POP)
615101	EMBLEM PIAGGIO	Piaggio spare parts (POP)
B041992	EMC MOUNTING BKT	Piaggio spare parts (POP)
B041395	EMC MTG SHAFT ASSLY	Piaggio spare parts (POP)
B041504	EMC SUPPORT BRACKET	Piaggio spare parts (POP)
B041843	EMC SUPPORT CHANNEL	Piaggio spare parts (POP)
B041437	EMC SUPPORT FRONT	Piaggio spare parts (POP)
B041438	EMC SUPPORT REAR	Piaggio spare parts (POP)
6B001791	EMER. & FNRB SWITCH MTG COVER ASSLY	Piaggio spare parts (POP)
118871	EMERGENCY BRAKE SUPPORT PLATE	Piaggio spare parts (POP)
ESP650DST007	EMS- ECU-PORTER 700	Piaggio spare parts (POP)
D3376187Z01	END CONNECTING ROD	Piaggio spare parts (POP)
E52011746	END COVER	Piaggio spare parts (POP)
B009756	END PIPE AIR CLEANER (SNORKEL)	Piaggio spare parts (POP)
925706	END S- ASSY, TIE ROD	Piaggio spare parts (POP)
925707	END S- ASSY, TIE ROD	Piaggio spare parts (POP)
D4544387507	END, STEERING DRAG LINK,	Piaggio spare parts (POP)
D4544287503	END, STEERING DRAG LINK,	Piaggio spare parts (POP)
CM293931	ENG 230 3V BSIII APÉ 501 CARGO L PET EXP	Piaggio spare parts (POP)
CM293927	ENG 230 4S 3V BSIII APÉ PAX PETROL EXP	Piaggio spare parts (POP)
CM293929	ENG 230 4S3V BSIII APÉ 501 CARGO PET EXP	Piaggio spare parts (POP)

CM293901	ENG. 230 4S/3V BSIV APÉ PAX LPG/CNG	Piaggio spare parts (POP)
CM293903	ENG. 230 4S/3V BSIV APÉ PAX PETROL	Piaggio spare parts (POP)
CM293918	ENG. 230 4S/3V BSVI APÉ 501 CARGO CNG	Piaggio spare parts (POP)
CM293912	ENG. 230 4S/3V BSVI APÉ AUTO 501 D+3 CNG	Piaggio spare parts (POP)
CM293911	ENG. 230 4S/3V BSVI APÉ AUTO 501 D+3 LPG	Piaggio spare parts (POP)
CM293914	ENG. 230 4S/3V BSVI APÉ AUTO 501 D+5 LPG	Piaggio spare parts (POP)
CM293906	ENG. 230 4S/3V BSVI APÉ PAX CNG	Piaggio spare parts (POP)
CM293909	ENG. 230 4S/3V BSVI APÉ PAX CNG MBODY	Piaggio spare parts (POP)
CM293905	ENG. 230 4S/3V BSVI APÉ PAX LPG	Piaggio spare parts (POP)
CM293908	ENG. 230 4S/3V BSVI APÉ PAX LPG MBODY	Piaggio spare parts (POP)
CM293923	ENG. 230 4S/3V BSVI APÉ PAX LPG MBODY MF	Piaggio spare parts (POP)
CM293919	ENG. 230 4S/3V BSVI APÉ PAX LPG MF 9.5	Piaggio spare parts (POP)
CM293904	ENG. 230 4S/3V BSVI APÉ PAX PETROL	Piaggio spare parts (POP)
CM293907	ENG. 230 4S/3V BSVI APÉ PAX PETROL MBODY	Piaggio spare parts (POP)
CM300902	ENG. 300 4T/2V BSVI APÉ AUTO 501 D+3 LPG	Piaggio spare parts (POP)
CM300906	ENG. 300 4T/2V BSVI APÉ AUTO 501 D+5 CNG	Piaggio spare parts (POP)
CM300905	ENG. 300 4T/2V BSVI APÉ AUTO 501 D+5 LPG	Piaggio spare parts (POP)
CM300909	ENG. 300 4T/2V BSVI APÉ CARGO CNG	Piaggio spare parts (POP)
CM300907	ENG. 300 4T/2V BSVI APÉ CARGO PET	Piaggio spare parts (POP)
CM168813	ENG.200 4S/3V BSIII APÉ PAX EXPO PET '16	Piaggio spare parts (POP)
CM283918	ENG.200 4S/3V BSIII APÉ PAX LPG EXP	Piaggio spare parts (POP)
CM283917	ENG.200 4S/3V BSIII APÉ PAX PET EXP	Piaggio spare parts (POP)
CM283903	ENG.200 4S/3V BSIV APÉ PAX CNG	Piaggio spare parts (POP)
CM283910	ENG.200 4S/3V BSIV APÉ PAX CNG	Piaggio spare parts (POP)
CM283916	ENG.200 4S/3V BSIV APÉ PAX CNG DLX	Piaggio spare parts (POP)
CM283902	ENG.200 4S/3V BSIV APÉ PAX LPG	Piaggio spare parts (POP)
CM283909	ENG.200 4S/3V BSIV APÉ PAX LPG	Piaggio spare parts (POP)
CM283915	ENG.200 4S/3V BSIV APÉ PAX LPG DLX	Piaggio spare parts (POP)
CM283914	ENG.200 4S/3V BSIV APÉ PAX PET DLX	Piaggio spare parts (POP)
CM283901	ENG.200 4S/3V BSIV APÉ PAX PETROL	Piaggio spare parts (POP)
CM283908	ENG.200 4S/3V BSIV APÉ PAX PETROL	Piaggio spare parts (POP)
CM283925	ENG.200 4S/3V E2 APÉ PAX LPG LAM	Piaggio spare parts (POP)
CM283924	ENG.200 4S/3V E2 APÉ PAX PETROL LAM	Piaggio spare parts (POP)
CM283911	ENG.200 4S/3V E4 APÉ PAX PETROL	Piaggio spare parts (POP)
CM283904	ENG.200 4S/3V E4 APÉ PAX PETROL EUR	Piaggio spare parts (POP)
CM283923	ENG.200 4S/3V E4 APÉ PAX PETROL EUROPE	Piaggio spare parts (POP)
CM293938	ENG.230 3V BSIV APÉ CITY PLUS PET EXP	Piaggio spare parts (POP)
KIT95105R	ENG.OIL SEAL SET APECITY-STEP-2&230CC AF	Piaggio spare parts (POP)
SM26240061	Engaging Lever Assy-Final	Piaggio spare parts (POP)
L6410120	ENGIN SUP. THRUST LOW	Piaggio spare parts (POP)
567573R	ENGINE COMP LAMP ASSLY W/O BULB	Piaggio spare parts (POP)
B006392	ENGINE (510)	Piaggio spare parts (POP)
B003224	ENGINE 15 LD 441	Piaggio spare parts (POP)
CM300901	ENGINE 300 4S/2V H2O BSVI PETROL	Piaggio spare parts (POP)
658475	ENGINE 501 CALEX	Piaggio spare parts (POP)
646092	ENGINE 601 HANDLE BAR	Piaggio spare parts (POP)
L7330342	ENGINE ANCHOR FITTING	Piaggio spare parts (POP)

L5500065	ENGINE ANCHORING BRACKET	Piaggio spare parts (POP)
6A001429	Engine Assembly GL599cc DSL BS6 D+5	Piaggio spare parts (POP)
6A001163	ENGINE ASSLY. GL599CC DSL BS6 CITY PLUS	Piaggio spare parts (POP)
6A000056	ENGINE ASSY APE 501 BSVI DIESEL	Piaggio spare parts (POP)
020864Y	ENGINE BRACKET	Piaggio spare parts (POP)
B001635CED	ENGINE COMP DOOR ASSLY (APE CITY)- CED	Piaggio spare parts (POP)
B075562	ENGINE COMP DOOR ASSLY (CNG/LPG)	Piaggio spare parts (POP)
B075562ED	ENGINE COMP DOOR ASSLY (CNG/LPG)	Piaggio spare parts (POP)
B002210	ENGINE COMP DOOR ASSLY CITY (CNG/LPG)	Piaggio spare parts (POP)
B001635	ENGINE COMP DOOR ASSLY CITY (PTL/DSL)	Piaggio spare parts (POP)
B075724ED	ENGINE COMP DOOR ASSLY -PETROL	Piaggio spare parts (POP)
B041746ED	ENGINE COMP. DOOR ASSLY (EURO CITY)-CED	Piaggio spare parts (POP)
567573	ENGINE COMPARTMENT LAMP ASSLY W/O BULB	Piaggio spare parts (POP)
567572	ENGINE COMPARTMENT LAMP ASSLY WITH BULB	Piaggio spare parts (POP)
B074491	ENGINE COMPARTMENT LAMP WITH PIGTAIL(UP)	Piaggio spare parts (POP)
B077252	ENGINE COOLING SYSTEM	Piaggio spare parts (POP)
B006556	ENGINE COOLING SYSTEM (510)- SM AUTO	Piaggio spare parts (POP)
B074357	ENGINE COOLING SYSTEM (650CC)- SM AUTO	Piaggio spare parts (POP)
569182	ENGINE COVER (501_DIESEL)	Piaggio spare parts (POP)
B006963	ENGINE COVER APECITY	Piaggio spare parts (POP)
568176	ENGINE COVER MTG PLATE ASSLY SIDE	Piaggio spare parts (POP)
B002495	ENGINE COVER STRAP 1	Piaggio spare parts (POP)
B002491	ENGINE COVER STRAP 2	Piaggio spare parts (POP)
B002972	ENGINE DOOR ASSLY (CED)	Piaggio spare parts (POP)
E400106100	ENGINE FEET	Piaggio spare parts (POP)
E40020615	ENGINE FOOT	Piaggio spare parts (POP)
6A000611	ENGINE G 435 A BS IV APE CITY PLUS	Piaggio spare parts (POP)
KIT95104R	Engine Gasket Set Ape'city 230 CC AF	Piaggio spare parts (POP)
KIT96028R	Engine Gasket Set Ape'city BS3/4 Step-2	Piaggio spare parts (POP)
1A010208	ENGINE GEAR	Piaggio spare parts (POP)
1A015620	ENGINE GEAR	Piaggio spare parts (POP)
127759019R	ENGINE GEAR	Piaggio spare parts (POP)
B015862	ENGINE GEAR	Piaggio spare parts (POP)
1A007564	ENGINE GEAR	Piaggio spare parts (POP)
1A008668R	ENGINE GEAR	Piaggio spare parts (POP)
127710001	ENGINE GEAR	Piaggio spare parts (POP)
127751017	ENGINE GEAR	Piaggio spare parts (POP)
127759019	ENGINE GEAR (MONTANO)	Piaggio spare parts (POP)
127303511	ENGINE GEAR (VE)	Piaggio spare parts (POP)
920032	Engine gear assly(1610400601)	Piaggio spare parts (POP)
1F000754	ENGINE GEAR ASSY Z=23	Piaggio spare parts (POP)
1F000841	ENGINE GEAR ASSY Z=28	Piaggio spare parts (POP)
920709	ENGINE GEAR OIL SEAL PRESSING FIXTURE	Piaggio spare parts (POP)
1A017165	ENGINE GEAR WITH BUSH	Piaggio spare parts (POP)
1A017162	ENGINE GEAR WITH BUSH	Piaggio spare parts (POP)
990001202	Engine Gear Without Helical Teeth	Piaggio spare parts (POP)
A2913001	ENGINE GL400 AG CNG BSIII EXT MTG	Piaggio spare parts (POP)

A2912001	ENGINE GL400 AG LPG BSIII EXT MTG	Piaggio spare parts (POP)
A2911001	ENGINE GL400 BSII AG CNG/LPG	Piaggio spare parts (POP)
A1911003	ENGINE GL400 BSII DSL EXT MTG	Piaggio spare parts (POP)
A1911001	ENGINE GL400 BSII DSL INT MTG	Piaggio spare parts (POP)
A1916001	ENGINE GL400 BSIII APE CITY DSL	Piaggio spare parts (POP)
B078285	ENGINE GL400 WG CNG FOR BSIV VEHICLE	Piaggio spare parts (POP)
B077171	ENGINE GL435 _ SPL _ FOR APE CLASSIC EUR4	Piaggio spare parts (POP)
A1911002	ENGINE GL435 BSIII DSL EXT MTG	Piaggio spare parts (POP)
B079164	ENGINE GL435 BSIV DSL 501 PASS / CARGO	Piaggio spare parts (POP)
B076742	ENGINE GL435 BSIV DSL 501 PASSENGER	Piaggio spare parts (POP)
B079045	ENGINE GL435 BSIV DSL AUTO+	Piaggio spare parts (POP)
B076518	ENGINE GL435 BSIV DSL EXT MTG 501 COMM	Piaggio spare parts (POP)
B079163	ENGINE GL435 BSIV DSL EXT MTG- APE CITY	Piaggio spare parts (POP)
6A000461	ENGINE GL435 _ SPL _ FOR APE CLASSIC E4	Piaggio spare parts (POP)
641441	ENGINE HARNESS	Piaggio spare parts (POP)
1D001383	ENGINE HARNESS BNA	Piaggio spare parts (POP)
B023622	ENGINE HARNESS BNA	Piaggio spare parts (POP)
B025687	ENGINE HARNESS BNA BSIII	Piaggio spare parts (POP)
LG7968211	ENGINE IDENTIFICATION LA	Piaggio spare parts (POP)
KD7968211	ENGINE IDENTIFICATION LABLE	Piaggio spare parts (POP)
6A000281	Engine inlet hose	Piaggio spare parts (POP)
B002556	ENGINE INSPECTION DOOR (CED)	Piaggio spare parts (POP)
B001186ED	ENGINE INSPECTION DOOR 3W BSIII - CED	Piaggio spare parts (POP)
B001186	ENGINE INSPECTION DOOR 501	Piaggio spare parts (POP)
B076022ED	ENGINE INSPECTION DOOR 501 BSIII/IV CED	Piaggio spare parts (POP)
660207	ENGINE INSPECTION DOOR 501 CNG/LPG	Piaggio spare parts (POP)
660207ED	ENGINE INSPECTION DOOR 501 CNG/LPG-SPD	Piaggio spare parts (POP)
643936	ENGINE INSPECTION DOOR 501(VE)	Piaggio spare parts (POP)
662406	ENGINE INSPECTION DOOR 601	Piaggio spare parts (POP)
B075186ED	ENGINE INSPECTION DOOR PAX CARGO-ED	Piaggio spare parts (POP)
662406ED	ENGINE INSPECTION DOOR-601(CED)	Piaggio spare parts (POP)
LG9101314	ENGINE LABEL PLATE	Piaggio spare parts (POP)
B006696	ENGINE LGA 280 OHC APE CITY CNG	Piaggio spare parts (POP)
B003596	ENGINE LGA 280 OHC APE CITY PETROL	Piaggio spare parts (POP)
E87020632	ENGINE LIFTING	Piaggio spare parts (POP)
1A012430	Engine lifting bracket	Piaggio spare parts (POP)
L8900586	ENGINE MOUNTING	Piaggio spare parts (POP)
970300527	ENGINE MOUNTING STAND	Piaggio spare parts (POP)
T900309	ENGINE MTG STAND	Piaggio spare parts (POP)
E87015524	ENGINE NAME PLATE	Piaggio spare parts (POP)
KIT95009	ENGINE OIL SEAL SET	Piaggio spare parts (POP)
KIT95009R	ENGINE OIL SEAL SET	Piaggio spare parts (POP)
B041385	ENGINE OUTLET HOSE	Piaggio spare parts (POP)
B074105	ENGINE OUTLET HOSE	Piaggio spare parts (POP)
B077246	ENGINE OUTLET HOSE	Piaggio spare parts (POP)
B024761	ENGINE OUTLET HOSE	Piaggio spare parts (POP)
970301685	ENGINE OVER HAUL KIT LARGE SIZE BAG	Piaggio spare parts (POP)

970301684	ENGINE OVER HAUL KIT MEDIUM SIZE BAG	Piaggio spare parts (POP)
970301683	ENGINE OVER HAUL KIT SMALL SIZE BAG	Piaggio spare parts (POP)
6A001377ED	ENGINE REAR CROSS MEMBER BOLTED CARGO-ED	Piaggio spare parts (POP)
6A001682	ENGINE REAR SUPPORT BRACKET ASSEMBLY	Piaggio spare parts (POP)
6A000696	ENGINE REAR SUPPORTING BKT ASM	Piaggio spare parts (POP)
6A000696ED	ENGINE REAR SUPPORTING BKT ASM	Piaggio spare parts (POP)
127171011	ENGINE SIDE COVER	Piaggio spare parts (POP)
1F0007564	ENGINE SIDE COVER	Piaggio spare parts (POP)
1A013353	ENGINE SIDE COVER	Piaggio spare parts (POP)
1A017366	Engine side cover	Piaggio spare parts (POP)
127171310	ENGINE SIDE COVER (EXT.MTG)	Piaggio spare parts (POP)
127171310P	ENGINE SIDE COVER (EXT.MTG)	Piaggio spare parts (POP)
SP1A017431	ENGINE SIDE COVER WITH I.P._SPD	Piaggio spare parts (POP)
01E130004	ENGINE SPEED SENSOR	Piaggio spare parts (POP)
888501	ENGINE SPEED SENSOR	Piaggio spare parts (POP)
B042055	ENGINE STOP CABLE	Piaggio spare parts (POP)
B041026	ENGINE STOP CABLE	Piaggio spare parts (POP)
B003177	ENGINE STOP CABLE	Piaggio spare parts (POP)
652379	ENGINE STOP CABLE INNER - 601 CARGO	Piaggio spare parts (POP)
652380	ENGINE STOP CABLE INNER - 601 PASS	Piaggio spare parts (POP)
660350	ENGINE STOP CONTROL CABLE	Piaggio spare parts (POP)
604509	ENGINE STOP CONTROL CABLE INNER	Piaggio spare parts (POP)
643704R	TAIL LAMP ASSLY LH	Piaggio spare parts (POP)
660349	ENGINE STOP CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
644489	ENGINE STOP CONTROL UNIT, ASSY	Piaggio spare parts (POP)
L6410123	ENGINE SUP.THRUST SUP	Piaggio spare parts (POP)
B041830	ENGINE SUPPORT ARM ASSLY REAR	Piaggio spare parts (POP)
B002388	ENGINE SUPPORT ARM ASSLY REAR	Piaggio spare parts (POP)
B003371	ENGINE SUPPORT ARM ASSLY REAR	Piaggio spare parts (POP)
B008898	ENGINE SUPPORT BKT ASSLY REAR	Piaggio spare parts (POP)
1D001972	Engine Wiring Harness	Piaggio spare parts (POP)
E1006200064	EPCYCLIC GEAR TRAIN	Piaggio spare parts (POP)
1006200137	EPICYCLODIAL GEAR TRAIN	Piaggio spare parts (POP)
1006200332	EPICYCLOIDAL GEAR TRAIN	Piaggio spare parts (POP)
F002G70318	EPICYCLOIDAL GEAR TRAIN ASSEMBLY	Piaggio spare parts (POP)
KD1111267	Equalizer shaft	Piaggio spare parts (POP)
SST94166	ervice Wall Charts Set – English	Piaggio spare parts (POP)
6A001498	EV POWER PACK ASSLY. KIT	Piaggio spare parts (POP)
B018718	EXAG. SOCKET CYLIND.HEAD SCREW M5X14	Piaggio spare parts (POP)
B018854	EXAGONAL HEAD FLANGED SCREW M6x90	Piaggio spare parts (POP)
1A012406	EXAGONAL HEAD FLANGED SCREW M6x95	Piaggio spare parts (POP)
L9543113	EXAUST PIPE HEAD SIL.I.P.	Piaggio spare parts (POP)
1A012411	EXAUST VALVE	Piaggio spare parts (POP)
E5208576045	EXCESS FUEL BOLT	Piaggio spare parts (POP)
E400101102	EXCESS FUEL DEVICE ASSY	Piaggio spare parts (POP)
F002G20098	EXCIATATION WINDING	Piaggio spare parts (POP)
F002G20215	EXCITATION WINDING	Piaggio spare parts (POP)

E40008380	EXH VALVE	Piaggio spare parts (POP)
LG8000308	EXHA.VALV.SEAT LGA280 AR 20 D	Piaggio spare parts (POP)
E87010814	EXHAUST	Piaggio spare parts (POP)
A01A210027	EXHAUST AFTER TREATMENT SYSTEM	Piaggio spare parts (POP)
A01A210011	EXHAUST AFTER TREATMENT SYSTEM	Piaggio spare parts (POP)
E07517705	Exhaust bend	Piaggio spare parts (POP)
B009614	EXHAUST CLAMP	Piaggio spare parts (POP)
B075572	EXHAUST GASKETR (MANIFOLD END)	Piaggio spare parts (POP)
ESP650DCH013	EXHAUST MANIFOLD	Piaggio spare parts (POP)
A01M070002	EXHAUST MANIFOLD	Piaggio spare parts (POP)
E87011788A	EXHAUST MANIFOLD	Piaggio spare parts (POP)
E07510836	Exhaust manifold for EGR	Piaggio spare parts (POP)
B010988	EXHAUST MANIFOLD WITH I.P.	Piaggio spare parts (POP)
E50007715P	EXHAUST MUFFLER	Piaggio spare parts (POP)
E50007715	EXHAUST MUFFLER	Piaggio spare parts (POP)
E40017748	EXHAUST MUFFLER (WITH CAT CON) PVPL	Piaggio spare parts (POP)
E43527715	EXHAUST MUFFLER ASSEMBLY	Piaggio spare parts (POP)
E40017723	EXHAUST MUFFLER ASSY. (APE CITY)	Piaggio spare parts (POP)
L4775570	EXHAUST PACKING (MUFFLER SIDE)	Piaggio spare parts (POP)
L4775569	EXHAUST PAKING (HEAD SIDE)	Piaggio spare parts (POP)
B009075	EXHAUST PIPE ASSY MINITRUK (441)	Piaggio spare parts (POP)
L9543141	EXHAUST PIPE WITH I.P.WITH CATCON	Piaggio spare parts (POP)
LG4501122	EXHAUST PORT GASKET	Piaggio spare parts (POP)
827018	exhaust stud	Piaggio spare parts (POP)
ED43772	EXHAUST VALVE GUIDE	Piaggio spare parts (POP)
E43522233	EXHAUST VALVE GUIDE	Piaggio spare parts (POP)
B015334	EXHAUST VALVE GUIDE	Piaggio spare parts (POP)
E40002255	EXHAUST VALVE GUIDE	Piaggio spare parts (POP)
LG9685169	EXHAUST VALVE LGA 280	Piaggio spare parts (POP)
KD9685175	EXHAUST VALVE MECH.TPT 15LD	Piaggio spare parts (POP)
B017438	EXHAUST VALVE Ø22	Piaggio spare parts (POP)
E5508000118	EXHAUST VALVE SEAT	Piaggio spare parts (POP)
E283800037	EXHAUST VALVE SEAT	Piaggio spare parts (POP)
B017336	EXHAUST VALVE SEAT	Piaggio spare parts (POP)
LG8000337	EXHAUST VALVE SEAT	Piaggio spare parts (POP)
E40007754	EXHAUSTMUFFLERASSEMBLYFORAGENGINE	Piaggio spare parts (POP)
E285899017	EXPANSION PLUG	Piaggio spare parts (POP)
659853	EXPANSION PLUG	Piaggio spare parts (POP)
1A017309	Expansion tank	Piaggio spare parts (POP)
1A019840	EXPANSION TANK	Piaggio spare parts (POP)
B023637	EXPANSION TANK PIPE	Piaggio spare parts (POP)
6414	EXT CICLIP DIA 14	Piaggio spare parts (POP)
6411	EXT CIRCLIP DIA 11	Piaggio spare parts (POP)
6450	EXT CIRCLIP DIA 48	Piaggio spare parts (POP)
6408	EXT CIRCLIP DIA 8	Piaggio spare parts (POP)
KD1240004	EXT. CIRCLIP D10/9.6 1.0 THK	Piaggio spare parts (POP)
KD1240002	EXT. CIRCLIP D8/7.6 0.8 THK	Piaggio spare parts (POP)

KD5201329	EXT.ACCLEVER REM.CONT.15LD441	Piaggio spare parts (POP)
KD5201331	EXT.STOP LEVER COMPL.15LD441	Piaggio spare parts (POP)
KD52013298	EXTACCLEVER REMCONT15	Piaggio spare parts (POP)
6B003152	EXTENDER SEAT COVER ASSLY	Piaggio spare parts (POP)
L1157347	EXTERNAL ALTERNATOR FOR	Piaggio spare parts (POP)
L2920190	EXTERNAL COWLING	Piaggio spare parts (POP)
616559	EXTERNAL GRILL CARGO	Piaggio spare parts (POP)
643774	EXTERNAL GRILL CARGO (WIRE MESH)	Piaggio spare parts (POP)
B011489	EXTERNAL IRETAINING RING	Piaggio spare parts (POP)
616557	EXTERNAL RADIATOR CONVEYOR	Piaggio spare parts (POP)
L1175083	EXTERNAL RETAINING RING	Piaggio spare parts (POP)
L1175080	EXTERNAL RETAINING RING	Piaggio spare parts (POP)
L1175081	EXTERNAL RETAINING RING	Piaggio spare parts (POP)
L1175082	EXTERNAL RETAINING RING	Piaggio spare parts (POP)
L7750121	EXTERNAL ROTOR	Piaggio spare parts (POP)
B011120	EXTERNAL SELECTING LEVER ASSEMBLY	Piaggio spare parts (POP)
B041048	EXTERNAL SELECTING LEVER ASSEMBLY	Piaggio spare parts (POP)
940075	EXTERNAL SELECTING LEVER ASSEMBLY_P-600(Piaggio spare parts (POP)
E500520214	EXTERNAL STOP LEVER	Piaggio spare parts (POP)
B009101	EXTINGUISHER BKT ASSLY COMPLETE	Piaggio spare parts (POP)
E07506504	Extra fuel device assly. Consisting of s	Piaggio spare parts (POP)
ED42261	EXTRA FUEL DEVICE ASSY	Piaggio spare parts (POP)
020713Y	EXTRACTOR	Piaggio spare parts (POP)
920020	EYE HOLE BUSH 0.50LCA	Piaggio spare parts (POP)
920021	EYE HOLE PLASTIC BUSH	Piaggio spare parts (POP)
920023	EYE HOLE SLEEVE 0.5T LCA	Piaggio spare parts (POP)
ED11989	F M A (INEL)	Piaggio spare parts (POP)
F002G20945	F002G20945E	Piaggio spare parts (POP)
L9718288	FAN	Piaggio spare parts (POP)
L9718299	FAN	Piaggio spare parts (POP)
940030	FAN , MOTOR & SHROUD ASSLY	Piaggio spare parts (POP)
940097	FAN Ape'	Piaggio spare parts (POP)
B042737	FAN CONTROL SWITCH	Piaggio spare parts (POP)
1A006741	FAN COVER	Piaggio spare parts (POP)
1A010001	FAN COVER	Piaggio spare parts (POP)
B017377	FAN COVER	Piaggio spare parts (POP)
1A006742	FAN COVER SUPPORT	Piaggio spare parts (POP)
B015931	FAN COVER SUPPORT	Piaggio spare parts (POP)
925670	FAN MOTOR	Piaggio spare parts (POP)
6A001180	FAN MOTOR SHROUD ASSEMBLY	Piaggio spare parts (POP)
6A000823	FAN MOTOR WITH SHROUD ASSLY	Piaggio spare parts (POP)
L2569689	FAN VOLUTE	Piaggio spare parts (POP)
L2610084	FAN VOLUTE COVER	Piaggio spare parts (POP)
124121015	FARE METER PINION	Piaggio spare parts (POP)
940117	Fare Meter without Filip	Piaggio spare parts (POP)
1A000817	FAREMETER	Piaggio spare parts (POP)
568107	FAREMETER CABLE ASSLY	Piaggio spare parts (POP)

1A014907	FAREMETER COVER	Piaggio spare parts (POP)
124102019	FAREMETER GEAR	Piaggio spare parts (POP)
124130016	FAREMETER HSG. ASSLY. (MODIFIED)	Piaggio spare parts (POP)
124140011	FAREMETER HSG. ASSLY. COMP. (MODIFIED)	Piaggio spare parts (POP)
B002334	FAREMETER MTG BKT ASSLY	Piaggio spare parts (POP)
644956	FAREMETER MTG BKT-RHD SOFT TOP	Piaggio spare parts (POP)
KD3617197	FASCETTA/CLAMP F	Piaggio spare parts (POP)
568682	FASTENER (DRIVER SEAT LOCKING PIN)	Piaggio spare parts (POP)
SM26246177	Fastner assy kit	Piaggio spare parts (POP)
E87015139	FDC LEVER	Piaggio spare parts (POP)
E870051124	FDC LEVER ASSY	Piaggio spare parts (POP)
E50006808	FEED PUMP	Piaggio spare parts (POP)
E10G120009	FEED PUMP	Piaggio spare parts (POP)
ED43399	Feed pump	Piaggio spare parts (POP)
LG6581538	FEED PUMP	Piaggio spare parts (POP)
6D000874	FEED PUMP & RADIATOR FAN CLPR SENSOR	Piaggio spare parts (POP)
KD7200735	FEED PUMP ROD	Piaggio spare parts (POP)
E40017130	FEED PUMP TO FILTER	Piaggio spare parts (POP)
L6585139	FEED PUMP WITH FILTER	Piaggio spare parts (POP)
KD6585139	FEED PUMP WITH FILTER	Piaggio spare parts (POP)
E40006819	FEEDPUMP	Piaggio spare parts (POP)
894285	Felpe cotton Full Zip	Piaggio spare parts (POP)
B003502	FEMALE BUTTON ASSLY (PLASTIC)	Piaggio spare parts (POP)
6A000485	FERRULE	Piaggio spare parts (POP)
661905	FERRULE (VANAZ P.NO.K-0109-02-020)	Piaggio spare parts (POP)
6A000484	FERRULE NUT M12X1	Piaggio spare parts (POP)
925757	FERRULE(K-0113-300)	Piaggio spare parts (POP)
925726	FERRULE(K-0808-02-040)	Piaggio spare parts (POP)
127912013	FIBRE WASHER - OIL DEFLECTOR	Piaggio spare parts (POP)
SM26240098	Field Coil Assy	Piaggio spare parts (POP)
L4990240	FIFTH SPEED GEAR	Piaggio spare parts (POP)
L4990233	FIFTH SPEED GEAR	Piaggio spare parts (POP)
970300552	Fifting tool for pin reverse assly	Piaggio spare parts (POP)
6A000512	FILLER CAP	Piaggio spare parts (POP)
623673	FILLER CAP	Piaggio spare parts (POP)
B006286	FILLER CONNECTOR	Piaggio spare parts (POP)
929924	Filler Connector with cap FL-0102-IV	Piaggio spare parts (POP)
970300584	FILLER GAUGE SET	Piaggio spare parts (POP)
B077642	Filler union Kit	Piaggio spare parts (POP)
6A001436	FILLER VALVE BRACKET	Piaggio spare parts (POP)
604902	FILLER VALVE COVER	Piaggio spare parts (POP)
B075125	FILLER VALVE MTG BKT	Piaggio spare parts (POP)
B078854	FILLER VALVE MTG BKT	Piaggio spare parts (POP)
643839	FILLER VALVE WITH REFUELLING UNIT(VANAZ	Piaggio spare parts (POP)
6A000601	FILLING NOZZLE - NZS	Piaggio spare parts (POP)
E50006810	FILTER	Piaggio spare parts (POP)
1D003477	FILTER	Piaggio spare parts (POP)

932269	Filter (Solenoid Valve (Gas)K-0440-03)	Piaggio spare parts (POP)
E10G120012	FILTER (WITH STAR INSERT) 0.5 LTR	Piaggio spare parts (POP)
940206	Filter Assembly (F-0208-I)	Piaggio spare parts (POP)
F002H20108	Filter Assy	Piaggio spare parts (POP)
F002H25009	Filter Assy 501 BSIV	Piaggio spare parts (POP)
B004097	FILTER ASSY, FUEL	Piaggio spare parts (POP)
E40008722	FILTER CARBURATOR	Piaggio spare parts (POP)
6A001039	FILTER CARTRIDGE	Piaggio spare parts (POP)
925743	FILTER CONNECTOR WITH CAP(FL-0102)	Piaggio spare parts (POP)
E07518638	filter cover	Piaggio spare parts (POP)
940072	Filter cover Gasket-Paxx UG	Piaggio spare parts (POP)
920086	Filter Cover-BSIII	Piaggio spare parts (POP)
E500217519	FILTER ELEMENT	Piaggio spare parts (POP)
F002H22283	Filter Element	Piaggio spare parts (POP)
940073	Filter Element- Ape' city UG (CNG/LPG)	Piaggio spare parts (POP)
632428	FILTER ELEMENT ASSLY (ENGINETECH AIR FI	Piaggio spare parts (POP)
932279	Filter Element Assy for Ape Paxx	Piaggio spare parts (POP)
F002H22471	FILTER ELEMENT BSIV	Piaggio spare parts (POP)
932203	Filter Element for 870 Air Filter	Piaggio spare parts (POP)
643705R	TAIL LAMP ASSLY RH	Piaggio spare parts (POP)
920102P	Filter Element with Cyclonic tube	Piaggio spare parts (POP)
940207	Filter Element with O Ring (F-0208-I-01)	Piaggio spare parts (POP)
925737	FILTER ELEMENT(K-0301-12-050)	Piaggio spare parts (POP)
E07518637	Filter housing	Piaggio spare parts (POP)
AP8220370	Filter housing rubber	Piaggio spare parts (POP)
920085	Filter Housing-BSIII	Piaggio spare parts (POP)
ED43413	FILTER KIT	Piaggio spare parts (POP)
882461	FILTER OIL	Piaggio spare parts (POP)
B075638	FILTER SOLENOID VALVE (CNG)	Piaggio spare parts (POP)
932250	Filter Solenoid Valve (Gas)(K-0102-19-II	Piaggio spare parts (POP)
B075636	FILTER SOLENOID VALVE (LPG)	Piaggio spare parts (POP)
B075632	FILTER SOLENOID VALVE WITH MTG. BRACKET	Piaggio spare parts (POP)
E50008711	FILTER SPIN-ON TYPE	Piaggio spare parts (POP)
925773	FILTER SUB ASSLY.(R-8104-07)	Piaggio spare parts (POP)
F002H20333	Filter top cover (ape mini)	Piaggio spare parts (POP)
925751	FILTER(K-0102-02-380)	Piaggio spare parts (POP)
932243	FILTER(K-0102-02-I-380)Paxx200	Piaggio spare parts (POP)
925753	FILTER(K-01-02-380)	Piaggio spare parts (POP)
LG5976004	FILTERING ELEMENT	Piaggio spare parts (POP)
896237	Filtering element	Piaggio spare parts (POP)
858930	Filtering element	Piaggio spare parts (POP)
614945	FILTERING ELEMENT WITH C TUBE	Piaggio spare parts (POP)
KD7980095	FILTERING MASS SUPPORT	Piaggio spare parts (POP)
925731	FILTTER SUB ASSLY(R-8101-07)	Piaggio spare parts (POP)
B002088	FINAL DRIVE GEAR	Piaggio spare parts (POP)
B003988	FINAL DRIVE GEAR	Piaggio spare parts (POP)
B003989	FINAL DRIVE PINION	Piaggio spare parts (POP)

E10G120070	FIP	Piaggio spare parts (POP)
F002F10001	FIP ASSLY BS-1	Piaggio spare parts (POP)
F002F10006	FIP ASSLY.	Piaggio spare parts (POP)
E10M120001	FIP CASING	Piaggio spare parts (POP)
ED31943	FIP CASING	Piaggio spare parts (POP)
F002B10645	FIP element-BSII New	Piaggio spare parts (POP)
ESP650DFP024	FIP LEAK OFF PIPE	Piaggio spare parts (POP)
ESP650DFP030	FIPE ASM To FIP INLET-P-700	Piaggio spare parts (POP)
643655	FIRE EXTINGUISHER	Piaggio spare parts (POP)
643655R	FIRE EXTINGUISHER	Piaggio spare parts (POP)
B073322	FIRE EXTINGUISHER MTG. BKT	Piaggio spare parts (POP)
643532	FIRE EXTINGUISHER MTG. BKT	Piaggio spare parts (POP)
B041418	FIRE EXTINGUISHER MTG. BKT S/A	Piaggio spare parts (POP)
569193	FIRST AID KIT	Piaggio spare parts (POP)
889608	FIRST COMPRESSION RING	Piaggio spare parts (POP)
L4990197	FIRST SPEED GEAR	Piaggio spare parts (POP)
L4990234	FIRST SPEED GEAR	Piaggio spare parts (POP)
B041783	FIRST STAGE REDUCTION UNIT	Piaggio spare parts (POP)
B024131	FIRST STAGE REDUCTION UNIT	Piaggio spare parts (POP)
020360Y	FITTING GEARBOX BEARING 52X55mm ADAPTOR	Piaggio spare parts (POP)
970300510	FITTING PUNCH CLUSTER GEAR NRB REMOVAL	Piaggio spare parts (POP)
L7330421	FITTING RING (TWO WAY 120°)	Piaggio spare parts (POP)
D9004408001	FITTING, GREASE	Piaggio spare parts (POP)
163661	FIXED GLASS FOR THE WINDOW	Piaggio spare parts (POP)
1A006899	Fixed pad	Piaggio spare parts (POP)
1A012432	Fixed pad	Piaggio spare parts (POP)
SM26256342	Fixing Bkt Assy	Piaggio spare parts (POP)
SM26257028	Fixing Bolt	Piaggio spare parts (POP)
B074983	FIXING PIN,LSPV CONTROL SPRING	Piaggio spare parts (POP)
KD6275187	FIXING PLATE FOR STATOR WIRE	Piaggio spare parts (POP)
970300546	Fixture for ball & circlip pressing tool	Piaggio spare parts (POP)
SST94202	FIXTURE RIVETTING TAPER PIN OF G/SHAFTER	Piaggio spare parts (POP)
19121330	FIXTURE-ASSLY OF LOWER &FIFTH WHLS.STG.	Piaggio spare parts (POP)
19120842	FIXTURE-DIS-ASSLY OF UPPER BRG.LOWER SEA	Piaggio spare parts (POP)
19120004	FIXTURE-FIFTH WHL.BRG.RACE DIS-ASSLY	Piaggio spare parts (POP)
922205	FIXTURE-RIVETTING TAPER PIN OF G/SHIFTER	Piaggio spare parts (POP)
B017633	FLAGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
L1971384	FLAME ARRESTER BUSH	Piaggio spare parts (POP)
L4380010	FLAME ARRESTER BUSH SEAL	Piaggio spare parts (POP)
970300520	FLAME ARRESTOR BUSH EXTRACTOR	Piaggio spare parts (POP)
E2923895009	Flange	Piaggio spare parts (POP)
6A000071	FLANGE	Piaggio spare parts (POP)
E50025503	Flange	Piaggio spare parts (POP)
E500379026	FLANGE	Piaggio spare parts (POP)
E5303790040	FLANGE	Piaggio spare parts (POP)
ED21235	FLANGE	Piaggio spare parts (POP)
E40008873	FLANGE	Piaggio spare parts (POP)

E50008650	FLANGE AIR CLEANER	Piaggio spare parts (POP)
E50018633	FLANGE AIR CLEANER	Piaggio spare parts (POP)
569381	FLANGE ASSLY - AIR INTAKE	Piaggio spare parts (POP)
E40001816	FLANGE ASSLY.L O FILTER	Piaggio spare parts (POP)
E40020133	FLANGE BOLT	Piaggio spare parts (POP)
E07502801	Flange bolt for silencer mounting bracke	Piaggio spare parts (POP)
6A001141	FLANGE BOLT M10 X 111	Piaggio spare parts (POP)
B074999	FLANGE BOLT M10X55	Piaggio spare parts (POP)
B008676	FLANGE BOLT M10X70 CL 8.8 A/F 13.00	Piaggio spare parts (POP)
6A001132	FLANGE BOLT M8X75	Piaggio spare parts (POP)
ED43605	FLANGE CARBURATOR ASSEMBLY	Piaggio spare parts (POP)
B078223	FLANGE CLEVELOC NUT, M8X1.25-6H	Piaggio spare parts (POP)
E43508875	FLANGE EXHAUST MACHINED	Piaggio spare parts (POP)
E10M070002	FLANGE EXHAUST MACHINED	Piaggio spare parts (POP)
E10T070001	FLANGE FOR AIR FILTER	Piaggio spare parts (POP)
LG3855221	FLANGE FOR OIL FILTER	Piaggio spare parts (POP)
E87000197	FLANGE HEX BOLT	Piaggio spare parts (POP)
E87000187	FLANGE HEX BOLT	Piaggio spare parts (POP)
E87000198A	FLANGE HEX BOLT	Piaggio spare parts (POP)
E87000194	FLANGE HEX BOLT	Piaggio spare parts (POP)
E10M120004	FLANGE INJECTOR 501 BSIV	Piaggio spare parts (POP)
E10M070001	FLANGE INTAKE MACHINED	Piaggio spare parts (POP)
E43508876	FLANGE INTAKE MACHINED	Piaggio spare parts (POP)
01B150070	Flange Nut	Piaggio spare parts (POP)
SM26131416	Flange Nut	Piaggio spare parts (POP)
LG3203101	FLANGE NUT M6	Piaggio spare parts (POP)
932251	Flange Screw (M6x10L)(K-0155-02-040)Pax	Piaggio spare parts (POP)
932255	FLANGE SCREW(K-0812-12-060)Paxx200	Piaggio spare parts (POP)
932232	FLANGE SCREW(R-8106-VI-100)Paxx200	Piaggio spare parts (POP)
611621	FLANGE-AIR FILTER	Piaggio spare parts (POP)
661301	FLANGED HEAD SCREW (M12 X 1.25 X 25L)	Piaggio spare parts (POP)
E87020116	FLANGED HEX BOLT	Piaggio spare parts (POP)
E87020102	FLANGED HEX BOLT FIP CAMSHAFT	Piaggio spare parts (POP)
414837	FLANGED HEX HEAD SCREW	Piaggio spare parts (POP)
B075965	FLANGED HEX HEAD SCREW M5 X 14	Piaggio spare parts (POP)
B075847	FLANGED HEX HEAD SCREW M5 X 20	Piaggio spare parts (POP)
1A002691	FLANGED HEX HEAD SCREW M6X20 CL10	Piaggio spare parts (POP)
B017225	FLANGED HEX HEAD SCREW M6X20 CL10	Piaggio spare parts (POP)
L3300249	FLANGED HEX NUT	Piaggio spare parts (POP)
889502	FLANGED HEX NUT STANDARD	Piaggio spare parts (POP)
1A003060	FLANGED HEX. HEAD SCREW	Piaggio spare parts (POP)
B010389	FLANGED HEX. HEAD SCREW M10X30 10.9	Piaggio spare parts (POP)
B010390	FLANGED HEX. HEAD SCREW M10X80 10.9	Piaggio spare parts (POP)
B016604	FLANGED HEX. HEAD SCREW M6X16 CL10	Piaggio spare parts (POP)
B016602	FLANGED HEX. HEAD SCREW M6X20 CL10	Piaggio spare parts (POP)
B016611	FLANGED HEX. HEAD SCREW M6X45 CL10	Piaggio spare parts (POP)
B016621	FLANGED HEX. HEAD SCREW M8X50 CL10	Piaggio spare parts (POP)

1A011057	FLANGED HEXAG. HEAD SCREW	Piaggio spare parts (POP)
B012405	FLANGED HEXAG. HEAD SCREW	Piaggio spare parts (POP)
889637	FLANGED HEXAG. HEAD SCREW	Piaggio spare parts (POP)
889497	FLANGED HEXAG. HEAD SCREW	Piaggio spare parts (POP)
889846	FLANGED HEXAG. HEAD SCREW	Piaggio spare parts (POP)
872425	FLANGED HEXAGON HEAD SCREW	Piaggio spare parts (POP)
B013529	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
655169	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1A015812	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
830061	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
829593	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1A016737	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
833722	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1A010966	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
436788	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B010747	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012026	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1F000831	flanged hexagonal head screw	Piaggio spare parts (POP)
B010725	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B011784	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
411213	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
830784	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1F000036	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012190	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1A001623	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B011030	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012258	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012257	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
1A007618	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B010921	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B011027	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B010936	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
888894	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012209	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B011182	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B012256	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
888564	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
888934	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B010378	FLANGED HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
B042802	FLANGED HEXAGONAL HEAD SCREW M6X15	Piaggio spare parts (POP)
B018853	FLANGED HEXAGONAL HEAD SCREW M6X30	Piaggio spare parts (POP)
6B002075	FLANGED HEXAGONAL HEAD SCREW M8X105	Piaggio spare parts (POP)
B042799	FLANGED HEXAGONAL HEAD SCREW M8X40	Piaggio spare parts (POP)
B042798	FLANGED HEXAGONAL HEAD SCREW M8X45	Piaggio spare parts (POP)
1F000110	FLANGED HEXAGONAL SCREW	Piaggio spare parts (POP)
B016774	FLANGED HEXAGONAL SCREW M6X25	Piaggio spare parts (POP)
B016775	FLANGED HEXAGONAL SCREW M6X50	Piaggio spare parts (POP)

889505	FLANGED NUT	Piaggio spare parts (POP)
888841	FLANGED NUT	Piaggio spare parts (POP)
872816	FLANGED NUT	Piaggio spare parts (POP)
B017143	FLANGED NUT M6 CL10	Piaggio spare parts (POP)
288245	FLANGED NUT M6 DIN-6923	Piaggio spare parts (POP)
436947	FLANGED NUT M7x1 H=8	Piaggio spare parts (POP)
B016939	FLANGED NUT M8X1.25	Piaggio spare parts (POP)
L3203105	FLANGED NUT SELFLOCKING	Piaggio spare parts (POP)
ED23592	FLANGE-LUB OIL ADAPTOR	Piaggio spare parts (POP)
925664	FLASHER RELAY	Piaggio spare parts (POP)
6D000305	FLASHER RELAY (BG LI-IN)	Piaggio spare parts (POP)
6D001111	FLASHER RELAY (BG LI-IN)	Piaggio spare parts (POP)
1E002807	FLAT BAR 850x200x12	Piaggio spare parts (POP)
6B000450	FLAT CAR ASSLY	Piaggio spare parts (POP)
B042739CED	FLAT CAR ASSLY	Piaggio spare parts (POP)
6B000630	FLAT CAR ASSLY (DTL PANELS)	Piaggio spare parts (POP)
6B000091BW	FLAT CAR ASSLY (DTL PANELS) WG 6FT_BW	Piaggio spare parts (POP)
6B000091CB	FLAT CAR ASSLY (DTL PANELS) WG 6FT_CB	Piaggio spare parts (POP)
6B000091CO	FLAT CAR ASSLY (DTL PANELS) WG 6FT_CO	Piaggio spare parts (POP)
6B000091EG	FLAT CAR ASSLY (DTL PANELS) WG 6FT_EG	Piaggio spare parts (POP)
6B000091GY	FLAT CAR ASSLY (DTL PANELS) WG 6FT_GY	Piaggio spare parts (POP)
6B000091PA	FLAT CAR ASSLY (DTL PANELS) WG 6FT_PA	Piaggio spare parts (POP)
6B000091PB	FLAT CAR ASSLY (DTL PANELS) WG 6FT_PB	Piaggio spare parts (POP)
B042516BW	FLAT CAR ASSLY 501 PU (DTL PANELS) - BW	Piaggio spare parts (POP)
B042516CB	FLAT CAR ASSLY 501 PU (DTL PANELS) - CB	Piaggio spare parts (POP)
B042516GY	FLAT CAR ASSLY 501 PU (DTL PANELS) - GY	Piaggio spare parts (POP)
B042516PA	FLAT CAR ASSLY 501 PU (DTL PANELS) - PA	Piaggio spare parts (POP)
B042516PB	FLAT CAR ASSLY 501 PU (DTL PANELS) - PB	Piaggio spare parts (POP)
B042516SY	FLAT CAR ASSLY 501 PU (DTL PANELS) - SY	Piaggio spare parts (POP)
B042516WR	FLAT CAR ASSLY 501 PU (DTL PANELS) - WR	Piaggio spare parts (POP)
B001329BG	FLAT CAR ASSLY COMP -LD BSIII BG	Piaggio spare parts (POP)
B001329BW	FLAT CAR ASSLY COMP -LD BSIII BW	Piaggio spare parts (POP)
B001329CB	FLAT CAR ASSLY COMP -LD BSIII CB	Piaggio spare parts (POP)
B001329CO	FLAT CAR ASSLY COMP -LD BSIII CO	Piaggio spare parts (POP)
B001329GY	FLAT CAR ASSLY COMP -LD BSIII GY	Piaggio spare parts (POP)
B001329SY	FLAT CAR ASSLY COMP -LD BSIII SY	Piaggio spare parts (POP)
B001329WR	FLAT CAR ASSLY COMP -LD BSIII WR	Piaggio spare parts (POP)
568704	FLAT CAR ASSLY COMPLETE	Piaggio spare parts (POP)
B042530ED	FLAT CAR ASSLY LD (DTL PANELS) ED	Piaggio spare parts (POP)
6B001733BW	FLAT CAR ASSLY LDX+ CNG(230)BSVI-BW	Piaggio spare parts (POP)
6B001733CB	FLAT CAR ASSLY LDX+ CNG(230)BSVI-CB	Piaggio spare parts (POP)
6B001733CO	FLAT CAR ASSLY LDX+ CNG(230)BSVI-CO	Piaggio spare parts (POP)
6B001733EG	FLAT CAR ASSLY LDX+ CNG(230)BSVI-EG	Piaggio spare parts (POP)
6B001733GY	FLAT CAR ASSLY LDX+ CNG(230)BSVI-GY	Piaggio spare parts (POP)
6B001733PA	FLAT CAR ASSLY LDX+ CNG(230)BSVI-PA	Piaggio spare parts (POP)
6B001733PB	FLAT CAR ASSLY LDX+ CNG(230)BSVI-PB	Piaggio spare parts (POP)
6B001733WR	FLAT CAR ASSLY LDX+ CNG(230)BSVI-WR	Piaggio spare parts (POP)

B042516ED	FLAT CAR ASSLY PICK UP (DTL PANELS) ED	Piaggio spare parts (POP)
B003589BW	FLAT CAR ASSLY PICKUP (GL435) B WHITE	Piaggio spare parts (POP)
B003589BG	FLAT CAR ASSLY PICKUP (GL435) BLR GRN	Piaggio spare parts (POP)
B003589CB	FLAT CAR ASSLY PICKUP (GL435) C BLUE	Piaggio spare parts (POP)
B003589GY	FLAT CAR ASSLY PICKUP (GL435) G YELLOW	Piaggio spare parts (POP)
B003589SY	FLAT CAR ASSLY PICKUP (GL435) S YELLOW	Piaggio spare parts (POP)
B003589WR	FLAT CAR ASSLY PICKUP (GL435) W RED	Piaggio spare parts (POP)
B079142BW	FLAT CAR ASSLY WC LD (DTL PANELS) - BW	Piaggio spare parts (POP)
B079142CB	FLAT CAR ASSLY WC LD (DTL PANELS) - CB	Piaggio spare parts (POP)
B079142CO	FLAT CAR ASSLY WC LD (DTL PANELS) - CO	Piaggio spare parts (POP)
B079142EG	FLAT CAR ASSLY WC LD (DTL PANELS) - EG	Piaggio spare parts (POP)
B079142GY	FLAT CAR ASSLY WC LD (DTL PANELS) - GY	Piaggio spare parts (POP)
B079142PA	FLAT CAR ASSLY WC LD (DTL PANELS) - PA	Piaggio spare parts (POP)
B079142PB	FLAT CAR ASSLY WC LD (DTL PANELS) - PB	Piaggio spare parts (POP)
B079147BW	FLAT CAR ASSLY WC PICK UP DTL PANELS -BW	Piaggio spare parts (POP)
B079147CB	FLAT CAR ASSLY WC PICK UP DTL PANELS -CB	Piaggio spare parts (POP)
B079147EG	FLAT CAR ASSLY WC PICK UP DTL PANELS -EG	Piaggio spare parts (POP)
B079147GY	FLAT CAR ASSLY WC PICK UP DTL PANELS -GY	Piaggio spare parts (POP)
B079147PA	FLAT CAR ASSLY WC PICK UP DTL PANELS -PA	Piaggio spare parts (POP)
B079147PB	FLAT CAR ASSLY WC PICK UP DTL PANELS -PB	Piaggio spare parts (POP)
660459	FLAT CAR ASSLY WITH FASTENERS	Piaggio spare parts (POP)
B042530BW	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-BW	Piaggio spare parts (POP)
B042530CB	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-CB	Piaggio spare parts (POP)
B042530CO	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-CO	Piaggio spare parts (POP)
B042530EG	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-EG	Piaggio spare parts (POP)
B042530GY	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-GY	Piaggio spare parts (POP)
B042530PA	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-PA	Piaggio spare parts (POP)
B042530PB	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-PB	Piaggio spare parts (POP)
B042530SY	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-SY	Piaggio spare parts (POP)
B042530WR	FLAT CAR ASSLY XTRA 501 LD DTL PANEL-WR	Piaggio spare parts (POP)
6B000630BW	FLAT CAR ASSLY_LDX_BS6-BW	Piaggio spare parts (POP)
6B000630CB	FLAT CAR ASSLY_LDX_BS6-CB	Piaggio spare parts (POP)
6B000630CO	FLAT CAR ASSLY_LDX_BS6-CO	Piaggio spare parts (POP)
6B000630EG	FLAT CAR ASSLY_LDX_BS6-EG	Piaggio spare parts (POP)
6B000630GY	FLAT CAR ASSLY_LDX_BS6-GY	Piaggio spare parts (POP)
6B000630PA	FLAT CAR ASSLY_LDX_BS6-PA	Piaggio spare parts (POP)
6B000630PB	FLAT CAR ASSLY_LDX_BS6-PB	Piaggio spare parts (POP)
6B000630WR	FLAT CAR ASSLY_LDX_BS6-WR	Piaggio spare parts (POP)
6B000450BW	FLAT CAR ASSLY_XTRA DX PU_BS6-BW	Piaggio spare parts (POP)
6B000450CB	FLAT CAR ASSLY_XTRA DX PU_BS6-CB	Piaggio spare parts (POP)
6B000450EG	FLAT CAR ASSLY_XTRA DX PU_BS6-EG	Piaggio spare parts (POP)
6B000450GY	FLAT CAR ASSLY_XTRA DX PU_BS6-GY	Piaggio spare parts (POP)
6B000450PA	FLAT CAR ASSLY_XTRA DX PU_BS6-PA	Piaggio spare parts (POP)
6B000450PB	FLAT CAR ASSLY_XTRA DX PU_BS6-PB	Piaggio spare parts (POP)
6B000450WR	FLAT CAR ASSLY_XTRA DX PU_BS6-WR	Piaggio spare parts (POP)
660459BG	FLAT CAR WITH FASTENERS-LD-BRILLIANT GRE	Piaggio spare parts (POP)
660459CB	FLAT CAR WITH FASTENERS-LD-CHARMING BLUE	Piaggio spare parts (POP)

660459CO	FLAT CAR WITH FASTENERS-LD-CRIMSON ORANG	Piaggio spare parts (POP)
660459GY	FLAT CAR WITH FASTENERS-LD-GOLDEN YELLOW	Piaggio spare parts (POP)
660459PM	FLAT CAR WITH FASTENERS-LD-PASSION MAROO	Piaggio spare parts (POP)
SM26258670	Flat Seal	Piaggio spare parts (POP)
2916710603	FLAT SEAL RING	Piaggio spare parts (POP)
E07518641	Flat seal ring	Piaggio spare parts (POP)
B011469	FLAT WASHER	Piaggio spare parts (POP)
L7701213	FLAT WASHER	Piaggio spare parts (POP)
L7701195	FLAT WASHER 17X30X1	Piaggio spare parts (POP)
615988	FLAT, FILLSTER HEAD SCREW	Piaggio spare parts (POP)
604535	FLEXIBLE COUPLING	Piaggio spare parts (POP)
604535P	FLEXIBLE COUPLING	Piaggio spare parts (POP)
6C000603	FLEXIBLE COUPLING	Piaggio spare parts (POP)
643576	FLEXIBLE COUPLING	Piaggio spare parts (POP)
B042229	FLEXIBLE COUPLING	Piaggio spare parts (POP)
932248	Flexible Hose Assembly	Piaggio spare parts (POP)
932306	Flexible Hose Assembly (FSV to LPR)	Piaggio spare parts (POP)
932305	Flexible Hose Assembly (MFV to FSV)	Piaggio spare parts (POP)
932304	Flexible Hose Assembly (Refuelling)	Piaggio spare parts (POP)
B075043	FLEXIBLE HOSE ASSLY (HPR TO FSV)	Piaggio spare parts (POP)
B078470	FLEXIBLE HOSE ASSLY (HPR TO FSV)	Piaggio spare parts (POP)
B074855	FLEXIBLE HOSE ASSLY (HPR TO FSV)	Piaggio spare parts (POP)
B075065	FLEXIBLE HOSE ASSY (REFUELLING)	Piaggio spare parts (POP)
D9004922166	FLEXIBLE HOSE RR BRAKE	Piaggio spare parts (POP)
B001581R	FLEXIBLE PIPE FOR FRONT WHEEL BRAKE	Piaggio spare parts (POP)
587621R	FLEXIBLE PIPE FOR REAR WHEEL BRAKE	Piaggio spare parts (POP)
B023786R	FLEXIBLE PIPE FOR REAR WHEEL BRAKE	Piaggio spare parts (POP)
587624R	FLEXIBLE PIPING FOR FRONT WHEEL BRAKE R	Piaggio spare parts (POP)
644814	FLEXIBLE PIPING FOR REAR WHEEL BRAKE	Piaggio spare parts (POP)
B023786	FLEXIBLE PIPING FOR REAR WHEEL BRAKE	Piaggio spare parts (POP)
6C000386	FLEXIBLE PIPING FOR REAR WHEEL BRAKE	Piaggio spare parts (POP)
B003683	FLEXIBLE PIPING FOR REAR WHEEL BRAKE (X)	Piaggio spare parts (POP)
644814R	FLEXIBLE PIPING FOR REAR WHEEL BRAKE R	Piaggio spare parts (POP)
660340	FLEXIBLE TRANS. FOR ODOMETER CONTROL	Piaggio spare parts (POP)
6A000884	FLEXIBLE TRANS. FOR ODOMETER CONTROL	Piaggio spare parts (POP)
6A000889	FLEXIBLE TRANS. FOR ODOMETER CONTROL	Piaggio spare parts (POP)
632357	FLEXIBLE TRANS.CABLE WITH WASHER CARGO R	Piaggio spare parts (POP)
587627	FLEXIBLE TRANS.FOR ODOMETER CONTROL	Piaggio spare parts (POP)
6A001834	FLEXIBLE TRANSMISSION CABLE WITH WASHER	Piaggio spare parts (POP)
6A001833	FLEXIBLE TRANSMISSION CABLE WITH WASHER	Piaggio spare parts (POP)
6A000883	FLEXIBLE TRANSMISSION CABLE WITH WASHER	Piaggio spare parts (POP)
659805	FLEXIBLE TRANSMISSION CABLE WITH WASHER	Piaggio spare parts (POP)
LG9440066	Flexible Tube	Piaggio spare parts (POP)
KD994A0010	FLG HEX BOLT M6X12 8.8	Piaggio spare parts (POP)
LG994A001	FLG HEX BOLT M6X12 8.8	Piaggio spare parts (POP)
LG994A002	FLG HEX BOLT M6X20L 8.8	Piaggio spare parts (POP)
LG1780158	FLG HEX BOLT M8X16L STEEL 8.8	Piaggio spare parts (POP)

LG3240165	FLG NUT M8 COPPER PLATED	Piaggio spare parts (POP)
KD3240165	FLG NUT M8 COPPER PLATED SELF	Piaggio spare parts (POP)
B016823	FLOAT	Piaggio spare parts (POP)
LG4105024	Float Assembly	Piaggio spare parts (POP)
E40006459	FLOAT ASSY	Piaggio spare parts (POP)
LG9710128	Float Chamber Assembly	Piaggio spare parts (POP)
1A010095	FLOAT CHAMBER GASKET	Piaggio spare parts (POP)
B016834	FLOAT CHAMBER GASKET	Piaggio spare parts (POP)
B016388	FLOAT CHAMBER GASKET	Piaggio spare parts (POP)
E40006458	FLOAT CHAMBER GASKET	Piaggio spare parts (POP)
LG6231311	Float Spindle	Piaggio spare parts (POP)
6B000185	FLOOR MAT LH	Piaggio spare parts (POP)
6B000705	FLOOR MAT RH	Piaggio spare parts (POP)
645876	FLOOR S/A RR BODY (TRUK)	Piaggio spare parts (POP)
B002717	FLOOR S/A RR BODY (CED)	Piaggio spare parts (POP)
B024860BW	FLOOR S/A RR BODY PORTER 600 BIANCO WHIT	Piaggio spare parts (POP)
B024860LB	FLOOR S/A RR BODY PORTER 600 LIGHT BLUE	Piaggio spare parts (POP)
B024860SY	FLOOR S/A RR BODY PORTER 600 SAHARA YELL	Piaggio spare parts (POP)
B024860WR	FLOOR S/A RR BODY PORTER 600 WESTERN RED	Piaggio spare parts (POP)
B024860ED	FLOOR S/A RR BODY PORTER 600-CED	Piaggio spare parts (POP)
B074230ED	FLOOR S/A RR BODY PORTER 700_ED	Piaggio spare parts (POP)
B003074	FLOOR SEAT PANEL ASSLY	Piaggio spare parts (POP)
932225	Flow Adjusting Screw(R-8106-VI-390)Paxx2	Piaggio spare parts (POP)
661917	FLOW CONTROL BODY (VANAZ P.NO.K-0415-08-	Piaggio spare parts (POP)
925760	FLOW CONTROL BODY(K-0122-07-010)	Piaggio spare parts (POP)
932224	Flow Control Body(R-8106-VI-462)Paxx200	Piaggio spare parts (POP)
643844	FLOW CONTROL UNIT(VANAZ PT NO R-8101-08	Piaggio spare parts (POP)
925761	FLOWADJUSTING SCREW(K-0122-07-020)	Piaggio spare parts (POP)
925735	FLOWADJUSTINGSCREW(K-0122-07-020)	Piaggio spare parts (POP)
191002	FLY SPRING	Piaggio spare parts (POP)
B003929	FLY SPRING	Piaggio spare parts (POP)
E870106111	FLY WEIGHT SUPPORT	Piaggio spare parts (POP)
E500988155	FLY WHEEL	Piaggio spare parts (POP)
970300606	FLY WHEEL & CRANCKCASE COVER EXTRACTOR	Piaggio spare parts (POP)
L9881624	FLY WHEEL LDW-482	Piaggio spare parts (POP)
E40005461	FLY WHEEL MOUNTED ALTERNATOR	Piaggio spare parts (POP)
E43509593	FLY WHEEL WITH RING GEAR	Piaggio spare parts (POP)
E87009595B	FLYWEEL ASSY WITH	Piaggio spare parts (POP)
E870051117A	FLYWEIGHT GOVERNOR	Piaggio spare parts (POP)
LG9881629	FLYWH.INEL 180W W/O RING GEAR	Piaggio spare parts (POP)
B011080	FLYWHEEL ASSEMBLY	Piaggio spare parts (POP)
B011580	FLYWHEEL ASSEMBLY	Piaggio spare parts (POP)
E10A030001	FLYWHEEL ASSLY WITH RING GEAR	Piaggio spare parts (POP)
A01A030001	FLYWHEEL ASSY WITH TONE WHEEL AND RING G	Piaggio spare parts (POP)
E10A030002	FLYWHEEL ASSY. (WITH STATOR & INTEG	Piaggio spare parts (POP)
ESP650DST003	FLYWHEEL ASSY.WITH RING GEAR & TONE WHEE	Piaggio spare parts (POP)
020848Y	FLYWHEEL BLOCK	Piaggio spare parts (POP)

970300507	FLYWHEEL CONE EXTRACTOR	Piaggio spare parts (POP)
832990	FLYWHEEL COVER GASKET.	Piaggio spare parts (POP)
L2610126	FLYWHEEL COVER WITH I.P	Piaggio spare parts (POP)
L2610103	FLYWHEEL COVER WITH I.P.	Piaggio spare parts (POP)
970300508	FLYWHEEL EXTRACTOR	Piaggio spare parts (POP)
441001	FLYWHEEL EXTRACTOR	Piaggio spare parts (POP)
020847Y	FLYWHEEL EXTRACTOR	Piaggio spare parts (POP)
L1157337	FLYWHEEL GENERATOR	Piaggio spare parts (POP)
KD1800030	FLYWHEEL HEX BOLT M14X35L 1.5P	Piaggio spare parts (POP)
LG9881519	FLYWHEEL INEL AUTOMOTIVE	Piaggio spare parts (POP)
970300514	FLYWHEEL LOCKING TOOL	Piaggio spare parts (POP)
SST94065	FLYWHEEL LOCKING TOOL	Piaggio spare parts (POP)
970300618	FLYWHEEL LOCKING TOOL FOR REMOVAL & FITM	Piaggio spare parts (POP)
ESK9248	FLYWHEEL MOUNTED ALT.	Piaggio spare parts (POP)
LG5096105	FLYWHEEL NET GUARD LGA INDIA	Piaggio spare parts (POP)
LG9881665	FLYWHEEL OF Ape City LGA280	Piaggio spare parts (POP)
SST94061	FLYWHEEL PULLER	Piaggio spare parts (POP)
932318	FLYWHEEL REPAIRING KIT	Piaggio spare parts (POP)
KD2816204	Flywheel ring	Piaggio spare parts (POP)
E40009599	FLYWHEEL RING GEAR ASSEMBLY	Piaggio spare parts (POP)
441002	FLYWHEEL STOPPER TOOL	Piaggio spare parts (POP)
L9881376	FLYWHEEL WITH CROWN GEAR	Piaggio spare parts (POP)
L9881464	FLYWHEEL WITH I.P.	Piaggio spare parts (POP)
E40019549	FLYWHEEL WITH MAGNET AND RING GEAR	Piaggio spare parts (POP)
E40009567	FLYWHEEL WITH RING GEAR	Piaggio spare parts (POP)
E07509588	Flywheel with ring gear assy. Consisting	Piaggio spare parts (POP)
ED23242	FMA	Piaggio spare parts (POP)
E40005489	FMA 18 POLE	Piaggio spare parts (POP)
E40005491	FMA STATOR 18 POLE_435 III	Piaggio spare parts (POP)
6B001798	FNRB SWITCH KNOB	Piaggio spare parts (POP)
652264	FOAM FILTER	Piaggio spare parts (POP)
B006480	FOOT BRAKE PADAL ASSEMBLY	Piaggio spare parts (POP)
652300	FOOT BRAKE PEDAL ASSEMBLY	Piaggio spare parts (POP)
632540	FOOT BRAKE PEDAL ASSEMBLY	Piaggio spare parts (POP)
587928	FOOT BRAKE PEDAL SPRING	Piaggio spare parts (POP)
890256	Foot Peg Rubber Kit	Piaggio spare parts (POP)
B073538	FOOT REST	Piaggio spare parts (POP)
6B001996	FOOT STEP COVER LH	Piaggio spare parts (POP)
B075985	FOOT STEP COVER LH	Piaggio spare parts (POP)
6B001995	FOOT STEP COVER RH	Piaggio spare parts (POP)
B075984	FOOT STEP COVER RH	Piaggio spare parts (POP)
B075267	FOOTREST ASSLY. COMPLETE	Piaggio spare parts (POP)
AP8134829	Footrest pin	Piaggio spare parts (POP)
AP8134955	Footrest pin	Piaggio spare parts (POP)
AP8134451	FOOTREST PLATE	Piaggio spare parts (POP)
859921	Footrest plate	Piaggio spare parts (POP)
GU32441210	FOOTREST PLATE	Piaggio spare parts (POP)

AP8121134	FOOTREST SLIDING PIN	Piaggio spare parts (POP)
L6480080	FORGED SIDE PINION	Piaggio spare parts (POP)
E270394527	Fork	Piaggio spare parts (POP)
B023999	FORK 1-2	Piaggio spare parts (POP)
03G160767	fork 12 machined	Piaggio spare parts (POP)
889197	FORK 1st-2nd SPEED	Piaggio spare parts (POP)
8891974	FORK 1st-2nd SPEED	Piaggio spare parts (POP)
B024000	FORK 3-4	Piaggio spare parts (POP)
03G160768	fork 345 machined	Piaggio spare parts (POP)
889198	FORK 3st-4nd SPEED	Piaggio spare parts (POP)
8891984	FORK 3st-4nd SPEED	Piaggio spare parts (POP)
1F0006824	FORK 5th - R SPEED ASSY	Piaggio spare parts (POP)
1F000677	FORK 5th-R SPEED	Piaggio spare parts (POP)
889199	FORK 5th-R SPEED	Piaggio spare parts (POP)
179056	FORK ASSY LH	Piaggio spare parts (POP)
179057	FORK ASSY RH	Piaggio spare parts (POP)
645527	FORK ASSY,RIGHT WHEEL	Piaggio spare parts (POP)
B006249	FORK FOR CLUTCH RELEASE	Piaggio spare parts (POP)
E1001933111	FORK LEVER	Piaggio spare parts (POP)
1001933126	FORK LEVER	Piaggio spare parts (POP)
1001933111	FORK LEVER	Piaggio spare parts (POP)
F000CD1020	Fork Lever	Piaggio spare parts (POP)
B074132	FORK SUPPORT 90°	Piaggio spare parts (POP)
B074135	FORK SUPPORT 90° WITH PIN	Piaggio spare parts (POP)
B041721	FORK/STEERING COLUMN	Piaggio spare parts (POP)
920037	Formed plate clutch(161FC01829) "	Piaggio spare parts (POP)
567581	FOUR POLE FUSE BOX	Piaggio spare parts (POP)
L4990232	FOURTH SPEED GEAR	Piaggio spare parts (POP)
L4990194	FOURTH SPEED GEAR	Piaggio spare parts (POP)
L4990239	FOURTH SPEED GEAR 16NICR5	Piaggio spare parts (POP)
B024700	FR CROSS MEMBER S/A ENGINE	Piaggio spare parts (POP)
B024700CED	FR CROSS MEMBER S/A ENGINE (CED)	Piaggio spare parts (POP)
B073988	FR CROSS MEMBER S/A ENGINE PORTER 700	Piaggio spare parts (POP)
B073988ED	FR CROSS MEMBER S/A ENGINE PORTER 700-ED	Piaggio spare parts (POP)
657999	FR ENG MTG CROSS MEMBER 482	Piaggio spare parts (POP)
662141	FR ENG MTG CROSS MEMBER 870 BSII	Piaggio spare parts (POP)
B008208	FR ENG MTG CROSS MEMBER 870 BSIII	Piaggio spare parts (POP)
B008208ED	FR ENG MTG CROSS MEMBER 870 BSIII(CED)	Piaggio spare parts (POP)
B002554	FR HUB AXLE S/A FOR DISC BRAKE	Piaggio spare parts (POP)
B003586	FR MUDGUARD & CREST ASSLY	Piaggio spare parts (POP)
B024452	FR MUDGUARD & TRIM ASSLY	Piaggio spare parts (POP)
B024452BW	FR MUDGUARD & TRIM ASSLY-B.WHITE	Piaggio spare parts (POP)
B024452BL	FR MUDGUARD & TRIM ASSLY-BLACK	Piaggio spare parts (POP)
B024452CB	FR MUDGUARD & TRIM ASSLY-C.BLUE	Piaggio spare parts (POP)
B024452EG	FR MUDGUARD & TRIM ASSLY-E.GREEN	Piaggio spare parts (POP)
B024452GY	FR MUDGUARD & TRIM ASSLY-G.YELLOW	Piaggio spare parts (POP)
B024452NB	FR MUDGUARD & TRIM ASSLY-N. BLUE	Piaggio spare parts (POP)

B024452WR	FR MUDGUARD & TRIM ASSLY-W.RED	Piaggio spare parts (POP)
1.00E+40	Fr ont Cover	Piaggio spare parts (POP)
B073381	FR SHOCK ABSORBER KIT W/O SPRING_GABRIEL	Piaggio spare parts (POP)
E43510791	FRACTURED CON ROD BOLT KIT	Piaggio spare parts (POP)
6C000382	FRAME ASSLY SUS.& ENGINE SUPPORT	Piaggio spare parts (POP)
587576R	FRAME ASSLY SUS.& ENGINE SUPPORT	Piaggio spare parts (POP)
587576	FRAME ASSLY SUS.& ENGINE SUPPORT	Piaggio spare parts (POP)
6C000306	FRAME ASSLY SUSP AND ENGINE SUPPORT	Piaggio spare parts (POP)
B001827	FRAME ASSLY SUSP AND ENGINE SUPPORT	Piaggio spare parts (POP)
6C000583	FRAME ASSLY SUSP. AND ENGINE SUPPORT	Piaggio spare parts (POP)
645014	FRAME ASSLY SUSP.ENGINE	Piaggio spare parts (POP)
632322	FRAME ASSLY SUSP.ENGINE	Piaggio spare parts (POP)
B075798	FRAME ASSLY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
B023904	FRAME ASSLY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
B024838	FRAME ASSLY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
602313	FRAME ASSLY SUSPENSION END ENGINE SUPP.	Piaggio spare parts (POP)
6C000383	FRAME ASSY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
660457	FRAME ASSY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
660457R	FRAME ASSY SUSPENSION & ENGINE SUPPORT	Piaggio spare parts (POP)
L9140174	FRAME FOR MAX SPEED SPRING	Piaggio spare parts (POP)
B075911	FRAME REAR SUB ASSLY LH	Piaggio spare parts (POP)
B002391	FRAME REAR SUB ASSLY LH	Piaggio spare parts (POP)
B002399	FRAME REAR SUB ASSLY RH	Piaggio spare parts (POP)
645114	FRAME S/A RADIATOR SUPPORT	Piaggio spare parts (POP)
662168	FRAME S/A SIDE , RR LH 870	Piaggio spare parts (POP)
662167	FRAME S/A SIDE , RR RH 870	Piaggio spare parts (POP)
B024811	FRAME S/A SIDE,RR RH	Piaggio spare parts (POP)
645267	FRAME SUB ASSLY FR DOOR FR LWR	Piaggio spare parts (POP)
645265	FRAME SUB ASSLY FR DOOR, RR LWR LH.	Piaggio spare parts (POP)
645266	FRAME SUB ASSLY FR DOOR, RR LWR RH.	Piaggio spare parts (POP)
B077024	FRAME SUB ASSLY RH	Piaggio spare parts (POP)
1E002549	FRAME SUB-ASSY, FUEL TANK SUPPORT	Piaggio spare parts (POP)
6B001304BW	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-BW	Piaggio spare parts (POP)
6B001304CB	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-CB	Piaggio spare parts (POP)
6B001304CO	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-CO	Piaggio spare parts (POP)
6B001304EG	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-EG	Piaggio spare parts (POP)
6B001304GY	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-GY	Piaggio spare parts (POP)
6B001304PA	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-PA	Piaggio spare parts (POP)
6B001304PB	FRAME W/ DOORS_LDX_LPG (20.6L) W/HSRP-PB	Piaggio spare parts (POP)
6B001302BW	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-BW	Piaggio spare parts (POP)
6B001302CB	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-CB	Piaggio spare parts (POP)
6B001302CO	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-CO	Piaggio spare parts (POP)
6B001302EG	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-EG	Piaggio spare parts (POP)
6B001302GY	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-GY	Piaggio spare parts (POP)
6B001302SY	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-GY	Piaggio spare parts (POP)
6B001302PA	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-PA	Piaggio spare parts (POP)
6B001302PB	FRAME W/ DRS_LDX+_LPG (18L) W/ HSRP-PB	Piaggio spare parts (POP)

B001340ED	FRAME WITH CAB ASSLY WITH DOOR LD BS3 ED	Piaggio spare parts (POP)
659788	FRAME WITH CAB ASSLY WITH DOORS	Piaggio spare parts (POP)
632338	FRAME WITH CABIN ASSLY. WITH DOORS	Piaggio spare parts (POP)
920036	FRICTION PLAT(161FC01729)	Piaggio spare parts (POP)
1A012153	FRICTION PLATE	Piaggio spare parts (POP)
893782	Friction Plate	Piaggio spare parts (POP)
6B001802	FRONT BEZEL COVER LH	Piaggio spare parts (POP)
6B001831	FRONT BEZEL COVER RH	Piaggio spare parts (POP)
1A009590	FRONT BRACKET ASSLY	Piaggio spare parts (POP)
6C000272	FRONT BRAKE ASSEMBLY	Piaggio spare parts (POP)
B003248	FRONT BRAKE ASSLY LH	Piaggio spare parts (POP)
B003266	FRONT BRAKE ASSLY RH	Piaggio spare parts (POP)
B024113	FRONT BRAKE ASSY	Piaggio spare parts (POP)
B001397	FRONT BRAKE ASSY	Piaggio spare parts (POP)
AP8145022	Front brake lever	Piaggio spare parts (POP)
AP8133664	Front brake lever	Piaggio spare parts (POP)
B003326	FRONT BRAKE SHOE KIT	Piaggio spare parts (POP)
940004A	FRONT BRAKE SHOE SET	Piaggio spare parts (POP)
940004	FRONT BRAKE SHOE SET	Piaggio spare parts (POP)
257640	FRONT BUMPER LH SIDE ELEMENT	Piaggio spare parts (POP)
B003277	FRONT BUMPER RH SIDE ELEMENT	Piaggio spare parts (POP)
B042029	FRONT BUMPER S/A WIREMESH	Piaggio spare parts (POP)
6B002763	FRONT CARPET	Piaggio spare parts (POP)
616737	FRONT CARPET (CARGO)	Piaggio spare parts (POP)
B003650	FRONT CARPET (CITY CNG)	Piaggio spare parts (POP)
645081	FRONT CARPET (CNG CARGO)	Piaggio spare parts (POP)
644979	FRONT CARPET (CNG PASS)	Piaggio spare parts (POP)
616768	FRONT CARPET (TAXI)	Piaggio spare parts (POP)
B075254	FRONT CARPET (APE CITY CARGO)	Piaggio spare parts (POP)
B003649	FRONT CARPET (CITY PETROL)	Piaggio spare parts (POP)
6B002009	FRONT CARPET CNG	Piaggio spare parts (POP)
6B003346	FRONT CARPET DIESEL	Piaggio spare parts (POP)
6B002008	FRONT CARPET DIESEL	Piaggio spare parts (POP)
B041993	FRONT CARPET- EURO CITY (PETROL)	Piaggio spare parts (POP)
B041794	FRONT CARPET PAX CNG/LPG	Piaggio spare parts (POP)
B025598	FRONT CENTRAL COVER	Piaggio spare parts (POP)
B025598BW	FRONT CENTRAL COVER-B.WHITE	Piaggio spare parts (POP)
B025598BL	FRONT CENTRAL COVER-BLACK	Piaggio spare parts (POP)
B025598CB	FRONT CENTRAL COVER-C.BLUE	Piaggio spare parts (POP)
B025598EG	FRONT CENTRAL COVER-E.GREEN	Piaggio spare parts (POP)
B025598GY	FRONT CENTRAL COVER-G.YELLOW	Piaggio spare parts (POP)
B025598NB	FRONT CENTRAL COVER-N. BLUE	Piaggio spare parts (POP)
B025598WR	FRONT CENTRAL COVER-W.RED	Piaggio spare parts (POP)
6B002829	FRONT CHROME STICKER APE AUTO HT	Piaggio spare parts (POP)
SPB011340	FRONT COVER ASSEMBLY - SPD	Piaggio spare parts (POP)
B002778	FRONT CREST	Piaggio spare parts (POP)
6A000783	FRONT CROSS MEMBER ASSEMBLY	Piaggio spare parts (POP)

6B001720ED	FRONT CROSS MEMBER ASSLY-ED	Piaggio spare parts (POP)
6B002674ED	FRONT CROSS MEMBER ASSLY-ED	Piaggio spare parts (POP)
661418	FRONT CROSS PIPE (FRAME COVERING)	Piaggio spare parts (POP)
6D000145R	FRONT DIRECTION INDICATORS LH	Piaggio spare parts (POP)
6D000146R	FRONT DIRECTION INDICATORS RH	Piaggio spare parts (POP)
B003353	FRONT DOME PLATE - STICKER	Piaggio spare parts (POP)
B074513	FRONT DOOR ASSLY, RH	Piaggio spare parts (POP)
E87020645	FRONT ENGINE MOUNTING BRACKET (MACHINED	Piaggio spare parts (POP)
6A001503	FRONT ENGINE MTG CROSS MEMBER ASSLY	Piaggio spare parts (POP)
AP8221277	Front footrest spring	Piaggio spare parts (POP)
B002741	FRONT GRILL	Piaggio spare parts (POP)
B001302	FRONT HUB ASSLY	Piaggio spare parts (POP)
B077465	FRONT HUB S/A	Piaggio spare parts (POP)
854555	FRONT INDICATORS	Piaggio spare parts (POP)
854556	FRONT INDICATORS	Piaggio spare parts (POP)
B007727	FRONT LEFT BRACKET, DIE CAST	Piaggio spare parts (POP)
661421	FRONT LEFT PIPE (FRAME COVERING)	Piaggio spare parts (POP)
6B002250	FRONT MUDFLAP	Piaggio spare parts (POP)
6B002645	FRONT MUDGARD	Piaggio spare parts (POP)
B001026	FRONT MUDGUARD	Piaggio spare parts (POP)
183138	FRONT MUDGUARD	Piaggio spare parts (POP)
B075974	FRONT MUDGUARD	Piaggio spare parts (POP)
B073882SL	FRONT MUDGUARD	Piaggio spare parts (POP)
183138R	FRONT MUDGUARD VE	Piaggio spare parts (POP)
B042611	FRONT MUDGUARD APE CLASSIC NEW	Piaggio spare parts (POP)
B025603	FRONT MUDGUARD TRIM	Piaggio spare parts (POP)
B073882	FRONT MUDGUARD_CITY UPGRADE	Piaggio spare parts (POP)
SST94043	Front Mudguard_TC	Piaggio spare parts (POP)
B073882BL	FRONT MUDGUARD_UPGRD_PAINTED_BLACK	Piaggio spare parts (POP)
B073882BW	FRONT MUDGUARD_UPGRD_PAINTED_BW	Piaggio spare parts (POP)
B073882CB	FRONT MUDGUARD_UPGRD_PAINTED_CB	Piaggio spare parts (POP)
B073882EG	FRONT MUDGUARD_UPGRD_PAINTED_EG	Piaggio spare parts (POP)
B073882GY	FRONT MUDGUARD_UPGRD_PAINTED_GY	Piaggio spare parts (POP)
B073882LB	FRONT MUDGUARD_UPGRD_PAINTED_LB	Piaggio spare parts (POP)
B073882NB	FRONT MUDGUARD_UPGRD_PAINTED_N.BLUE	Piaggio spare parts (POP)
B073882WR	FRONT MUDGUARD_UPGRD_PAINTED_WR	Piaggio spare parts (POP)
B001027	FRONT NOSE	Piaggio spare parts (POP)
SST94088	FRONT OIL OGIVES 1002	Piaggio spare parts (POP)
E87006343A	FRONT OIL SEAL	Piaggio spare parts (POP)
E87006344A	FRONT OIL SEAL	Piaggio spare parts (POP)
118447	FRONT PACKING	Piaggio spare parts (POP)
193953	FRONT PACKING R.H. DOOR WINDOW	Piaggio spare parts (POP)
B075148	Front Pad Kit	Piaggio spare parts (POP)
929905	Front Pad Kit	Piaggio spare parts (POP)
AP8133943	Front pads pair	Piaggio spare parts (POP)
B006604	FRONT PARTITION BODY	Piaggio spare parts (POP)
B006759	FRONT PIPE FOR FRAME COVERING LEFT SIDE	Piaggio spare parts (POP)

B006760	FRONT PIPE FOR FRAME COVERING RIGHT SIDE	Piaggio spare parts (POP)
661422	FRONT RIGHT PIPE (FRAME COVERING)	Piaggio spare parts (POP)
604706	FRONT RIGHT PIPE FOR FRAME COVERING	Piaggio spare parts (POP)
605176	FRONT SEAT PASSENG. ASSY	Piaggio spare parts (POP)
940066	front Shock Absorber Spring-Paxx UG	Piaggio spare parts (POP)
940065	front Shock Absorber W/O spring-Paxx UG	Piaggio spare parts (POP)
970300541	Front strut assly shocker replacement to	Piaggio spare parts (POP)
B001396	FRONT SUSPENSION ARM	Piaggio spare parts (POP)
B024018	FRONT SUSPENSION ARM	Piaggio spare parts (POP)
6C000473SP	FRONT SUSPENSION ASSEMBLY XTRA LD STD SP	Piaggio spare parts (POP)
6C000471SP	FRONT SUSPENSION ASSLY	Piaggio spare parts (POP)
660499	FRONT SUSPENSION ASSLY 501 REG	Piaggio spare parts (POP)
6C000474SP	FRONT SUSPENSION ASSLY 501 STD - SPD	Piaggio spare parts (POP)
B008170	FRONT SUSPENSION ASSLY APE CITY 200CC	Piaggio spare parts (POP)
569255	FRONT SUSPENSION SPRING	Piaggio spare parts (POP)
B076875SP	FRONT SUSPN ASSLY COMPL-APE CITY STD-SPD	Piaggio spare parts (POP)
B041699	FRONT WHEEL	Piaggio spare parts (POP)
B041700	FRONT WHEEL	Piaggio spare parts (POP)
661943	FRONT WHEEL	Piaggio spare parts (POP)
643772R	FRONT WHEEL AXLE (VE)	Piaggio spare parts (POP)
643772	FRONT WHEEL AXLE (VE)	Piaggio spare parts (POP)
165012017	FRONT WHEEL HUB	Piaggio spare parts (POP)
567474	FRONT WHEEL HUB ASSLY	Piaggio spare parts (POP)
652521	FRONT WHEEL HUB ASSLY.(VE RIM)	Piaggio spare parts (POP)
662197	FRT / RR TUBE - HOOD FRAME -HI BODY (JUM	Piaggio spare parts (POP)
652522	FRT CROSS MEMBER ASSLY - ENGINE MTG.	Piaggio spare parts (POP)
180022	FRT SIDE BLINKER LAMP & POSITION LAMP	Piaggio spare parts (POP)
180023	FRT SIDE BLINKING LAMP	Piaggio spare parts (POP)
662311	FRT SUPPORT TUBE ASSLY	Piaggio spare parts (POP)
567731	FRT SUSPENSION ASSLY	Piaggio spare parts (POP)
B024533	FRT. BUMPER S/A PORTER 600	Piaggio spare parts (POP)
B002594	FRT.CROSS MEMBER ASSLY - ENGINE MTG.	Piaggio spare parts (POP)
B073986	FSM UNIT (BOSCH)	Piaggio spare parts (POP)
612450	FUEL HOSE (A/C PUMP - GASOIL FILTER)	Piaggio spare parts (POP)
E87016058	FUEL CAM SHAFT WITH KEY	Piaggio spare parts (POP)
E87116080	Fuel Camshaft Assy with key and plug	Piaggio spare parts (POP)
KD2175297	Fuel cartridge	Piaggio spare parts (POP)
B075732	FUEL CHANGE OVER SWITCH	Piaggio spare parts (POP)
A01G120013	FUEL DISTRIBUTOR BLOCK (FDB)	Piaggio spare parts (POP)
ESP650DFS005	FUEL DISTRIBUTOR BLOCK(FDB)	Piaggio spare parts (POP)
E40008724	FUEL FILTER	Piaggio spare parts (POP)
KD3730088	FUEL FILTER	Piaggio spare parts (POP)
E87008720	FUEL FILTER	Piaggio spare parts (POP)
E87108732	FUEL FILTER	Piaggio spare parts (POP)
632557	FUEL FILTER	Piaggio spare parts (POP)
F002H25011	Fuel Filter	Piaggio spare parts (POP)
KD37301778	FUEL FILTER 15 LD 400	Piaggio spare parts (POP)

GU01106090	Fuel Filter 2003	Piaggio spare parts (POP)
1E000782	FUEL FILTER ASSY WITH QSD ENGINE STOP	Piaggio spare parts (POP)
F002H20364	FUEL FILTER ELEMENT	Piaggio spare parts (POP)
A01G120009	Fuel Filter insert	Piaggio spare parts (POP)
B073290	FUEL FILTER MTG. BRACKET	Piaggio spare parts (POP)
616738R	FUEL FILTER- PETROL ENGINE	Piaggio spare parts (POP)
B001253	FUEL FILTER S/A	Piaggio spare parts (POP)
B075790	FUEL FILTER SUPPORT	Piaggio spare parts (POP)
616738	FUEL FILTER-LGA 280 PETROL ENGINE	Piaggio spare parts (POP)
605359	FUEL GAUGE INDICATOR	Piaggio spare parts (POP)
632410	FUEL GAUGE WITH SPACER RING ASSLY (MY)	Piaggio spare parts (POP)
KD9375872	FUEL HOSE	Piaggio spare parts (POP)
569054	FUEL HOSE (GASOIL FILTER -FIP)	Piaggio spare parts (POP)
1E000751	FUEL HOSE / FILTER - PUMP COMPLETE	Piaggio spare parts (POP)
1E000955	FUEL HOSE ASSY FILTER TANK	Piaggio spare parts (POP)
1E000954	FUEL HOSE ASSY QSD FILTER	Piaggio spare parts (POP)
1E000758	FUEL HOSE, INJECTOR FILTER, COMPLETE	Piaggio spare parts (POP)
612452	FUEL HOSE, TANK TO AC/PUMP (CARGO)	Piaggio spare parts (POP)
6A001666	FUEL HOSE, TANK TO FILTER	Piaggio spare parts (POP)
1E000750	FUEL HOSE-PUMP TO FILTER / COMPLETE	Piaggio spare parts (POP)
F002F50006	FUEL INJECTION PUMP GL 400 BS-II	Piaggio spare parts (POP)
F002F20053	Fuel Injection Pump(P-600 Mdfd)	Piaggio spare parts (POP)
1A013967	FUEL INJECTOR	Piaggio spare parts (POP)
1D000698	FUEL INJECTOR	Piaggio spare parts (POP)
1D001226	FUEL LEVEL GAUGE	Piaggio spare parts (POP)
660183	FUEL LEVEL GAUGE	Piaggio spare parts (POP)
B042622	FUEL LEVEL GAUGE - PORTER 1000 (BNA)	Piaggio spare parts (POP)
B073434	FUEL LEVEL GAUGE GASKET	Piaggio spare parts (POP)
6A000685	FUEL LINE, FILTER TO FIP	Piaggio spare parts (POP)
6A000686	FUEL LINE, TANK TO FILTER	Piaggio spare parts (POP)
6A000757	FUEL METAL PIPE	Piaggio spare parts (POP)
587763	Fuel pipe	Piaggio spare parts (POP)
E87137123	FUEL PIPE	Piaggio spare parts (POP)
6A000763	FUEL PIPE – FILTER TO FIP	Piaggio spare parts (POP)
B075796	FUEL PIPE - FUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
B076406	FUEL PIPE - FUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
E43537158	FUEL PIPE - TANK TO FEED PUMP	Piaggio spare parts (POP)
6A000762	FUEL PIPE – TANK TO FILTER	Piaggio spare parts (POP)
B002627	FUEL PIPE Y- CONNECTOR TO CARBURETTOR	Piaggio spare parts (POP)
B073840	FUEL PIPE Y- CONNECTOR TO CARBURETTOR	Piaggio spare parts (POP)
B024892	FUEL PIPE Y- CONNECTOR TO CARBURETTOR	Piaggio spare parts (POP)
E43537118	FUEL PIPE (TANK TO FEED PUMP)	Piaggio spare parts (POP)
E43537119	FUEL PIPE (TANK TO FEED PUMP)	Piaggio spare parts (POP)
E43537120	FUEL PIPE (FEED PUMP TO FUEL FILTER)	Piaggio spare parts (POP)
E43537159	FUEL PIPE (FEED PUMP TO FUEL FILTER)	Piaggio spare parts (POP)
E43527185	FUEL PIPE (FEED PUMP TO FUEL FILTER)	Piaggio spare parts (POP)
E43527184	FUEL PIPE (FUEL FILTER TO FIP)	Piaggio spare parts (POP)

E43537175	FUEL PIPE (FUEL FILTER TO FIP)	Piaggio spare parts (POP)
441013	FUEL PIPE (HOSE)REMOVAL TOOL	Piaggio spare parts (POP)
KD93762748	FUEL PIPE (MAIN TO SAFETY FLT)	Piaggio spare parts (POP)
6A000554	FUEL PIPE (SMALL FILTER TO SOLENOID)	Piaggio spare parts (POP)
B074008	FUEL PIPE : RETURN PIPE ASSY	Piaggio spare parts (POP)
B074007	FUEL PIPE : SECONDARY FUEL FILTER TO FIP	Piaggio spare parts (POP)
1A009137	FUEL PIPE BRACKET WITH I.P.	Piaggio spare parts (POP)
1A018035	FUEL PIPE BRACKET WITH I.P.	Piaggio spare parts (POP)
KD93762768	FUEL PIPE FEED PUMP - MAIN FLT	Piaggio spare parts (POP)
B077325	FUEL PIPE FEED PUMP TO CARBURETTOR	Piaggio spare parts (POP)
E40017167	FUEL PIPE FEED PUMP TO FILTER	Piaggio spare parts (POP)
E40017145	Fuel pipe feed pump to filter	Piaggio spare parts (POP)
E07537195	FUEL PIPE- FEED PUMP TO FILTER	Piaggio spare parts (POP)
E07537156	FUEL PIPE- FEED PUMP TO FILTER	Piaggio spare parts (POP)
B003321	FUEL PIPE FEED PUMP TO MAIN FILTER	Piaggio spare parts (POP)
KD93763078	FUEL PIPE FEED PUMP TO MAIN FILTER	Piaggio spare parts (POP)
B076749	FUEL PIPE FEED PUMP TO Y- CONNECTOR	Piaggio spare parts (POP)
B002626	FUEL PIPE FEED PUMP TO Y- CONNECTOR	Piaggio spare parts (POP)
B077324	FUEL PIPE FILTER TO FEED	Piaggio spare parts (POP)
E40017158	Fuel pipe filter to pump	Piaggio spare parts (POP)
E40017192	FUEL PIPE FILTER TO PUMP	Piaggio spare parts (POP)
B042030	FUEL PIPE FUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
B075366	FUEL PIPE FUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
B073837	FUEL PIPE FUEL FILTER TO FEED PUMP	Piaggio spare parts (POP)
662514	FUEL PIPE- FUEL FILTER TO FEED PUMP	Piaggio spare parts (POP)
B002624	FUEL PIPE FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B009582	FUEL PIPE FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B073835	FUEL PIPE FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
662494	FUEL PIPE FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B077322	FUEL PIPE FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
E07517140	Fuel pipe pump to injector	Piaggio spare parts (POP)
E07537136	FUEL PIPE PUMP TO INJECTOR	Piaggio spare parts (POP)
E07537192	FUEL PIPE PUMP TO INJECTOR	Piaggio spare parts (POP)
B074962	FUEL PIPE- SMALL FILTER TO SOLENOID	Piaggio spare parts (POP)
KD93763098	FUEL PIPE TANK F. PUMP 970	Piaggio spare parts (POP)
KD93762758	FUEL PIPE TANK TO FEED PUMP	Piaggio spare parts (POP)
E40027188	FUEL PIPE TANK TO FEED PUMP (APE CITY)	Piaggio spare parts (POP)
662515	FUEL PIPE Y CONN. TO CARBURATOR	Piaggio spare parts (POP)
B073839	FUEL PIPE Y- CONNECTOR TO FUEL TANK	Piaggio spare parts (POP)
B002628	FUEL PIPE Y- CONNECTOR TO FUEL TANK	Piaggio spare parts (POP)
B078171	FUEL PIPE Y-CONNECTOR TO CARBURATOR	Piaggio spare parts (POP)
B078312	FUEL PIPE Y-CONNECTOR TO FUEL TANK	Piaggio spare parts (POP)
6A001307	FUEL PIPE, FEED PUMP TO CARBURATOR	Piaggio spare parts (POP)
B079091	FUEL PIPE, FEED PUMP TO T-CONNECTOR	Piaggio spare parts (POP)
E87027117	FUEL PIPE, PUMP TO	Piaggio spare parts (POP)
B079086	FUEL PIPE, T-CONNECTOR TO TANK RETURN	Piaggio spare parts (POP)
B003323	FUEL PIPE: MAIN FILTER TO SAFETY FILTER	Piaggio spare parts (POP)

E07537185	FUEL PIPE:FUEL FILTER TO FIP(IMPL)	Piaggio spare parts (POP)
B076752	FUEL PIPE-3 WAY TO ENGINE CARBURATOR	Piaggio spare parts (POP)
B076753	FUEL PIPE-3 WAY TO FUEL TANK (RETURN)	Piaggio spare parts (POP)
6A000764	FUEL PIPE-ENGINE TO TANK	Piaggio spare parts (POP)
B074005	FUEL PIPE-FEED PUMP TO PRI. FUEL FILTER	Piaggio spare parts (POP)
B024908	FUEL PIPEFUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
B003942	FUEL PIPEFUEL FILTER TO CARBURATOR	Piaggio spare parts (POP)
B002625	FUEL PIPEFUEL FILTER TO FEED PUMP	Piaggio spare parts (POP)
B079059	FUEL PIPE-FUEL FILTER TO FEED PUMP	Piaggio spare parts (POP)
6A000556	FUEL PIPE-FUEL FILTER TO FEED PUMP	Piaggio spare parts (POP)
B079057	FUEL PIPE-FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B079105	FUEL PIPE-FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B075437	FUEL PIPE-TANK TO SMALL FILTER-CITY GAS	Piaggio spare parts (POP)
B075337	FUEL PIPE-TANK TO SMALL FILTER-CITY PTL	Piaggio spare parts (POP)
KD746193	FUEL PIPING	Piaggio spare parts (POP)
L6585109	FUEL PUMP	Piaggio spare parts (POP)
ED31905	FUEL PUMP	Piaggio spare parts (POP)
1D002701	FUEL PUMP	Piaggio spare parts (POP)
B010572	FUEL PUMP	Piaggio spare parts (POP)
E07506863	Fuel Pump assembly	Piaggio spare parts (POP)
E87106853	FUEL PUMP ASSEMBLY	Piaggio spare parts (POP)
E10G120069	FUEL PUMP ASSEMBLY 8.5 ELEMENT	Piaggio spare parts (POP)
ED41531	FUEL PUMP ASSLY.MICO	Piaggio spare parts (POP)
889999	FUEL PUMP FLANGE	Piaggio spare parts (POP)
B079382	FUEL PUMP GASKET	Piaggio spare parts (POP)
1B002953	FUEL PUMP GASKET	Piaggio spare parts (POP)
ED41930	FUEL PUMP RC LEVER ASSLY.	Piaggio spare parts (POP)
E07515161	Fuel Pump Rocker Assly	Piaggio spare parts (POP)
ED41388	Fuel pump rocker assy.	Piaggio spare parts (POP)
B079387	FUEL PUMP SPRING HOLDER	Piaggio spare parts (POP)
889472	FUEL RAIL	Piaggio spare parts (POP)
889467	FUEL RAIL BNA	Piaggio spare parts (POP)
B079063	FUEL RETURN HOSE (MIDBODY BSIV)	Piaggio spare parts (POP)
B075498	FUEL RETURN HOSE-501- BS-IV	Piaggio spare parts (POP)
B075499	FUEL RETURN HOSE-CITY- BS-IV	Piaggio spare parts (POP)
A01T120004	FUEL RETURN LINE(FRLS)	Piaggio spare parts (POP)
KD9376157	FUEL RETURN METAL TUBE 15LD400	Piaggio spare parts (POP)
KD93763068	FUEL RETURN PIPE 1500 MM KD 441	Piaggio spare parts (POP)
KD93762738	FUEL RETURN PIPE 15LD441	Piaggio spare parts (POP)
615994	FUEL S/A TANK	Piaggio spare parts (POP)
B073142	FUEL S/A TANK	Piaggio spare parts (POP)
E500810244	FUEL TANK	Piaggio spare parts (POP)
E50001274	FUEL TANK 500SR INT.F/F	Piaggio spare parts (POP)
B079384	FUEL TANK ASSEMBLY WITH TANK UNIT	Piaggio spare parts (POP)
604826	FUEL TANK ASSLY 501 CNG/LPG	Piaggio spare parts (POP)
B002278	FUEL TANK ASSLY CITY CNG/LPG	Piaggio spare parts (POP)
B003656	FUEL TANK ASSLY COMPLETE	Piaggio spare parts (POP)

B078375	FUEL TANK ASSLY COMPLETE D5S	Piaggio spare parts (POP)
643776	FUEL TANK ASSLY WITH T.UNIT 501 DSL (VE)	Piaggio spare parts (POP)
643523	FUEL TANK ASSLY WITH T.UNIT 601 CARGO	Piaggio spare parts (POP)
B076903	FUEL TANK ASSLY WITH T.UNIT CITY DSL/PTL	Piaggio spare parts (POP)
B001430	FUEL TANK ASSLY WITH T.UNIT CITY DSL/PTL	Piaggio spare parts (POP)
B006330	FUEL TANK ASSLY WITH TANK UNIT	Piaggio spare parts (POP)
B073829	FUEL TANK ASSLY WITH TANK UNIT	Piaggio spare parts (POP)
6A001267	FUEL TANK ASSLY WITH TANK UNIT	Piaggio spare parts (POP)
B073901	FUEL TANK ASSY	Piaggio spare parts (POP)
644952	FUEL TANK ASSY (WITH TANK UNIT) - 601	Piaggio spare parts (POP)
614968	FUEL TANK ASSY (482)	Piaggio spare parts (POP)
614968SP	FUEL TANK ASSY (482) - SPD	Piaggio spare parts (POP)
569223	FUEL TANK ASSY (CARGO)	Piaggio spare parts (POP)
569225	FUEL TANK ASSY (PASSENGERS)	Piaggio spare parts (POP)
B041014	FUEL TANK ASSY. COMPLETE	Piaggio spare parts (POP)
B075317	FUEL TANK BEAM S/A	Piaggio spare parts (POP)
940134	Fuel tank cap lock assy WITH KEY	Piaggio spare parts (POP)
925850	Fuel Tank Cap lock With key 870 model	Piaggio spare parts (POP)
B076481	FUEL TANK CROSS MEMBER S/A FR	Piaggio spare parts (POP)
567683	FUEL TANK LOCK	Piaggio spare parts (POP)
B041498	FUEL TANK MOUNTING -FRONT	Piaggio spare parts (POP)
B075323	FUEL TANK MTG BKT ASSLY	Piaggio spare parts (POP)
B075198	FUEL TANK NECK SUPPORT	Piaggio spare parts (POP)
B075243	FUEL TANK S/A	Piaggio spare parts (POP)
6A000773	FUEL TANK STRAP	Piaggio spare parts (POP)
602432	FUEL TANK SUB ASSEMBLY	Piaggio spare parts (POP)
644951	FUEL TANK SUB ASSLY-601 CARGO	Piaggio spare parts (POP)
B003123	FUEL TANK SUPPORT STRIP S/A	Piaggio spare parts (POP)
B076750	FUEL TANK TO FUEL FILTER	Piaggio spare parts (POP)
B074936	FUEL TANK UNIT- PORTER 1000	Piaggio spare parts (POP)
660188	FUEL TANK WITH TANK UNIT ASSLY.-482 (I)	Piaggio spare parts (POP)
662512	FUEL TUBE FILTER TO FUEL TANK	Piaggio spare parts (POP)
F002F20015	FUEL-INJECTION PUMP	Piaggio spare parts (POP)
ESP650DFP023	FUELRETURNLINE(INJECTOR)	Piaggio spare parts (POP)
ED43667	Fulcrum fuel pump	Piaggio spare parts (POP)
SST94179	Fulcrum screw removal tool -	Piaggio spare parts (POP)
L2750380	FULL CLUTCH CAP	Piaggio spare parts (POP)
L26300058	FULL CLUTCH CAP LDW 482 BS II (200 KG)	Piaggio spare parts (POP)
E43510745	Full Overhaul Kit 435	Piaggio spare parts (POP)
E43510749	Full Overhaul Kit 435 w/o Cyl Head &	Piaggio spare parts (POP)
E40010743	Full Overhaul Kit BS2 400	Piaggio spare parts (POP)
E40010748	Full Overhaul Kit BS2 400 w/o Cyl Head &	Piaggio spare parts (POP)
L7992022	FULLY FINISH CLUTCH GEAR	Piaggio spare parts (POP)
L7992021	FULLY FINISH CLUTCH GEAR	Piaggio spare parts (POP)
ESP650DNB029	FUR CLIP	Piaggio spare parts (POP)
292507	FUSE	Piaggio spare parts (POP)
B073630	FUSE (PORTER 1000)-20A	Piaggio spare parts (POP)

B073631	FUSE (PORTER 1000)-25A	Piaggio spare parts (POP)
B073632	FUSE (PORTER 1000)-30A	Piaggio spare parts (POP)
B073635	FUSE (PORTER 1000)-60A	Piaggio spare parts (POP)
925786	FUSE (VANAZ PT.NO-6025)	Piaggio spare parts (POP)
567706	FUSE 30 A	Piaggio spare parts (POP)
660109	FUSE BOX BRACKET	Piaggio spare parts (POP)
645276	Fuse Box Cover 6 Pole (TTP-06FC-06)	Piaggio spare parts (POP)
B075693	FUSE BOX MTG BRACKET	Piaggio spare parts (POP)
B076788	FUSE MICRO 10A LITTLE FUSE	Piaggio spare parts (POP)
B076789	FUSE MICRO 15A LITTLE FUSE	Piaggio spare parts (POP)
B073639	FUSE-80A (BOX)-PORTER 1000	Piaggio spare parts (POP)
E400011021R1	G 400 A BS-II RECON ENGINE	Piaggio spare parts (POP)
B006717	G.BOX (W/O CLUTCH ASSLY) MINI TRUK PLUS	Piaggio spare parts (POP)
B024021	G.BOX (W/O CLUTCH ASSLY)-PORTER 600	Piaggio spare parts (POP)
B024021SP	G.BOX (W/O CLUTCH ASSLY)-PORTER 600-SPD	Piaggio spare parts (POP)
930101639	G.YELLOW TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
E43531726	G435III AIR SHROUD PLASTIC	Piaggio spare parts (POP)
L3010277	GAITER BEARING FOR BELLO	Piaggio spare parts (POP)
L30102778	GAITER BEARING FOR BELLOW	Piaggio spare parts (POP)
930202586	GARDOROL DW 3601	Piaggio spare parts (POP)
B024692	GAS CYLINDER COVER LH ASSLY	Piaggio spare parts (POP)
B041301	GAS CYLINDER COVER LH ASSLY	Piaggio spare parts (POP)
B024694	GAS CYLINDER COVER RH ASSLY	Piaggio spare parts (POP)
B075327	GAS KIT W/ HS- LPG- PAX 200- (RH SHIFT)	Piaggio spare parts (POP)
B078003	GAS KIT W/ HS-CITY VAVE	Piaggio spare parts (POP)
B075355	GAS KIT W/ HS-LPG MONO- PAX (RH SHIFT)	Piaggio spare parts (POP)
B075328	GAS KIT W/Hs -CNG - PAX 200- (RH SHIFT)	Piaggio spare parts (POP)
6D000412	GAS KIT WIRING HARNESS - CNG (PAX 200)	Piaggio spare parts (POP)
B024270	GAS KIT WIRING HARNESS - CNG (PAX 200)	Piaggio spare parts (POP)
B024271	GAS KIT WIRING HARNESS - LPG (PAX 200)	Piaggio spare parts (POP)
6A000211	GAS PIPE REGULATOR TO MANIFOLD CNG	Piaggio spare parts (POP)
6A000210	GAS PIPE REGULATOR TO MANIFOLD LPG	Piaggio spare parts (POP)
198101	GAS SPRING	Piaggio spare parts (POP)
B016825	GAS VALVE COVER KIT	Piaggio spare parts (POP)
643878	GAS VENT ASSLY(VANAZ PT NO K-0401-19)	Piaggio spare parts (POP)
B041491	GAS VENT SUB ASSEMBLY-1	Piaggio spare parts (POP)
B041490	GAS VENT SUB ASSEMBLY-2	Piaggio spare parts (POP)
B078179	GAS_KIT_HARNESS-CNG/LPG	Piaggio spare parts (POP)
882765	GASCKET - EGR PIPE	Piaggio spare parts (POP)
889917	GASCKET - EGR PIPE	Piaggio spare parts (POP)
882769	GASCKET - EGR VALVE	Piaggio spare parts (POP)
882776	GASCKET - EGR VALVE PADMINI	Piaggio spare parts (POP)
632142	GASKET	Piaggio spare parts (POP)
L4775577	Gasket	Piaggio spare parts (POP)
L4775573	GASKET	Piaggio spare parts (POP)
569451	GASKET	Piaggio spare parts (POP)
120223011	GASKET	Piaggio spare parts (POP)

1E000360	GASKET	Piaggio spare parts (POP)
L4775578	GASKET	Piaggio spare parts (POP)
LG4431216	Gasket	Piaggio spare parts (POP)
L4775593	Gasket	Piaggio spare parts (POP)
E40006448	GASKET	Piaggio spare parts (POP)
B010639	GASKET	Piaggio spare parts (POP)
D8518587Z02	GASKET	Piaggio spare parts (POP)
KD4670060	GASKET	Piaggio spare parts (POP)
287174	GASKET	Piaggio spare parts (POP)
1A000826	GASKET	Piaggio spare parts (POP)
LG4770013	Gasket	Piaggio spare parts (POP)
B010533	GASKET	Piaggio spare parts (POP)
168201	GASKET	Piaggio spare parts (POP)
L4775579	GASKET	Piaggio spare parts (POP)
B010354	GASKET	Piaggio spare parts (POP)
GU01154230	Gasket	Piaggio spare parts (POP)
LG4601174	GASKET	Piaggio spare parts (POP)
142244	GASKET	Piaggio spare parts (POP)
889963	GASKET	Piaggio spare parts (POP)
676200	GASKET	Piaggio spare parts (POP)
GU05128230	Gasket	Piaggio spare parts (POP)
857451	Gasket	Piaggio spare parts (POP)
KD4400058	GASKET F 10	Piaggio spare parts (POP)
882085	GASKET - CRANKSHAFT TIMING END	Piaggio spare parts (POP)
A01S070002	GASKET - EGR PIPE FLANGE TO EGR COOLER	Piaggio spare parts (POP)
A01S070004	GASKET - EGR PIPE FLANGE TO EGR VALVE.	Piaggio spare parts (POP)
882773	GASKET - EGR VALVE	Piaggio spare parts (POP)
889820	GASKET - EXHAUST MANIFOLD	Piaggio spare parts (POP)
A01S070003	GASKET - EXHAUST MANIFOLD TO ATS	Piaggio spare parts (POP)
A01S070011	GASKET - EXHAUST MANIFOLD TO ATS -Dia.23	Piaggio spare parts (POP)
120239010	GASKET - GEAR SHIFTER HSG.	Piaggio spare parts (POP)
889158	GASKET - INLET MANIFOLD	Piaggio spare parts (POP)
889181	GASKET - THROTTLE BODY ADAPTOR	Piaggio spare parts (POP)
882605	GASKET - TURBOCHARGER OIL DRAIN	Piaggio spare parts (POP)
ED42941	Gasket (0.5 mm)Water outlet manifold	Piaggio spare parts (POP)
ESP650DGS008	GASKET (ADAPTORE GR VALVE)	Piaggio spare parts (POP)
A01S010002	GASKET (BARREL AND CRANKCASE)	Piaggio spare parts (POP)
ESP650DGS003	GASKET (EGR COOLER)	Piaggio spare parts (POP)
ESP650DGS004	GASKET (EGR VALVE-EGR PIPE)	Piaggio spare parts (POP)
129001014	GASKET (ENGINE PTO FACE)	Piaggio spare parts (POP)
ESP650DGS005	GASKET (EXHAUST FLANGE)	Piaggio spare parts (POP)
A01S070001	GASKET (EXHAUST FLANGE)	Piaggio spare parts (POP)
B074372	GASKET (EXHAUST)	Piaggio spare parts (POP)
ESP650DGS007	GASKET (INTAKE MANIFOLD TO EGR PIPE)	Piaggio spare parts (POP)
932294	Gasket (Paxx 200)	Piaggio spare parts (POP)
L4775580	GASKET 0,2	Piaggio spare parts (POP)
L4775582	GASKET 0,3	Piaggio spare parts (POP)

E5604580049	GASKET 0.5 mm.	Piaggio spare parts (POP)
L4775584	GASKET 1.53v1.67	Piaggio spare parts (POP)
L4775585	GASKET 1.66v1.82	Piaggio spare parts (POP)
L4775586	GASKET 1.85v2.01	Piaggio spare parts (POP)
B010342	GASKET- ADAPT/MANIFOLD	Piaggio spare parts (POP)
643829	GASKET ASSLY CONVEYOR	Piaggio spare parts (POP)
643830	GASKET ASSY ENGINE SIDE	Piaggio spare parts (POP)
L4775562	GASKET BETWEEN CRANKCASE/OIL PUMP	Piaggio spare parts (POP)
L4775596	GASKET CIRCULAR SECTION	Piaggio spare parts (POP)
877069	GASKET COVER AND HALF-CRANKCASE CLUTCH S	Piaggio spare parts (POP)
AP8120615	GASKET D3	Piaggio spare parts (POP)
ED43224	GASKET EGR PIPE	Piaggio spare parts (POP)
A015070005	GASKET EGR VALVE TO EGR COOLER	Piaggio spare parts (POP)
E43526151	GASKET EGR VALVEEGR PIPE	Piaggio spare parts (POP)
128071012	GASKET ENGINE SIDE COVER	Piaggio spare parts (POP)
B001844	GASKET- ENGINE SIDE COVER	Piaggio spare parts (POP)
E43526150	GASKET EX MANIFOLDEGR PIPE	Piaggio spare parts (POP)
E87016193	GASKET EXHAUST	Piaggio spare parts (POP)
E87026113	GASKET EXHAUST AT MANIFOLD / OXYCAT	Piaggio spare parts (POP)
KD4501101	GASKET EXHAUST MANIFOLD	Piaggio spare parts (POP)
KD4490093	GASKET for AIR INLET FLANGE	Piaggio spare parts (POP)
KD44312148	GASKET FOR CONTROL PANEL	Piaggio spare parts (POP)
KD4431214	GASKET FOR CONTROL PANEL	Piaggio spare parts (POP)
LG4601184	GASKET FOR ENGINE FLANGE	Piaggio spare parts (POP)
KD4601184	GASKET FOR ENGINE FLANGER	Piaggio spare parts (POP)
B001479	GASKET FOR FRONT MUDGUARD	Piaggio spare parts (POP)
LG4601211	GASKET FOR LGA 280 CRANK CASE	Piaggio spare parts (POP)
E870161108	GASKET FRONT	Piaggio spare parts (POP)
632604	GASKET FRONT DOOR OPENING	Piaggio spare parts (POP)
127141016	GASKET G.B. COVER	Piaggio spare parts (POP)
1A017185	GASKET GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A006859	GASKET GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A010186	GASKET GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A012334	GASKET GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
568671	GASKET -GLOVE BOX COVER	Piaggio spare parts (POP)
E87016197	GASKET GOVERNOR	Piaggio spare parts (POP)
6D000426	GASKET INBUILT LENS & HOUSING	Piaggio spare parts (POP)
E43526149	GASKET INTAKE FLANGE EGR VALVE	Piaggio spare parts (POP)
E10S070001	GASKET INTAKE MANIFOLD 435 BSIV	Piaggio spare parts (POP)
B010357	GASKET OIL SUMP	Piaggio spare parts (POP)
KD4730949	GASKET PUSH ROD VANE 15LD401	Piaggio spare parts (POP)
950300407	GASKET REMOVER	Piaggio spare parts (POP)
AP8104597	Gasket ring	Piaggio spare parts (POP)
82897R	GASKET RING 20.30.5	Piaggio spare parts (POP)
KIT95002	GASKET SET PAXX 200	Piaggio spare parts (POP)
KIT95002R	GASKET SET PAXX 200	Piaggio spare parts (POP)
B024030	GASKET- SHIFTER HOUSING	Piaggio spare parts (POP)

165031013	GASKET- SPEED DRIVE HSG.	Piaggio spare parts (POP)
E87026159	GASKET TUBE ASSY	Piaggio spare parts (POP)
E87016188	GASKET WATER INLET	Piaggio spare parts (POP)
932284	GASKET(BNA)	Piaggio spare parts (POP)
E10S070003	GASKET(EGR VALVE-EGR PIPE)	Piaggio spare parts (POP)
E10S070004	GASKET(EX MANIFOLD - EGR PIPE 501 BSIV)	Piaggio spare parts (POP)
B007840	GASKET, CONVERTER IN	Piaggio spare parts (POP)
660559	GASKET, TURBINE OUTLET	Piaggio spare parts (POP)
163663	GASKET, WINDOW GLASS	Piaggio spare parts (POP)
E40036136	GASKET:ROCKER COVER	Piaggio spare parts (POP)
E10P140002	GASKET_ Sogefi	Piaggio spare parts (POP)
889174	GASKET-ACCESS COVER- CYLINDER HEAD COVER	Piaggio spare parts (POP)
ESP650DGS006	GASKET-AIR INTAKE MANIFOLD	Piaggio spare parts (POP)
E04S070003	GASKET-AIR INTAKE MANIFOLD	Piaggio spare parts (POP)
B024029	GASKET-BACK COVER	Piaggio spare parts (POP)
567879	GASKET-CHASSIS TO AIR FILTER	Piaggio spare parts (POP)
ESP650DGS011	GASKET-CYL HEAD THK-1 (COMPRESSED)	Piaggio spare parts (POP)
ESP650DGS012	GASKET-CYL HEAD THK-1.2(COMPRESSED)	Piaggio spare parts (POP)
ESP650DGS015	GASKET-CYL HEAD-MLS-Gasket-1-Notch	Piaggio spare parts (POP)
ESP650DGS016	GASKET-CYL HEAD-MLS-Gasket-2-Notch	Piaggio spare parts (POP)
ESP650DGS017	GASKET-CYL HEAD-MLS-Gasket-3-Notch	Piaggio spare parts (POP)
B002415	GASKET-DIFF.COVER (510GB)	Piaggio spare parts (POP)
A01S070007	Gasket-EXH MANIFOLD TO EGR PIPE (HOT END)	Piaggio spare parts (POP)
B076802	GASKET-FR MUDGUARD PARTITION_501 UPGRADE	Piaggio spare parts (POP)
B076801	GASKET-FR MUDGUARD_501 UPGRADE	Piaggio spare parts (POP)
B074063	GASKET-FR MUDGUARD_ UPGRADE	Piaggio spare parts (POP)
568703	GASKET-FRT MUDGUARD SIDE	Piaggio spare parts (POP)
568702	GASKET-FRT MUDGUARD TOP	Piaggio spare parts (POP)
128081017	GASKET-GEAR SHIFTER HSG.	Piaggio spare parts (POP)
ESP650DGS014	GASKET-GUIDE PUSH ROD TUBE	Piaggio spare parts (POP)
E87016195	GASKETINTAKE	Piaggio spare parts (POP)
B001501	GASKET-PTO COVER & ENGINE SIDE COVER	Piaggio spare parts (POP)
E87026111	GASKETROCKER	Piaggio spare parts (POP)
B024959	GASKET-SIDE COVER	Piaggio spare parts (POP)
E87026107	GASKETTHERMOSTAT	Piaggio spare parts (POP)
E60016181	GASKET-WATER OUTLET	Piaggio spare parts (POP)
ED32804	GASKETWATER PUMP	Piaggio spare parts (POP)
B074246	GASKIT W/Hs - CNG (PAX 200 CARGO)	Piaggio spare parts (POP)
6D000408	GASKIT W/Hs - CNG (PAX 200 CARGO)	Piaggio spare parts (POP)
B074245	GASKIT W/Hs - LPG (PAX 200 CARGO)	Piaggio spare parts (POP)
660354	GASOLENE CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
660353	GASOLENE CONTROL TRANSMISSION ASSEMBLY	Piaggio spare parts (POP)
587802	GASOLINE CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
587806	CLUTCH CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
B073470R	GASOLINE CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B074184R	GASOLINE CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B078530	GASOLINE CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)

662568	GASOLINE CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
B078460	GASOLINE CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
B078532R	GASOLINE CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
B002615	GASOLINE CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
644727	GATE S/A RR BODY TAIL	Piaggio spare parts (POP)
B001215	GATE S/A RR BODY TAIL	Piaggio spare parts (POP)
644727ED	GATE S/A RR BODY TAIL- (CED)	Piaggio spare parts (POP)
B001215ED	GATE S/A RR BODY TAIL 870 (CED)	Piaggio spare parts (POP)
B006293ED	GATE S/A RR BODY TAIL GATE(MINI 441)-CED	Piaggio spare parts (POP)
644680	GATE S/A, RR BODY SIDE LH	Piaggio spare parts (POP)
B002714	GATE S/A, RR BODY SIDE LH (CED)	Piaggio spare parts (POP)
B074227ED	GATE S/A, RR BODY SIDE, LH-ED	Piaggio spare parts (POP)
644725	GATE S/A, RR SIDE GATE, RH	Piaggio spare parts (POP)
B002715	GATE S/A, RR SIDE GATE, RH (CED)	Piaggio spare parts (POP)
B074228ED	GATE S/A, RR SIDE GATE, RH-ED	Piaggio spare parts (POP)
CM286302	GAUGED SPACER (thick. 1.75 mm)	Piaggio spare parts (POP)
CM286301	GAUGED SPACER (thick. 1.7mm)	Piaggio spare parts (POP)
CM286303	GAUGED SPACER (thick. 1.8 mm)	Piaggio spare parts (POP)
CM286304	GAUGED SPACER (thick. 1.85 mm)	Piaggio spare parts (POP)
CM286305	GAUGED SPACER (thick. 1.9 mm)	Piaggio spare parts (POP)
CM286306	GAUGED SPACER (thick. 1.95 mm)	Piaggio spare parts (POP)
CM286307	GAUGED SPACER (thick. 2 mm)	Piaggio spare parts (POP)
CM286308	GAUGED SPACER (thick. 2.05 mm)	Piaggio spare parts (POP)
CM286309	GAUGED SPACER (thick. 2.1 mm)	Piaggio spare parts (POP)
CM286310	GAUGED SPACER (thick. 2.15 mm)	Piaggio spare parts (POP)
CM286311	GAUGED SPACER (thick. 2.2 mm)	Piaggio spare parts (POP)
CM286312	GAUGED SPACER (thick. 2.25 mm)	Piaggio spare parts (POP)
CM286313	GAUGED SPACER (thick. 2.3 mm)	Piaggio spare parts (POP)
CM286314	GAUGED SPACER (thick. 2.35 mm)	Piaggio spare parts (POP)
CM286315	GAUGED SPACER (thick. 2.4 mm)	Piaggio spare parts (POP)
CM286316	GAUGED SPACER (thick. 2.45 mm)	Piaggio spare parts (POP)
CM286317	GAUGED SPACER (thick. 2.5 mm)	Piaggio spare parts (POP)
CM286318	GAUGED SPACER (thick. 2.55 mm)	Piaggio spare parts (POP)
CM286319	GAUGED SPACER (thick. 2.6 mm)	Piaggio spare parts (POP)
CM286320	GAUGED SPACER (thick. 2.65 mm)	Piaggio spare parts (POP)
CM286321	GAUGED SPACER (thick. 2.7 mm)	Piaggio spare parts (POP)
CM286322	GAUGED SPACER (thick. 2.75 mm)	Piaggio spare parts (POP)
CM286323	GAUGED SPACER (thick. 2.8 mm)	Piaggio spare parts (POP)
CM286324	GAUGED SPACER (thick. 2.85 mm)	Piaggio spare parts (POP)
CM286325	GAUGED SPACER (thick. 2.9 mm)	Piaggio spare parts (POP)
B006327	GB EXT (W/O FM & W/O CLUTCH ASSLY) PASS	Piaggio spare parts (POP)
B009168	GB EXT.MTG. (W/O CLUTCH ASSLY) APE CITY	Piaggio spare parts (POP)
B076657	GB EXT.MTG.(W/O CLUTCH ASSLY) PASS BSIV	Piaggio spare parts (POP)
B076830	GB EXT.MTG.(W/O CLUTCH ASSLY) PASS. STD	Piaggio spare parts (POP)
6A000115	GB EXT.MTG.(W/O CLUTCH ASSLY) PASSENGER	Piaggio spare parts (POP)
B002320	GB EXT.MTG.(W/O CLUTCH ASSLY) PASSENGER	Piaggio spare parts (POP)
B002322	GB EXT.MTG.(W/O CLUTCH ASSLY) PICK UP	Piaggio spare parts (POP)

B076669	GB EXT.MTG.(W/O CLUTCH ASSLY) PICKUP BS4	Piaggio spare parts (POP)
B076881	GB EXT.MTG.(W/O CLUTCH ASSLY) PICKUP STD	Piaggio spare parts (POP)
L2193202	GDU WITH 18 SEC POST GLOW	Piaggio spare parts (POP)
KD4936264	GEAR	Piaggio spare parts (POP)
03G160334	gear 1 input layshaft	Piaggio spare parts (POP)
03G160304	gear 2 lay shaft	Piaggio spare parts (POP)
03G160217	gear 3 input	Piaggio spare parts (POP)
03G160336	gear 3 lay shaft	Piaggio spare parts (POP)
03G160337	gear 4 layshaft	Piaggio spare parts (POP)
03G160216	gear 4 shaft input	Piaggio spare parts (POP)
03G160338	gear 5 layshaft	Piaggio spare parts (POP)
03G160215	gear 5 shaft input	Piaggio spare parts (POP)
03G161713	gear bevel differential pin	Piaggio spare parts (POP)
03G161712	gear - bevel - differential - side	Piaggio spare parts (POP)
127401014	GEAR R.C.(PAS)	Piaggio spare parts (POP)
03G160402	gear reverse idler	Piaggio spare parts (POP)
03G160633	gear speedo diff	Piaggio spare parts (POP)
970300605	GEAR ADAPATOR N/R BEARING PRESSING TOOL	Piaggio spare parts (POP)
441011	GEAR ADOPTER BEARING / OIL SEAL ISTALLER	Piaggio spare parts (POP)
B011738	GEAR ASSEMBLY - IDLER	Piaggio spare parts (POP)
889626	GEAR ASSEMBLY - IDLER	Piaggio spare parts (POP)
B004148	GEAR ASSY STEERING (LHD)	Piaggio spare parts (POP)
645043	GEAR ASSY. STEERING	Piaggio spare parts (POP)
020850Y	GEAR BLOCK	Piaggio spare parts (POP)
1F000695	GEAR BOX	Piaggio spare parts (POP)
L7865127A	GEAR BOX	Piaggio spare parts (POP)
B002319	GEAR BOX (W/O CLUTCH ASSLY) PASSENGER	Piaggio spare parts (POP)
B002724	GEAR BOX (W/O CLUTCH ASSLY) MINI TRUK	Piaggio spare parts (POP)
B002321	GEAR BOX (W/O CLUTCH ASSLY) PICK UP	Piaggio spare parts (POP)
6A000869	GEAR BOX APE EV	Piaggio spare parts (POP)
B0118804	GEAR BOX ASSEMBLY (BNA)	Piaggio spare parts (POP)
B011880	GEAR BOX ASSEMBLY (BNA)	Piaggio spare parts (POP)
227910014	GEAR BOX ASSLY (JV) COMMERCIAL	Piaggio spare parts (POP)
227911018	GEAR BOX ASSLY (JV) COMMERCIAL	Piaggio spare parts (POP)
B001879	GEAR BOX ASSLY (JV) COMMERCIAL	Piaggio spare parts (POP)
B001874	GEAR BOX ASSLY (JV) PASSENGER	Piaggio spare parts (POP)
127910015	GEAR BOX ASSLY (JV) PASSENGER	Piaggio spare parts (POP)
127918017	GEAR BOX ASSLY (JV) PASSENGER	Piaggio spare parts (POP)
B011574	GEAR BOX BRACKET	Piaggio spare parts (POP)
B011347	GEAR BOX COVER	Piaggio spare parts (POP)
B011926	GEAR BOX COVER	Piaggio spare parts (POP)
1A010093	GEAR BOX COVER	Piaggio spare parts (POP)
120301019	GEAR BOX COVER	Piaggio spare parts (POP)
127112015	GEAR BOX COVER	Piaggio spare parts (POP)
127121016	GEAR BOX COVER	Piaggio spare parts (POP)
SP227230012	GEAR BOX COVER ASSLY COMP (501 CARGO)SPD	Piaggio spare parts (POP)
227230012	GEAR BOX COVER ASSLY COMP.(CARGO)	Piaggio spare parts (POP)

BS4_1A010093	GEAR BOX COVER_BS4	Piaggio spare parts (POP)
T900405	GEAR BOX MTG STAND	Piaggio spare parts (POP)
B011887	GEAR BOX WITH I.P.	Piaggio spare parts (POP)
SPB0118874	GEAR BOX WITH I.P. - PHASE 1- SPD	Piaggio spare parts (POP)
6A001554	GEAR BOX, APE 501 CARGO EV	Piaggio spare parts (POP)
660764	GEAR CABLE CENTERING TOOL	Piaggio spare parts (POP)
643990	GEAR CABLE INNER 601 CARGO	Piaggio spare parts (POP)
6A001249	GEAR CHANGE CONTROL TUBE ASSY	Piaggio spare parts (POP)
611772	GEAR CHANGE LEVER	Piaggio spare parts (POP)
897360	Gear change lever	Piaggio spare parts (POP)
B002540	GEAR CONTROL ASSY.	Piaggio spare parts (POP)
614111	GEAR CONTROL ASSY.	Piaggio spare parts (POP)
L7865122	GEAR CONTROL BOX	Piaggio spare parts (POP)
L7865124	GEAR CONTROL BOX COMPLETE	Piaggio spare parts (POP)
L7865127	GEAR CONTROL BOX COMPLETE	Piaggio spare parts (POP)
652048	GEAR CONTROL CABLE	Piaggio spare parts (POP)
644954	GEAR CONTROL CABLE - (601-CARGO)	Piaggio spare parts (POP)
644955	GEAR CONTROL CABLE - (601-PASS)	Piaggio spare parts (POP)
6A001398	GEAR CONTROL CABLE (BLACK)	Piaggio spare parts (POP)
6A001399	GEAR CONTROL CABLE (WHITE)	Piaggio spare parts (POP)
569014	GEAR CONTROL CABLE, ASSY	Piaggio spare parts (POP)
109775	GEAR CONTROL LEVER S/A	Piaggio spare parts (POP)
L8235068	GEAR CONTROL POSITIONER	Piaggio spare parts (POP)
L8570001	GEAR CONTROL ROD	Piaggio spare parts (POP)
L8570005	GEAR CONTROL ROD	Piaggio spare parts (POP)
B041057	GEAR CONTROL SHAFT ASSEMBLY	Piaggio spare parts (POP)
6A000375	GEAR CONTROL TUBE ASSY WITH CL. PA	Piaggio spare parts (POP)
E87009653	GEAR CRANK SHAFT	Piaggio spare parts (POP)
889628	GEAR CRANKSHAFT	Piaggio spare parts (POP)
E87009680	Gear crown wheelMachined	Piaggio spare parts (POP)
03G160670	GEAR CROWNWHEEL MACHINED	Piaggio spare parts (POP)
SP1A000242	GEAR DRIVE SHAFT WITH I.P APEPAX - SPD	Piaggio spare parts (POP)
B016198	GEAR DRIVE SHAFT WITH I.P.	Piaggio spare parts (POP)
1A000242	GEAR DRIVE SHAFT WITH I.P.	Piaggio spare parts (POP)
E87121784	Gear End Cover	Piaggio spare parts (POP)
E87011784A	GEAR END COVER	Piaggio spare parts (POP)
SST94059	GEAR END COVER BUSH PULLER	Piaggio spare parts (POP)
127552019	GEAR F.D. (VE) (PASS)	Piaggio spare parts (POP)
227555010	GEAR F.D.(CARGO)	Piaggio spare parts (POP)
127555016	GEAR FD (PAS)	Piaggio spare parts (POP)
E87009654	GEAR FIP CAM SHAFT	Piaggio spare parts (POP)
B023987	GEAR FIRST SPEED	Piaggio spare parts (POP)
B041041	GEAR FOURTH DRIVEN	Piaggio spare parts (POP)
B041040	GEAR FOURTH DRIVING	Piaggio spare parts (POP)
882157	GEAR FUEL PUMP	Piaggio spare parts (POP)
B023994	GEAR IDLER	Piaggio spare parts (POP)
B042579	GEAR IDLER REVERSE	Piaggio spare parts (POP)

851843	Gear lever	Piaggio spare parts (POP)
860402	Gear lever	Piaggio spare parts (POP)
616948	GEAR LEVER PROTECTION GROMET	Piaggio spare parts (POP)
1A008486	GEAR LEVER WITH I.P.	Piaggio spare parts (POP)
E87009656	GEAR LUB OIL PUMP	Piaggio spare parts (POP)
03G160322	GEAR MUDFLAT	Piaggio spare parts (POP)
E07509605	Gear oil pump	Piaggio spare parts (POP)
925567	GEAR PLATE ASSLY (034500/4)	Piaggio spare parts (POP)
227401013	GEAR R.C. (CARGO)	Piaggio spare parts (POP)
127402513	GEAR R.C.(VE)	Piaggio spare parts (POP)
03A160402	GEAR REVERSE IDLER ASSEMBLY	Piaggio spare parts (POP)
03G160345	gear reverse synchroniser sleeve	Piaggio spare parts (POP)
B041043	GEAR SECOND DRIVEN	Piaggio spare parts (POP)
660763	GEAR SELECTOR LEVER LOCKING TOOL	Piaggio spare parts (POP)
6A001458	GEAR SHIFT CABLE ASSY	Piaggio spare parts (POP)
6A001459	GEAR SHIFT CABLE ASSY	Piaggio spare parts (POP)
1A016574	Gear shift lever	Piaggio spare parts (POP)
1A017139	Gear shift lever	Piaggio spare parts (POP)
1A010038	Gear shift lever	Piaggio spare parts (POP)
1A012039	Gear shift lever	Piaggio spare parts (POP)
SP1A017141	GEAR SHIFTER ASSEMBLY_SPD	Piaggio spare parts (POP)
660300	GEAR SHIFTER ASSLY	Piaggio spare parts (POP)
B002117	GEAR SHIFTER ASSLY COMPLEPTE APE MINI	Piaggio spare parts (POP)
1A001474	GEAR SHIFTER ASSY	Piaggio spare parts (POP)
SP1A001474	GEAR SHIFTER ASSY APE PAX - SPD	Piaggio spare parts (POP)
SP1A013360	GEAR SHIFTER ASSY_SPD	Piaggio spare parts (POP)
1A016556	GEAR SHIFTER COVER	Piaggio spare parts (POP)
1A013351	GEAR SHIFTER COVER	Piaggio spare parts (POP)
1A017095	GEAR SHIFTER COVER	Piaggio spare parts (POP)
B042758	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
127641016	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A010008	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A007599	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
CM312201	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A012182	GEAR SHIFTER HOUSING	Piaggio spare parts (POP)
1A013421	GEAR SHIFTER HOUSING GASKET	Piaggio spare parts (POP)
B009454	GEAR SHIFTER LEVER	Piaggio spare parts (POP)
1A007605	GEAR SHIFTER LEVER	Piaggio spare parts (POP)
1A009682	GEAR SHIFTER LEVER	Piaggio spare parts (POP)
526023017	GEAR SHIFTER LEVER(41734)	Piaggio spare parts (POP)
132136	GEAR SUN	Piaggio spare parts (POP)
132136R	GEAR SUN	Piaggio spare parts (POP)
B041402	GEAR SUN - 510	Piaggio spare parts (POP)
940028	Gear Sun & Differential Gear	Piaggio spare parts (POP)
KIT95013	Gear Sun & Differential Gear_Porter 600	Piaggio spare parts (POP)
KIT95013R	Gear Sun & Differential Gear_Porter 600	Piaggio spare parts (POP)
B041042	GEAR THIRD DRIVEN	Piaggio spare parts (POP)

E87009655	GEAR VALVE CAM SHAFT	Piaggio spare parts (POP)
KD4910075	GEAR-1	Piaggio spare parts (POP)
KD4936256	GEAR-3	Piaggio spare parts (POP)
KD4936292	GEAR-3	Piaggio spare parts (POP)
KD2032392	GEARBOX ADAPTER	Piaggio spare parts (POP)
KD2032416	GEARBOX ADAPTER	Piaggio spare parts (POP)
LG2032392	GEARBOX ADAPTER BELL ASS.Y	Piaggio spare parts (POP)
CM305004	GEARBOX ASSEMBLY (APE 501 XTRA HS)	Piaggio spare parts (POP)
CM305003	GEARBOX ASSEMBLY (APE 501)	Piaggio spare parts (POP)
CM305002	GEARBOX ASSEMBLY (APE 501) PASS	Piaggio spare parts (POP)
B041064	GEARBOX CONTROL ASSEMBLY	Piaggio spare parts (POP)
889207	GEARBOX CONTROL ASSEMBLY	Piaggio spare parts (POP)
1A011295	GEARBOX CONTROL ASSEMBLY	Piaggio spare parts (POP)
1F000638	GEARBOX CONTROL ASSEMBLT	Piaggio spare parts (POP)
B041063	GEARBOX CONTROL COVER WITH I.P.	Piaggio spare parts (POP)
1F000501	GEARBOX COVER	Piaggio spare parts (POP)
ESP650DFP008	GEAR-FIP CAMSHAFT	Piaggio spare parts (POP)
ESP650DLB017	GEAR-OIL PUMP	Piaggio spare parts (POP)
B042759	GEARS REFERENCE SENSOR.	Piaggio spare parts (POP)
ESP650DFP011	GEAR-VALVE CAMSHAFT	Piaggio spare parts (POP)
A01A060015	GEN 3.1 TAPPET BOLT REPLACEMENT KIT	Piaggio spare parts (POP)
894250	Giacca Imbottita con Prima Loft L	Piaggio spare parts (POP)
894270	Giubbetto nylon reversible red L	Piaggio spare parts (POP)
B073645	GLASS FRONT DOOR LH	Piaggio spare parts (POP)
662440	GLASS FRONT DOOR LH.	Piaggio spare parts (POP)
B073646	GLASS FRONT DOOR RH	Piaggio spare parts (POP)
662439	GLASS FRONT DOOR RH.	Piaggio spare parts (POP)
932297	Glass Plate Instrument Cluster	Piaggio spare parts (POP)
613651	GLASS, BACK	Piaggio spare parts (POP)
163665	GLASS, VENT	Piaggio spare parts (POP)
613646	GLASS, WINDSH	Piaggio spare parts (POP)
B024735	GLOBE BOX LOCK WITH KEY	Piaggio spare parts (POP)
604548	GLOVE BOX COVER	Piaggio spare parts (POP)
B041535	GLOVE BOX COVER	Piaggio spare parts (POP)
B009040	GLOVE BOX COVER (MINITRUK)	Piaggio spare parts (POP)
644007	GLOVE BOX LOCK	Piaggio spare parts (POP)
645056	GLOVE BOX LOCK	Piaggio spare parts (POP)
925700	GLOVE BOX LOCK WITH KEY	Piaggio spare parts (POP)
940131	GLOVE BOX LOCK WITH KEY	Piaggio spare parts (POP)
B077538	Glove Box outer lid Assembly-for SPD	Piaggio spare parts (POP)
602483	GLOVE COMPARTMENT COVER	Piaggio spare parts (POP)
B006741	GLOW DURATION UNIT (LDW 482 BS-III)	Piaggio spare parts (POP)
L2100096	GLOW PLUG	Piaggio spare parts (POP)
L2100108	GLOW PLUG	Piaggio spare parts (POP)
889767	GLOW PLUG	Piaggio spare parts (POP)
L2100097	Glow plug	Piaggio spare parts (POP)
A01G140010	GLOW PLUG (GLP2E) - for post glow strate	Piaggio spare parts (POP)

ED33369	GOV SUPPORT ASSEMBLY	Piaggio spare parts (POP)
E520878542	GOV SUPT ASSY	Piaggio spare parts (POP)
KD4896414	GOV. ASSY.	Piaggio spare parts (POP)
E50005131	GOV. LEVER	Piaggio spare parts (POP)
E500565527	GOV.SPRING	Piaggio spare parts (POP)
L2165112	GOVERNER CASE	Piaggio spare parts (POP)
SST94055	GOVERNER GEAR PULLER	Piaggio spare parts (POP)
E270208529	Governor bell	Piaggio spare parts (POP)
E500208572	GOVERNOR BELL (STEEL)	Piaggio spare parts (POP)
E870022111	GOVERNOR COLLAR	Piaggio spare parts (POP)
E07508001	Governor cover	Piaggio spare parts (POP)
E87011790	GOVERNOR COVER	Piaggio spare parts (POP)
E87121783	Governor Cover (Machined)	Piaggio spare parts (POP)
KD2750511	Governor Cover assly KD 441	Piaggio spare parts (POP)
E870051117	GOVERNOR FLYWEIGHT	Piaggio spare parts (POP)
E870051122	GOVERNOR FORK ASSY	Piaggio spare parts (POP)
E500493620	GOVERNOR GEAR	Piaggio spare parts (POP)
E07509687	Governor Gear	Piaggio spare parts (POP)
E50010157	GOVERNOR GEAR ASSEMBLY	Piaggio spare parts (POP)
E07505199	Governor gear pin assly. Consisting of	Piaggio spare parts (POP)
E270520086	Governor Lever	Piaggio spare parts (POP)
E50010103	GOVERNOR LEVER ASSY.	Piaggio spare parts (POP)
KD5201381	GOVERNOR LEVER FOR 15LD400-440	Piaggio spare parts (POP)
E40009645	GOVERNOR SPRING ASSY.	Piaggio spare parts (POP)
E43521752	GOVERNOR SUPPORT ASSEMBLY	Piaggio spare parts (POP)
E40015173	Governor Support Assembly	Piaggio spare parts (POP)
E43515174	Governor Support Assembly G435	Piaggio spare parts (POP)
E5208785129	GOVERNOR SUPPORT ASSY. CONSISTING	Piaggio spare parts (POP)
E87001828	GOVERNOR SUPPORT BRACKET ASSLY(COMPLETE	Piaggio spare parts (POP)
020859Y	GRAFICA PER PANNELLI ATTREZZI RSV4	Piaggio spare parts (POP)
874946	GRAPHITE BUSH	Piaggio spare parts (POP)
CM305001	GREARBOX ASSEMBLY APÉ 501 CARGO	Piaggio spare parts (POP)
124113018	GREASE NIPPLE M6	Piaggio spare parts (POP)
B073726	GREAVES ENGINE 650cc- BS-IV	Piaggio spare parts (POP)
567587	GRID	Piaggio spare parts (POP)
KD7366058	GRID OIL DRAUGHT FOR 15LD401	Piaggio spare parts (POP)
KD7366061	GRID OIL DRAUGHT FOR 15LD401	Piaggio spare parts (POP)
263943	GRIP	Piaggio spare parts (POP)
604618	GRIP- HAND BRAKE CONTROL LEVER	Piaggio spare parts (POP)
B073849	GRIP RH HANDLEBAR	Piaggio spare parts (POP)
D7461787Z01	GRIP, ASSIST, RR	Piaggio spare parts (POP)
E07515517	GROMMET	Piaggio spare parts (POP)
567742	GROMMET	Piaggio spare parts (POP)
632671	GROMMET	Piaggio spare parts (POP)
632653	GROMMET	Piaggio spare parts (POP)
632654	GROMMET	Piaggio spare parts (POP)
B076606	GROMMET	Piaggio spare parts (POP)

15478	GROMMET	Piaggio spare parts (POP)
6B002781	GROMMET	Piaggio spare parts (POP)
632500	GROMMET	Piaggio spare parts (POP)
119975	GROMMET	Piaggio spare parts (POP)
569155	GROMMET	Piaggio spare parts (POP)
569682	GROMMET	Piaggio spare parts (POP)
645625	GROMMET	Piaggio spare parts (POP)
D9004480352	GROMMET	Piaggio spare parts (POP)
568140	GROMMET	Piaggio spare parts (POP)
1E000358	GROMMET	Piaggio spare parts (POP)
652252	GROMMET	Piaggio spare parts (POP)
567921	GROMMET	Piaggio spare parts (POP)
660189	GROMMET	Piaggio spare parts (POP)
105392	GROMMET	Piaggio spare parts (POP)
644473	GROMMET	Piaggio spare parts (POP)
178610	GROMMET	Piaggio spare parts (POP)
6A000756	GROMMET	Piaggio spare parts (POP)
6D000227	GROMMET	Piaggio spare parts (POP)
76227	GROMMET	Piaggio spare parts (POP)
6D000251	GROMMET	Piaggio spare parts (POP)
D9004480396	GROMMET	Piaggio spare parts (POP)
6D000514	GROMMET	Piaggio spare parts (POP)
6D000099	GROMMET	Piaggio spare parts (POP)
6D000370	GROMMET	Piaggio spare parts (POP)
6B000174	GROMMET	Piaggio spare parts (POP)
566737	GROMMET	Piaggio spare parts (POP)
6A001315	GROMMET	Piaggio spare parts (POP)
1A019884	GROMMET	Piaggio spare parts (POP)
6A001155	GROMMET	Piaggio spare parts (POP)
D9004480378	GROMMET	Piaggio spare parts (POP)
B075979	GROMMET (DIA-28)	Piaggio spare parts (POP)
6B001519	Grommet (guide for latch opening link)	Piaggio spare parts (POP)
B002539	GROMMET FOR DIA 7 HOLE ON DOME	Piaggio spare parts (POP)
6A000233	GROMMET FOR FILLER NECK	Piaggio spare parts (POP)
B075989	GROMMET FRT PART OF CENTRAL BEAM	Piaggio spare parts (POP)
662427	GROMMET GLASS FRONT DOOR	Piaggio spare parts (POP)
566260	GROMMET HEADLAMP MOUNTING	Piaggio spare parts (POP)
925593	GROMMET HL PARKING LAMP (LUMAX)	Piaggio spare parts (POP)
925594	GROMMET HL PARKING LAMP (NEOLITE)	Piaggio spare parts (POP)
B077314	GROMMET INTAKE HOSE GUIDE	Piaggio spare parts (POP)
B075981	GROMMET REAR PART OF CENTRAL BEAM	Piaggio spare parts (POP)
B077480	GROMMET RR PART OF CENTRAL BEAM ASSLY	Piaggio spare parts (POP)
B075964	GROMMET RR PART OF CENTRAL BEAM ASSLY	Piaggio spare parts (POP)
B002412	GROMMET WIRING & HAND BRAKE	Piaggio spare parts (POP)
6D001037	GROMMET, DIA 68MM	Piaggio spare parts (POP)
D9004189019	GROMMET, SCRE	Piaggio spare parts (POP)
D9004189001	GROMMET, SCREW	Piaggio spare parts (POP)

B006638	GROMMET-LOWER BACK WALL	Piaggio spare parts (POP)
643156	GROUND WIRE	Piaggio spare parts (POP)
1D001894	GROUND WIRE	Piaggio spare parts (POP)
680217	GROUND WIRE	Piaggio spare parts (POP)
B003731R	GROUP CLUTCH DISC ASSLY (FRICTION PLATE)	Piaggio spare parts (POP)
B003766	GROUP CNG KIT (FOR BODY MTG. ASSLY)	Piaggio spare parts (POP)
660181	GROUP CNG KIT (FOR BODY MTG. ASSLY)	Piaggio spare parts (POP)
B003769	GROUP CNG KIT (OFFLINE VEHICLE ASSLY)	Piaggio spare parts (POP)
660182	GROUP CNG KIT (OFFLINE VEHICLE ASSLY)	Piaggio spare parts (POP)
632847	GROUP FRT MOULDING SUB ASSLY	Piaggio spare parts (POP)
B009124	GROUP LPG KIT (VEHICLE ASSLY)	Piaggio spare parts (POP)
660016	GROUP LPG KIT (VEHICLE ASSLY)	Piaggio spare parts (POP)
B003764	GROUP LPG KIT APE CITY (VEHICLE ASSLY)	Piaggio spare parts (POP)
B003962	GROUP LPG KIT CITY (BODY MTG. ASSLY)	Piaggio spare parts (POP)
B003732R	GROUPCLUTCH COVER ASSLY (PRESSURE PLATE)	Piaggio spare parts (POP)
644997R	GROUP-STEERING POST ASSY.	Piaggio spare parts (POP)
A01B010002	GRUB SCREW - 1/8 BSPT (Taper)	Piaggio spare parts (POP)
E07520435	Grub screw on pto cover	Piaggio spare parts (POP)
A01B010001	GRUB SCREW (M8x1.25x10)	Piaggio spare parts (POP)
A01B010003	GRUB SCREW- 3/8 BSPT (Taper)	Piaggio spare parts (POP)
B011041	GUARD	Piaggio spare parts (POP)
B000466	GUARD COWLING	Piaggio spare parts (POP)
E40019528	GUARD PLATE	Piaggio spare parts (POP)
ED32131	GUARD PLATE	Piaggio spare parts (POP)
KD4580180	GUARNIZIONE/GASKET S A 10	Piaggio spare parts (POP)
E07511409	Gudgeon pin	Piaggio spare parts (POP)
E5408480091	Gugeon pin	Piaggio spare parts (POP)
E5408480091A	Gugeon pin	Piaggio spare parts (POP)
929222	GUIDE FOR 929217	Piaggio spare parts (POP)
E273484007	Guide push rod	Piaggio spare parts (POP)
SST94170	Guide ring for piston ass. in Barrel DSL	Piaggio spare parts (POP)
23823 M	GUIDE STOP CABLE	Piaggio spare parts (POP)
D4552387211	GUIDE, RACK	Piaggio spare parts (POP)
ESP650DCH023	GUIDE-PUSH ROD TUBE	Piaggio spare parts (POP)
ED40641	GUIDING BOLT	Piaggio spare parts (POP)
3413121016	GUIDING BOLT	Piaggio spare parts (POP)
A01G060006	Guiding bolt for valve tappet	Piaggio spare parts (POP)
B011414	GUIDING RAIL	Piaggio spare parts (POP)
A01G120001	Guiding screw - for tappet (FIP-RT)	Piaggio spare parts (POP)
ED43340	GUIDINGBOLT	Piaggio spare parts (POP)
E40015404	H T COIL	Piaggio spare parts (POP)
E40015465	H T COIL	Piaggio spare parts (POP)
859949	H.bars anti.v weight	Piaggio spare parts (POP)
1A011507	H.T. COIL COMPLETE	Piaggio spare parts (POP)
1A016648	H.T. COIL COMPLETE WITH CAP	Piaggio spare parts (POP)
680181	H.T.COIL COMPLETE	Piaggio spare parts (POP)
D5109187Z05	H00K SUB-ASSY, FR	Piaggio spare parts (POP)

1A012405	Half - Cone	Piaggio spare parts (POP)
L80615238	HALF BEARING	Piaggio spare parts (POP)
KD80615578	HALF BEARING (BIG END CONROD)	Piaggio spare parts (POP)
KD8061496	HALF BEARING BIG END CON. ROD	Piaggio spare parts (POP)
LG8061495	HALF BEARING CONROD B	Piaggio spare parts (POP)
LG8061498	HALF BEARING CONROD D32 W HOLE	Piaggio spare parts (POP)
896759	HALF HANDLEBAR	Piaggio spare parts (POP)
KIT96008R	HALF OH KIT GL-400 IIA ENGINE	Piaggio spare parts (POP)
E40010769	HALF OH KIT GL-400 IIA ENGINE	Piaggio spare parts (POP)
KIT96008RP	HALF OH KIT GL-400 IIA ENGINE	Piaggio spare parts (POP)
E43510746	Half Overhaul Kit 435	Piaggio spare parts (POP)
E43510770	HALF OVERHAUL KIT G 435 AIII ENGINE	Piaggio spare parts (POP)
KIT96009RP	HALF OVERHAUL KIT G 435 AIII ENGINE	Piaggio spare parts (POP)
KIT96009R	HALF OVERHAUL KIT G 435 AIII ENGINE	Piaggio spare parts (POP)
E40010744	Half Overhaul Kit BS2 400	Piaggio spare parts (POP)
L8061523	HALF-BEARING LDW482 L=19	Piaggio spare parts (POP)
B015288	HALF-CONE	Piaggio spare parts (POP)
857024	Half-cone	Piaggio spare parts (POP)
B015941	HALF-CRANKCASE GASKET	Piaggio spare parts (POP)
1A001278	HALF-CRANKCASES GASKET	Piaggio spare parts (POP)
1A012739	HALF-CRANKCASES GASKET	Piaggio spare parts (POP)
1A006856	Half-crankcases gasket	Piaggio spare parts (POP)
B075697	HAND BRAKE CONTROL ASSLY	Piaggio spare parts (POP)
567746	HAND BRAKE CONTROL ASSLY	Piaggio spare parts (POP)
567746G1	HAND BRAKE LEVER (WITH POWDER COATING)	Piaggio spare parts (POP)
568120	HAND BRAKE STRUT ASSLY	Piaggio spare parts (POP)
604581	HAND REST TUBE ASSLY	Piaggio spare parts (POP)
645251	HAND REST TUBE ASSLY - KENYA	Piaggio spare parts (POP)
441062	HAND TOOL FOR CIRCLIP SETTING	Piaggio spare parts (POP)
940152	Hand Wheel (V-6611-110 B)	Piaggio spare parts (POP)
604539	HANDLE	Piaggio spare parts (POP)
141925	HANDLE	Piaggio spare parts (POP)
020712Y	HANDLE	Piaggio spare parts (POP)
B002031	HANDLE (T - TYPE)	Piaggio spare parts (POP)
257091	HANDLE ASSLY	Piaggio spare parts (POP)
B077161	HANDLE ASSY, DOOR INSIDE PANTONE 426C	Piaggio spare parts (POP)
D6928087Z01	HANDLE ASSY, DOOR, INSIDE	Piaggio spare parts (POP)
D6927087Z01	HANDLE ASSY, DOOR, INSIDE	Piaggio spare parts (POP)
B077160	HANDLE ASSY, DOOR,INSIDE PANTONE 426C	Piaggio spare parts (POP)
D6921087Z01	HANDLE ASSY, FR DOOR, OUT	Piaggio spare parts (POP)
D6922087Z01	HANDLE ASSY, FR DOOR, OUT	Piaggio spare parts (POP)
611773	HANDLE BAR 601	Piaggio spare parts (POP)
567567	HANDLE BAR BODY	Piaggio spare parts (POP)
6C000273	HANDLE BAR BODY	Piaggio spare parts (POP)
B075772	HANDLE BAR BODY - APE CITY BSIV	Piaggio spare parts (POP)
B002823	HANDLE BAR BODY 501(CED)	Piaggio spare parts (POP)
B075687ED	HANDLE BAR BODY-APE CITY/501 BSIV CED	Piaggio spare parts (POP)

B075772ED	HANDLE BAR BODY-APE CITY/501 BSIV CED	Piaggio spare parts (POP)
6C000273ED	HANDLE BAR BODY-ED	Piaggio spare parts (POP)
B024477	HANDLE BAR SWITCH (WITH STARTER BUTTON)	Piaggio spare parts (POP)
B073366R	HANDLE BAR SWITCH ASSLY-NEW	Piaggio spare parts (POP)
B073366	HANDLE BAR SWITCH ASSLY-NEW (PAVNA)	Piaggio spare parts (POP)
6B003027	HANDLE BAR TOP COVER	Piaggio spare parts (POP)
441061	HANDLE BAR WASHER CAULKING TOOL	Piaggio spare parts (POP)
B073598	HANDLE CANOPY STRAP	Piaggio spare parts (POP)
604538	HANDLE COVER	Piaggio spare parts (POP)
660063	HANDLE- JACK ASSY	Piaggio spare parts (POP)
D0911387Z01	HANDLE SUB-ASSY, PANTOGRA	Piaggio spare parts (POP)
B024733	HANDLE WITH PUSH BUTTON LH WITH KEY	Piaggio spare parts (POP)
B024734	HANDLE WITH PUSH BUTTON RH WITH KEY	Piaggio spare parts (POP)
6C000280	HANDLEBAR	Piaggio spare parts (POP)
895220	Handlebar	Piaggio spare parts (POP)
B073817	HANDLEBAR COVER	Piaggio spare parts (POP)
6C000280ED	HANDLEBAR E-CITY-ED	Piaggio spare parts (POP)
6C000534ED	HANDLEBAR-ED	Piaggio spare parts (POP)
897584	HANDLEBARS ASSY	Piaggio spare parts (POP)
B073848	HANDLEGRIP LH - HANDLEBAR	Piaggio spare parts (POP)
B024166	HANDLY ASSLY WITH KEY	Piaggio spare parts (POP)
661502	HANDRAIL PIPE ASSLY (PASS UPGRADE)	Piaggio spare parts (POP)
D5195287Z01	HANGER, SPARE WHEEL CARRI	Piaggio spare parts (POP)
662241	HANGER, SPARE WHEEL CARRIER	Piaggio spare parts (POP)
940090	Hanging Grip Handle(Common)	Piaggio spare parts (POP)
920082	Hardware for Tail Lamp Assy	Piaggio spare parts (POP)
B041104	HAT SUPPORT PLATE_FOR BATTERY	Piaggio spare parts (POP)
B001650	HATCH ASSLY OF LATCH BOLT (APE CITY)	Piaggio spare parts (POP)
B001650CED	HATCH ASSLY OF LATCH BOLT (APE CITY)-CED	Piaggio spare parts (POP)
B024475	HAZARD SWITCH WITH CAP (601 HBAR)	Piaggio spare parts (POP)
660826R	HAZARD WARNING SWITCH WITH CROWN CAP	Piaggio spare parts (POP)
660826	HAZARD WARNING SWITCH WITH CROWN CAP	Piaggio spare parts (POP)
B073850	HBS (ST. BUTTON) - CITY UPGRADE	Piaggio spare parts (POP)
B073850R	HBS (ST. BUTTON) - CITY UPGRADE	Piaggio spare parts (POP)
B017763	HEAD COVER	Piaggio spare parts (POP)
1A012419	Head Cover	Piaggio spare parts (POP)
1A006545	HEAD COVER	Piaggio spare parts (POP)
B019350	HEAD COVER	Piaggio spare parts (POP)
LG2125703	HEAD COVER FOR OIL TAP	Piaggio spare parts (POP)
1A012417	Head Cover gasket	Piaggio spare parts (POP)
B014555	HEAD CYLINDER GASKET	Piaggio spare parts (POP)
L4775597	Head Gasket 1.5	Piaggio spare parts (POP)
L4775598	Head Gasket 1.65	Piaggio spare parts (POP)
L4775599	Head Gasket 1.80	Piaggio spare parts (POP)
L4775632	HEAD GASKET MET LDW 482	Piaggio spare parts (POP)
L4775633	HEAD GASKET MET LDW 482	Piaggio spare parts (POP)
L4775631	HEAD GASKET MET LDW 482	Piaggio spare parts (POP)

124449	HEAD LAMP	Piaggio spare parts (POP)
6D000144R	HEAD LAMP ASSLY - RH (NUOVO)	Piaggio spare parts (POP)
B073643	HEAD LAMP _ASSLY _CITY UPGRADE_ LH	Piaggio spare parts (POP)
B073642	HEAD LAMP _ASSLY _CITY UPGRADE_ RH	Piaggio spare parts (POP)
15641	HEAD LAMP ADJUSTING SCREW	Piaggio spare parts (POP)
182080019	HEAD LAMP ASSLY (WITHOUT BULB)	Piaggio spare parts (POP)
B077866	HEAD LAMP ASSLY _LH (NUOVO)	Piaggio spare parts (POP)
B077865	HEAD LAMP ASSLY _RH (NUOVO)	Piaggio spare parts (POP)
B023816R	HEAD LAMP ASSLY LH	Piaggio spare parts (POP)
6D000143R	HEAD LAMP ASSLY LH - NUOVO	Piaggio spare parts (POP)
B023817R	HEAD LAMP ASSLY RH	Piaggio spare parts (POP)
613967	HEAD LAMP ASSLY WITH LEVELING MOTOR, RH	Piaggio spare parts (POP)
B003050	HEAD LAMP ASSY. RH	Piaggio spare parts (POP)
6B002588	HEAD LAMP BEZEL ASSLY. RH	Piaggio spare parts (POP)
B025601	HEAD LAMP COVER LH	Piaggio spare parts (POP)
B075999	HEAD LAMP COVER LH	Piaggio spare parts (POP)
B077149	HEAD LAMP COVER LH (WITHOUT PAINT)	Piaggio spare parts (POP)
SST94045	HEAD LAMP COVER LH_TC	Piaggio spare parts (POP)
B025601SL	HEAD LAMP COVER LH-SILVER	Piaggio spare parts (POP)
B025600	HEAD LAMP COVER RH	Piaggio spare parts (POP)
B076000	HEAD LAMP COVER RH	Piaggio spare parts (POP)
B077148	HEAD LAMP COVER RH (WITHOUT PAINT)	Piaggio spare parts (POP)
SST94046	HEAD LAMP COVER RH_TC	Piaggio spare parts (POP)
B025600SL	HEAD LAMP COVER RH-SILVER	Piaggio spare parts (POP)
B025601BL	HEAD LAMP COVER-LH	Piaggio spare parts (POP)
B025601EG	HEAD LAMP COVER-LH	Piaggio spare parts (POP)
B025601WR	HEAD LAMP COVER-LH	Piaggio spare parts (POP)
B025600BL	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600BW	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600CB	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600EG	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600GY	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600NB	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
B025600WR	HEAD LAMP COVER-RH	Piaggio spare parts (POP)
940199	Head Lamp Guards (Pair) – ape city 200SS	Piaggio spare parts (POP)
940107	Head Lamp Guards (Pair) – Ape' City 200	Piaggio spare parts (POP)
925578	HEAD LAMP LATERAL LAMP LENSE LH (MAKE-LU	Piaggio spare parts (POP)
925580	HEAD LAMP LATERAL LAMP LENSE LH (MAKE-NE	Piaggio spare parts (POP)
925577	HEAD LAMP LATERAL LAMP LENSE RH (MAKE-LU	Piaggio spare parts (POP)
925579	HEAD LAMP LATERAL LAMP LENSE RH (MAKE-NE	Piaggio spare parts (POP)
645139	HEAD LAMP LEVELING SWITCH	Piaggio spare parts (POP)
B001622	HEAD LAMP LEVELING SWITCH - GALACTIC	Piaggio spare parts (POP)
925590	HEAD LAMP SEAL BEAM WITH HOLE	Piaggio spare parts (POP)
LG9201203	HEAD LGA 280 COMPR.RATIO 8,8:1	Piaggio spare parts (POP)
185843	HEAD LIGHT RING	Piaggio spare parts (POP)
B011019	HEAD REAR COVER	Piaggio spare parts (POP)
E40020113	HEAD SCREW FOR FLY WHEEL GUARD	Piaggio spare parts (POP)

L6850212	HEAD SCURING STUD	Piaggio spare parts (POP)
L6850210	HEAD SECURING STUD	Piaggio spare parts (POP)
B001047	HEAD WITH I.P.	Piaggio spare parts (POP)
1A015991	HEAD/CYLINDER GASKET	Piaggio spare parts (POP)
B003049	HEADLAMP ASSY. LH	Piaggio spare parts (POP)
1D002386	HEADLAMP ASSY COMBINATION LH (LHD)	Piaggio spare parts (POP)
658973	HEADLAMP ASSY COMBINATION LH (RHD)	Piaggio spare parts (POP)
1D002385	HEADLAMP ASSY COMBINATION RH (LHD)	Piaggio spare parts (POP)
658972	HEADLAMP ASSY COMBINATION RH (RHD)	Piaggio spare parts (POP)
613968	HEADLAMP ASSY WITH LEVELING MOTOR , LH	Piaggio spare parts (POP)
6B002587	HEADLAMP BEZEL ASSEMBLY LH	Piaggio spare parts (POP)
6B003144	HEADLAMP BEZEL ASSEMBLY LH	Piaggio spare parts (POP)
6B003148	HEADLAMP BEZEL ASSLY. RH	Piaggio spare parts (POP)
6B002757	HEADLAMP BEZEL BEADING	Piaggio spare parts (POP)
B003262	HEADLAMP BEZEL LH WITH SIDE INDICATORS	Piaggio spare parts (POP)
B003263	HEADLAMP BEZEL RH WITH SIDE INDICATORS	Piaggio spare parts (POP)
182153	HEADLAMP DOOR COVER, LH	Piaggio spare parts (POP)
182152	HEADLAMP DOOR COVER, RH	Piaggio spare parts (POP)
6D000539	HEADLAMP WITH BLUE VISION - LH	Piaggio spare parts (POP)
6D000540	HEADLAMP WITH BLUE VISION - RH	Piaggio spare parts (POP)
858703	Headlight	Piaggio spare parts (POP)
613694	HEADLINING	Piaggio spare parts (POP)
B042045	HEADLINING ROOF	Piaggio spare parts (POP)
B076778	HEADREST MTG. PLATE S/A	Piaggio spare parts (POP)
B008745	HEAT SHIELD LGA280 SILENCER	Piaggio spare parts (POP)
LG69277918	HEAT GUARD FOR STARTER MOTOR	Piaggio spare parts (POP)
LG69277798	HEAT GUARD FOR STARTER MOTOR	Piaggio spare parts (POP)
1E000860	HEATER COMPLETE	Piaggio spare parts (POP)
1D000714	Heater manager device	Piaggio spare parts (POP)
B009237	HEAVY EXHAUST CLAMP ASSY.	Piaggio spare parts (POP)
B042578	HELICAL SPRING COMPRESSION	Piaggio spare parts (POP)
1A019394	HEX BOLT	Piaggio spare parts (POP)
940019	Hex Bolt (M8 X 30)(truk plus)	Piaggio spare parts (POP)
L1780176	HEX BOLT M10 X 25L 1.26P ST12.9	Piaggio spare parts (POP)
KD1760001	HEX BOLT M6X10L 8.8	Piaggio spare parts (POP)
LG1760001	HEX BOLT M6X10L 8.8	Piaggio spare parts (POP)
KD1760143	HEX BOLT M6X14L STEEL 8.8	Piaggio spare parts (POP)
LG1760005	HEX BOLT M6X16L 8.8	Piaggio spare parts (POP)
KD1760006	HEX BOLT M6X20L 8.8S	Piaggio spare parts (POP)
LG1760006	HEX BOLT M6X20L 8.8S	Piaggio spare parts (POP)
LG1760034	HEX BOLT M6X25L 8.8	Piaggio spare parts (POP)
L1760034	HEX BOLT M6X25L 8.8	Piaggio spare parts (POP)
KD1760027	HEX BOLT M6X40L STEEL 8.8	Piaggio spare parts (POP)
B078264	HEX BOLT M8	Piaggio spare parts (POP)
6A001712	HEX BOLT M8	Piaggio spare parts (POP)
B003646	HEX BOLT M8 X 80 WITH PL,SP WASHER	Piaggio spare parts (POP)
932299	Hex Bolt sub-assembly	Piaggio spare parts (POP)

940018	Hex Bolt(truk plus)	Piaggio spare parts (POP)
6A001108	HEX BOLT, M8X135	Piaggio spare parts (POP)
B074860	HEX COLLAR NUT M22X1.5 6H	Piaggio spare parts (POP)
660142	HEX COLLAR SCREW (M10 X 1.25 X 42)	Piaggio spare parts (POP)
661704	HEX COMBI. SCREW WITH P/W (M6 X 1.0 X 20	Piaggio spare parts (POP)
31159	HEX DH SCREW M10X35 CL 8.8	Piaggio spare parts (POP)
587966	HEX EMBLEM	Piaggio spare parts (POP)
B073088	HEX EMBLEM	Piaggio spare parts (POP)
B076120	HEX EMBLEM	Piaggio spare parts (POP)
B073874	HEX EMBLEM_CITY UPGRADE	Piaggio spare parts (POP)
E43502817	HEX FLANGE BOLT M8X1.25X12	Piaggio spare parts (POP)
B074795	HEX FLANGE NUT	Piaggio spare parts (POP)
E43502821	HEX FLANGE SCREW M10X1.5X30 ZINC YELLOW	Piaggio spare parts (POP)
30113	HEX HD BOLT M10X120 CL 8.8	Piaggio spare parts (POP)
6C000241	HEX HD BOLT M10X210 CL 10.9	Piaggio spare parts (POP)
15578	HEX HD BOLT M10X45 CL 10.9	Piaggio spare parts (POP)
B024614	HEX HD BOLT M10X45 CL 10.9(FOR HUB)	Piaggio spare parts (POP)
15594	HEX HD BOLT M10X65 CL 10.9	Piaggio spare parts (POP)
18622	HEX HD BOLT M10X80 CL10.9	Piaggio spare parts (POP)
643741	HEX HD BOLT M10X85 CL12.9	Piaggio spare parts (POP)
272178	HEX HD BOLT M8 X 122 CL 10.9	Piaggio spare parts (POP)
568260	HEX HD BOLT M8X160 CL 8.8	Piaggio spare parts (POP)
30103	HEX HD M10X70 CL 8.8	Piaggio spare parts (POP)
31154	HEX HD SCREW M10X22 CL 8.8	Piaggio spare parts (POP)
31054	HEX HD SCREW M5X10 CL 8.8	Piaggio spare parts (POP)
31089	HEX HD SCREW M6 X 18 CL 8.8	Piaggio spare parts (POP)
31087	HEX HD SCREW M6X 14 CL 8.8	Piaggio spare parts (POP)
31088	HEX HD SCREW M6X16 CL 8.8 (811061623)	Piaggio spare parts (POP)
6A000819	HEX HD. FL. SCREW M10X65, CL 10.9	Piaggio spare parts (POP)
604606	HEX HD.SCREW M5 X 20 CL.8.8	Piaggio spare parts (POP)
B001386	HEX HD.SCREW M5 X 25 CL.8.8	Piaggio spare parts (POP)
660164	HEX HEAD BOLT (M10 X 1.25 X 60)	Piaggio spare parts (POP)
660145	HEX HEAD BOLT (M12 X 1.25 X 100)	Piaggio spare parts (POP)
661705	HEX HEAD BOLT (M12 X 1.25 X 57)	Piaggio spare parts (POP)
661703	HEX HEAD BOLT (M12 X 1.25 X 85)	Piaggio spare parts (POP)
6C000333	HEX HEAD BOLT (M8 X 105)	Piaggio spare parts (POP)
604887	HEX HEAD BOLT (M8 X 140)	Piaggio spare parts (POP)
B076205	HEX HEAD BOLT (M8 X 85)	Piaggio spare parts (POP)
645022	HEX HEAD BOLT M10 X 1.25P X 90 CL. 8.8	Piaggio spare parts (POP)
645021	HEX HEAD BOLT M10 X 55 CL. 8.8	Piaggio spare parts (POP)
267068	HEX HEAD BOLT M10 X 60 CL 10.9	Piaggio spare parts (POP)
810107535	HEX HEAD BOLT M10 X75	Piaggio spare parts (POP)
E87020127	HEX HEAD BOLT M10X1.5X45 TL=20 (GRADE	Piaggio spare parts (POP)
6C000605	HEX HEAD BOLT M10X71	Piaggio spare parts (POP)
B009586	HEX HEAD BOLT M12 x 1.25	Piaggio spare parts (POP)
B003591	HEX HEAD BOLT M12X1.25X70	Piaggio spare parts (POP)
B003614	HEX HEAD BOLT M12X1.25X70	Piaggio spare parts (POP)

30056	HEX HEAD BOLT M6 X 40 CL. 8.8	Piaggio spare parts (POP)
B003581	HEX HEAD BOLT M6X45	Piaggio spare parts (POP)
E87120142	HEX HEAD BOLT M6X50 (MAX SPEED)	Piaggio spare parts (POP)
B076143	HEX HEAD BOLT M8 X 25	Piaggio spare parts (POP)
30072	HEX HEAD BOLT M8 X 35	Piaggio spare parts (POP)
30074	HEX HEAD BOLT M8 X 40 CL 8.8	Piaggio spare parts (POP)
30078	HEX HEAD BOLT M8 X 60 CL. 8.8	Piaggio spare parts (POP)
B002206	HEX HEAD BOLT(M10 X 130 -CL ASS 10.9)	Piaggio spare parts (POP)
B074226	HEX HEAD BOLT(M10 X 145 -CL ASS 10.9)	Piaggio spare parts (POP)
O1B150081	HEX HEAD FLANGE	Piaggio spare parts (POP)
O1B150085	HEX HEAD FLANGE	Piaggio spare parts (POP)
B074794	HEX HEAD FLANGE BOLT (M10X1.5X40)	Piaggio spare parts (POP)
660169	HEX HEAD FLANGE BOLT (M6 X 1 X 20)	Piaggio spare parts (POP)
ESP650DNB017	HEX HEAD FLANGE BOLT M10x1.5x38	Piaggio spare parts (POP)
E43502822	HEX HEAD FLANGE BOLT M5X0.8 X10	Piaggio spare parts (POP)
O1B150092	HEX HEAD FLANGE BOLT M6 X 10	Piaggio spare parts (POP)
ESP650DNB011	HEX HEAD FLANGE BOLT M6x16	Piaggio spare parts (POP)
ESP650DNB028	HEX HEAD FLANGE BOLT M6X30	Piaggio spare parts (POP)
662421	HEX HEAD SCREW M8 X70	Piaggio spare parts (POP)
660146	HEX HEAD SCREW (M10 X 1.25 X 30)	Piaggio spare parts (POP)
660143	HEX HEAD SCREW (M6 X 1.0 X 22)	Piaggio spare parts (POP)
31025	HEX HEAD SCREW COMPLETE THREADS	Piaggio spare parts (POP)
30104	HEX HEAD SCREW M10 X 75 (CLASS 8.8)	Piaggio spare parts (POP)
31056	HEX HEAD SCREW M5 X 12 CL. 8.8	Piaggio spare parts (POP)
31057	HEX HEAD SCREW M5 X 14 CL. 8.8	Piaggio spare parts (POP)
660024	HEX HEAD SCREW M5 X 18 (SS)	Piaggio spare parts (POP)
811051525	HEX HEAD SCREW M5 X15	Piaggio spare parts (POP)
567741	HEX HEAD SCREW M5 X18 (811051824)	Piaggio spare parts (POP)
E50000404	HEX HEAD SCREW M6	Piaggio spare parts (POP)
31086	HEX HEAD SCREW M6 X 12 CL 8.8	Piaggio spare parts (POP)
811061221	HEX HEAD SCREW M6 X12	Piaggio spare parts (POP)
811061829	HEX HEAD SCREW M6 X18	Piaggio spare parts (POP)
31092	HEX HEAD SCREW M6X25 CL 8.8(811062524)	Piaggio spare parts (POP)
31116	HEX HEAD SCREW M8 X 16 (811081623)	Piaggio spare parts (POP)
645033	HEX HEAD SCREW M8 X 16 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
645028	HEX HEAD SCREW M8 X 16 CL. 8.8 W/SP WASH	Piaggio spare parts (POP)
31118	HEX HEAD SCREW M8 X 20 (811082029)	Piaggio spare parts (POP)
645036	HEX HEAD SCREW M8 X 20 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
645034	HEX HEAD SCREW M8 X 20 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
645037	HEX HEAD SCREW M8 X 22 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
652561	HEX HEAD SCREW M8 X 22 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
31119	HEX HEAD SCREW M8 X 25 (811082524)	Piaggio spare parts (POP)
645038	HEX HEAD SCREW M8 X 30 CL 8.8 W/SP , PL	Piaggio spare parts (POP)
31122	HEX HEAD SCREW M8 X 30 CL. 8.8	Piaggio spare parts (POP)
811083525	HEX HEAD SCREW M8 X 35	Piaggio spare parts (POP)
B041820	HEX HEAD SCREW M8 X 35(gr.10.9/12.9)	Piaggio spare parts (POP)
B002622	HEX HEAD SCREW M8 X 40 CL.8.8	Piaggio spare parts (POP)

652563	HEX HEAD SCREW M8 X 60 CL 8.8 W/SP ,PL	Piaggio spare parts (POP)
B073360	HEX HEAD SCREW M8 X 60 CL 8.8 W/SP, PL	Piaggio spare parts (POP)
30084	HEX HEAD SCREW M8 X 90 CL. 8.8	Piaggio spare parts (POP)
B008478	HEX HEAD SCREW M8X55 BLACK PASS.	Piaggio spare parts (POP)
B001972	HEX HEAD SCREW, M10X30 GR.12.9	Piaggio spare parts (POP)
6A001633	HEX HEADED SCREW	Piaggio spare parts (POP)
B001400	HEX HEADED SCREW WITH PARTIALLY THREAD S	Piaggio spare parts (POP)
6A000143	HEX HEADED SCREW WITH PARTIALLY THREADED	Piaggio spare parts (POP)
661908	HEX NUT (M5) (FERRULE (VANAZ P.NO.R-8101	Piaggio spare parts (POP)
S20107	HEX NUT FOR STOP CABLE	Piaggio spare parts (POP)
21110	HEX NUT M10 X 1.25 P	Piaggio spare parts (POP)
21216	HEX NUT M16 X 1.5	Piaggio spare parts (POP)
LG3260129	HEX NUT M18 A/F27 9THK	Piaggio spare parts (POP)
20106	HEX NUT M6	Piaggio spare parts (POP)
632056	HEX NUT M6 (TERMINAL)	Piaggio spare parts (POP)
KD325A2510	HEX NUT M6 SELF LOCKING	Piaggio spare parts (POP)
L325A251	HEX NUT M6 SELF LOCKING	Piaggio spare parts (POP)
LG325A251	HEX NUT M6 SELF LOCKING	Piaggio spare parts (POP)
E50000238	Hex Nut M6X1 (SS)	Piaggio spare parts (POP)
20108	HEX NUT M8	Piaggio spare parts (POP)
KD3240018	HEX NUT M8 1.25P STEEL 8G UNI5	Piaggio spare parts (POP)
B008292	HEX NUT M8 X 10.4 THK (NYLOCK)	Piaggio spare parts (POP)
15335	HEX NUT M8 X 8 THK	Piaggio spare parts (POP)
441032	HEX NUT ON CRANKSHAFT HOLDING TOOL	Piaggio spare parts (POP)
2915012007	HEX NUT; M6	Piaggio spare parts (POP)
KD1770215	HEX SC 8X45 SPEC. 12.9+PHOS	Piaggio spare parts (POP)
E1003450014	HEX SCREW	Piaggio spare parts (POP)
1413453025	HEX SCREW	Piaggio spare parts (POP)
B003163	HEX SCREW (M10X20L X1.25-6g)	Piaggio spare parts (POP)
940186	Hex Screw (R-8101-570)	Piaggio spare parts (POP)
645026	HEX SCREW M8 X 16 CL 8.8 A/F 12 W/PL WAS	Piaggio spare parts (POP)
645025	HEX SCREW M8 X 30 CL 8.8 NOTCHING, SP WA	Piaggio spare parts (POP)
KD9730337	HEX SOC BUTTON HEAD SCR M6X16L	Piaggio spare parts (POP)
AP8150500	HEX SOCKET SCREW M5X9	Piaggio spare parts (POP)
604948	HEX. HD BOLT M8 X 110 WITH POINTING	Piaggio spare parts (POP)
E43500245	HEX. HEAD FLANGE NUT M8 X 1 (435-002-45	Piaggio spare parts (POP)
632247	HEX. HEAD SCREW M10 X 30 CL. 8.8	Piaggio spare parts (POP)
662442	HEX. HEADED SCREW M 10 X 45	Piaggio spare parts (POP)
L3240180	HEX. NUT	Piaggio spare parts (POP)
E60000227	HEX. NUT FOR INJECTOR CLAMP M8X1.25NUT	Piaggio spare parts (POP)
20110	HEX. NUT M10	Piaggio spare parts (POP)
B015996	HEX. NUT M16X1.25	Piaggio spare parts (POP)
1A012845	HEX. NUT M16X1.25	Piaggio spare parts (POP)
21118	HEX. NUT M18 X 1.5 P	Piaggio spare parts (POP)
20104	HEX. NUT M4 (800000428)	Piaggio spare parts (POP)
21120	HEX. NUT, THIN PITCH	Piaggio spare parts (POP)
E40002829	HEX. SCREW M5X0.8X35 FOR STATOR MTG.	Piaggio spare parts (POP)

652562	HEX. SCREW M8 X 1.25 X 14 WITH SPRING WA	Piaggio spare parts (POP)
E99732037	HEX. SOCKET HEAD SCREW	Piaggio spare parts (POP)
E270973015	HEX. SOCKET HEAD SCREW	Piaggio spare parts (POP)
E260973027	HEX. SOCKET HEAD SCREW	Piaggio spare parts (POP)
929989	Hex.BoltM5-R-8104-910	Piaggio spare parts (POP)
929968	Hex.Bolt-R-8101-650	Piaggio spare parts (POP)
568689	HEX.HD BOLT M10X100 CL 10.9	Piaggio spare parts (POP)
B009027	HEX.HD SCREW M10X100	Piaggio spare parts (POP)
E40002828	HEX.HEAD FLANGE BOLT M8x110	Piaggio spare parts (POP)
ESP650DNB020	HEX.HEAD FLANGE BOLT M8x110	Piaggio spare parts (POP)
662310	HEX.HEAD SCREW M10X20 W/WITH, PL.WASHER	Piaggio spare parts (POP)
31121	HEX.HEAD SCREW M8X28 CL 8.8	Piaggio spare parts (POP)
662254	HEX.HEADED BOLT	Piaggio spare parts (POP)
E260973026	HEX.SOCKET HEAD SCREW	Piaggio spare parts (POP)
E50000437	HEX.SOCKET HEAD SCREW	Piaggio spare parts (POP)
30052	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
1F000535	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
1A004807	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
1F000631	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
262531	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
B011599	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
1A014556	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
63440	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
1A009591	HEXAG. HEAD SCREW	Piaggio spare parts (POP)
30077	HEXAG. HEAD SCREW M8 X 55 CL 8.8	Piaggio spare parts (POP)
L1780143	HEXAG.-HEAD SCREW M 14X1,5X35	Piaggio spare parts (POP)
L1780146	HEXAG.-HEAD SCREW M 8X25	Piaggio spare parts (POP)
2418	HEXAG.SELFLOCKING NU	Piaggio spare parts (POP)
KD1755003	HEXAGON BOLT M5X16	Piaggio spare parts (POP)
709116	HEXAGON NUT	Piaggio spare parts (POP)
2915011009	HEXAGON NUT	Piaggio spare parts (POP)
2915059107	HEXAGON NUT; M8X1.25	Piaggio spare parts (POP)
F000CD10933	Hexagon Screw	Piaggio spare parts (POP)
9411033412	HEXAGON SCREW	Piaggio spare parts (POP)
1003450052	Hexagon Screw	Piaggio spare parts (POP)
873433	HEXAGON SOCKET BUTTON HEAD SCREW	Piaggio spare parts (POP)
E07520112	Hexagon socket countersunk head screw M6	Piaggio spare parts (POP)
ESP650DNB004	HEXAGON SOCKET SET SCREW M6x10-IS:6094-F	Piaggio spare parts (POP)
B042485	HEXAGONAL EMBLEM	Piaggio spare parts (POP)
L1755093	HEXAGONAL FLANGED HEAD SCREW M 5X35	Piaggio spare parts (POP)
1E001021	HEXAGONAL HEAD BOLT (M10x1.25x20)	Piaggio spare parts (POP)
1E001029	HEXAGONAL HEAD BOLT (M12x1.25x20)	Piaggio spare parts (POP)
644033	HEXAGONAL HEAD BOLT PARTIAL THREADED	Piaggio spare parts (POP)
B012027	HEXAGONAL HEAD SCREW	Piaggio spare parts (POP)
31058	HEXAGONAL HEAD SCREW (M5x16)	Piaggio spare parts (POP)
L1780151	HEXAGONAL HEAD SCREW M 10X55	Piaggio spare parts (POP)
L1755092	HEXAGONAL HEAD SCREW M 5X14	Piaggio spare parts (POP)

L1760143	HEXAGONAL HEAD SCREW M 6X14	Piaggio spare parts (POP)
L1780145	HEXAGONAL HEAD SCREW M 6X25	Piaggio spare parts (POP)
L1760140	HEXAGONAL HEAD SCREW M 6X35	Piaggio spare parts (POP)
L1760141	HEXAGONAL HEAD SCREW M 6X45	Piaggio spare parts (POP)
L1770169	HEXAGONAL HEAD SCREW M 8X100	Piaggio spare parts (POP)
L1770167	HEXAGONAL HEAD SCREW M 8X115	Piaggio spare parts (POP)
L1770168	HEXAGONAL HEAD SCREW M 8X130	Piaggio spare parts (POP)
L1770172	HEXAGONAL HEAD SCREW M 8X40	Piaggio spare parts (POP)
L1770171	HEXAGONAL HEAD SCREW M 8X75	Piaggio spare parts (POP)
L1770170	HEXAGONAL HEAD SCREW M 8X85	Piaggio spare parts (POP)
L1770191	HEXAGONAL HEAD SCREW M8*	Piaggio spare parts (POP)
L1770193	HEXAGONAL HEAD SCREW M8*	Piaggio spare parts (POP)
L1770192	HEXAGONAL HEAD SCREW M8*	Piaggio spare parts (POP)
L1770194	HEXAGONAL HEAD SCREW M8*	Piaggio spare parts (POP)
L1770195	HEXAGONAL HEAD SCREW M8*	Piaggio spare parts (POP)
L1770216	HEXAGONAL HEAD SCREW M8*70 special	Piaggio spare parts (POP)
B003906	HEXAGONAL HEAD SCREW WITH PARTLY THREADE	Piaggio spare parts (POP)
L3240178	HEXAGONAL NUT	Piaggio spare parts (POP)
L3240177	HEXAGONAL NUT HIGH	Piaggio spare parts (POP)
KD8965051	HEXAGONAL PLUG M12X1,5	Piaggio spare parts (POP)
KD8965048	HEXAGONAL PLUG M12X1,5	Piaggio spare parts (POP)
432142	HEXAGONAL RANGE HEAD SCREW (M6X35)	Piaggio spare parts (POP)
31090	HEXAGONAL SCREW	Piaggio spare parts (POP)
L1780155	HEXAGONAL SCREW FLANGE	Piaggio spare parts (POP)
B018848	HEXAGONAL SCREW M5x14	Piaggio spare parts (POP)
L1780142	HEXAGONAL-HEAD SCREW M 10X35	Piaggio spare parts (POP)
B002555BW	HI BODY ASSLY WITH T/ GATE-BIANCO WHITE	Piaggio spare parts (POP)
B002555BG	HI BODY ASSLY WITH T/ GATE-BRILLIANT GRE	Piaggio spare parts (POP)
B002555CB	HI BODY ASSLY WITH T/ GATE-CHARMING BLUE	Piaggio spare parts (POP)
B002555GY	HI BODY ASSLY WITH T/ GATE-GOLDEN YELLOW	Piaggio spare parts (POP)
B002555PM	HI BODY ASSLY WITH T/ GATE-PASS MAROON	Piaggio spare parts (POP)
B002555SY	HI BODY ASSLY WITH T/ GATE-SAHARA YELLOW	Piaggio spare parts (POP)
B006835BW	HIGH BODY ASSLY WITH TAIL GATE (GL435)BW	Piaggio spare parts (POP)
B006835CB	HIGH BODY ASSLY WITH TAIL GATE (GL435)CB	Piaggio spare parts (POP)
B006835GY	HIGH BODY ASSLY WITH TAIL GATE (GL435)GY	Piaggio spare parts (POP)
B006835SY	HIGH BODY ASSLY WITH TAIL GATE (GL435)SY	Piaggio spare parts (POP)
B006835WR	HIGH BODY ASSLY WITH TAIL GATE (GL435)WR	Piaggio spare parts (POP)
B006835BG	HIGH BODY ASSLY WITH TAIL GATE(GL435) BG	Piaggio spare parts (POP)
662183	HIGH BODY ASSLY WITH TAIL GATE-BSII	Piaggio spare parts (POP)
B006835ED	HIGH BODY ASSLY WITH TAIL GATE-BSIII ED	Piaggio spare parts (POP)
652501	HIGH DECK ASSLY WITH TAIL GATE	Piaggio spare parts (POP)
6A001222	HIGH PR. TUBE FOR CNG VALVE TO CNG VALVE	Piaggio spare parts (POP)
643847	HIGH PRESS SOLENOID VALVE(VANAZ PT NO K	Piaggio spare parts (POP)
E87007207	HIGH PRESSURE	Piaggio spare parts (POP)
E87007205A	HIGH PRESSURE	Piaggio spare parts (POP)
KD9376029	HIGH PRESSURE FUEL PIPE	Piaggio spare parts (POP)
E500937290	HIGH PRESSURE PIPE	Piaggio spare parts (POP)

E40001008	HIGH PRESSURE PIPE	Piaggio spare parts (POP)
E43501049	HIGH PRESSURE PIPE	Piaggio spare parts (POP)
A01A120004	HIGH PRESSURE PIPE ASM- FDB TO INJECTOR	Piaggio spare parts (POP)
A01A120005	HIGH PRESSURE PIPE ASM-PUMP TO FDB	Piaggio spare parts (POP)
ESP650DFP019	HIGH PRESSURE PIPE ASSEMBLY PUMP TO FDB	Piaggio spare parts (POP)
E10T120001	HIGH PRESSURE PIPE ASSLY	Piaggio spare parts (POP)
ESP650DFP020	HIGH PRESSURE PIPE ASSY FDB TO INJECTOR	Piaggio spare parts (POP)
E07501054	High pressure pipe assy.	Piaggio spare parts (POP)
E87107209	HIGH PRESSURE PIPE FLYWHEEL END SIDE	Piaggio spare parts (POP)
E87107208	HIGH PRESSURE PIPE GEAR END SIDE	Piaggio spare parts (POP)
889642	HIGH PRESSURE PUMP	Piaggio spare parts (POP)
A01G120006	HIGH PRESSURE PUMP-IMRLS	Piaggio spare parts (POP)
ESP650DFS003	HIGH PRESSURE PUMP-IMRLS	Piaggio spare parts (POP)
6A001185	HIGH PRESSURE TUBE ASSEMBLY	Piaggio spare parts (POP)
587815	Hinge	Piaggio spare parts (POP)
B073814	HINGE	Piaggio spare parts (POP)
605389	HINGE	Piaggio spare parts (POP)
567745	HINGE	Piaggio spare parts (POP)
B076332	HINGE ASSEMBLY	Piaggio spare parts (POP)
B076056	HINGE ASSLY LH, CROSS MEMBER	Piaggio spare parts (POP)
B078862	HINGE ASSLY LH, CROSS MEMBER	Piaggio spare parts (POP)
B076056ED	HINGE ASSLY LH, CROSS MEMBER - ED	Piaggio spare parts (POP)
B076057	HINGE ASSLY RH, CROSS MEMBER	Piaggio spare parts (POP)
B078863	HINGE ASSLY RH, CROSS MEMBER	Piaggio spare parts (POP)
B076057CED	HINGE ASSLY RH, CROSS MEMBER_ED	Piaggio spare parts (POP)
6B001455	HINGE ASSLY-PASS DOOR	Piaggio spare parts (POP)
D6871087Z01	HINGE ASSY, FR DOOR	Piaggio spare parts (POP)
B073813	HINGE MTG. BKT.	Piaggio spare parts (POP)
6B002667	HINGE PIN	Piaggio spare parts (POP)
569096	HINGE S/A	Piaggio spare parts (POP)
B077779	HINGE S/A PASS SEAT D5S	Piaggio spare parts (POP)
B074043	HINGES SUPPORT LEFT	Piaggio spare parts (POP)
B074042	HINGES SUPPORT RIGHT	Piaggio spare parts (POP)
B076191	HL BEZEL BEADING	Piaggio spare parts (POP)
B073969	HL BEZEL BEADING	Piaggio spare parts (POP)
1A019393	HOLDER	Piaggio spare parts (POP)
615601	HOLDER - CLAMP BKT BAR LH	Piaggio spare parts (POP)
615600	HOLDER - CLAMP BKT BAR RH	Piaggio spare parts (POP)
1A012158	HOLDER CLUTCH	Piaggio spare parts (POP)
114121	HOLDER FRONT LAMP	Piaggio spare parts (POP)
D3360887Z01	HOLDER SUB-ASSY SHIFT L.	Piaggio spare parts (POP)
925805	HOLDER WITH WIRE ASSY	Piaggio spare parts (POP)
661837	HOLDER, WASHER NOZZLE	Piaggio spare parts (POP)
D8534287Z01	HOLDER, WASHER NOZZLE	Piaggio spare parts (POP)
970300578	Holding fixture for differential assly I	Piaggio spare parts (POP)
F002C40520	HOLE-TYPE NOZZLE	Piaggio spare parts (POP)
A01M010008	Hollow Dowel - Dia 11	Piaggio spare parts (POP)

120203011	HOLLOW DOWEL GEAR BOX COVER	Piaggio spare parts (POP)
127102010	HOLLOW DOWEL GEAR BOX ENGINE SIDE COVER	Piaggio spare parts (POP)
B006255	HOLLOW DOWEL MAIN HSG CLUTCH SIDE	Piaggio spare parts (POP)
B024066	HOLLOW DOWEL SHIFTER HOUSING	Piaggio spare parts (POP)
ESP650DBP005	HOLLOW DOWEL-CYL.HEAD (Ø150DXØ12.6IDX12L	Piaggio spare parts (POP)
ESP650DCR011	HOLLOWDOWEL-PTOCOVER	Piaggio spare parts (POP)
B001365	HOOD ASSLY WITH PLATE	Piaggio spare parts (POP)
661427	HOOD FRAME (SOFT TOP)	Piaggio spare parts (POP)
KIT95014	HOOD FRAME 501_BSIII	Piaggio spare parts (POP)
B024345	HOOD FRAME ASSLY	Piaggio spare parts (POP)
B073309	HOOD FRAME ASSLY 501	Piaggio spare parts (POP)
B074623	HOOD FRAME ASSLY 501 B'DESH	Piaggio spare parts (POP)
6B000072	HOOD FRAME ASSLY 501 CNG/LPG WG	Piaggio spare parts (POP)
B076065	HOOD FRAME ASSLY 501-BS-IV	Piaggio spare parts (POP)
B076588	HOOD FRAME ASSLY APE CITY DSL	Piaggio spare parts (POP)
6B000375	HOOD FRAME ASSLY CITY DLX EXPORT	Piaggio spare parts (POP)
B001431	HOOD FRAME ASSLY CTD - DOM & EXP BSIII	Piaggio spare parts (POP)
B074562	HOOD FRAME ASSLY D 5 SEATER	Piaggio spare parts (POP)
662221	HOOD FRAME ASSLY -HI BODY (JUMBO) BSIII	Piaggio spare parts (POP)
B042787	HOOD FRAME ASSLY PAX 200cc	Piaggio spare parts (POP)
B075744	HOOD FRAME ASSLY PAX BS-IV	Piaggio spare parts (POP)
B073477	HOOD FRAME ASSLY PAX UPGRADE	Piaggio spare parts (POP)
B075283	HOOD FRAME ASSLY PAX UPGRADE AF P&c	Piaggio spare parts (POP)
KIT96013R	HOOD FRAME ASSLY WITH PROFILE -501 BSIV	Piaggio spare parts (POP)
KIT95066R	HOOD FRAME ASSLY WITH PROFILE PAX UPGRAD	Piaggio spare parts (POP)
940035	HOOD FRAME ASSY. BSII (661427+661502)	Piaggio spare parts (POP)
940036	HOOD FRAME ASSY. BSIII (B006770+661502)	Piaggio spare parts (POP)
KIT95058R	Hood Frame Assy. With Profile 501 BSIII	Piaggio spare parts (POP)
KIT95059R	Hood Frame Assy. With Profile Ape' city	Piaggio spare parts (POP)
B001432	HOOD FRAME REAR SECTION ASSLY	Piaggio spare parts (POP)
B006770	HOOD FRAME SET - DOM & EXP BSIII	Piaggio spare parts (POP)
587870	HOOK	Piaggio spare parts (POP)
23136	HOOK	Piaggio spare parts (POP)
E904850603	HOOK	Piaggio spare parts (POP)
602257	HOOK CONTROL PULLER	Piaggio spare parts (POP)
140090	HOOK CONTROL PULLER	Piaggio spare parts (POP)
970300512	HOOK FOR CLUTCH LOCKING	Piaggio spare parts (POP)
614485	HOOK S/A FR SPARE WHEEL	Piaggio spare parts (POP)
920209	HOOK SPANNER FOR HOLDING CLUTCH STILL	Piaggio spare parts (POP)
660194	HOOK SUB-ASSY, FR	Piaggio spare parts (POP)
E87010924	HOOK THROTTLE	Piaggio spare parts (POP)
L4260026	HOOKING PLATE	Piaggio spare parts (POP)
569146	HOOP NO. 1 (FRAME COVERING) APE CITY	Piaggio spare parts (POP)
604700	HOOP NO. 2 (FRAME COVERING)	Piaggio spare parts (POP)
604701	HOOP NO. 3 (FRAME COVERING)	Piaggio spare parts (POP)
604702	HOOP NO. 4 (FRAME COVERING)	Piaggio spare parts (POP)
604703	HOOP NO. 5 (FRAME COVERING)	Piaggio spare parts (POP)

661376	HOOP NO.2 (FRAME COVERING)	Piaggio spare parts (POP)
661377	HOOP NO.3 (FRAME COVERING)	Piaggio spare parts (POP)
B076079	HOOP SUB ASSEMBLY UPGRADE	Piaggio spare parts (POP)
B041000R	HORN 3 WH _ E MARK	Piaggio spare parts (POP)
604667	HORN 3WH-ADDON - (DOMESTIC)	Piaggio spare parts (POP)
645050	HORN ASSEMBLY 12V	Piaggio spare parts (POP)
645009	HORN ASSLY WITH PROTECTION COVER DIA 75	Piaggio spare parts (POP)
B074033	HORN ASSLY(DIA 70) _ UPGRADE_ADDON	Piaggio spare parts (POP)
645041	HORN COVER (VE)	Piaggio spare parts (POP)
604667R	HORN FOR 3 WH	Piaggio spare parts (POP)
B073953	HORN MTG. BKT S/A	Piaggio spare parts (POP)
B073948	HORN PAD	Piaggio spare parts (POP)
643765	HORN PROTECTOR	Piaggio spare parts (POP)
616874	HORN SEALED DIA.75	Piaggio spare parts (POP)
B001445	HORIZONTAL PIPE NO. 1	Piaggio spare parts (POP)
6A000751	HOSE - AIR FILTER TO ENGINE	Piaggio spare parts (POP)
6A000037	HOSE - AIR FILTER TO ENGINE INTAKE	Piaggio spare parts (POP)
6A000750	HOSE - AIR FILTER TO LONG MEMBER	Piaggio spare parts (POP)
B012507	HOSE - COOLANT INPUT EGR	Piaggio spare parts (POP)
B012466	HOSE - COOLANT OUTLET EGR	Piaggio spare parts (POP)
889920	HOSE - COOLANT OUTLET EGR	Piaggio spare parts (POP)
B012465	HOSE - COOLANT OUTPUT ENGINE	Piaggio spare parts (POP)
889919	HOSE - COOLANT OUTPUT ENGINE	Piaggio spare parts (POP)
B011752	HOSE - COOLANT OUTPUT ENGINE	Piaggio spare parts (POP)
A01T100003	HOSE - Cylinder Head TO EGR Cooler	Piaggio spare parts (POP)
A01T100008	HOSE - CYLINDER HEAD TO EGR VALVE	Piaggio spare parts (POP)
A01T100002	HOSE - EGR COOLER TO EGR VALVE	Piaggio spare parts (POP)
B041155	HOSE FUEL BACKFLOW	Piaggio spare parts (POP)
B075418	HOSE FUEL BACKFLOW	Piaggio spare parts (POP)
632826	HOSE FUEL GROUP (FUEL TANK SIDE)	Piaggio spare parts (POP)
6A000758	HOSE – FUEL NECK TO METAL PIPE	Piaggio spare parts (POP)
6A000759	HOSE – METAL PIPE TO FUEL TANK	Piaggio spare parts (POP)
A01A090011	HOSE - OMS TO OIL RETURN (with Banjo)	Piaggio spare parts (POP)
A01T090006	HOSE - ROCKER COVER TO OMS	Piaggio spare parts (POP)
6A000407	HOSE (RADIATOR INLET)	Piaggio spare parts (POP)
6A000982	HOSE (RADIATOR OUTLET)	Piaggio spare parts (POP)
6A001126	HOSE (COOLANT FILLER UNIT TO TANK)	Piaggio spare parts (POP)
6A000353	HOSE (COOLANT RECOVERY TANK TO FILLER)	Piaggio spare parts (POP)
ESP650DIN007	HOSE (EGR COOLER TO WATER PUMP)	Piaggio spare parts (POP)
6A000984	HOSE (ENGINE INLET)	Piaggio spare parts (POP)
6A000405	HOSE (ENGINE OUTLET)	Piaggio spare parts (POP)
B006797	HOSE (FILLER NECK TO RADIATOR INLET)	Piaggio spare parts (POP)
B075420	HOSE (FILLER NECK TO RADIATOR INLET)	Piaggio spare parts (POP)
B077247	HOSE (FILLER NECK TO RADIATOR INLET)	Piaggio spare parts (POP)
ESP650DLB016	HOSE (OMS TO INTAKE MANIFOLD)	Piaggio spare parts (POP)
ESP650DLB015	HOSE (ROCKER COVER TO OMS)	Piaggio spare parts (POP)
661352	HOSE (THERMOSTAT -T CONNECTOR)	Piaggio spare parts (POP)

B074041	HOSE AIR - FILTER TO ENGINE	Piaggio spare parts (POP)
B024968	HOSE AIR - FILTER TO ENGINE	Piaggio spare parts (POP)
662280	HOSE AIR CLEANER 'QI 870'	Piaggio spare parts (POP)
B008765	HOSE AIR FILTER INLET '870 BSIII'	Piaggio spare parts (POP)
B008766	HOSE AIR FILTER INTAKE '870 BSIII'	Piaggio spare parts (POP)
B008764	HOSE AIR FILTER OUTLET '870 BSIII'	Piaggio spare parts (POP)
B003135	HOSE AIR FILTER OUTLET TO ANCH. WALL	Piaggio spare parts (POP)
B077269	HOSE AIR FILTER TO CARBURATOR	Piaggio spare parts (POP)
B078898	HOSE AIR FILTER TO ENGINE	Piaggio spare parts (POP)
B075483	HOSE AIR FILTER TO ENGINE- 501 DSL BSIV	Piaggio spare parts (POP)
B075478	HOSE AIR FILTER TO ENGINE- CITY DSL BSIV	Piaggio spare parts (POP)
662491	HOSE AIR FILTER TO MIXER	Piaggio spare parts (POP)
B024969	HOSE AIR INTAKE	Piaggio spare parts (POP)
662544	HOSE AIR INTAKE TO AIR FILTER	Piaggio spare parts (POP)
B003136	HOSE ANCH. WALL TO ENGINE	Piaggio spare parts (POP)
ESP650DIN003	HOSE ASM WITH SLEEVE-HEAD TO COOLER	Piaggio spare parts (POP)
B074332	HOSE ASSY, AIR INTAKE	Piaggio spare parts (POP)
643902	HOSE- CARBURATOR TO MIXER	Piaggio spare parts (POP)
CM002901	HOSE CLAMP	Piaggio spare parts (POP)
CM001907	HOSE CLAMP	Piaggio spare parts (POP)
E87001016	HOSE CLAMP	Piaggio spare parts (POP)
1A007152	HOSE CLAMP	Piaggio spare parts (POP)
CM001906	HOSE CLAMP	Piaggio spare parts (POP)
661367	HOSE CLAMP	Piaggio spare parts (POP)
1A007153	HOSE CLAMP	Piaggio spare parts (POP)
632109	HOSE CLAMP - BRAKE PIPE	Piaggio spare parts (POP)
LG3630022	HOSE CLAMP SX12CW1 50X70	Piaggio spare parts (POP)
660878	HOSE CLIP	Piaggio spare parts (POP)
662465	HOSE CLIP	Piaggio spare parts (POP)
B042199	HOSE CLIP	Piaggio spare parts (POP)
120170018	HOSE CLIP - CLUTCH COVER BELOW	Piaggio spare parts (POP)
604591	HOSE CLIP - DIESEL OVER FLOW (000)	Piaggio spare parts (POP)
662571	HOSE CLIP (DIAMETER = 11.50) QI 870	Piaggio spare parts (POP)
662572	HOSE CLIP (DIAMETER = 15.50) QI 870	Piaggio spare parts (POP)
B003282	HOSE CLIP (DIAMETER = 7.0)	Piaggio spare parts (POP)
661699	HOSE CLIP (32-45):45A	Piaggio spare parts (POP)
661700	HOSE CLIP (45-60):2X	Piaggio spare parts (POP)
569519	HOSE CLIP (65A) 9 MM WIDTH	Piaggio spare parts (POP)
B001543	HOSE CLIP (DIA. 13.8)	Piaggio spare parts (POP)
B076918	HOSE CLIP (FORDIA 42-55)	Piaggio spare parts (POP)
604756	HOSE CLIP (SIZE : 2 X)	Piaggio spare parts (POP)
B041853	HOSE CLIP (SIZE : 65A)	Piaggio spare parts (POP)
632667	HOSE CLIP SIZE DIA 16 (OVER FLOW)	Piaggio spare parts (POP)
660896	HOSE COOL AIR INTAKE	Piaggio spare parts (POP)
A01T100004	HOSE- EGR VALVE TO WATER PUMP	Piaggio spare parts (POP)
B006581	HOSE ENGINE	Piaggio spare parts (POP)
611619	HOSE ENGINE	Piaggio spare parts (POP)

B002404	HOSE ENGINE	Piaggio spare parts (POP)
B009033	HOSE ENGINE	Piaggio spare parts (POP)
B024417	HOSE ENGINE	Piaggio spare parts (POP)
6A000656	HOSE ENGINE OUTLET	Piaggio spare parts (POP)
644470	HOSE EXPANSION TANK INLET	Piaggio spare parts (POP)
B003944	HOSE EXPANSION TANK INLET	Piaggio spare parts (POP)
662321	HOSE EXPANSION TANK INLET NO.2 'QI 870'	Piaggio spare parts (POP)
644471	HOSE EXPANSION TANK OUTLET	Piaggio spare parts (POP)
662319	HOSE EXPANSION TANK OUTLET 'QI 870'	Piaggio spare parts (POP)
658492	HOSE EXPANSION TANK OUTLET.	Piaggio spare parts (POP)
B003945	HOSE EXPANSION TANK OUTLET.	Piaggio spare parts (POP)
B041509	HOSE -FEED PUMP TO FUEL TANK (JALDOOT)	Piaggio spare parts (POP)
B001344	HOSE FLANGE	Piaggio spare parts (POP)
611620	HOSE FLANGE	Piaggio spare parts (POP)
LG9485344	HOSE FOR OIL COOLER	Piaggio spare parts (POP)
LG9485343	HOSE FOR OIL COOLER	Piaggio spare parts (POP)
643906	HOSE FROM FILLER VALVE TO JUNCTION BLOCK	Piaggio spare parts (POP)
6C000350	HOSE FROM OIL PUMP TO TMC	Piaggio spare parts (POP)
6C000396	HOSE FROM OIL RESERVOIR TO TMC	Piaggio spare parts (POP)
6C000351	HOSE FROM TMC TO OIL PUMP	Piaggio spare parts (POP)
6C000397	HOSE FROM TMC TO OIL PUMP	Piaggio spare parts (POP)
661794	HOSE FUEL	Piaggio spare parts (POP)
645623	HOSE FUEL	Piaggio spare parts (POP)
B003424	HOSE FUEL	Piaggio spare parts (POP)
644013	HOSE FUEL (DIESEL FILTER-PUMP A/C)	Piaggio spare parts (POP)
661326	HOSE FUEL (DIESEL FILTER-PUMP A/C)	Piaggio spare parts (POP)
632770	HOSE FUEL BACK FLOW (FRONT)	Piaggio spare parts (POP)
632788	HOSE FUEL BACKFLOW(REAR)	Piaggio spare parts (POP)
632771	HOSE FUEL BACKFLOW(REAR)	Piaggio spare parts (POP)
B041154	HOSE FUEL DELIVERY	Piaggio spare parts (POP)
632768	HOSE FUEL DELIVERY (FRONT)	Piaggio spare parts (POP)
632787	HOSE FUEL DELIVERY (REAR)	Piaggio spare parts (POP)
632769	HOSE FUEL DELIVERY (REAR)	Piaggio spare parts (POP)
632828	HOSE FUEL GROUP(ENGINE SIDE)	Piaggio spare parts (POP)
1F000530	HOSE FUEL SUPPORT BRACKET	Piaggio spare parts (POP)
B003114	HOSE FUEL TANK	Piaggio spare parts (POP)
B006411	HOSE FUEL, BACKFLOW	Piaggio spare parts (POP)
B023458	HOSE HIGH PRESSURE PUMP-CONNECTOR	Piaggio spare parts (POP)
B003098	HOSE INTAKE TO AIR FILTER	Piaggio spare parts (POP)
B078897	HOSE LM TO AIR FILTER	Piaggio spare parts (POP)
6A000036	HOSE- LONG MEMBER TO FILTER	Piaggio spare parts (POP)
932253	Hose Low Pressure CNG(K-0180-060)Paxx200	Piaggio spare parts (POP)
6A000739	HOSE LPG/CNG (FLEXIBLE)	Piaggio spare parts (POP)
6A000162	HOSE MFV TO FILTER	Piaggio spare parts (POP)
6A000160	HOSE MFV TO LPR LPG	Piaggio spare parts (POP)
6C000036	HOSE NO 1, RESERVOIR TO TMC	Piaggio spare parts (POP)
A01T090005	HOSE- OMS TO INLET MANIFOLD	Piaggio spare parts (POP)

E87010812	HOSE PIPEWATER	Piaggio spare parts (POP)
B076492	HOSE PLASTIC FUEL TANK	Piaggio spare parts (POP)
B042378	HOSE PLASTIC FUEL TANK	Piaggio spare parts (POP)
B077277	HOSE PLASTIC FUEL TANK	Piaggio spare parts (POP)
B078930	HOSE PLASTIC FUEL TANK	Piaggio spare parts (POP)
B075253	HOSE PLASTIC FUEL TANK (CARGO)	Piaggio spare parts (POP)
6A001212	HOSE PR. REG. TO FILTER	Piaggio spare parts (POP)
6A000522	HOSE PRESSURE REG. TO PULSATION DAMP LPG	Piaggio spare parts (POP)
6A000498	HOSE PULSATION DAMPNER TO INJECTOR	Piaggio spare parts (POP)
B025888	HOSE RADIATOR INLER N*1	Piaggio spare parts (POP)
645117	HOSE RADIATOR INLET	Piaggio spare parts (POP)
B077239	HOSE RADIATOR INLET	Piaggio spare parts (POP)
B074473	HOSE RADIATOR INLET	Piaggio spare parts (POP)
662306	HOSE RADIATOR INLET NO. 1 'QI 870'	Piaggio spare parts (POP)
B003946	HOSE RADIATOR INLET NO1	Piaggio spare parts (POP)
644039	HOSE RADIATOR INLET NO1	Piaggio spare parts (POP)
662307	HOSE RADIATOR OUTLET NO.1 'QI 870'	Piaggio spare parts (POP)
B075983	HOSE REGULATOR TO CARBURATOR LPG	Piaggio spare parts (POP)
B042750	HOSE REGULATOR TO CARBURETTOR	Piaggio spare parts (POP)
B077652	HOSE REGULATOR TO MIXER	Piaggio spare parts (POP)
932272	Hose Regulator to Mixer (K-0812-05-010)	Piaggio spare parts (POP)
6A000663	HOSE- SNORKEL TUBE TO LONG MEMBER	Piaggio spare parts (POP)
932252	Hose Solenoid to LPR(K-0180-06)Paxx200	Piaggio spare parts (POP)
661305	HOSE STRAP	Piaggio spare parts (POP)
605252	HOSE TMC TO OIL TANK	Piaggio spare parts (POP)
E87010824	HOSE WATER OUTLET	Piaggio spare parts (POP)
661351	HOSE(T CONNECTOR-COOLANT TANK)	Piaggio spare parts (POP)
6A001080	HOSE, AIR FILTER TO DELTA PRS. SENSOR	Piaggio spare parts (POP)
6A000393	HOSE, BREATHER TUBE TO T-CONNECTOR	Piaggio spare parts (POP)
6A000438	HOSE, CANISTER TO PCV IN	Piaggio spare parts (POP)
1E000957	HOSE, COOL AIR INTAKE	Piaggio spare parts (POP)
B025889	HOSE, DEGASSING	Piaggio spare parts (POP)
B025887	HOSE, ENGINE BYPASS	Piaggio spare parts (POP)
1E001638	HOSE, ENGINE BYPASS n°2	Piaggio spare parts (POP)
1E001634	HOSE, ENGINE BY-PASS TO PUMP	Piaggio spare parts (POP)
B007581	HOSE, EXPANSION TANK RETURN NO.2	Piaggio spare parts (POP)
1E001639	HOSE, EXPANSION TANK RETURN No1	Piaggio spare parts (POP)
B023450	HOSE, EXPANSION TANK RETURN No1	Piaggio spare parts (POP)
6A001233	HOSE, FILTER TO GAS IN PORT	Piaggio spare parts (POP)
6A001273	HOSE, FILTER TO INJECTOR	Piaggio spare parts (POP)
612451	HOSE, FUEL (TANK - PUMP A/C)	Piaggio spare parts (POP)
6A000089	HOSE, FUEL FILLER	Piaggio spare parts (POP)
6A001029	HOSE, FUEL FILLER	Piaggio spare parts (POP)
6A000618	HOSE, FUEL OVERFLOW	Piaggio spare parts (POP)
1E002552	HOSE, FUEL TANK TO FILLER PIPE	Piaggio spare parts (POP)
1E002555	HOSE, FUEL VAPOR	Piaggio spare parts (POP)
B023461	HOSE, FULEL, PUMP-FILTER	Piaggio spare parts (POP)

B073095	HOSE, FULEL, TANK-PUMP	Piaggio spare parts (POP)
B023460	HOSE, FULEL, TANK-PUMP	Piaggio spare parts (POP)
6A001564	HOSE, PCV TO ENGINE INTAKE	Piaggio spare parts (POP)
6A000439	HOSE, PCV TO INTAKE MANIFOLD	Piaggio spare parts (POP)
614124	HOSE, RADIATOR OUTLET NO1	Piaggio spare parts (POP)
B023516	HOSE, RADIATOR OUTLET, NO2	Piaggio spare parts (POP)
6A001264	HOSE, REGULATOR TO FILTER	Piaggio spare parts (POP)
6C000035	HOSE, RESERVOIR, N°2	Piaggio spare parts (POP)
614105	HOSE, RESERVOIR, NO1	Piaggio spare parts (POP)
B073702	HOSE, RESERVOIR, NO1	Piaggio spare parts (POP)
B076060	HOSE, RESERVOIR, NO1	Piaggio spare parts (POP)
B076061	HOSE, RESERVOIR, NO2	Piaggio spare parts (POP)
B073703	HOSE, RESEVOIR,NO2	Piaggio spare parts (POP)
614106	HOSE, RESEVOIR,NO2	Piaggio spare parts (POP)
6A000437	HOSE, T-CONNECTOR TO CANISTER IN	Piaggio spare parts (POP)
6A000394	HOSE, T-CONNECTOR TO OWW	Piaggio spare parts (POP)
615999	HOSE,FUEL TAN	Piaggio spare parts (POP)
6C000540	HOSE,RESERVOIR TO TMC PRIMARY	Piaggio spare parts (POP)
6C000541	HOSE,RESERVOIR TO TMC SECONDARY	Piaggio spare parts (POP)
B003320	HOSE-FUEL BACK FLOW	Piaggio spare parts (POP)
B003322	HOSE-FUEL DELIVERY	Piaggio spare parts (POP)
B023840	HOSE-PIPE, MOULDED	Piaggio spare parts (POP)
LG9850156	Housing	Piaggio spare parts (POP)
LG5957054	Housing	Piaggio spare parts (POP)
L1862156	HOUSING	Piaggio spare parts (POP)
109067	HOUSING	Piaggio spare parts (POP)
03G161723	Housing Differential4planet machined as	Piaggio spare parts (POP)
03G160855	Housing reverse detent spring	Piaggio spare parts (POP)
929925	Housing assembly- FL-0104	Piaggio spare parts (POP)
B006287	HOUSING ASSLY FOR FILLER CONNECTOR	Piaggio spare parts (POP)
L1860094	HOUSING BALL	Piaggio spare parts (POP)
920030	Housing cl. Assly(161FW00933)	Piaggio spare parts (POP)
1A019376	HOUSING CLUTCH ASSLY	Piaggio spare parts (POP)
1A019375	HOUSING CLUTCH ASSLY	Piaggio spare parts (POP)
1A012150	HOUSING CLUTCH ASSY	Piaggio spare parts (POP)
D4551187514	HOUSING, STEERING RACK	Piaggio spare parts (POP)
6A001543	HP TUBE, CONNECTOR TO REG.,D3s	Piaggio spare parts (POP)
6A001544	HP TUBE, CONNECTOR TO REG.,D5s	Piaggio spare parts (POP)
6A001845	HP TUBE, CONNECTOR TO REGULATOR	Piaggio spare parts (POP)
6A001542	HP TUBE, VALVE TO CONNECTOR,300cc	Piaggio spare parts (POP)
6A001547	HP TUBE, VALVE TO UNION, 230cc	Piaggio spare parts (POP)
B078286	HS1_BULB (12 V _35/35W)	Piaggio spare parts (POP)
B078286R	HS1_BULB (12 V _35/35W)	Piaggio spare parts (POP)
ED33680	HT COIL	Piaggio spare parts (POP)
1A015287	HT COIL COMPLETE WITH CUP	Piaggio spare parts (POP)
136888	HUB	Piaggio spare parts (POP)
6C000570	HUB	Piaggio spare parts (POP)

644511	HUB	Piaggio spare parts (POP)
L5900205	HUB	Piaggio spare parts (POP)
888199	HUB - MAIN IDLER	Piaggio spare parts (POP)
889216	HUB 1st-2nd SPEED	Piaggio spare parts (POP)
889223	HUB 3rd-4th SPEED	Piaggio spare parts (POP)
882185	HUB ASSEMBLY	Piaggio spare parts (POP)
615672	HUB ASSY	Piaggio spare parts (POP)
658393	HUB AXLE SHAFT SIDE	Piaggio spare parts (POP)
B002179	HUB BOLT	Piaggio spare parts (POP)
1A012152	HUB CLUTCH	Piaggio spare parts (POP)
1A019388	HUB CLUTCH WITH INSERT	Piaggio spare parts (POP)
168045015	HUB PIN (DIA 18)	Piaggio spare parts (POP)
1E001046	HUB S/A, FRONT AXLE	Piaggio spare parts (POP)
614293	HUB SA FR AXL	Piaggio spare parts (POP)
614294	HUB SA FR AXL	Piaggio spare parts (POP)
661254	HUB SUB ASSLY. FRONT AXLE	Piaggio spare parts (POP)
B042585	HUB SYNCHRONIZER	Piaggio spare parts (POP)
658303	HUB WHEEL SIDE	Piaggio spare parts (POP)
B075112	HUB-SUB-ASSLY,REAR BRAKE DRUM	Piaggio spare parts (POP)
660892	HUB-SUB-ASSLY,REAR BRAKE DRUM	Piaggio spare parts (POP)
587652	I BLINKING DEVICES	Piaggio spare parts (POP)
6D000230	I.P HARNESS BSVI DIESEL	Piaggio spare parts (POP)
1A017348	IDLE DRIVEN GEAR+5th SPEED DRIVING GEAR	Piaggio spare parts (POP)
B011805	IDLE GEAR	Piaggio spare parts (POP)
B011804	IDLE GEAR ASSEMBLY	Piaggio spare parts (POP)
SPB0118044	IDLE GEAR ASSEMBLY -SPD	Piaggio spare parts (POP)
L4110035	IDLER ASSLY.	Piaggio spare parts (POP)
SST94187	Idler Bush Installer (Brass Bush)	Piaggio spare parts (POP)
SST94183	Idler Bush Removal Tool (Brass Bush)	Piaggio spare parts (POP)
1A013368	IDLER GEAR	Piaggio spare parts (POP)
1A013369	IDLER GEAR	Piaggio spare parts (POP)
127571015R	IDLER GEAR	Piaggio spare parts (POP)
1A013370	IDLER GEAR	Piaggio spare parts (POP)
B002089	IDLER GEAR	Piaggio spare parts (POP)
227571014R	IDLER GEAR (CARGO)	Piaggio spare parts (POP)
227571014	IDLER GEAR (CARGO)	Piaggio spare parts (POP)
127571015	IDLER GEAR(PAS)	Piaggio spare parts (POP)
L7100435	IDLER PULLEY WITH I.P.	Piaggio spare parts (POP)
882544	IDLER SHAFT	Piaggio spare parts (POP)
882187	IDLER SHAFT WASHER PLATE	Piaggio spare parts (POP)
B016828	IDLING SCREW KIT	Piaggio spare parts (POP)
925736	IDLING SCREW(R-8104-220)	Piaggio spare parts (POP)
932226	IDLING SCREW(R-8106-VI-130)Paxx200	Piaggio spare parts (POP)
925720	IDLING SPRING(R-8105-130)	Piaggio spare parts (POP)
925779	IDLINGSCREW(R-8104-220)	Piaggio spare parts (POP)
605438	IGNITION SWITCH CUM STEERING LOCK	Piaggio spare parts (POP)
B002573	IGN SW W/ COUPLER(3WH DIESEL)-PAVNA	Piaggio spare parts (POP)

E40015443	IGN SYS.PLAATE ASSLY WITH BOUGICORD CABLE	Piaggio spare parts (POP)
A03G130004	IGNIATION COIL	Piaggio spare parts (POP)
E40005495	IGNITION SYSTEM PLATE ASSY.	Piaggio spare parts (POP)
B003863	IGNITION CUT OFF STICKER	Piaggio spare parts (POP)
940127	IGNITION SWITCH CUM STEE. LOCK WITH KEY	Piaggio spare parts (POP)
645052	IGNITION SWITCH CUM STEERING LOCK	Piaggio spare parts (POP)
652046	IGNITION SWITCH CUM STEERING LOCK	Piaggio spare parts (POP)
B003259	IGNITION SWITCH CUM STEERING LOCK	Piaggio spare parts (POP)
925675	IGNITION SWITCH CUM STEERING LOCK W/KEY	Piaggio spare parts (POP)
587649	IGNITION SWITCH WITH KEY	Piaggio spare parts (POP)
E40005444	IGNITION SYSTEM ASSY.	Piaggio spare parts (POP)
ED33738	IGNITIONSYSTEMPLATEASSEMBLY	Piaggio spare parts (POP)
1F000387	IL DRAIN FITTING	Piaggio spare parts (POP)
B011921	IMING COVER	Piaggio spare parts (POP)
107609	IMMOVABLE PINTLE	Piaggio spare parts (POP)
115119	IMMOVABLE PINTLE	Piaggio spare parts (POP)
K1A018282	INA ONE WAY CLUTCH KIT	Piaggio spare parts (POP)
B075264	INBOARD BOOT KIT	Piaggio spare parts (POP)
B075262	INBOARD JOINT KIT	Piaggio spare parts (POP)
AP8127803	INDICATORE DI DIREZ.POST.DX	Piaggio spare parts (POP)
AP8127804	INDICATORE DI DIREZ.POST.SX	Piaggio spare parts (POP)
1A012409	INFERIOR CUP	Piaggio spare parts (POP)
B011112	ING SEAL	Piaggio spare parts (POP)
1A009606	INIECTOR RETAINING PLATE	Piaggio spare parts (POP)
L4670112	INIECTOR SEAL	Piaggio spare parts (POP)
L7260055	INJ RET PIPE PLUG	Piaggio spare parts (POP)
KD65904658	INJ.PUMP+BANJO 15LD400 INDIA	Piaggio spare parts (POP)
020923Y	INJECTION DIAGNOSTIC TOOL CABLE	Piaggio spare parts (POP)
L6590380	INJECTION PUMP	Piaggio spare parts (POP)
KD6590359	Injection pump	Piaggio spare parts (POP)
L2015093	INJECTION PUMP CAM SUB-ASSY	Piaggio spare parts (POP)
L7215135	INJECTION PUMP TAPPET	Piaggio spare parts (POP)
970300502	INJECTION TIMING SETTING TOOL	Piaggio spare parts (POP)
1A009527	INJECTOR	Piaggio spare parts (POP)
L5010075	INJECTOR	Piaggio spare parts (POP)
ED31904	INJECTOR	Piaggio spare parts (POP)
A01G120003	INJECTOR	Piaggio spare parts (POP)
889479	INJECTOR	Piaggio spare parts (POP)
ESP650DFS004	INJECTOR	Piaggio spare parts (POP)
889478	INJECTOR	Piaggio spare parts (POP)
L5010725	INJECTOR 120 BAR (MICO)	Piaggio spare parts (POP)
E87101057	INJECTOR ASSEMBLY	Piaggio spare parts (POP)
L5010065	INJECTOR ASSEMBLY MICO	Piaggio spare parts (POP)
F002C7Z106	INJECTOR ASSLY BS-1	Piaggio spare parts (POP)
ED41532	INJECTOR ASSLY MICO	Piaggio spare parts (POP)
F002C6Z396	INJECTOR ASSLY.	Piaggio spare parts (POP)
E10G120004	INJECTOR ASSY with JOINT	Piaggio spare parts (POP)

E5306615089	INJECTOR ASSY.	Piaggio spare parts (POP)
KD5010066	INJECTOR ASSY.	Piaggio spare parts (POP)
F002C7Z112	INJECTOR ASSY. - EURO II	Piaggio spare parts (POP)
E10T120016	injector banjo -Over flow pipe	Piaggio spare parts (POP)
E87001021	INJECTOR CLAMP	Piaggio spare parts (POP)
ESP650DCH007	INJECTOR CLAMP	Piaggio spare parts (POP)
ESP650DFS001	INJECTOR CLAMP PIN	Piaggio spare parts (POP)
E9430032199	INJECTOR COMPLETE.	Piaggio spare parts (POP)
889983	INJECTOR COVER	Piaggio spare parts (POP)
8899824	INJECTOR COVER ASSY	Piaggio spare parts (POP)
889982	INJECTOR COVER ASSY	Piaggio spare parts (POP)
SP8899824	INJECTOR COVER ASSY BNA SPD	Piaggio spare parts (POP)
SST94091	INJECTOR HOLE CLEANING/OBSTUCTION DOLLY	Piaggio spare parts (POP)
882277	INJECTOR LEAK - OFF PIPE	Piaggio spare parts (POP)
889704	INJECTOR LEAK - OFF PIPE	Piaggio spare parts (POP)
L9080262	INJECTOR LEAK-OFF PLUG	Piaggio spare parts (POP)
KD8545793	INJECTOR LOCKING PLATE	Piaggio spare parts (POP)
889669	INJECTOR NUT	Piaggio spare parts (POP)
889706	INJECTOR NUT ASSY	Piaggio spare parts (POP)
SP889706	INJECTOR NUT ASSY	Piaggio spare parts (POP)
SST94067	INJECTOR PULLER	Piaggio spare parts (POP)
SST94057	INJECTOR REMOVEL	Piaggio spare parts (POP)
E10B120001	INJECTOR STUD	Piaggio spare parts (POP)
889668	INJECTOR SUPPORT GASKET	Piaggio spare parts (POP)
1D002087	INJECTOR THROTTLE BODY DIAM. 24	Piaggio spare parts (POP)
E87001010D	INJECTOR WITH	Piaggio spare parts (POP)
L96521950	INLET VALVE	Piaggio spare parts (POP)
L9652168	INLET VALVE	Piaggio spare parts (POP)
L9652195	INLET VALVE	Piaggio spare parts (POP)
E5508000117	INLET VALVE SEAT	Piaggio spare parts (POP)
662574	INLET AIR CLEANER HOSE 'QI 870'	Piaggio spare parts (POP)
LG2920197	INLET AIR SHROUD PRES	Piaggio spare parts (POP)
9431033395	INLET CONNECTON STUD	Piaggio spare parts (POP)
E07518622	Inlet flange	Piaggio spare parts (POP)
LG4420073	INLET GASKET	Piaggio spare parts (POP)
E07510835	Inlet manifold	Piaggio spare parts (POP)
E87121781	INLET MANIFOLD	Piaggio spare parts (POP)
E87011787A	INLET MANIFOLD	Piaggio spare parts (POP)
A01A070001	INLET MANIFOLD (Assy)	Piaggio spare parts (POP)
LG2942218	INLET PIPE W/O PLUG SEAT	Piaggio spare parts (POP)
LG8000307	INLET VALV.SEAT LGA280 AR 20 D	Piaggio spare parts (POP)
LG8000342	INLET VALV.SEAT LGA280 AR 20 D	Piaggio spare parts (POP)
E5509652099	INLET VALVE	Piaggio spare parts (POP)
E40008379	INLET VALVE	Piaggio spare parts (POP)
ED43771	INLET VALVE GUIDE	Piaggio spare parts (POP)
E43522232	INLET VALVE GUIDE	Piaggio spare parts (POP)
E40002254	INLET VALVE GUIDE	Piaggio spare parts (POP)

KD9652183	INLET VALVE MECH.TPT 15LD	Piaggio spare parts (POP)
E283800036	INLET VALVE SEAT	Piaggio spare parts (POP)
A01G120017	INLINE PUMP WITH INTEGRATED FUEL FILTER	Piaggio spare parts (POP)
A01G120014	INLINE PUMP WITH INTEGRATED FUEL FILTER	Piaggio spare parts (POP)
B006980	INNER - ACCELERATOR DIESEL	Piaggio spare parts (POP)
B041120	inner cover steering post	Piaggio spare parts (POP)
L2920179	INNER COWLING	Piaggio spare parts (POP)
6B000751	INNER MUDGUARD LOWER LH	Piaggio spare parts (POP)
6B001957	INNER MUDGUARD LOWER LH ASSLY	Piaggio spare parts (POP)
6B000753	INNER MUDGUARD LOWER LH ASSLY	Piaggio spare parts (POP)
6B000752	INNER MUDGUARD LOWER RH	Piaggio spare parts (POP)
6B001958	INNER MUDGUARD LOWER RH ASSLY	Piaggio spare parts (POP)
6B000754	INNER MUDGUARD LOWER RH ASSLY	Piaggio spare parts (POP)
122032014	INNER RING - CLUSTER GEAR	Piaggio spare parts (POP)
151924	INNER TUBE FOR TYRE 4.5 X 10 INCH	Piaggio spare parts (POP)
6C000552	INNER TUBE FOR TYRE 4X8 INCH	Piaggio spare parts (POP)
B001316	INNER TUBE FOR TYRE 4X8 INCH	Piaggio spare parts (POP)
B023916	INNER-GEAR CONTROL	Piaggio spare parts (POP)
B006982	INNER-GEAR CONTROL	Piaggio spare parts (POP)
B003986	INPUT SHAFT	Piaggio spare parts (POP)
03A160219	INPUT SHAFT ASSEMBLY	Piaggio spare parts (POP)
889217	INSERT	Piaggio spare parts (POP)
B002793	INSERT BUSH (85 06 049 0)	Piaggio spare parts (POP)
03G161688	Insert-Drain plug	Piaggio spare parts (POP)
185728	INSIDE DOOR LEVER ASSY	Piaggio spare parts (POP)
B009234	INSIDE DOOR LEVER WITH CABLE	Piaggio spare parts (POP)
L5800168	INSIDE SPRING FOR INTAKE/EXHAUST VALVE	Piaggio spare parts (POP)
B001481R	INST. CLUSTER - APE CITY	Piaggio spare parts (POP)
B002209R	INST. CLUSTER - APE CITY(GAS)	Piaggio spare parts (POP)
B001481	INST. CLUSTER - (APE CITY)	Piaggio spare parts (POP)
B074914	INST. CLUSTER - CITY UPGRADE(DIESEL)	Piaggio spare parts (POP)
B002209	INST. CLUSTER (APE CITY CNG/LPG)	Piaggio spare parts (POP)
B075476	INST. CLUSTER (W/O BEZEL) PORTER 1000	Piaggio spare parts (POP)
B074431	INST. CLUSTER (W/O BEZEL) PORTER 650	Piaggio spare parts (POP)
B075703	INST. CLUSTER -CITY BSIV (CNG/LPG)	Piaggio spare parts (POP)
6D000225	INST. CLUSTER_APE CITY HT (CNG)	Piaggio spare parts (POP)
6D000224	INST. CLUSTER_APE CITY HT (LPG)	Piaggio spare parts (POP)
6D000389	INST. CLUSTER_APE CITY HT BSVI (LPG)	Piaggio spare parts (POP)
B078079	INST.CLUST- CITY - (CNG) SW/NEUTRAL	Piaggio spare parts (POP)
B078078	INST.CLUST- CITY - (LPG) SW/NEUTRAL	Piaggio spare parts (POP)
B078033	INST.CLUST- CITY - (PETROL) SW/NEUTRAL	Piaggio spare parts (POP)
B074271	INST.CLUST- CITY UPGRADE- (CNG/LPG)	Piaggio spare parts (POP)
B074216	INST.CLUST- CITY UPGRADE- (PETROL)	Piaggio spare parts (POP)
B073221	INST.CLUST- NEUTRAL INDI (CITY- PET/DSL)	Piaggio spare parts (POP)
B078480	INST.CLUSTER _501_ GAS (WC)	Piaggio spare parts (POP)
B073222	INST.CLUSTER- NEUTRAL INDI (CITY- GAS)	Piaggio spare parts (POP)
6D000222	INST.CLUSTER PORTER 1000 (LHD)	Piaggio spare parts (POP)

6D000320	INST.CLUSTER_APE CITY (CNG) - BSVI	Piaggio spare parts (POP)
6D000322	INST.CLUSTER_APE CITY_HT(PETROL_-BSVI	Piaggio spare parts (POP)
6D000062	INST.PANEL WHs PORTER 1000(LHD)	Piaggio spare parts (POP)
6D000333	INST.PANEL WHs_APE MID BODY(GAS)	Piaggio spare parts (POP)
LG5302472	INSTRUCTIONS MANUAL	Piaggio spare parts (POP)
6D000059	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000413	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000519	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000058	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000739	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000740	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000792	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000793	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000517	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000518	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
6D000367	INSTRUMENT CLUSTER	Piaggio spare parts (POP)
B002713R	INSTRUMENT CLUSTER - APE MINI 441	Piaggio spare parts (POP)
B002713	INSTRUMENT CLUSTER - APE MINI TRUK	Piaggio spare parts (POP)
661614	INSTRUMENT CLUSTER (870)	Piaggio spare parts (POP)
659911	INSTRUMENT CLUSTER (CNG / LPG)	Piaggio spare parts (POP)
660334	INSTRUMENT CLUSTER (APE DELUX)	Piaggio spare parts (POP)
B023738	INSTRUMENT CLUSTER (BNA_VE)	Piaggio spare parts (POP)
B024715	INSTRUMENT CLUSTER (PORTER MINI)	Piaggio spare parts (POP)
B042623	INSTRUMENT CLUSTER _PORTER 1000_(MINDA)	Piaggio spare parts (POP)
6D000712	INSTRUMENT CLUSTER 300CC PETROL	Piaggio spare parts (POP)
6D000414	INSTRUMENT CLUSTER 501 BSVI (LPG)	Piaggio spare parts (POP)
6D000320R	INSTRUMENT CLUSTER APE CITY BSVI	Piaggio spare parts (POP)
661251	INSTRUMENT CLUSTER WITH SHIFTED SPEEDOME	Piaggio spare parts (POP)
B001556R	INSTRUMENT CLUSTER WITH SHIFTED SPEEDOME	Piaggio spare parts (POP)
661510R	INSTRUMENT CLUSTER WITH SHIFTED SPEEDOME	Piaggio spare parts (POP)
6D000214	INSTRUMENT CLUSTER, APE CITY PLUS, P	Piaggio spare parts (POP)
B076774	INSTRUMENT CLUSTER_CITY (EURO 4)	Piaggio spare parts (POP)
B042632	INSTRUMENT CLUSTER_APE CLASSIC NEW	Piaggio spare parts (POP)
B001716	INSTRUMENT PANEL	Piaggio spare parts (POP)
B003994	INSTRUMENT PANEL CLUSTER	Piaggio spare parts (POP)
605426	INSTRUMENT PANEL - RHD	Piaggio spare parts (POP)
1D001970	Instrument Panel Wiring Harness	Piaggio spare parts (POP)
587939	INSTRUMENT SPACER-RING	Piaggio spare parts (POP)
020716Y	INSTRUMENTS	Piaggio spare parts (POP)
020726Y	INSTRUMENTS	Piaggio spare parts (POP)
020715Y	INSTRUMENTS	Piaggio spare parts (POP)
020408Y	INSTRUMENTS	Piaggio spare parts (POP)
020724Y	INSTRUMENTS	Piaggio spare parts (POP)
020727Y	INSTRUMENTS	Piaggio spare parts (POP)
020720Y	INSTRUMENTS	Piaggio spare parts (POP)
632675	Insulating	Piaggio spare parts (POP)
B073261	INSULATING TUBE	Piaggio spare parts (POP)

114279	INSULATING TUBE	Piaggio spare parts (POP)
B006792	INSULATION - ENGINE INSPECTION COVER	Piaggio spare parts (POP)
659991	INSULATION FOR FLOOR	Piaggio spare parts (POP)
6B000034	INSULATION ENGINE INSPECTION COVER	Piaggio spare parts (POP)
660239	INSULATION, ENGINE INSPECTION DOOR	Piaggio spare parts (POP)
660490	INSULATION-ENGINE INSPECTION COVER.	Piaggio spare parts (POP)
E40006482	INSULATOR	Piaggio spare parts (POP)
D1236287201	INSULATOR, ENGINE MOUNTIN	Piaggio spare parts (POP)
645914	INSULATOR, ENGINE MOUNTING	Piaggio spare parts (POP)
1E001085	INSULATOR, ENGINE MOUNTING	Piaggio spare parts (POP)
KD1240017	INT CIRCLIP D20/21.5 1.0 THK	Piaggio spare parts (POP)
LG1240017	INT CIRCLIP D20/21.5 1.0 THK	Piaggio spare parts (POP)
KD5200981	INT. ACCL. LEVER COMPL.	Piaggio spare parts (POP)
A01S120001	Int. O-Ring for Inline Pump 501 DSL BS6	Piaggio spare parts (POP)
KD6902233	INT.SHORT M.FOLD X REMOTE FLTR	Piaggio spare parts (POP)
KD6902218	INT.SHORT M.FOLD X REMOTE FLTR	Piaggio spare parts (POP)
E500022105	INT.VAL.GUIDE	Piaggio spare parts (POP)
ED33683	INTAKE AIR REDUCER	Piaggio spare parts (POP)
672660	INTAKE FITTING	Piaggio spare parts (POP)
1A009632	INTAKE FITTING	Piaggio spare parts (POP)
B018775	INTAKE FITTING	Piaggio spare parts (POP)
1A007409	INTAKE FITTING	Piaggio spare parts (POP)
1A003268	INTAKE FITTING	Piaggio spare parts (POP)
1A008002	INTAKE FITTING	Piaggio spare parts (POP)
1A019334	INTAKE FITTING	Piaggio spare parts (POP)
B014771	INTAKE FITTING GASKET	Piaggio spare parts (POP)
B018442	INTAKE FITTING GASKET	Piaggio spare parts (POP)
1A012706	INTAKE FITTING GASKET	Piaggio spare parts (POP)
B016016	INTAKE FITTING GASKET WITH O-RING	Piaggio spare parts (POP)
1A006781	INTAKE FITTING WITH I.P.	Piaggio spare parts (POP)
1A015022	INTAKE FITTING WITH I.P.	Piaggio spare parts (POP)
1A016000	INTAKE FITTING WITH I.P.	Piaggio spare parts (POP)
1A010172	INTAKE FITTING WITH I.P.	Piaggio spare parts (POP)
1A015639	INTAKE FITTING WITH I.P.	Piaggio spare parts (POP)
SP1A014453	INTAKE FITTING WITH INJECTOR_SPD	Piaggio spare parts (POP)
B074971	INTAKE GRILL FOR SNORKEL SYSTEM	Piaggio spare parts (POP)
E40010859	INTAKE MANIFOLD	Piaggio spare parts (POP)
B010575	INTAKE MANIFOLD	Piaggio spare parts (POP)
1F000722	INTAKE MANIFOLD	Piaggio spare parts (POP)
SPB010720	INTAKE MANIFOLD AND EGR VALVE SUPP.GROUP	Piaggio spare parts (POP)
ESP650DIN002	INTAKE MANIFOLD STUB PIPE	Piaggio spare parts (POP)
483841	INTAKE OIL FILTER COMPLETE	Piaggio spare parts (POP)
1F000240	INTAKE PIPE ADAPTOR	Piaggio spare parts (POP)
B012254	INTAKE PIPE ADAPTOR	Piaggio spare parts (POP)
1F000488	INTAKE PIPE ELBOW	Piaggio spare parts (POP)
1A012410	INTAKE VALVE	Piaggio spare parts (POP)
B014680	INTAKE VALVE GUIDE	Piaggio spare parts (POP)

B014684	INTAKE VALVE Ø20	Piaggio spare parts (POP)
B017230	INTAKE VALVE SEAT	Piaggio spare parts (POP)
L8000230	INTAKE VALVE SEAT	Piaggio spare parts (POP)
ESP650DCH021	INTAKE VALVE STEM SEAL	Piaggio spare parts (POP)
LG9652179	INTAKE VALVE-STELLITE LGA280	Piaggio spare parts (POP)
970300607	INTAKE-EXHAUST VALVE GUIDE GO-NOGO TOOL	Piaggio spare parts (POP)
03G160877	INTERGATE LOCK	Piaggio spare parts (POP)
B023761R	INTERIOR MIRROR ASSLY WITH LAMP	Piaggio spare parts (POP)
1F000498	INTERMEDIATE FLANGE	Piaggio spare parts (POP)
SP1F000635	INTERMEDIATE FLANGE ASSLY-GB 700 SPD	Piaggio spare parts (POP)
567874	INTERMEDIATE PROFILE FOR CARPET	Piaggio spare parts (POP)
940016	Intermediate Shaft Assembly(truk plus)	Piaggio spare parts (POP)
659990	INTERNAL BRACKET ASSLY- LH	Piaggio spare parts (POP)
632103	INTERNAL BRACKET ASSLY- LH	Piaggio spare parts (POP)
632104	INTERNAL BRACKET ASSLY- RH	Piaggio spare parts (POP)
226661	INTERNAL BUSH	Piaggio spare parts (POP)
605497	INTERNAL CAB REAR WIEW MIRROR ASSLY	Piaggio spare parts (POP)
661231	INTERNAL CIRCLIP DIA.9.5	Piaggio spare parts (POP)
LG1240039	INTERNAL CIRCLIPS D.4	Piaggio spare parts (POP)
L2920189	INTERNAL COWLING	Piaggio spare parts (POP)
AP8221211	Internal Lateral Stand Spring	Piaggio spare parts (POP)
ED41960	Internal lever	Piaggio spare parts (POP)
B016205	INTERNAL RING (FLY WHEEL SIZE)	Piaggio spare parts (POP)
L7750122	INTERNAL ROTOR	Piaggio spare parts (POP)
KD5201129	INTERNAL STOP LEVER	Piaggio spare parts (POP)
SP1A011609	INVERTER LEVER SECTOR ASSY CARGO -SPD	Piaggio spare parts (POP)
SP1A0101404	INVERTER LEVER SECTOR ASSY PASS -SPD	Piaggio spare parts (POP)
SP1A018787	INVERTER LEVER SECTOR ASSY -SPD	Piaggio spare parts (POP)
1A010139	INVERTER LEVER SECTOR WITH I.P.	Piaggio spare parts (POP)
1A018785	INVERTER LEVER SECTOR WITH I.P.	Piaggio spare parts (POP)
B019221	INVERTER LEVER SECTOR WITH P.I.	Piaggio spare parts (POP)
1A009093	INVERTER LEVER SECTOR WITH P.I.	Piaggio spare parts (POP)
SST96022	IR W1130 battery operated Impact Wrench	Piaggio spare parts (POP)
SST96018	IR- W5111-battery operated Impact Wrench	Piaggio spare parts (POP)
SST96021	IR W5132-battery operated Impact Wrench	Piaggio spare parts (POP)
567439	JACK	Piaggio spare parts (POP)
652407	JACK - (ROHIT MAKE)	Piaggio spare parts (POP)
643773	JACK - APE 601	Piaggio spare parts (POP)
B001954R	JACK ASSEMBLY	Piaggio spare parts (POP)
B002030	JACK ASSLY	Piaggio spare parts (POP)
B076650R	JACK ASSLY - APE CITY	Piaggio spare parts (POP)
B076650	JACK ASSLY - APE CITY (M/S RUCHA)	Piaggio spare parts (POP)
B023718	JACK ASSLY (APE CITY) 0.5T	Piaggio spare parts (POP)
B001954	JACK ASSLY COMPONENT	Piaggio spare parts (POP)
660062	JACK ASSY	Piaggio spare parts (POP)
B076012	JACK BOX	Piaggio spare parts (POP)
6C000049	JACK MTG BKT ASSLY	Piaggio spare parts (POP)

B075963	JACK TOP PLATE	Piaggio spare parts (POP)
644324	JACK,LEFT GROUP	Piaggio spare parts (POP)
645528	JACK,RIGHT GROUP	Piaggio spare parts (POP)
D8508087Z01	JAR & PUMP ASSY, WASHER	Piaggio spare parts (POP)
645044	JAR AND PUMP ASSY. WASHER	Piaggio spare parts (POP)
03G160769	jaw 34 machined	Piaggio spare parts (POP)
03G160770	jaw 5 machined	Piaggio spare parts (POP)
03G160771	Jaw reverse	Piaggio spare parts (POP)
03A160771	JAW REVERSE ASSEMBLY	Piaggio spare parts (POP)
602497	JAWS STOP SPRING	Piaggio spare parts (POP)
127850	JAWS STOP SPRING	Piaggio spare parts (POP)
6C000277	JAWS-SUPPORTING DISK FOR LEFT WHEEL WITH	Piaggio spare parts (POP)
6C000279	JAW-SUPPORT DISK FOR RIGHT WHEEL WITH AS	Piaggio spare parts (POP)
B010937	JET COOLING PISTON	Piaggio spare parts (POP)
B010388	JET COOLING PISTON	Piaggio spare parts (POP)
932322	Jet Holder(LAM)	Piaggio spare parts (POP)
1A010098	JET NEEDLE	Piaggio spare parts (POP)
E40006451	JET NEEDLE	Piaggio spare parts (POP)
1A001533	JET NEEDLE	Piaggio spare parts (POP)
CM166701	JET NEEDLE "NPTA"	Piaggio spare parts (POP)
932319	Jet Needle(LAM)	Piaggio spare parts (POP)
SST94142	JOB CARD WRITING PAD	Piaggio spare parts (POP)
L2165159	JOINED CRANK CASE (MODIFIED) I (WITH OIL	Piaggio spare parts (POP)
L2165092	JOINED CRANKCASE	Piaggio spare parts (POP)
L2165144	JOINED CRANKCASE	Piaggio spare parts (POP)
L21651488	JOINED CRANKCASE(MODIFIED)	Piaggio spare parts (POP)
E200467013	JOINT	Piaggio spare parts (POP)
E283467036	JOINT	Piaggio spare parts (POP)
E200467021	JOINT	Piaggio spare parts (POP)
E07506189	JOINT	Piaggio spare parts (POP)
E200467003	JOINT	Piaggio spare parts (POP)
ED40517	JOINT	Piaggio spare parts (POP)
E500450091	JOINT	Piaggio spare parts (POP)
E500450092	JOINT	Piaggio spare parts (POP)
E500440023	JOINT	Piaggio spare parts (POP)
E50006166	JOINT	Piaggio spare parts (POP)
E53006166	JOINT	Piaggio spare parts (POP)
E40016138	JOINT	Piaggio spare parts (POP)
E50006404	JOINT	Piaggio spare parts (POP)
E5404400023	JOINT	Piaggio spare parts (POP)
E50006169	JOINT	Piaggio spare parts (POP)
E87016199A	JOINT	Piaggio spare parts (POP)
E87126189	Joint - Gear End Cover	Piaggio spare parts (POP)
E87026141	JOINT TIMING	Piaggio spare parts (POP)
E2854601030	Joint 0.1 mm	Piaggio spare parts (POP)
E273470077	Joint 0.15mm	Piaggio spare parts (POP)
E500470103	JOINT 0.2 MM	Piaggio spare parts (POP)

E500460120	JOINT 0.2 MM	Piaggio spare parts (POP)
E40016137	JOINT 0.2 MM	Piaggio spare parts (POP)
E50016133	JOINT 0.2 MM.	Piaggio spare parts (POP)
E500460102	JOINT 0.3 MM	Piaggio spare parts (POP)
E500470094	JOINT 0.3 MM	Piaggio spare parts (POP)
E271460001	Joint 0.3 mm	Piaggio spare parts (POP)
E40016136	JOINT 0.3 MM	Piaggio spare parts (POP)
E271470009	Joint 0.3mm	Piaggio spare parts (POP)
E50006101	JOINT 0.4 MM	Piaggio spare parts (POP)
E40016142	JOINT 0.4 MM	Piaggio spare parts (POP)
ED41236	JOINT 0.5 MM.	Piaggio spare parts (POP)
E075161102	Joint 0.5mm	Piaggio spare parts (POP)
ED41237	JOINT 1.0 MM.	Piaggio spare parts (POP)
E075161103	Joint 1.0mm	Piaggio spare parts (POP)
E260467013	JOINT 10.20 X 17 X 1	Piaggio spare parts (POP)
E7506189	JOINT 14X20X1.5	Piaggio spare parts (POP)
ED40893	JOINT 2.0 MM	Piaggio spare parts (POP)
D4523087Z01	JOINT ASSY,STEERING SHAFT	Piaggio spare parts (POP)
E904467015	JOINT BANJO BOLT	Piaggio spare parts (POP)
E94670059	JOINT -BANJO BOLT	Piaggio spare parts (POP)
E87016196	JOINT BELL HOUSING	Piaggio spare parts (POP)
E40026135	JOINT CYL. HEAD (0.7TH)	Piaggio spare parts (POP)
E40026134	JOINT CYL. HEAD (1.0TH)	Piaggio spare parts (POP)
E8701611010B	JOINT CYLINDER 0.2MM	Piaggio spare parts (POP)
ED43275	Joint cylinder (0.1 mm)	Piaggio spare parts (POP)
ED43220	Joint cylinder (0.2 mm)	Piaggio spare parts (POP)
ED42670	Joint cylinder (0.5 mm)	Piaggio spare parts (POP)
E870161101A	JOINT CYLINDER 0.1 MM	Piaggio spare parts (POP)
E8701611010A	JOINT CYLINDER 0.1MM	Piaggio spare parts (POP)
E870161101B	JOINT CYLINDER 0.2 MM	Piaggio spare parts (POP)
ED33232	Joint cylinder head	Piaggio spare parts (POP)
E40016143	JOINT CYLINDER HEAD 0.5 MM	Piaggio spare parts (POP)
E40016144	JOINT CYLINDER HEAD 0.55 MM	Piaggio spare parts (POP)
E53006146	JOINT CYLINDER HEAD 0.6 MM	Piaggio spare parts (POP)
E43506180	JOINT CYLINDER HEAD 0.6 MM	Piaggio spare parts (POP)
E53006147	JOINT CYLINDER HEAD 0.7 MM	Piaggio spare parts (POP)
E43506181	JOINT CYLINDER HEAD 0.7MM	Piaggio spare parts (POP)
E53006148	JOINT CYLINDER HEAD 0.8 MM	Piaggio spare parts (POP)
E43506182	JOINT CYLINDER HEAD 0.8 MM	Piaggio spare parts (POP)
E43506183	JOINT CYLINDER HEAD 0.9 MM	Piaggio spare parts (POP)
E43506184	JOINT CYLINDER HEAD 1.0 MM	Piaggio spare parts (POP)
E250467014	JOINT DRAIN PLUG	Piaggio spare parts (POP)
E07526166	Joint EGR	Piaggio spare parts (POP)
ED33758	JOINT EXH. FLANGE	Piaggio spare parts (POP)
E40016140	JOINT EXHAUST FLANGE	Piaggio spare parts (POP)
E07516145	Joint exhaust flange (1.0 mm)	Piaggio spare parts (POP)
E07526173	Joint exhaust manifold (1.0 mm)	Piaggio spare parts (POP)

ESP650DGS010	JOINT FOR CYLINDER (ALGASKET0.5mmTHK.)	Piaggio spare parts (POP)
ED42723	JOINT FOR FIP CASING	Piaggio spare parts (POP)
E270470069	Joint for housing	Piaggio spare parts (POP)
ED42602	JOINT FOR PTO COVER END	Piaggio spare parts (POP)
E10S110001	JOINT FOR ROCKER COVER	Piaggio spare parts (POP)
E60026104	Joint fuel pump 0.15mm	Piaggio spare parts (POP)
E260458001	Joint fuel pump 0.1mm	Piaggio spare parts (POP)
E260458012	Joint fuel pump 0.3mm	Piaggio spare parts (POP)
E260458008	Joint fuel pump 0.5mm	Piaggio spare parts (POP)
E271450067	Joint inlet adaptor (1.0 mm)	Piaggio spare parts (POP)
ED41328	Joint inlet flange (1.0 mm)	Piaggio spare parts (POP)
E40026168	JOINT INTAKE PORT	Piaggio spare parts (POP)
E07506109	Joint lub oil adaptor	Piaggio spare parts (POP)
E07506174	Joint Oil Pan	Piaggio spare parts (POP)
E070474017	Joint push rod sleeve	Piaggio spare parts (POP)
E40006428	JOINT PUSH ROD SLEEVE	Piaggio spare parts (POP)
E40016468	JOINT PUSH ROD SLEEVE (GREEN)	Piaggio spare parts (POP)
E87026156	JOINT PUSH ROD TUBE SET	Piaggio spare parts (POP)
E87026138	JOINT PUSHROD TUBE	Piaggio spare parts (POP)
E87016189	JOINT RELIEF VALVE	Piaggio spare parts (POP)
E07516153	Joint rocker cover	Piaggio spare parts (POP)
E07516147	Joint rocker cover 0.15 mm	Piaggio spare parts (POP)
E07516146	Joint rocker cover 0.5 mm	Piaggio spare parts (POP)
E07516152	Joint rocker cover 0.8 mm	Piaggio spare parts (POP)
E870161104	JOINT SPPORT	Piaggio spare parts (POP)
E500477616	JOINT SUCTION BULB	Piaggio spare parts (POP)
E870161101	JOINT SUPPORT FLYWHEEL SIDE	Piaggio spare parts (POP)
E870161105	JOINT SUPPORT GEAR	Piaggio spare parts (POP)
E273453512	Joint tappet guide	Piaggio spare parts (POP)
E870161107	JOINT(1.2MM	Piaggio spare parts (POP)
E87026112	JOINT, CRANKCASE	Piaggio spare parts (POP)
E260467001	JOINT..	Piaggio spare parts (POP)
B006551	JOINT-CONIC CONNECTOR TO AIR CLEANER	Piaggio spare parts (POP)
E50016130	JOINT-COVER PLATE	Piaggio spare parts (POP)
E40026133	JOINT-CYLINDER BARREL TO CRANKCASE 0.3mm	Piaggio spare parts (POP)
E43526147	JOINTEXHAUST FLANGE	Piaggio spare parts (POP)
E03S070003	JOINT-EXHAUST FLANGE	Piaggio spare parts (POP)
E87026110	JOINTFILTER	Piaggio spare parts (POP)
613161	JOINTING	Piaggio spare parts (POP)
E10S070002	JOINT-INTAKE FLANGE	Piaggio spare parts (POP)
E40016139	JOINT-INTAKE FLANGE-AIR INTAKE	Piaggio spare parts (POP)
E5004400023	JOINTROCKERCOVER	Piaggio spare parts (POP)
E40016141	JOINT-SUCTION BULB	Piaggio spare parts (POP)
L1580243	JOURNAL MAIN BUSH	Piaggio spare parts (POP)
L7653022	JOURNAL THRUST WASHER	Piaggio spare parts (POP)
SM26256905	Jump Ring	Piaggio spare parts (POP)
643848	JUNCTION BLOCK SUB ASSY(VANAZ PT NO K-0	Piaggio spare parts (POP)

6D000849	JUNCTION BOX	Piaggio spare parts (POP)
L1261110	JUNK RING	Piaggio spare parts (POP)
L2280156	KAY	Piaggio spare parts (POP)
E500220013	KEY	Piaggio spare parts (POP)
KD2280067	KEY	Piaggio spare parts (POP)
LG2200022	KEY 4x4x12 UNI 6604	Piaggio spare parts (POP)
661234	KEY - COUPLE (PAVNA)	Piaggio spare parts (POP)
660946	KEY ASSLY. (PAVNA)	Piaggio spare parts (POP)
ESP650DFP016	KEY CAM SHAFTFIP	Piaggio spare parts (POP)
E291228056	Key F W E	Piaggio spare parts (POP)
E500228048	KEY F.W.E.	Piaggio spare parts (POP)
616576R	KEY IGN SWITCH (PETROL / CNG / LPG)	Piaggio spare parts (POP)
616576	KEY IGNITION SWITCH	Piaggio spare parts (POP)
B024532	KEY IGNITION SWITCH (PAX 200)	Piaggio spare parts (POP)
E70228047	KEY PTO	Piaggio spare parts (POP)
E291228049	Key PTO (dia. 30 con shaft)	Piaggio spare parts (POP)
645058	KEY SET	Piaggio spare parts (POP)
020889Y	KEY TOOL	Piaggio spare parts (POP)
KIT95028R	KIT - FLEXIBLE COUPLING 3W_BSIII	Piaggio spare parts (POP)
KIT95029R	KIT - FLEXIBLE COUPLING PORTER 600	Piaggio spare parts (POP)
940003R	KIT – Steering Pin and Seal	Piaggio spare parts (POP)
KIT940003R	KIT – Steering Pin and Seal	Piaggio spare parts (POP)
940003	KIT – Steering Pin and Seal	Piaggio spare parts (POP)
CM264703	KIT AIR SCREW	Piaggio spare parts (POP)
KIT95117R	Kit Aluminium Clutch plates DSL BS4/BS6	Piaggio spare parts (POP)
KIT96021R	KIT APE CITY LPG SPARE PARTS	Piaggio spare parts (POP)
KIT96050	Kit ape' City 200 Accessories SS	Piaggio spare parts (POP)
L4898055	KIT BARREL PISTON & RING LDW 482	Piaggio spare parts (POP)
1U000019	KIT BEARING X S.P.	Piaggio spare parts (POP)
KIT1U000019	KIT BEARING X S.P.	Piaggio spare parts (POP)
KIT95131R	Kit Clutch Plate set for Step-2 Eng. AF	Piaggio spare parts (POP)
B012502	KIT CLUTCH VALEO	Piaggio spare parts (POP)
6A000650	KIT CNG FOR VEHICLE ASSLY.	Piaggio spare parts (POP)
KIT1U000017	KIT COMPRESSION RINGS X S.P.	Piaggio spare parts (POP)
E50010710A	KIT CON ROD BOLT	Piaggio spare parts (POP)
893968	Kit Cool. pump	Piaggio spare parts (POP)
B074167	KIT COVER-DOOR -IND CALEX	Piaggio spare parts (POP)
E40020513PA	KIT CYLINDER & PISTON ASSY BSII Grade A	Piaggio spare parts (POP)
E40020513PB	KIT CYLINDER & PISTON ASSY BSII Grade B	Piaggio spare parts (POP)
E43510714PB	KIT CYLINDER & PISTON ASSY BSIII Grade B	Piaggio spare parts (POP)
E43510714PA	KIT CYLINDER & PISTON ASSY BSIII Grade A	Piaggio spare parts (POP)
KD4898083	KIT CYLINDER PISTON D.86 MENON FOR15LD44	Piaggio spare parts (POP)
KIT96049R	KIT FAREMETER BKT & HARDWARE	Piaggio spare parts (POP)
B073248	KIT FOR BLEEDER D-51 CALLIPER FR BRAKE	Piaggio spare parts (POP)
B073246	KIT FOR GUIDE PIN D-51 CALLIPER-FR BRAKE	Piaggio spare parts (POP)
B077762	KIT FOR HOOD FRAME ASSLY (D+5)	Piaggio spare parts (POP)
KIT96047R	KIT FOR HOOD FRAME ASSLY& PROFILE (D+5)	Piaggio spare parts (POP)

B073247	KIT FOR PAD D-51 CALLIPER-FRONT BRAKE	Piaggio spare parts (POP)
KIT95106R	KIT GUIDING SCREW & WASHER(3.1Gen)DSL BS6	Piaggio spare parts (POP)
KIT95001R	KIT HIGH SLOPE CONVERSION	Piaggio spare parts (POP)
KIT95030	KIT HIGH SLOPE CONVERSION - LPG	Piaggio spare parts (POP)
KIT95030R	KIT HIGH SLOPE CONVERSION - LPG	Piaggio spare parts (POP)
KIT96045R	KIT HOOD FRAME ASS. & PROFILE City + BS4	Piaggio spare parts (POP)
KIT96048R	KIT HOOD FRAME ASS. CITY DLX EXP. & Strip	Piaggio spare parts (POP)
KIT96037R	KIT HOOD FRAME ASSLY _501 CNG/LPG WG	Piaggio spare parts (POP)
KIT96035R	KIT HOOD FRAME ASSLY _APE CITY DLX BS-IV	Piaggio spare parts (POP)
KIT95130R	KIT HOOD FRAME ASSY APECITY DSL STEPBODY	Piaggio spare parts (POP)
KIT95100R	KIT HOOD FRAME ASSY W PROFILE CITY + BS6	Piaggio spare parts (POP)
KIT96059R	KIT HOOD STR. W/PROFILE Auto+& DXLAF BS6	Piaggio spare parts (POP)
6B001672	KIT HOOD STRUCTURE	Piaggio spare parts (POP)
6B001731	KIT HOOD STRUCTURE	Piaggio spare parts (POP)
KIT95125R	KIT HOOD STRUCTURE APE CITY DLX BSVI	Piaggio spare parts (POP)
KIT96027	Kit of Ape' City 200 Accessories	Piaggio spare parts (POP)
KIT96051R	KIT of Bkt & Hardwar Barrier fitment BS6	Piaggio spare parts (POP)
E40011420PA	KIT OF PISTON RING MOD BS-II	Piaggio spare parts (POP)
E43511440PA	KIT OF PISTON RING SET STD-BS-III	Piaggio spare parts (POP)
KIT95057R	Kit of Side Cover, Rev Idler Plt & Bolt	Piaggio spare parts (POP)
KIT96016R	KIT OF STEERING CONE & BALL KIT	Piaggio spare parts (POP)
E40020509A	KIT PISTON ASSLY A MOD BS-II	Piaggio spare parts (POP)
E40020510A	KIT PISTON ASSLY B MOD BS-II	Piaggio spare parts (POP)
E43520571A	KIT PISTON ASSY GRADE 'A' BSIII	Piaggio spare parts (POP)
E43520572A	KIT PISTON ASSY GRADE 'B' BSIII	Piaggio spare parts (POP)
KIT96023R	KIT REVERSE GEAR CONTROL_EXPORT_Ape 501	Piaggio spare parts (POP)
1A011914	KIT STARTER DEVICE	Piaggio spare parts (POP)
1A000542	KIT STARTER DEVICE	Piaggio spare parts (POP)
6D000409	KIT WIRING HARNESS - CNG	Piaggio spare parts (POP)
660932	KIT WIRING HARNESS - CNG	Piaggio spare parts (POP)
660179	KIT WIRING HARNESS-CNG	Piaggio spare parts (POP)
KIT96044R	KIT_ENGINE COOLING SYSTEM_Water cooled	Piaggio spare parts (POP)
KIT96058R	KIT_EV Final Drive	Piaggio spare parts (POP)
KIT95128R	Kit_VALVE/SEAL RING/HALF CONE_Ape cityAF	Piaggio spare parts (POP)
940001	KIT-DRIVEN PLATE ASSLY	Piaggio spare parts (POP)
KIT95004R	Kit-Driving + Pressure Plate (New)	Piaggio spare parts (POP)
940027	Kit-Driving + Pressure Plate (New)	Piaggio spare parts (POP)
940026	Kit-Driving + Pressure Plate(Old)	Piaggio spare parts (POP)
ED43756	Knob	Piaggio spare parts (POP)
ED42503	KNOB	Piaggio spare parts (POP)
414948	KNOB - CARPET	Piaggio spare parts (POP)
632424	KNOB ASSLY (ENGINETECH AIR FILTER)	Piaggio spare parts (POP)
632137	KNOB FOR CHOKE	Piaggio spare parts (POP)
604715	KNOB FOR DECOMPRESSION	Piaggio spare parts (POP)
604716	KNOB FOR ENGINE STOP	Piaggio spare parts (POP)
182655	KNOB FOR INTERNAL DOOR LEVER	Piaggio spare parts (POP)
604717	KNOB FOR R.C.	Piaggio spare parts (POP)

B001423	KNOB REAR DOOR	Piaggio spare parts (POP)
6C000569	KNOB STICKER	Piaggio spare parts (POP)
569041	KNOB SUB-ASSY	Piaggio spare parts (POP)
925730	KNOB(FL-0103-080)	Piaggio spare parts (POP)
B041212	KNOB, GEAR SHIFT LEVER	Piaggio spare parts (POP)
B008839	KNOB, SHIFT LEVER	Piaggio spare parts (POP)
644477	KNOB, SHIFT LEVER	Piaggio spare parts (POP)
B075975	KNOB, SHIFT LEVER	Piaggio spare parts (POP)
B003181	KNOB, SHIFT LEVER	Piaggio spare parts (POP)
CM037001	KNOB, SHIFT LEVER	Piaggio spare parts (POP)
632536	KNOB-GEAR LEVER	Piaggio spare parts (POP)
1E000844	KNUCKLE, STEERING, LH	Piaggio spare parts (POP)
1E001013	KNUCKLE, STEERING, LH	Piaggio spare parts (POP)
1E000845	KNUCKLE, STEERING, RH	Piaggio spare parts (POP)
1E001014	KNUCKLE, STEERING, RH	Piaggio spare parts (POP)
B015312	KNURLED BUSH	Piaggio spare parts (POP)
KD91014078	KOHLER NAME PLATE	Piaggio spare parts (POP)
B041851	L BRACKET (1.2MM)	Piaggio spare parts (POP)
B009758	L PIPE AIR CLEANER (SNORKEL)	Piaggio spare parts (POP)
B076142	L TYPE SPANNER - A/F 16	Piaggio spare parts (POP)
B001494	L TYPE SPANNER A/F 16	Piaggio spare parts (POP)
127903	L.H. BRAKE JAW HOLDING CABLE PLATE	Piaggio spare parts (POP)
178804	L.H. FORK	Piaggio spare parts (POP)
178805	L.H. GEAR	Piaggio spare parts (POP)
178807	L.H. LEVER	Piaggio spare parts (POP)
178806	L.H. STRUT	Piaggio spare parts (POP)
116334	L.H.DOOR GUIDE BOX ASSY	Piaggio spare parts (POP)
163667	L.H.VENT WINDOW ASSY. WITH ATTACHMENTS	Piaggio spare parts (POP)
970300581	L.O.P.gear fitting tool for kobra engine	Piaggio spare parts (POP)
262972	LABEL,DESIGNAT BRAKE OIL	Piaggio spare parts (POP)
660159	LABEL-GENERAL INSTRUCTION	Piaggio spare parts (POP)
660158	LABEL-RUNNING IN INSTRUCTION	Piaggio spare parts (POP)
660315	LABLE- GENERAL INSTRUCTION	Piaggio spare parts (POP)
660314	LABLE- RUNNING IN INSTRUCTION	Piaggio spare parts (POP)
B041551	LABLE, GENERAL INSTRUCTION	Piaggio spare parts (POP)
661673	LABLE, TYRE PRESSURE INFORMATION	Piaggio spare parts (POP)
B041547	LABLE, TYRE PRESSURE INFORMATION	Piaggio spare parts (POP)
1A014335	LAMBDA SENSOR	Piaggio spare parts (POP)
584344	LAMBDA SENSOR	Piaggio spare parts (POP)
B073601	LAMINATED WINDSHIELD GLASS	Piaggio spare parts (POP)
587963	LAMINATED WINDSHIELD GLASS	Piaggio spare parts (POP)
219528	LAMP 12 V 35/35 W	Piaggio spare parts (POP)
640754	LAMP 12V - 55W H11	Piaggio spare parts (POP)
580141	LAMP 12V-55W H1	Piaggio spare parts (POP)
71633	LAMP 12V-5W	Piaggio spare parts (POP)
567593	LAMP 4 W	Piaggio spare parts (POP)
613774	LAMP ASSLY. INDICATOR LH	Piaggio spare parts (POP)

613773	LAMP ASSLY. INDICATOR RH	Piaggio spare parts (POP)
D8127087Z01	LAMP ASSY, LINCENSE PLATE	Piaggio spare parts (POP)
613820	LAMP BACK-UP (ASSLY., REVERSE)	Piaggio spare parts (POP)
587659	LAMP FR LH ASSLY	Piaggio spare parts (POP)
587660	LAMP FR RH ASSLY	Piaggio spare parts (POP)
613822	LAMP RR COMBI (TAIL & BRAKE)	Piaggio spare parts (POP)
613821	LAMP RR COMBI (TURN SIGNAL)	Piaggio spare parts (POP)
AP8127489	Lamp RY10W 12V	Piaggio spare parts (POP)
E50002296P	LARGE END BEARING	Piaggio spare parts (POP)
E50002296	LARGE END BEARING	Piaggio spare parts (POP)
ED40640	LARGE END BEARING (ED 30640)	Piaggio spare parts (POP)
ED40719	LARGE END BEARING 0.50MM U/S	Piaggio spare parts (POP)
E500164036	LARGE END BEARING STD.	Piaggio spare parts (POP)
ED30640	LARGE END BEARING STD.	Piaggio spare parts (POP)
E50002297	LARGE END BEARING WITH COPPER HEAD (SING	Piaggio spare parts (POP)
E50002296A	LARGE END BEARING(set of 2)	Piaggio spare parts (POP)
ED40718	LARGE END BEARING0.25 U/S	Piaggio spare parts (POP)
604812	LARGE HEAD SCREW	Piaggio spare parts (POP)
657971	LATCH , SIDE GATE , RH	Piaggio spare parts (POP)
657968	LATCH , SIDE GATE ,LH	Piaggio spare parts (POP)
6B000637	LATCH ASSLY-LH(PASSENGER DOOR)	Piaggio spare parts (POP)
6B000638	LATCH ASSLY-RH (PASSENGER DOOR)	Piaggio spare parts (POP)
660338	LATCH SUB ASSLY SIDE GATE	Piaggio spare parts (POP)
B002719	LATCH SUB ASSLY SIDE GATE (CED)	Piaggio spare parts (POP)
660337	LATCH SUB ASSLY TAIL GATE	Piaggio spare parts (POP)
B002718	LATCH SUB-ASSY TAIL GATE (CED)	Piaggio spare parts (POP)
B076069	LATCH-TAIL GATE	Piaggio spare parts (POP)
925587	LATERAL LAMP ASSLLY RH (NEOLITE)	Piaggio spare parts (POP)
925598	LATERAL LAMP ASSLY LH (LUMAX)	Piaggio spare parts (POP)
925597	LATERAL LAMP ASSLY LH (NEOLITE)	Piaggio spare parts (POP)
925588	LATERAL LAMP ASSLY RH (LUMAX)	Piaggio spare parts (POP)
B078316	LATERAL PROFILE FOR COVER	Piaggio spare parts (POP)
6B000342	LATERAL PROFILE FOR COVER	Piaggio spare parts (POP)
B041403	LATERAL PROFILE FOR COVER	Piaggio spare parts (POP)
643752	LATERAL PROFILE FOR COVER (VE)	Piaggio spare parts (POP)
B078063	LATERAL PROFILE FOR COVER D5S	Piaggio spare parts (POP)
AP8221204	Lateral Stand Spring	Piaggio spare parts (POP)
B001340BG	LD CHASSIS WITH CAB DOORS BSIII - BG	Piaggio spare parts (POP)
B001340BW	LD CHASSIS WITH CAB DOORS BSIII - BW	Piaggio spare parts (POP)
B001340CB	LD CHASSIS WITH CAB DOORS BSIII - CB	Piaggio spare parts (POP)
B001340CO	LD CHASSIS WITH CAB DOORS BSIII - CO	Piaggio spare parts (POP)
B001340EG	LD CHASSIS WITH CAB DOORS BSIII - EG	Piaggio spare parts (POP)
B001340GY	LD CHASSIS WITH CAB DOORS BSIII - GY	Piaggio spare parts (POP)
B001340SY	LD CHASSIS WITH CAB DOORS BSIII - SY	Piaggio spare parts (POP)
B001340WR	LD CHASSIS WITH CAB DOORS BSIII - WR	Piaggio spare parts (POP)
L72702508	LDW 422 BANJO FOR OIL PRESSURE SWITCH	Piaggio spare parts (POP)
L19011908	LDW 422 SCREW M12 X 1.5 FOR OIL PRESSURE	Piaggio spare parts (POP)

KD1640143	LE BEARING	Piaggio spare parts (POP)
KD1640152	LE BEARING	Piaggio spare parts (POP)
KD1640145	LE BEARING Set O/S	Piaggio spare parts (POP)
KD1640144	LE BEARING Set O/S 0.25	Piaggio spare parts (POP)
LG1640139	LE Brg set 1.0 U/s	Piaggio spare parts (POP)
LG1640138	LE Brg set 0.5 U/s	Piaggio spare parts (POP)
LG1640129	LE Brg set STD	Piaggio spare parts (POP)
B003784	LEADING SHOE COMP WITH PIN LH ANL 1643	Piaggio spare parts (POP)
B003785	LEADING SHOE COMP WITH PIN RH ANL 1643	Piaggio spare parts (POP)
652357	LEADING SHOE COMP. WITH PIN LH	Piaggio spare parts (POP)
652359	LEADING SHOE COMP. WITH PIN RH	Piaggio spare parts (POP)
B006921	LEAF SPRING SUPPORT PLATE LH	Piaggio spare parts (POP)
B006922	LEAF SPRING SUPPORT PLATE RH	Piaggio spare parts (POP)
B009265	LEAF SPRING, ASSLY.	Piaggio spare parts (POP)
E87027119	LEAK OFF PIPE	Piaggio spare parts (POP)
E87137124	LEAK OFF PIPE	Piaggio spare parts (POP)
A01T120001	LEAK OFF PIPE - Fuel Pump to Y connector	Piaggio spare parts (POP)
602119	LEFT BRAKE ASSLY	Piaggio spare parts (POP)
602120	LEFT BRAKE JAW HOLDING CABLE PLATE	Piaggio spare parts (POP)
602126	LEFT COMPLETE FRONT SHOE WITH PIN	Piaggio spare parts (POP)
660813	LEFT ENGINE COVER (SIDE)	Piaggio spare parts (POP)
B024945	LEFT ENGINE UNDER COVER	Piaggio spare parts (POP)
645152	LEFT ENGINE UNDER COVER ASSLY	Piaggio spare parts (POP)
567535	LEFT FABRIC PROTECTION	Piaggio spare parts (POP)
B002274	LEFT REAR LAMPS WHITE	Piaggio spare parts (POP)
605401	LEFT REAR LIGHT TAXI BLACK	Piaggio spare parts (POP)
6B001495R	LEFT REAR-VIEW MIRROR	Piaggio spare parts (POP)
858539	LEFT REAR-VIEW MIRROR	Piaggio spare parts (POP)
899203	LEFT REAR-VIEW MIRROR	Piaggio spare parts (POP)
B024187	LENS ASSLY _REVERSE LAMP (LH)	Piaggio spare parts (POP)
925585	LENS MOUNTING SCREW FOR LATERAL LAMP - N	Piaggio spare parts (POP)
925589	LENS MOUNTING SCREW FOR LATERAL LAMP 6*1	Piaggio spare parts (POP)
925586	LENS MOUNTING SCREW FOR LATERAL LAMP 6*3	Piaggio spare parts (POP)
925511	LENSE FOR TAIL LAMP RH	Piaggio spare parts (POP)
920083	Lense LH With hardware and gasket	Piaggio spare parts (POP)
940062	Lense LH With hardware and gasket-TLA	Piaggio spare parts (POP)
920084	Lense RH With hardware and gasket	Piaggio spare parts (POP)
940063	Lense RH With hardware and gasket-TLA	Piaggio spare parts (POP)
L7200728	LETA	Piaggio spare parts (POP)
632408	Level gauge	Piaggio spare parts (POP)
925625	LEVEL INDICATOR ASSEMBLY - BRAKE OIL IND	Piaggio spare parts (POP)
925791	LEVEL INDICATOR ASSLY	Piaggio spare parts (POP)
925802	LEVELING MOTOR 12V	Piaggio spare parts (POP)
E500526506	LEVER	Piaggio spare parts (POP)
119928	LEVER	Piaggio spare parts (POP)
E500520393	LEVER	Piaggio spare parts (POP)
L5271192	LEVER	Piaggio spare parts (POP)

E500520293	LEVER	Piaggio spare parts (POP)
178821	LEVER	Piaggio spare parts (POP)
KD5201132	LEVER	Piaggio spare parts (POP)
03G161665	lever - clutch release - internal	Piaggio spare parts (POP)
120322013	LEVER RC GEAR (41929)	Piaggio spare parts (POP)
128050018	LEVER & SECTOR ASSLY COMPL PASS GB	Piaggio spare parts (POP)
SP128050018	LEVER & SECTOR ASSLY COMPL PASS GB - SPD	Piaggio spare parts (POP)
SP228050017	LEVER & SECTOR COMP. 501 CARGO GB SPD	Piaggio spare parts (POP)
228050017	LEVER & SECTOR COMP. CARGO	Piaggio spare parts (POP)
B002152	LEVER AND SECTOR COMPLETE-MINI TRUK	Piaggio spare parts (POP)
SPB002152	LEVER AND SECTOR COMPLETE-MINI TRUK SPD	Piaggio spare parts (POP)
B075881	LEVER ASSY PARKING BRAKE	Piaggio spare parts (POP)
652223	LEVER ASSY PARKING BRAKE	Piaggio spare parts (POP)
KD5201362	LEVER ASSY.	Piaggio spare parts (POP)
B075813	LEVER CLUTCH CONTROL	Piaggio spare parts (POP)
109120	LEVER COMPLETE FOR R.H. LOCK	Piaggio spare parts (POP)
109121	LEVER COMPLETE OF LH LOCK	Piaggio spare parts (POP)
217166	LEVER CONTROL PIN	Piaggio spare parts (POP)
03G160862	Lever gear selection	Piaggio spare parts (POP)
B042746	LEVER GEAR SHIFT-PORTER 1000	Piaggio spare parts (POP)
B041434	LEVER GEAR SHIFT-PORTER 600	Piaggio spare parts (POP)
B042745	LEVER GEAR SHIFT-PORTER 600	Piaggio spare parts (POP)
B076837	LEVER GEAR SHIFT-PORTER 700	Piaggio spare parts (POP)
L5201161	LEVER GROUP FOR MAX CONTROLLIN	Piaggio spare parts (POP)
L5201167	LEVER GROUP STOP CONTROL	Piaggio spare parts (POP)
E500520134	LEVER INNER GOVERNOR	Piaggio spare parts (POP)
662007	LEVER LOCK FRONT DOOR ASSLY. RH	Piaggio spare parts (POP)
925778	LEVER PIN(R-8104-200)	Piaggio spare parts (POP)
932210	LEVER PIN(R-8106-110)Paxx200	Piaggio spare parts (POP)
929994	Lever Pin-R-8105-100	Piaggio spare parts (POP)
920004	Lever Pin-R-8105-470	Piaggio spare parts (POP)
L6140501	LEVER PIVOT WITH I.P.	Piaggio spare parts (POP)
127151011	LEVER R.C. GEAR(41738)	Piaggio spare parts (POP)
L5680132	LEVER RETURNING SPRING	Piaggio spare parts (POP)
B024002	LEVER REVERSE GEAR SHIFT	Piaggio spare parts (POP)
B024024	LEVER REVERSE GEAR SHIFT SUB-ASSLY	Piaggio spare parts (POP)
AP8120912	Lever rubber	Piaggio spare parts (POP)
660382	LEVER S/A, SELECT	Piaggio spare parts (POP)
B076455	LEVER S/ASSLY. REVERSE	Piaggio spare parts (POP)
E870051136	LEVER SPRING ARM COMPLETE (ASSEMBLY)	Piaggio spare parts (POP)
568163	LEVER STOP BRACKET	Piaggio spare parts (POP)
929993	Lever sub assembly-R-8105-03	Piaggio spare parts (POP)
L5271232	LEVER SUB ASSLY SELCT	Piaggio spare parts (POP)
932217	LEVER SUB ASSY.(R-8106-04)Paxx200	Piaggio spare parts (POP)
932209	LEVER SUB ASSY.(R-8106-VI-02)Paxx200	Piaggio spare parts (POP)
D3350387Z01	LEVER SUB-ASSY SHIFT	Piaggio spare parts (POP)
L5201260	LEVER WITH IP COMPLETE	Piaggio spare parts (POP)

925777	LEVER(R-8104-180)	Piaggio spare parts (POP)
1E002770	LEVER, CLUTCH CONTROL	Piaggio spare parts (POP)
1E002771	LEVER, CLUTCH SWITCH	Piaggio spare parts (POP)
614578	LEVER, SUB-ASSLY, SHIFTER	Piaggio spare parts (POP)
03G161677	leverassy clutch release	Piaggio spare parts (POP)
E5005202010	LEVER-MAX FUEL	Piaggio spare parts (POP)
929995	Lever-R-8105-150	Piaggio spare parts (POP)
6B002565	LH DOOR DECAL	Piaggio spare parts (POP)
6B002933	LH DOOR DECAL (EX)	Piaggio spare parts (POP)
6B002931	LH DOOR DECAL (FX)	Piaggio spare parts (POP)
6B002935	LH DOOR DECAL(LX)	Piaggio spare parts (POP)
567895	LH DOOR SUB ASSLY	Piaggio spare parts (POP)
B002848	LH DOOR SUB ASSLY (CED)	Piaggio spare parts (POP)
B003232	LH DOOR WINDOW REGULATOR	Piaggio spare parts (POP)
AP8145035	LH Foot Rest	Piaggio spare parts (POP)
853402	LH front turn indicator	Piaggio spare parts (POP)
AP8118579	Lh Hand Grip	Piaggio spare parts (POP)
856027	LH hand grip	Piaggio spare parts (POP)
894881	LH handguard	Piaggio spare parts (POP)
127540	LH HANDLE COMP.BUTTON WITH CLOSING KEY	Piaggio spare parts (POP)
178823	LH JUMPER	Piaggio spare parts (POP)
128804	LH LEVER FOR CLAMPING THE SIDE PANEL 3W	Piaggio spare parts (POP)
128804ED	LH LEVER FOR CLAMPING THE SIDE PANEL CED	Piaggio spare parts (POP)
632478	LH LIGHT UNIT	Piaggio spare parts (POP)
853404	LH rear turn indicator	Piaggio spare parts (POP)
182661	LH SIDE LOCK COMPLETE	Piaggio spare parts (POP)
6B002937	LH SIDE WALL DECAL	Piaggio spare parts (POP)
6B003399	LH SIDE WALL DECAL	Piaggio spare parts (POP)
6B002624	LH SIDE WALL DECAL (BLUE)	Piaggio spare parts (POP)
180021	LH TRANSPARENT LENS	Piaggio spare parts (POP)
AP8127700	LH transparent lens show - Euro only	Piaggio spare parts (POP)
B008949	LH TRIANGLE S/A -501	Piaggio spare parts (POP)
896721	LH underpanel dec. aprilia	Piaggio spare parts (POP)
B073815	LH UPPER COVER DASHBOARD	Piaggio spare parts (POP)
163667SP	LH VENT WINDOW ASSY.3W CARGO -SPD	Piaggio spare parts (POP)
SST96026	Li Battery 14.4V /4.0Ah (Single)-BOSCH	Piaggio spare parts (POP)
SST96027	Li Battery Charger AL 1860 CV-BOSCH	Piaggio spare parts (POP)
1E000403	LICENCE PLATE, ASSY	Piaggio spare parts (POP)
605244	LICENSE PLATE LH	Piaggio spare parts (POP)
605245	LICENSE PLATE RH	Piaggio spare parts (POP)
1E003587	LICENSE PLATE HOLDER REAR (BIG)	Piaggio spare parts (POP)
1E003588	LICENSE PLATE HOLDER REAR (SMALL)	Piaggio spare parts (POP)
B003151	LICENSE PLATE MOUNTING BKT.	Piaggio spare parts (POP)
643661	LICENSE PLTE MOUNTING BKT.	Piaggio spare parts (POP)
6B000140	LICENSE/NUMBER PLATE BLACK COLOUR EXP	Piaggio spare parts (POP)
LG4260025	LIFTING BRACKET	Piaggio spare parts (POP)
03G161686	LIFTING HOOK	Piaggio spare parts (POP)

KD8506003	LIFTING HOOK	Piaggio spare parts (POP)
E87030621	LIFTING HOOK POWERPACK	Piaggio spare parts (POP)
567576	LIGHT ASSLY	Piaggio spare parts (POP)
930101601	LIGHT BLUE TOUCH UP SPRAY PAINT	Piaggio spare parts (POP)
150915	LIGHT REGISTRATION PLATE	Piaggio spare parts (POP)
150915R	LIGHT REGISTRATION PLATE	Piaggio spare parts (POP)
645045	LINK ASSY FRONT WIPER	Piaggio spare parts (POP)
B075927	LINK ASSY FRONT WIPER	Piaggio spare parts (POP)
127460010	LINK ASSLY - CLUTCH (IMPROVED)	Piaggio spare parts (POP)
B002256	LINK ASSLY CLUTCH	Piaggio spare parts (POP)
127190017	LINK ASSLY CLUTCH ACTUATING	Piaggio spare parts (POP)
D8515087Z01	LINK ASSY, FR WIPER	Piaggio spare parts (POP)
E87100983	Link fuel Delivery Control	Piaggio spare parts (POP)
E87015136	LINK IDLE HUNTING	Piaggio spare parts (POP)
D7810587503	LINK SUB-ASSY, ACCELERATO	Piaggio spare parts (POP)
B042394	LINK SUB-ASSY, ACCELERATOR	Piaggio spare parts (POP)
D4505487511	LINK SUB-ASSY, STEERING D	Piaggio spare parts (POP)
925798	LINK TUBE (BIG)	Piaggio spare parts (POP)
925799	LINK TUBE (SMALL)	Piaggio spare parts (POP)
6D000944	LINK, ALTERNATOR TO SM	Piaggio spare parts (POP)
D6971287Z01	LINK, FR DOOR OPEN CONTROL LH	Piaggio spare parts (POP)
D6971187Z01	LINK, FR DOOR OPEN CONTROL RH	Piaggio spare parts (POP)
MS444194	Linkage setting tool for kobra engine	Piaggio spare parts (POP)
970300568	Linkage setting tool for kobra engine	Piaggio spare parts (POP)
E87000950A	LINKFUEL DELIVERY	Piaggio spare parts (POP)
L1210164	LIP STEAL RING	Piaggio spare parts (POP)
03G160624	LIPSEAL-BOOT (25X35X7)	Piaggio spare parts (POP)
03G161618	LIPSEAL-INPUT SHAFT	Piaggio spare parts (POP)
03G160817	LIPSEAL-SHIFT MECH	Piaggio spare parts (POP)
03G161705	LIPSEAL-SPEEDO DRIVE (6X19X6)	Piaggio spare parts (POP)
616825	LIQUID COOLANT TANK CALEX	Piaggio spare parts (POP)
652227	LIQUID COOLENT TANK WITH PLUG	Piaggio spare parts (POP)
950300402	LIQUID GASKET MAKER (ANOROBIC)	Piaggio spare parts (POP)
950300403	LIQUID GASKET MAKER (RTV-SILICONE BLACK)	Piaggio spare parts (POP)
950300410	LIQUID GASKET ROLLER	Piaggio spare parts (POP)
1A017327	LIQUID TANK PLUG	Piaggio spare parts (POP)
645871	LOAD BODY S/A REAR -482	Piaggio spare parts (POP)
B042454BW	LOAD BODY WITH DTL PANEL PORTER 600-BW	Piaggio spare parts (POP)
B042454LB	LOAD BODY WITH DTL PANEL PORTER 600-LB	Piaggio spare parts (POP)
B042454SY	LOAD BODY WITH DTL PANEL PORTER 600-SY	Piaggio spare parts (POP)
B042454WR	LOAD BODY WITH DTL PANEL PORTER 600-WR	Piaggio spare parts (POP)
B024834WR	LOAD BODY WITH TAIL GATE-P600 W RED	Piaggio spare parts (POP)
B024834BW	LOAD BODYWITHTAILGATE-510 (BIANCO WHITE)	Piaggio spare parts (POP)
B024834CO	LOAD BODYWITHTAILGATE-510 (CRIMSON ORANG	Piaggio spare parts (POP)
B024834LB	LOAD BODYWITHTAILGATE-510 (LIGHT BLUE)	Piaggio spare parts (POP)
B024834SY	LOAD BODYWITHTAILGATE-510 (SAHARA YELLOW	Piaggio spare parts (POP)
615142	LOAD SENSING PROPORTIONING VALVE	Piaggio spare parts (POP)

B074902	LOAD SENSING PROPORTIONING VALVE	Piaggio spare parts (POP)
263544	LOCK	Piaggio spare parts (POP)
263214	LOCK	Piaggio spare parts (POP)
662008	LOCK ASSY FRONT DOOR LH	Piaggio spare parts (POP)
D6932087509	LOCK ASSY, FR DOOR, LH	Piaggio spare parts (POP)
D6931087508	LOCK ASSY, FR DOOR, RH	Piaggio spare parts (POP)
940135	Lock Barrel Assembly WITH KEY	Piaggio spare parts (POP)
587909	LOCK FOR SPARE WHEEL/ BATTERY	Piaggio spare parts (POP)
B024169	LOCK GLOBE BOX LID WITH KEY RH	Piaggio spare parts (POP)
940120	LOCK GLOVE COMPARTMENT WITH KEY	Piaggio spare parts (POP)
E87000936	LOCK GOVERNOR COLLAR	Piaggio spare parts (POP)
661897	LOCK KIT	Piaggio spare parts (POP)
L4130129	LOCK NUT	Piaggio spare parts (POP)
661916	LOCK NUT (VANAZ P.NO.R-8101-555)	Piaggio spare parts (POP)
KD3240161	LOCK NUT FOR ROCKER ARM	Piaggio spare parts (POP)
970300579	Lock nut locking tool for assembly shaft	Piaggio spare parts (POP)
MS422555	Lock nut locking tool for assly shaft	Piaggio spare parts (POP)
932239	LOCK NUT(K-0101-04-220)Paxx200	Piaggio spare parts (POP)
925754	LOCK NUT(K0106-10-180)	Piaggio spare parts (POP)
925755	LOCK NUT(K-0106-10-180)	Piaggio spare parts (POP)
925771	LOCK NUT(R-8101-555)	Piaggio spare parts (POP)
925775	LOCK NUT(R-8104-110)	Piaggio spare parts (POP)
925727	LOCK NUT(R-8104-110)	Piaggio spare parts (POP)
141663	LOCK PAWL THK=2.0	Piaggio spare parts (POP)
E285633061	Lock plate	Piaggio spare parts (POP)
E2835111075	Lock Plate	Piaggio spare parts (POP)
587813	LOCK PLATE	Piaggio spare parts (POP)
E07500617	Lock plate	Piaggio spare parts (POP)
B003155	LOCK PLATE	Piaggio spare parts (POP)
6C000316	LOCK PLATE ASSLY	Piaggio spare parts (POP)
B003228	LOCK PLATE FRONT BRAKE HOSE	Piaggio spare parts (POP)
E87021526	LOCK PLATE PIN FLY WT	Piaggio spare parts (POP)
E283982075	Lock screw for rocker fulcrum	Piaggio spare parts (POP)
567580	LOCK SET	Piaggio spare parts (POP)
6H000008	LOCK SET	Piaggio spare parts (POP)
B008480	LOCK SET (APE CITYCNG/LPG & PETROL EXP)	Piaggio spare parts (POP)
652477	LOCK SET - APE CLASSIC	Piaggio spare parts (POP)
B075255	LOCK SET & KEYS (APE CITY CARGO)	Piaggio spare parts (POP)
B042082	LOCK SET & KEYS LPG MONOFUEL	Piaggio spare parts (POP)
B079047	LOCK SET & KEYS(CITY CARGO)_W/O DOOR EXP	Piaggio spare parts (POP)
B024683	LOCK SET & KEYS(PAX200 CNG/LPG/PETL EXP)	Piaggio spare parts (POP)
6G000131	LOCK SET (APE 501 EV CARGO FX)	Piaggio spare parts (POP)
B009030	LOCK SET (APE CITY CNG/LPG & PET. EXPOR)	Piaggio spare parts (POP)
B009031	LOCK SET (APE CITY LPG SINGLE MODE)	Piaggio spare parts (POP)
604983	LOCK SET (PASS) CNG	Piaggio spare parts (POP)
604981	LOCK SET (PICK UP) CNG	Piaggio spare parts (POP)
659969	LOCK SET (PICK UP)LPG	Piaggio spare parts (POP)

605297	LOCK SET 601 - DV - RHD	Piaggio spare parts (POP)
B003218	LOCK SET COMPLETE WITH KEYSET	Piaggio spare parts (POP)
644827	LOCK SET DEL.VAN COMMON KEY (EXPORT)	Piaggio spare parts (POP)
6G000035	LOCK SET DEL.VAN COMMON KEY (EXPORT)- PB	Piaggio spare parts (POP)
6G000056	LOCK SET DLX LPG MONO FUEL	Piaggio spare parts (POP)
605298	LOCK SET PASS - 601	Piaggio spare parts (POP)
6G000033	LOCK SET PASSENGER COMMON KEY - PB	Piaggio spare parts (POP)
644828	LOCK SET PASSENGER COMMON KEY (EXPORT)	Piaggio spare parts (POP)
644826	LOCK SET PICK UP/DAC COMMON KEY (EXPORT)	Piaggio spare parts (POP)
6G000034	LOCK SET PICK UP/DAC EXPORT - PB	Piaggio spare parts (POP)
6G000142	LOCK SET W/ KEYS SUNMOBILITY SWAPPABLE	Piaggio spare parts (POP)
B024684	LOCK SET WITH KEYS (PAX 200- PETROL)	Piaggio spare parts (POP)
B077164	LOCK SET WITH KEYS (CALESSINO E4 PETROL	Piaggio spare parts (POP)
6G000072	LOCK SET WITH KEYS (CITY DLX BS6 PTL)	Piaggio spare parts (POP)
B076407	LOCK SET WITH KEYS (CITY DLX BSIV PTL)	Piaggio spare parts (POP)
B076073	LOCK SET WITH KEYS (CITY-BSIV CNG/LPG)	Piaggio spare parts (POP)
B076072	LOCK SET WITH KEYS (CITY-BSIV DIESEL)	Piaggio spare parts (POP)
B076071	LOCK SET WITH KEYS (CITY-BSIV PETROL)	Piaggio spare parts (POP)
B078845	LOCK SET WITH KEYS (CITY-BSIV PTL)_EXP	Piaggio spare parts (POP)
604531	LOCK SET WITH KEYS (DEL. VAN)	Piaggio spare parts (POP)
B078759	LOCK SET WITH KEYS (E4 PETROL_PHILI)	Piaggio spare parts (POP)
604583	LOCK SET WITH KEYS (PASS)	Piaggio spare parts (POP)
6G000139	LOCK SET WITH KEYS (501 CARGO EV SW)	Piaggio spare parts (POP)
B009028	LOCK SET WITH KEYS (APE CITY DIESEL)	Piaggio spare parts (POP)
B002583	LOCK SET WITH KEYS (APE CITY PETROL)	Piaggio spare parts (POP)
B008479	LOCK SET WITH KEYS (APE CITY PETROL)	Piaggio spare parts (POP)
6G000115	LOCK SET WITH KEYS (CARGO PTL 300 cc)	Piaggio spare parts (POP)
6G000126	LOCK SET WITH KEYS (CITY + MONO)	Piaggio spare parts (POP)
6G000105	LOCK SET WITH KEYS (CITY + PTL BS6)	Piaggio spare parts (POP)
6G000057	LOCK SET WITH KEYS (CITY DLX- E4 PETROL)	Piaggio spare parts (POP)
6G000065	LOCK SET WITH KEYS (CITY DLX- EV)	Piaggio spare parts (POP)
6G000027	LOCK SET WITH KEYS (CITY-BSIV DSL) - PB	Piaggio spare parts (POP)
6G000117	LOCK SET WITH KEYS (D+3 300 cc PTL)	Piaggio spare parts (POP)
6G000028	LOCK SET WITH KEYS (PASS) - PB	Piaggio spare parts (POP)
643502	LOCK SET WITH KEYS (PASS) (COMMON KEY)	Piaggio spare parts (POP)
567578	LOCK SET WITH KEYS (PICK UP)	Piaggio spare parts (POP)
643500	LOCK SET WITH KEYS (PU) (COMMON KEY)	Piaggio spare parts (POP)
6G000030	LOCK SET WITH KEYS (PU) (COMMON KEY) -PB	Piaggio spare parts (POP)
B079282	LOCK SET WITH KEYS APE CITY + _PTL	Piaggio spare parts (POP)
B008402	LOCK SET WITH KEYS CNG (PICK UP VAN)	Piaggio spare parts (POP)
6G000029	LOCK SET WITH KEYS CNG (PICK UP VAN)-PB	Piaggio spare parts (POP)
B008400	LOCK SET WITH KEYS CNG /LPG (PASS	Piaggio spare parts (POP)
6G000032	LOCK SET WITH KEYS CNG /LPG PASS - PB	Piaggio spare parts (POP)
643501	LOCK SET WITH KEYS(DV) (COMMON KEY)	Piaggio spare parts (POP)
604530	LOCK SET WITH KEYS(PICK UP)	Piaggio spare parts (POP)
B077542	LOCK SET WITH KEYS-APE CLASSIC E4	Piaggio spare parts (POP)
B042633	LOCK SET WITH KEYS-APE CLASSIC NEW	Piaggio spare parts (POP)

568741	LOCK WASHER	Piaggio spare parts (POP)
L7625304	LOCK WASHER	Piaggio spare parts (POP)
1A018762	LOCK WASHER	Piaggio spare parts (POP)
1A006115	LOCK WASHER	Piaggio spare parts (POP)
1A013329	LOCK WASHER	Piaggio spare parts (POP)
1A007029	LOCK WASHER	Piaggio spare parts (POP)
1A015214	LOCK WASHER	Piaggio spare parts (POP)
1A006701	LOCK WASHER	Piaggio spare parts (POP)
106967	LOCK WEDGE	Piaggio spare parts (POP)
587611	LOCK, GLOVE COMPARTMENT	Piaggio spare parts (POP)
6B001627	LOCKBOLT RUBBER CATCHER	Piaggio spare parts (POP)
925678	LOCKING LEVER WITH CAP-SEAT FRAME S/A	Piaggio spare parts (POP)
6A000816	LOCKING PLATE FOR PUMP MOUNTING	Piaggio spare parts (POP)
6A001254	LOCKING PLATE FOR PUMP MOUNTING	Piaggio spare parts (POP)
120363017	LOCKING SCREW (F.M. HSG)	Piaggio spare parts (POP)
SST94172	Locking tool for flywheel BSVI - D	Piaggio spare parts (POP)
970300577	Locking tool for tightening flywheel bolts	Piaggio spare parts (POP)
KD7625270	LOCKING WASHER	Piaggio spare parts (POP)
03G160213	LOCKNUT-BEARING	Piaggio spare parts (POP)
B041740	LOCKS FOR VEHICLES 2R	Piaggio spare parts (POP)
567579	LOCKS FOR VEHICLES 2R	Piaggio spare parts (POP)
605296	Locks, assy	Piaggio spare parts (POP)
B076070	LOCK-TAIL GATE	Piaggio spare parts (POP)
A186000242	LOCTITE 242 (cod. Henkel 230749)	Piaggio spare parts (POP)
614057	LOEWR CAP	Piaggio spare parts (POP)
1E000832	LOGO SUPPORT	Piaggio spare parts (POP)
6B002581	LOGO SUPPORT	Piaggio spare parts (POP)
B074371BL	LOGO SUPPORT	Piaggio spare parts (POP)
B074371BW	LOGO SUPPORT	Piaggio spare parts (POP)
B074371CB	LOGO SUPPORT	Piaggio spare parts (POP)
B074371EG	LOGO SUPPORT	Piaggio spare parts (POP)
B074371GY	LOGO SUPPORT	Piaggio spare parts (POP)
B074371NB	LOGO SUPPORT	Piaggio spare parts (POP)
B074371WR	LOGO SUPPORT	Piaggio spare parts (POP)
B073875BL	LOGO SUPPORT	Piaggio spare parts (POP)
B073875BW	LOGO SUPPORT	Piaggio spare parts (POP)
B073875CB	LOGO SUPPORT	Piaggio spare parts (POP)
B073875EG	LOGO SUPPORT	Piaggio spare parts (POP)
B073875GY	LOGO SUPPORT	Piaggio spare parts (POP)
B073875NB	LOGO SUPPORT	Piaggio spare parts (POP)
B073875WR	LOGO SUPPORT	Piaggio spare parts (POP)
6B003006	LOGO SUPPORT - PAINTED	Piaggio spare parts (POP)
6B002586	LOGO SUPPORT BRACKET	Piaggio spare parts (POP)
B076001	LOGO SUPPORT FRONT	Piaggio spare parts (POP)
6B002827	LOGO SUPPORT MTG. CLIP	Piaggio spare parts (POP)
B074371SL	LOGO SUPPORT_CALEX IND-PAINTED	Piaggio spare parts (POP)
B073875	LOGO SUPPORT_CITY UPGRADE	Piaggio spare parts (POP)

B073875SL	LOGO SUPPORT_CITY UPGRADE-PAINTED	Piaggio spare parts (POP)
E40009683	LOP DRIVE GEAR	Piaggio spare parts (POP)
L3240179	LOW HEX. NUT	Piaggio spare parts (POP)
484819	LOW HEXAGONAL NUT	Piaggio spare parts (POP)
880805	LOW HEXAGONAL NUT	Piaggio spare parts (POP)
B075982	LOW PRESS CNG HOSE	Piaggio spare parts (POP)
B024133	LOW PRESS HOSE PIPE(VANAZ PT NO K-0107-	Piaggio spare parts (POP)
643843	LOW PRESS HOSE PIPE(VANAZ PT NO K-0107-	Piaggio spare parts (POP)
B023338	Low pressure fuel line	Piaggio spare parts (POP)
B079365	LOW PRESSURE HOSE LPK TO MIXER	Piaggio spare parts (POP)
894090	Low Winshield Kit	Piaggio spare parts (POP)
B002067	LOWER ARM ASSEMBLY	Piaggio spare parts (POP)
6C000191	LOWER BALL CAGE (VE)	Piaggio spare parts (POP)
108801	LOWER BKT.FOR CONNECTING R.H.DEFLECTOR	Piaggio spare parts (POP)
660249	LOWER BKT.FOR CONNECTING R.H.DEFLECTOR (Piaggio spare parts (POP)
660250	LOWER BKT.FOR CONNECTION L.H. DEFLECTOR	Piaggio spare parts (POP)
109263	LOWER BKT.FOR CONNECTION L.H. DEFLECTOR	Piaggio spare parts (POP)
B074477	LOWER BRACKET, SUPPORT FUSE BOX	Piaggio spare parts (POP)
157103	LOWER BUFFER OF THE SHOCK ABSORBER	Piaggio spare parts (POP)
889306	LOWER BUSH	Piaggio spare parts (POP)
925739	LOWER CASE(K-0401-18-030)	Piaggio spare parts (POP)
KD3430114	LOWER CUP	Piaggio spare parts (POP)
483711	LOWER CUP	Piaggio spare parts (POP)
L7980084	LOWER CUP SPRING SEAT	Piaggio spare parts (POP)
L3585062	LOWER ELEMENT OF COWLING	Piaggio spare parts (POP)
E5005200778	LOWER LEVER WITH PIN	Piaggio spare parts (POP)
E5205200778	LOWER LEVER WITH PIN	Piaggio spare parts (POP)
888434	LOWER MATCHING BUSHING	Piaggio spare parts (POP)
B073945	lower Nacelle Assembly	Piaggio spare parts (POP)
LG8430120	LOWER PIN	Piaggio spare parts (POP)
194947	LOWER PROTECTION PACKING R.H. DOOR	Piaggio spare parts (POP)
567476	LOWER REAR HATCH WITH PI	Piaggio spare parts (POP)
B002820	LOWER REAR HATCH WITH PI (CED)	Piaggio spare parts (POP)
L7980085	LOWER SPRING CAP	Piaggio spare parts (POP)
615603	LOWER U - BOLT	Piaggio spare parts (POP)
B009509	LOWER U - BOLT-APE MINI	Piaggio spare parts (POP)
6A000748	LP HOSE (MFV TO FV)	Piaggio spare parts (POP)
6A001357	LP HOSE-CNG	Piaggio spare parts (POP)
E10G140059	LPC kit Diesel BSIV	Piaggio spare parts (POP)
632186	LPG CYLINDER	Piaggio spare parts (POP)
6A000124	LPG CYLINDER- 20.6 LTR	Piaggio spare parts (POP)
6A000509	LPG FILLER VALVE ASSLY.	Piaggio spare parts (POP)
925744	LPG FILTER WITH SCREW(K-0301-12)	Piaggio spare parts (POP)
643875	LPG FILTER(VANAZ PT NO K-0301-12)	Piaggio spare parts (POP)
B079168	LPG FLEXIBLE HOSE ASSLY (MFV TO LPR)	Piaggio spare parts (POP)
B074851	LPG FLEXIBLE HOSE ASSY (MFV TO FSV)	Piaggio spare parts (POP)
B073085	LPG FLEXIBLE HOSE ASSY -FOR REFUELLING	Piaggio spare parts (POP)

B041773	LPG FLEXIBLE HOSE ASSY -FROM FSV TO LPR	Piaggio spare parts (POP)
6A000801	LPG FLEXIBLE HOSE- SOLENOID TO LPR	Piaggio spare parts (POP)
B078218	LPG GAS KIT HARNESS APE_501 WC ENG	Piaggio spare parts (POP)
B024148	LPG HOSE REGULATOR TO MIXER	Piaggio spare parts (POP)
6A001208	LPG KIT (VANAZ)	Piaggio spare parts (POP)
B078665	LPG KIT VEHICLE ASSLY	Piaggio spare parts (POP)
B009118BY	LPG PASS MAIN FRAME ASSLY.BSIII BY	Piaggio spare parts (POP)
B009118EG	LPG PASS MAIN FRAME ASSLY.BSIII EG	Piaggio spare parts (POP)
662570	LPG PLATE - STICKER	Piaggio spare parts (POP)
6A000520	LPG PRESSURE REGULATOR	Piaggio spare parts (POP)
6A000519	LPG PRESSURE REGULATOR ASSLY.	Piaggio spare parts (POP)
6B000184	LPG STICKER WATERCOOLED	Piaggio spare parts (POP)
B078642	LPG(LD) GAS KIT HARNESS-APE_501 WC ENG	Piaggio spare parts (POP)
B009427	L-PLATE	Piaggio spare parts (POP)
B001394	LSPV BRACKET EXTENSION PLATE	Piaggio spare parts (POP)
6C000229	L-TYPE SPANNER A/F 19	Piaggio spare parts (POP)
E40027155	LUB OIL PIPE OIL COOLER (L550)	Piaggio spare parts (POP)
E40027143	LUB OIL PIPE OIL COOLER (L650)	Piaggio spare parts (POP)
E07506754	Lub oil pump assy.	Piaggio spare parts (POP)
L66051238	LUB OIL PUMP (MODIFIED)	Piaggio spare parts (POP)
E52006709	LUB OIL PUMP ASSLY	Piaggio spare parts (POP)
E87006752	LUB OIL PUMP ASSM	Piaggio spare parts (POP)
ED33594	LUB. OIL PIPE FOR OIL COOLER	Piaggio spare parts (POP)
1A001337	LUBRICATION SPRAY JET	Piaggio spare parts (POP)
858541	Luggage Rack Kit	Piaggio spare parts (POP)
E870071001	LYNX GEAR BOX	Piaggio spare parts (POP)
6A000373	M10 combi bolt	Piaggio spare parts (POP)
E3324033	M10 Nut Bell housing	Piaggio spare parts (POP)
E87000237	M10 NUTBELL	Piaggio spare parts (POP)
E07500507	M10 stud Bell housing	Piaggio spare parts (POP)
E202756511	M10Washer Bell housing	Piaggio spare parts (POP)
01B160108	M10x1.5 Hexagon socket head cap screw di	Piaggio spare parts (POP)
E7500510	M10X1.5X60 StudSilencer bkt	Piaggio spare parts (POP)
E87000567	M10X1.5X80 StudSilencer bkt	Piaggio spare parts (POP)
01B150032	M10X100Hex Head Flange Bolt	Piaggio spare parts (POP)
01B150095	M10X25Hex Head Flange Bolt	Piaggio spare parts (POP)
B008328	M12 HEXAG. SELFLOCKING NUT	Piaggio spare parts (POP)
B009256	M12 x 1.25 CLEVELOC NUT	Piaggio spare parts (POP)
6C000526	M3X15 PHILIP HEAD SCREW	Piaggio spare parts (POP)
B075855	M4 HEX FLANGE NUT	Piaggio spare parts (POP)
6C000377	M5X10 COMBI BOLT	Piaggio spare parts (POP)
6C000378	M5X12 COMBI BOLT	Piaggio spare parts (POP)
01B160109	M6 NutRear Cover	Piaggio spare parts (POP)
01B160112	M6 StudDiff Stiffness plate	Piaggio spare parts (POP)
01B160111	M6 StudRear Cover	Piaggio spare parts (POP)
01B160113	M6 StudRubber boot holder	Piaggio spare parts (POP)
01B160107	M6 StudSelector Housing	Piaggio spare parts (POP)

01B150079	M6X18Hex Head Flange Bolt	Piaggio spare parts (POP)
01B150078	M6X20Hex Head Flange Bolt	Piaggio spare parts (POP)
6C000007	M8 - SPECIAL STUD	Piaggio spare parts (POP)
B001508	M8 BOLT	Piaggio spare parts (POP)
01B160103	M8 Stud	Piaggio spare parts (POP)
127103014	M-8 STUD - MAIN HOUSING	Piaggio spare parts (POP)
01B160102	M8 StudII Casing	Piaggio spare parts (POP)
6C000231	M8X1.25X35 HEX COMBI SCREW-12.9	Piaggio spare parts (POP)
01B150096	M8X16Hex Head Flange Bolt	Piaggio spare parts (POP)
01B150015	M8X40Hex Head Flange Bolt	Piaggio spare parts (POP)
E50000613	MACHINED WASHER	Piaggio spare parts (POP)
889245	MAGNET	Piaggio spare parts (POP)
L2535030	MAGNET CONTAINER ASSEMBLY	Piaggio spare parts (POP)
E50000421	MAGNETIC DRAIN PLUG	Piaggio spare parts (POP)
E7500407	MAGNETIC DRAIN PLUG	Piaggio spare parts (POP)
L9080258	MAGNETIC PLUG	Piaggio spare parts (POP)
L9080895	MAGNETIC PLUG M22X1.5	Piaggio spare parts (POP)
441042	MAGNETO ROTOR HOLDING TOOL	Piaggio spare parts (POP)
441047	MAGNETO ROTOR PULLER	Piaggio spare parts (POP)
SST941124	MAGNETSTAND FOR CRANK SHAFT END PLAY	Piaggio spare parts (POP)
889102	MAIN BEARING - LOWER	Piaggio spare parts (POP)
B011967	MAIN BEARING - LOWER SHELL	Piaggio spare parts (POP)
888055	MAIN BEARING - UPPER	Piaggio spare parts (POP)
B011966	MAIN BEARING - UPPER SHELL	Piaggio spare parts (POP)
882083	MAIN BEARING - UPPER THRUST	Piaggio spare parts (POP)
SST94174	Main bush removal tool PTO Cover side	Piaggio spare parts (POP)
B041694	MAIN FRAME	Piaggio spare parts (POP)
6B002247BL	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-BL	Piaggio spare parts (POP)
6B002247BW	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-BW	Piaggio spare parts (POP)
6B002247BY	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-BY	Piaggio spare parts (POP)
6B002247CB	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-CB	Piaggio spare parts (POP)
6B002247EG	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-EG	Piaggio spare parts (POP)
6B002247GY	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-GY	Piaggio spare parts (POP)
6B002247NB	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-NB	Piaggio spare parts (POP)
6B002247WR	MAIN FRAME W/HSRP 501 CNG 60Ltr BSVI-WR	Piaggio spare parts (POP)
B078548BW	MAIN FRAME ASSEMBLY (501 PU CNG WC) - BW	Piaggio spare parts (POP)
B078548CB	MAIN FRAME ASSEMBLY (501 PU CNG WC) - CB	Piaggio spare parts (POP)
B078548EG	MAIN FRAME ASSEMBLY (501 PU CNG WC) - EG	Piaggio spare parts (POP)
B078548GY	MAIN FRAME ASSEMBLY (501 PU CNG WC) - GY	Piaggio spare parts (POP)
B078548PA	MAIN FRAME ASSEMBLY (501 PU CNG WC) - PA	Piaggio spare parts (POP)
B078548PB	MAIN FRAME ASSEMBLY (501 PU CNG WC) - PB	Piaggio spare parts (POP)
B078746BW	MAIN FRAME ASSEMBLY (501 PU LPG WC) - BW	Piaggio spare parts (POP)
B078746CB	MAIN FRAME ASSEMBLY (501 PU LPG WC) - CB	Piaggio spare parts (POP)
B078746EG	MAIN FRAME ASSEMBLY (501 PU LPG WC) - EG	Piaggio spare parts (POP)
B078746GY	MAIN FRAME ASSEMBLY (501 PU LPG WC) - GY	Piaggio spare parts (POP)
B078746PA	MAIN FRAME ASSEMBLY (501 PU LPG WC) - PA	Piaggio spare parts (POP)
B078746PB	MAIN FRAME ASSEMBLY (501 PU LPG WC) - PB	Piaggio spare parts (POP)

567730	MAIN FRAME ASSLY	Piaggio spare parts (POP)
B076254BW	MAIN FRAME ASSLY - BSIV LPG-BW	Piaggio spare parts (POP)
B076254BY	MAIN FRAME ASSLY - BSIV LPG-BY	Piaggio spare parts (POP)
B076254CB	MAIN FRAME ASSLY - BSIV LPG-CB	Piaggio spare parts (POP)
B076254EG	MAIN FRAME ASSLY - BSIV LPG-EG	Piaggio spare parts (POP)
B076254GY	MAIN FRAME ASSLY - BSIV LPG-GY	Piaggio spare parts (POP)
B076254NB	MAIN FRAME ASSLY - BSIV LPG-NB	Piaggio spare parts (POP)
B076254WR	MAIN FRAME ASSLY - BSIV LPG-WR	Piaggio spare parts (POP)
B002329BY	MAIN FRAME ASSLY LPG PASS UPGRADE BLACK	Piaggio spare parts (POP)
B074751GY	MAIN FRAME ASSLY 501 LPG BSIII SPD - GY	Piaggio spare parts (POP)
B077750BL	MAIN FRAME ASSLY 501 PASS (D+5)_BL	Piaggio spare parts (POP)
B077750BW	MAIN FRAME ASSLY 501 PASS (D+5)_BW	Piaggio spare parts (POP)
B077750EG	MAIN FRAME ASSLY 501 PASS (D+5)_EG	Piaggio spare parts (POP)
B077750GY	MAIN FRAME ASSLY 501 PASS (D+5)_GY	Piaggio spare parts (POP)
B076585BL	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-BL	Piaggio spare parts (POP)
B076585BW	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-BW	Piaggio spare parts (POP)
B076585CB	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-CB	Piaggio spare parts (POP)
B076585EG	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-EG	Piaggio spare parts (POP)
B076585GY	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-GY	Piaggio spare parts (POP)
B076585WR	MAIN FRAME ASSLY 501 PASS BSIV NUOVO-WR	Piaggio spare parts (POP)
B076368BL	MAIN FRAME ASSLY 501 PASS BSIV STD-BL	Piaggio spare parts (POP)
B076368BW	MAIN FRAME ASSLY 501 PASS BSIV STD-BW	Piaggio spare parts (POP)
B076368CB	MAIN FRAME ASSLY 501 PASS BSIV STD-CB	Piaggio spare parts (POP)
B076368EG	MAIN FRAME ASSLY 501 PASS BSIV STD-EG	Piaggio spare parts (POP)
B076368GY	MAIN FRAME ASSLY 501 PASS BSIV STD-GY	Piaggio spare parts (POP)
B076368WR	MAIN FRAME ASSLY 501 PASS BSIV STD-WR	Piaggio spare parts (POP)
B001912CED	MAIN FRAME ASSLY 501 PASS CHA BSIII- CED	Piaggio spare parts (POP)
B002504BY	MAIN FRAME ASSLY APE CITY BLACK	Piaggio spare parts (POP)
B076256BW	MAIN FRAME ASSLY APE CITY BSIV DSL_BW	Piaggio spare parts (POP)
B076256BY	MAIN FRAME ASSLY APE CITY BSIV DSL_BY	Piaggio spare parts (POP)
B076256CB	MAIN FRAME ASSLY APE CITY BSIV DSL_CB	Piaggio spare parts (POP)
B076256EG	MAIN FRAME ASSLY APE CITY BSIV DSL_EG	Piaggio spare parts (POP)
B076256GY	MAIN FRAME ASSLY APE CITY BSIV DSL_GY	Piaggio spare parts (POP)
B076256NB	MAIN FRAME ASSLY APE CITY BSIV DSL_NB	Piaggio spare parts (POP)
B076256WR	MAIN FRAME ASSLY APE CITY BSIV DSL_NB	Piaggio spare parts (POP)
B002504BW	MAIN FRAME ASSLY APE CITY BW-SPD	Piaggio spare parts (POP)
B075028CO	MAIN FRAME ASSLY APE CITY CARGO CNG-CO	Piaggio spare parts (POP)
B075028EG	MAIN FRAME ASSLY APE CITY CARGO CNG-EG	Piaggio spare parts (POP)
B075030CO	MAIN FRAME ASSLY APE CITY CARGO LPG-CO	Piaggio spare parts (POP)
B075030EG	MAIN FRAME ASSLY APE CITY CARGO LPG-EG	Piaggio spare parts (POP)
B076032CO	MAIN FRAME ASSLY APE CITY CARGO PTL-CO	Piaggio spare parts (POP)
B076032EG	MAIN FRAME ASSLY APE CITY CARGO PTL-EG	Piaggio spare parts (POP)
B002504CB	MAIN FRAME ASSLY APE CITY CB-SPD	Piaggio spare parts (POP)
B076466BW	MAIN FRAME ASSLY APE CITY DSL STD_BW	Piaggio spare parts (POP)
B076466BY	MAIN FRAME ASSLY APE CITY DSL STD_BY	Piaggio spare parts (POP)
B076466CB	MAIN FRAME ASSLY APE CITY DSL STD_CB	Piaggio spare parts (POP)
B076466EG	MAIN FRAME ASSLY APE CITY DSL STD_EG	Piaggio spare parts (POP)

B076466GY	MAIN FRAME ASSLY APE CITY DSL STD_GY	Piaggio spare parts (POP)
B076466NB	MAIN FRAME ASSLY APE CITY DSL STD_NB	Piaggio spare parts (POP)
B076466WR	MAIN FRAME ASSLY APE CITY DSL STD_WR	Piaggio spare parts (POP)
B002504GY	MAIN FRAME ASSLY APE CITY G YELLOW	Piaggio spare parts (POP)
B002504WR	MAIN FRAME ASSLY APE CITY WR-SPD	Piaggio spare parts (POP)
B079221BL	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_BL	Piaggio spare parts (POP)
B079221BW	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_BW	Piaggio spare parts (POP)
B079221CB	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_CB	Piaggio spare parts (POP)
B079221EG	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_EG	Piaggio spare parts (POP)
B079221GY	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_GY	Piaggio spare parts (POP)
B079221NB	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_NB	Piaggio spare parts (POP)
B079221WR	MAIN FRAME ASSLY APE CITY+ C/L_HSRP_WR	Piaggio spare parts (POP)
B079222BL	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_BL	Piaggio spare parts (POP)
B079222CB	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_CB	Piaggio spare parts (POP)
B079222EG	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_EG	Piaggio spare parts (POP)
B079222GY	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_GY	Piaggio spare parts (POP)
B079222NB	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_NB	Piaggio spare parts (POP)
B079222WR	MAIN FRAME ASSLY APE CITY+_PTL_HSRP_WR	Piaggio spare parts (POP)
B079223BL	MAIN FRAME ASSLY APE CITY+DSL_HSRP_BL	Piaggio spare parts (POP)
B079223BW	MAIN FRAME ASSLY APE CITY+DSL_HSRP_BW	Piaggio spare parts (POP)
B079223CB	MAIN FRAME ASSLY APE CITY+DSL_HSRP_CB	Piaggio spare parts (POP)
B079223EG	MAIN FRAME ASSLY APE CITY+DSL_HSRP_EG	Piaggio spare parts (POP)
B079223GY	MAIN FRAME ASSLY APE CITY+DSL_HSRP_GY	Piaggio spare parts (POP)
B079223NB	MAIN FRAME ASSLY APE CITY+DSL_HSRP_NB	Piaggio spare parts (POP)
B079223WR	MAIN FRAME ASSLY APE CITY+DSL_HSRP_WR	Piaggio spare parts (POP)
6B002602BL	MAIN FRAME ASSLY Auto+230cc LPG BS6-BL	Piaggio spare parts (POP)
6B002602BW	MAIN FRAME ASSLY Auto+230cc LPG BS6-BW	Piaggio spare parts (POP)
6B002602BY	MAIN FRAME ASSLY Auto+230cc LPG BS6-BY	Piaggio spare parts (POP)
6B002602CB	MAIN FRAME ASSLY Auto+230cc LPG BS6-CB	Piaggio spare parts (POP)
6B002602EG	MAIN FRAME ASSLY Auto+230cc LPG BS6-EG	Piaggio spare parts (POP)
6B002602GY	MAIN FRAME ASSLY Auto+230cc LPG BS6-GY	Piaggio spare parts (POP)
6B002602NB	MAIN FRAME ASSLY Auto+230cc LPG BS6-NB	Piaggio spare parts (POP)
6B002602WR	MAIN FRAME ASSLY Auto+230cc LPG BS6-WR	Piaggio spare parts (POP)
B077025ED	MAIN FRAME ASSLY BSIV - CALASSINO_ED	Piaggio spare parts (POP)
B075803GY	MAIN FRAME ASSLY BSIV - DIESEL_GY	Piaggio spare parts (POP)
B075803BW	MAIN FRAME ASSLY BSIV - DIESEL-BW	Piaggio spare parts (POP)
B075803BY	MAIN FRAME ASSLY BSIV - DIESEL-BY	Piaggio spare parts (POP)
B075803CB	MAIN FRAME ASSLY BSIV - DIESEL-CB	Piaggio spare parts (POP)
B075803EG	MAIN FRAME ASSLY BSIV - DIESEL-EG	Piaggio spare parts (POP)
B075803NB	MAIN FRAME ASSLY BSIV - DIESEL-NB	Piaggio spare parts (POP)
B075803WR	MAIN FRAME ASSLY BSIV - DIESEL-WR	Piaggio spare parts (POP)
B009244BG	MAIN FRAME ASSLY CNG PICK UP BSIII BG	Piaggio spare parts (POP)
B009244BW	MAIN FRAME ASSLY CNG PICK UP BSIII BW	Piaggio spare parts (POP)
B009244CB	MAIN FRAME ASSLY CNG PICK UP BSIII CB	Piaggio spare parts (POP)
B009244EG	MAIN FRAME ASSLY CNG PICK UP BSIII EG	Piaggio spare parts (POP)
B009244GY	MAIN FRAME ASSLY CNG PICK UP BSIII GY	Piaggio spare parts (POP)
B009244SY	MAIN FRAME ASSLY CNG PICK UP BSIII SY	Piaggio spare parts (POP)

B009244WR	MAIN FRAME ASSLY CNG PICK UP BSIII WR	Piaggio spare parts (POP)
6B000224EG	MAIN FRAME ASSLY LPG	Piaggio spare parts (POP)
B002329EG	MAIN FRAME ASSLY LPG UPGRADE PASS-E GRN	Piaggio spare parts (POP)
6B000224BW	MAIN FRAME ASSLY LPG_BW	Piaggio spare parts (POP)
6B000224CB	MAIN FRAME ASSLY LPG_CB	Piaggio spare parts (POP)
6B000224CO	MAIN FRAME ASSLY LPG_CO	Piaggio spare parts (POP)
6B000224GY	MAIN FRAME ASSLY LPG_GY	Piaggio spare parts (POP)
6B000224PA	MAIN FRAME ASSLY LPG_PA	Piaggio spare parts (POP)
6B000224PB	MAIN FRAME ASSLY LPG_PB	Piaggio spare parts (POP)
B001912BL	MAIN FRAME ASSLY PASS CHA (GL435) BLACK	Piaggio spare parts (POP)
B001912BW	MAIN FRAME ASSLY PASS CHA (GL435) BW	Piaggio spare parts (POP)
B001912CB	MAIN FRAME ASSLY PASS CHA (GL435) CB	Piaggio spare parts (POP)
B001912EG	MAIN FRAME ASSLY PASS CHA (GL435) EG	Piaggio spare parts (POP)
B001912GY	MAIN FRAME ASSLY PASS CHA (GL435) GY	Piaggio spare parts (POP)
B001912WR	MAIN FRAME ASSLY PASS CHA (GL435) WR	Piaggio spare parts (POP)
644920	MAIN FRAME ASSLY TAXI (SOFT TOP VERSION)	Piaggio spare parts (POP)
B076255BW	MAIN FRAME ASSLY WITH IP - BSIV CNG-BW	Piaggio spare parts (POP)
B076255BY	MAIN FRAME ASSLY WITH IP - BSIV CNG-BY	Piaggio spare parts (POP)
B076255CB	MAIN FRAME ASSLY WITH IP - BSIV CNG-CB	Piaggio spare parts (POP)
B076255EG	MAIN FRAME ASSLY WITH IP - BSIV CNG-EG	Piaggio spare parts (POP)
B076255GY	MAIN FRAME ASSLY WITH IP - BSIV CNG-GY	Piaggio spare parts (POP)
B076255NB	MAIN FRAME ASSLY WITH IP - BSIV CNG-NB	Piaggio spare parts (POP)
B076255WR	MAIN FRAME ASSLY WITH IP - BSIV CNG-WR	Piaggio spare parts (POP)
B076253BW	MAIN FRAME ASSLY WITH IP - BSIV PTL -BW	Piaggio spare parts (POP)
B076253BY	MAIN FRAME ASSLY WITH IP - BSIV PTL -BY	Piaggio spare parts (POP)
B076253CB	MAIN FRAME ASSLY WITH IP - BSIV PTL -CB	Piaggio spare parts (POP)
B076253EG	MAIN FRAME ASSLY WITH IP - BSIV PTL -EG	Piaggio spare parts (POP)
B076253GY	MAIN FRAME ASSLY WITH IP - BSIV PTL -GY	Piaggio spare parts (POP)
B076253GY-SPD	MAIN FRAME ASSLY WITH IP - BSIV PTL -GY	Piaggio spare parts (POP)
B076253NB	MAIN FRAME ASSLY WITH IP - BSIV PTL -NB	Piaggio spare parts (POP)
B076253PK	MAIN FRAME ASSLY WITH IP - BSIV PTL -PK	Piaggio spare parts (POP)
B076253WR	MAIN FRAME ASSLY WITH IP - BSIV PTL -WR	Piaggio spare parts (POP)
B078497BL	MAIN FRAME ASSLY WITH IP - PHILIPINES_BL	Piaggio spare parts (POP)
B078497BW	MAIN FRAME ASSLY WITH IP - PHILIPINES_BW	Piaggio spare parts (POP)
B078497CB	MAIN FRAME ASSLY WITH IP - PHILIPINES_CB	Piaggio spare parts (POP)
B078497EG	MAIN FRAME ASSLY WITH IP - PHILIPINES_EG	Piaggio spare parts (POP)
B078497GY	MAIN FRAME ASSLY WITH IP - PHILIPINES_GY	Piaggio spare parts (POP)
B078497WR	MAIN FRAME ASSLY WITH IP - PHILIPINES_WR	Piaggio spare parts (POP)
B024787BY	MAIN FRAME ASSLY WITH IP (PAX 200 CNG)BY	Piaggio spare parts (POP)
B024787EG	MAIN FRAME ASSLY WITH IP (PAX 200 CNG)EG	Piaggio spare parts (POP)
B024787GY	MAIN FRAME ASSLY WITH IP (PAX 200 CNG)GY	Piaggio spare parts (POP)
B024790BY	MAIN FRAME ASSLY WITH IP (PAX 200 LPG)BY	Piaggio spare parts (POP)
B024790EG	MAIN FRAME ASSLY WITH IP (PAX 200 LPG)EG	Piaggio spare parts (POP)
B024790GY	MAIN FRAME ASSLY WITH IP (PAX 200 LPG)GY	Piaggio spare parts (POP)
B024637BY	MAIN FRAME ASSLY WITH IP (PAX 200 PTL)BY	Piaggio spare parts (POP)
B024637GY	MAIN FRAME ASSLY WITH IP (PAX 200 PTL)GY	Piaggio spare parts (POP)
B024804EG	MAIN FRAME ASSLY WITH IP COLOR -E. GREEN	Piaggio spare parts (POP)

B002472EG	MAIN FRAME ASSLY WITH IP LPG CHASSIS- EG	Piaggio spare parts (POP)
B002472GY	MAIN FRAME ASSLY WITH IP LPG CHASSIS- GY	Piaggio spare parts (POP)
B002472BY	MAIN FRAME ASSLY WITH IP LPG CHASSIS-BY	Piaggio spare parts (POP)
B024804BY	MAIN FRAME ASSLY WITH IP PAX DSL- BLACK	Piaggio spare parts (POP)
B024804CB	MAIN FRAME ASSLY WITH IP PAX DSL- CH BLU	Piaggio spare parts (POP)
B024804GY	MAIN FRAME ASSLY WITH IP PAX DSL G YELLO	Piaggio spare parts (POP)
B074586BW	MAIN FRAME ASSLY WITH IP_UPG_DIESEL-BW	Piaggio spare parts (POP)
B074586BY	MAIN FRAME ASSLY WITH IP_UPG_DIESEL-BY	Piaggio spare parts (POP)
B074586CB	MAIN FRAME ASSLY WITH IP_UPG_DIESEL-CB	Piaggio spare parts (POP)
B074586EG	MAIN FRAME ASSLY WITH IP_UPG_DIESEL-EG	Piaggio spare parts (POP)
B074586GY	MAIN FRAME ASSLY WITH IP_UPG_DIESEL-GY	Piaggio spare parts (POP)
B074584BW	MAIN FRAME ASSLY WITH IP_UPG_PETROL-BW	Piaggio spare parts (POP)
B074584BY	MAIN FRAME ASSLY WITH IP_UPG_PETROL-BY	Piaggio spare parts (POP)
B074584CB	MAIN FRAME ASSLY WITH IP_UPG_PETROL-CB	Piaggio spare parts (POP)
B074584EG	MAIN FRAME ASSLY WITH IP_UPG_PETROL-EG	Piaggio spare parts (POP)
B074584GY	MAIN FRAME ASSLY WITH IP_UPG_PETROL-GY	Piaggio spare parts (POP)
B074573BY	MAIN FRAME ASSLY WITH IP_UPGRADE_LPG-BY	Piaggio spare parts (POP)
B074573EG	MAIN FRAME ASSLY WITH IP_UPGRADE_LPG-EG	Piaggio spare parts (POP)
B074573GY	MAIN FRAME ASSLY WITH IP_UPGRADE_LPG-GY	Piaggio spare parts (POP)
B074538BY	MAIN FRAME ASSLY WITH IP_UPGRADE-CNG-BY	Piaggio spare parts (POP)
B074538EG	MAIN FRAME ASSLY WITH IP_UPGRADE-CNG-EG	Piaggio spare parts (POP)
B074538GY	MAIN FRAME ASSLY WITH IP_UPGRADE-CNG-GY	Piaggio spare parts (POP)
B002292EG	MAIN FRAME ASSLY. CNG UPGRADE E GRN	Piaggio spare parts (POP)
B002656BG	MAIN FRAME ASSLY. WITH W/SHIELD-BR.GREEN	Piaggio spare parts (POP)
B002656EG	MAIN FRAME ASSLY.WITH W/SHIELD-ECO GREEN	Piaggio spare parts (POP)
6B000361BW	MAIN FRAME ASSLY_APE CITY CARGO_PTL- BW	Piaggio spare parts (POP)
6B000361CB	MAIN FRAME ASSLY_APE CITY CARGO_PTL- CB	Piaggio spare parts (POP)
6B000361EG	MAIN FRAME ASSLY_APE CITY CARGO_PTL- EG	Piaggio spare parts (POP)
6B000361GY	MAIN FRAME ASSLY_APE CITY CARGO_PTL- GY	Piaggio spare parts (POP)
B079222BW	MAIN FRAME ASSLY_HSRP APE CITY+_PTL_BW	Piaggio spare parts (POP)
6B000122BW	MAIN FRAME ASSY (501 LD CNG WC)-BW	Piaggio spare parts (POP)
6B000122CB	MAIN FRAME ASSY (501 LD CNG WC)-CB	Piaggio spare parts (POP)
6B000122CO	MAIN FRAME ASSY (501 LD CNG WC)-CO	Piaggio spare parts (POP)
6B000122EG	MAIN FRAME ASSY (501 LD CNG WC)-EG	Piaggio spare parts (POP)
6B000122GY	MAIN FRAME ASSY (501 LD CNG WC)-GY	Piaggio spare parts (POP)
6B000122PA	MAIN FRAME ASSY (501 LD CNG WC)-PA	Piaggio spare parts (POP)
6B000122PB	MAIN FRAME ASSY (501 LD CNG WC)-PB	Piaggio spare parts (POP)
B078549BW	MAIN FRAME ASSY (501 XTRA LD CNG WC)- BW	Piaggio spare parts (POP)
B078549CB	MAIN FRAME ASSY (501 XTRA LD CNG WC)- CB	Piaggio spare parts (POP)
B078549CO	MAIN FRAME ASSY (501 XTRA LD CNG WC)- CO	Piaggio spare parts (POP)
B078549EG	MAIN FRAME ASSY (501 XTRA LD CNG WC)- EG	Piaggio spare parts (POP)
B078549GY	MAIN FRAME ASSY (501 XTRA LD CNG WC)- GY	Piaggio spare parts (POP)
B078549PA	MAIN FRAME ASSY (501 XTRA LD CNG WC)- PA	Piaggio spare parts (POP)
B078549PB	MAIN FRAME ASSY (501 XTRA LD CNG WC)- PB	Piaggio spare parts (POP)
6B002311BW	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-BW	Piaggio spare parts (POP)
6B002311CB	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-CB	Piaggio spare parts (POP)
6B002311CO	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-CO	Piaggio spare parts (POP)

6B002311EG	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-EG	Piaggio spare parts (POP)
6B002311GY	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-GY	Piaggio spare parts (POP)
6B002311PA	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-PA	Piaggio spare parts (POP)
6B002311PB	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-PB	Piaggio spare parts (POP)
6B002311WR	MAIN FRAME ASSY APE XTRA DX 300C/LBS6-WR	Piaggio spare parts (POP)
6B002718GY	MAIN FRAME ASSY W/CABIN DOORS_EX PU-GY	Piaggio spare parts (POP)
6B002718LB	MAIN FRAME ASSY W/CABIN DOORS_EX PU-LB	Piaggio spare parts (POP)
6B002718NB	MAIN FRAME ASSY W/CABIN DOORS_EX PU-NB	Piaggio spare parts (POP)
6B002893LB	MAIN FRAME ASSY W/CABIN DOORS_LX_PU-LB	Piaggio spare parts (POP)
6B002893NB	MAIN FRAME ASSY W/CABIN DOORS_LX_PU-NB	Piaggio spare parts (POP)
6B000893BL	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-BL	Piaggio spare parts (POP)
6B000893BW	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-BW	Piaggio spare parts (POP)
6B000893BY	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-BY	Piaggio spare parts (POP)
6B000893CB	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-CB	Piaggio spare parts (POP)
6B000893EG	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-EG	Piaggio spare parts (POP)
6B000893GY	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-GY	Piaggio spare parts (POP)
6B000893NB	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-NB	Piaggio spare parts (POP)
6B000893WR	MAIN FRAME ASSY_Mono APE CITY LPG-BS6-WR	Piaggio spare parts (POP)
B077300BY	MAIN FRAME ASSY-501 PASS CNG WC - BY	Piaggio spare parts (POP)
B077300EG	MAIN FRAME ASSY-501 PASS CNG WC - EG	Piaggio spare parts (POP)
B077300GY	MAIN FRAME ASSY-501 PASS CNG WC - GY	Piaggio spare parts (POP)
B078745BY	MAIN FRAME ASSY-501 PASS LPG WC - BY	Piaggio spare parts (POP)
B078745EG	MAIN FRAME ASSY-501 PASS LPG WC - EG	Piaggio spare parts (POP)
B078745GY	MAIN FRAME ASSY-501 PASS LPG WC - GY	Piaggio spare parts (POP)
B077020	MAIN FRAME UPPER PART ASSLY	Piaggio spare parts (POP)
6B002513BW	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_BW	Piaggio spare parts (POP)
6B002513CB	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_CB	Piaggio spare parts (POP)
6B002513CO	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_CO	Piaggio spare parts (POP)
6B002513EG	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_EG	Piaggio spare parts (POP)
6B002513GY	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_GY	Piaggio spare parts (POP)
6B002513PA	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_PA	Piaggio spare parts (POP)
6B002513PB	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_PB	Piaggio spare parts (POP)
6B002513WR	MAIN FRAME W/ DOORS LDX 230CC CNG BS6_WR	Piaggio spare parts (POP)
6B002342BR	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-BR	Piaggio spare parts (POP)
6B002342BW	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-BW	Piaggio spare parts (POP)
6B002342CB	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-CB	Piaggio spare parts (POP)
6B002342CO	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-CO	Piaggio spare parts (POP)
6B002342EG	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-EG	Piaggio spare parts (POP)
6B002342GY	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-GY	Piaggio spare parts (POP)
6B002342VG	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-VG	Piaggio spare parts (POP)
6B002342WR	MAIN FRAME W/ DOORS XTRA LD 300CC PTL-WR	Piaggio spare parts (POP)
6B001305BW	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-BW	Piaggio spare parts (POP)
6B001305CB	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-CB	Piaggio spare parts (POP)
6B001305CO	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-CO	Piaggio spare parts (POP)
6B001305EG	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-EG	Piaggio spare parts (POP)
6B001305GY	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-GY	Piaggio spare parts (POP)
6B001305PA	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-PA	Piaggio spare parts (POP)

6B001305PB	MAIN FRAME W/ DOORS_LDX+_CNG W/ HSRP-PB	Piaggio spare parts (POP)
6B001678BW	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-BW	Piaggio spare parts (POP)
6B001678BY	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-BY	Piaggio spare parts (POP)
6B001678CB	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-CB	Piaggio spare parts (POP)
6B001678EG	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-EG	Piaggio spare parts (POP)
6B001678GY	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-GY	Piaggio spare parts (POP)
6B001678NB	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-NB	Piaggio spare parts (POP)
6B001678WR	MAIN FRAME W/ HSRP CITY 20.6L LPG BS4-WR	Piaggio spare parts (POP)
6B001454BW	MAIN FRAME W/ HSRP E-CITY FIXED BAT-BW	Piaggio spare parts (POP)
6B001454BY	MAIN FRAME W/ HSRP E-CITY FIXED BAT-BY	Piaggio spare parts (POP)
6B001454CB	MAIN FRAME W/ HSRP E-CITY FIXED BAT-CB	Piaggio spare parts (POP)
6B001454EG	MAIN FRAME W/ HSRP E-CITY FIXED BAT-EG	Piaggio spare parts (POP)
6B001454GY	MAIN FRAME W/ HSRP E-CITY FIXED BAT-GY	Piaggio spare parts (POP)
6B001454NB	MAIN FRAME W/ HSRP E-CITY FIXED BAT-NB	Piaggio spare parts (POP)
6B001454WR	MAIN FRAME W/ HSRP E-CITY FIXED BAT-WR	Piaggio spare parts (POP)
6B002929BW	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-BW	Piaggio spare parts (POP)
6B002929CB	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-CB	Piaggio spare parts (POP)
6B002929CO	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-CO	Piaggio spare parts (POP)
6B002929EG	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-EG	Piaggio spare parts (POP)
6B002929GY	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-GY	Piaggio spare parts (POP)
6B002929PA	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-PA	Piaggio spare parts (POP)
6B002929PB	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-PB	Piaggio spare parts (POP)
6B002929WR	MAIN FRAME W/DOORS LDX 230CC P-BS3EXP-WR	Piaggio spare parts (POP)
6B002867BW	MAIN FRAME W/DOORS LDX+230CC CNG BS6_BW	Piaggio spare parts (POP)
6B002867CB	MAIN FRAME W/DOORS LDX+230CC CNG BS6_CB	Piaggio spare parts (POP)
6B002867CO	MAIN FRAME W/DOORS LDX+230CC CNG BS6_CO	Piaggio spare parts (POP)
6B002867EG	MAIN FRAME W/DOORS LDX+230CC CNG BS6_EG	Piaggio spare parts (POP)
6B002867GY	MAIN FRAME W/DOORS LDX+230CC CNG BS6_GY	Piaggio spare parts (POP)
6B002867PB	MAIN FRAME W/DOORS LDX+230CC CNG BS6_PB	Piaggio spare parts (POP)
6B002867WR	MAIN FRAME W/DOORS LDX+230CC CNG BS6_WR	Piaggio spare parts (POP)
6B002928BW	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-BW	Piaggio spare parts (POP)
6B002928CB	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-CB	Piaggio spare parts (POP)
6B002928CO	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-CO	Piaggio spare parts (POP)
6B002928EG	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-EG	Piaggio spare parts (POP)
6B002928GY	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-GY	Piaggio spare parts (POP)
6B002928PA	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-PA	Piaggio spare parts (POP)
6B002928PB	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-PB	Piaggio spare parts (POP)
6B002928WR	MAIN FRAME W/DOORS Xtra DX PU BS3 EXP-WR	Piaggio spare parts (POP)
6B002349BW	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_BW	Piaggio spare parts (POP)
6B002349CB	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_CB	Piaggio spare parts (POP)
6B002349CO	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_CO	Piaggio spare parts (POP)
6B002349EG	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_EG	Piaggio spare parts (POP)
6B002349GY	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_GY	Piaggio spare parts (POP)
6B002349PA	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_PA	Piaggio spare parts (POP)
6B002349PB	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_PB	Piaggio spare parts (POP)
6B002349WR	MAIN FRAME W/DOORS_DX_HT_PU PTL_300cc_WR	Piaggio spare parts (POP)
6B001642BW	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-BW	Piaggio spare parts (POP)

6B001642CB	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-CB	Piaggio spare parts (POP)
6B001642CO	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-CO	Piaggio spare parts (POP)
6B001642EG	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-EG	Piaggio spare parts (POP)
6B001642GY	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-GY	Piaggio spare parts (POP)
6B001642PA	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-PA	Piaggio spare parts (POP)
6B001642PB	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-PB	Piaggio spare parts (POP)
6B001642WR	MAIN FRAME WITH CABIN DOOR_DX_PU_BS6-WR	Piaggio spare parts (POP)
6B002306BW	MAIN FRAME WITH CABIN DOORS (300CC)-BW	Piaggio spare parts (POP)
6B002306CB	MAIN FRAME WITH CABIN DOORS (300CC)-CB	Piaggio spare parts (POP)
6B002306CO	MAIN FRAME WITH CABIN DOORS (300CC)-CO	Piaggio spare parts (POP)
6B002306EG	MAIN FRAME WITH CABIN DOORS (300CC)-EG	Piaggio spare parts (POP)
6B002306GY	MAIN FRAME WITH CABIN DOORS (300CC)-GY	Piaggio spare parts (POP)
6B002306PA	MAIN FRAME WITH CABIN DOORS (300CC)-PA	Piaggio spare parts (POP)
6B002306PB	MAIN FRAME WITH CABIN DOORS (300CC)-PB	Piaggio spare parts (POP)
6B002306WR	MAIN FRAME WITH CABIN DOORS (300CC)-WR	Piaggio spare parts (POP)
6B002620GY	MAIN FRAME WITH CABIN DOORS E-Cargo FXGY	Piaggio spare parts (POP)
6B002620LB	MAIN FRAME WITH CABIN DOORS E-Cargo FXLB	Piaggio spare parts (POP)
6B002620NB	MAIN FRAME WITH CABIN DOORS E-Cargo FXNB	Piaggio spare parts (POP)
6B001643BW	MAIN FRAME WITH CABIN DOORS_LDX_BS6-BW	Piaggio spare parts (POP)
6B001643CB	MAIN FRAME WITH CABIN DOORS_LDX_BS6-CB	Piaggio spare parts (POP)
6B001643CO	MAIN FRAME WITH CABIN DOORS_LDX_BS6-CO	Piaggio spare parts (POP)
6B001643EG	MAIN FRAME WITH CABIN DOORS_LDX_BS6-EG	Piaggio spare parts (POP)
6B001643GY	MAIN FRAME WITH CABIN DOORS_LDX_BS6-GY	Piaggio spare parts (POP)
6B001643LB	MAIN FRAME WITH CABIN DOORS_LDX_BS6-LB	Piaggio spare parts (POP)
6B001643NB	MAIN FRAME WITH CABIN DOORS_LDX_BS6-NB	Piaggio spare parts (POP)
6B001643PA	MAIN FRAME WITH CABIN DOORS_LDX_BS6-PA	Piaggio spare parts (POP)
6B001643PB	MAIN FRAME WITH CABIN DOORS_LDX_BS6-PB	Piaggio spare parts (POP)
6B001643WR	MAIN FRAME WITH CABIN DOORS_LDX_BS6-WR	Piaggio spare parts (POP)
6B002707BW	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-BW	Piaggio spare parts (POP)
6B002707CB	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-CB	Piaggio spare parts (POP)
6B002707CO	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-CO	Piaggio spare parts (POP)
6B002707EG	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-EG	Piaggio spare parts (POP)
6B002707GY	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-GY	Piaggio spare parts (POP)
6B002707PA	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-PA	Piaggio spare parts (POP)
6B002707PB	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-PB	Piaggio spare parts (POP)
6B002707WR	MAIN FRAME WITH CABIN DOORS_LDX+_BS6-WR	Piaggio spare parts (POP)
6B002345BW	MAIN FRAME WITH CABIN DOORS-BW	Piaggio spare parts (POP)
6B002267BW	MAIN FRAME WITH CABIN DOORS-BW	Piaggio spare parts (POP)
6B002345CB	MAIN FRAME WITH CABIN DOORS-CB	Piaggio spare parts (POP)
6B002267CB	MAIN FRAME WITH CABIN DOORS-CB	Piaggio spare parts (POP)
6B002345CO	MAIN FRAME WITH CABIN DOORS-CO	Piaggio spare parts (POP)
6B002267CO	MAIN FRAME WITH CABIN DOORS-CO	Piaggio spare parts (POP)
6B002345EG	MAIN FRAME WITH CABIN DOORS-EG	Piaggio spare parts (POP)
6B002267EG	MAIN FRAME WITH CABIN DOORS-EG	Piaggio spare parts (POP)
6B002345GY	MAIN FRAME WITH CABIN DOORS-GY	Piaggio spare parts (POP)
6B002267GY	MAIN FRAME WITH CABIN DOORS-GY	Piaggio spare parts (POP)
6B002345PA	MAIN FRAME WITH CABIN DOORS-PA	Piaggio spare parts (POP)

6B002267PA	MAIN FRAME WITH CABIN DOORS-PA	Piaggio spare parts (POP)
6B002267PB	MAIN FRAME WITH CABIN DOORS-PB	Piaggio spare parts (POP)
6B002345PB	MAIN FRAME WITH CABIN DOORS-PB	Piaggio spare parts (POP)
6B002345WR	MAIN FRAME WITH CABIN DOORS-WR	Piaggio spare parts (POP)
6B002267WR	MAIN FRAME WITH CABIN DOORS-WR	Piaggio spare parts (POP)
6B001306BW	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-BW	Piaggio spare parts (POP)
6B001306CB	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-CB	Piaggio spare parts (POP)
6B001306CO	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-CO	Piaggio spare parts (POP)
6B001306EG	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-EG	Piaggio spare parts (POP)
6B001306GY	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-GY	Piaggio spare parts (POP)
6B001306PA	MAIN FRAME WITH DOORS_LDX+_LPG HSRP-PA	Piaggio spare parts (POP)
6B001301BW	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-BW	Piaggio spare parts (POP)
6B001301CB	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-CB	Piaggio spare parts (POP)
6B001301CO	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-CO	Piaggio spare parts (POP)
6B001301EG	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-EG	Piaggio spare parts (POP)
6B001301GY	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-GY	Piaggio spare parts (POP)
6B001301PA	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-PA	Piaggio spare parts (POP)
6B001301PB	MAIN FRAME WITH DOORS_LDX_C/L W/ HSRP-PB	Piaggio spare parts (POP)
6B001584BL	MAIN FRAME WITH HSRP 501 DSL_BS6-BL	Piaggio spare parts (POP)
6B001584BW	MAIN FRAME WITH HSRP 501 DSL_BS6-BW	Piaggio spare parts (POP)
6B001584BY	MAIN FRAME WITH HSRP 501 DSL_BS6-BY	Piaggio spare parts (POP)
6B001584CB	MAIN FRAME WITH HSRP 501 DSL_BS6-CB	Piaggio spare parts (POP)
6B001584EG	MAIN FRAME WITH HSRP 501 DSL_BS6-EG	Piaggio spare parts (POP)
6B001584GY	MAIN FRAME WITH HSRP 501 DSL_BS6-GY	Piaggio spare parts (POP)
6B001584WR	MAIN FRAME WITH HSRP 501 DSL_BS6-WR	Piaggio spare parts (POP)
6B001974BW	MAIN FRAME WITH HSRP CITY + DSL BS6-BW	Piaggio spare parts (POP)
6B001974BY	MAIN FRAME WITH HSRP CITY + DSL BS6-BY	Piaggio spare parts (POP)
6B001974CB	MAIN FRAME WITH HSRP CITY + DSL BS6-CB	Piaggio spare parts (POP)
6B001974EG	MAIN FRAME WITH HSRP CITY + DSL BS6-EG	Piaggio spare parts (POP)
6B001974GY	MAIN FRAME WITH HSRP CITY + DSL BS6-GY	Piaggio spare parts (POP)
6B001974NB	MAIN FRAME WITH HSRP CITY + DSL BS6-NB	Piaggio spare parts (POP)
6B001974WR	MAIN FRAME WITH HSRP CITY + DSL BS6-WR	Piaggio spare parts (POP)
6B001749BW	MAIN FRAME WITH HSRP CITY + PTL BS6-BW	Piaggio spare parts (POP)
6B001749BY	MAIN FRAME WITH HSRP CITY + PTL BS6-BY	Piaggio spare parts (POP)
6B001749CB	MAIN FRAME WITH HSRP CITY + PTL BS6-CB	Piaggio spare parts (POP)
6B001749EG	MAIN FRAME WITH HSRP CITY + PTL BS6-EG	Piaggio spare parts (POP)
6B001749GY	MAIN FRAME WITH HSRP CITY + PTL BS6-GY	Piaggio spare parts (POP)
6B001749NB	MAIN FRAME WITH HSRP CITY + PTL BS6-NB	Piaggio spare parts (POP)
6B001773BL	MAIN FRAME WITH HSRP CITY+ BS6 BL	Piaggio spare parts (POP)
6B001773BW	MAIN FRAME WITH HSRP CITY+ C/L BS6-BW	Piaggio spare parts (POP)
6B001773BY	MAIN FRAME WITH HSRP CITY+ C/L BS6-BY	Piaggio spare parts (POP)
6B001773CB	MAIN FRAME WITH HSRP CITY+ C/L BS6-CB	Piaggio spare parts (POP)
6B001773EG	MAIN FRAME WITH HSRP CITY+ C/L BS6-EG	Piaggio spare parts (POP)
6B001773GY	MAIN FRAME WITH HSRP CITY+ C/L BS6-GY	Piaggio spare parts (POP)
6B001773NB	MAIN FRAME WITH HSRP CITY+ C/L BS6-NB	Piaggio spare parts (POP)
6B001621BL	MAIN FRAME WITH HSRP D+5 BS6-BL	Piaggio spare parts (POP)
6B001621BW	MAIN FRAME WITH HSRP D+5 BS6-BW	Piaggio spare parts (POP)

6B001621BY	MAIN FRAME WITH HSRP D+5 BS6-BY	Piaggio spare parts (POP)
6B001621CB	MAIN FRAME WITH HSRP D+5 BS6-CB	Piaggio spare parts (POP)
6B001621EG	MAIN FRAME WITH HSRP D+5 BS6-EG	Piaggio spare parts (POP)
6B001621GY	MAIN FRAME WITH HSRP D+5 BS6-GY	Piaggio spare parts (POP)
6B001621WR	MAIN FRAME WITH HSRP D+5 BS6-WR	Piaggio spare parts (POP)
6B002432BL	MAIN FRAME WITH HSRP D3S 230CC-BL	Piaggio spare parts (POP)
6B002432BW	MAIN FRAME WITH HSRP D3S 230CC-BW	Piaggio spare parts (POP)
6B002432BY	MAIN FRAME WITH HSRP D3S 230CC-BY	Piaggio spare parts (POP)
6B002432CB	MAIN FRAME WITH HSRP D3S 230CC-CB	Piaggio spare parts (POP)
6B002432EG	MAIN FRAME WITH HSRP D3S 230CC-EG	Piaggio spare parts (POP)
6B002432NB	MAIN FRAME WITH HSRP D3S 230CC-NB	Piaggio spare parts (POP)
6B002432WR	MAIN FRAME WITH HSRP D3S 230CC-WR	Piaggio spare parts (POP)
6B002333BL	MAIN FRAME WITH HSRP D3S 300CC PTL-BL	Piaggio spare parts (POP)
6B002333BW	MAIN FRAME WITH HSRP D3S 300CC PTL-BW	Piaggio spare parts (POP)
6B002333BY	MAIN FRAME WITH HSRP D3S 300CC PTL-BY	Piaggio spare parts (POP)
6B002333CB	MAIN FRAME WITH HSRP D3S 300CC PTL-CB	Piaggio spare parts (POP)
6B002333EG	MAIN FRAME WITH HSRP D3S 300CC PTL-EG	Piaggio spare parts (POP)
6B002333GY	MAIN FRAME WITH HSRP D3S 300CC PTL-GY	Piaggio spare parts (POP)
6B002333NB	MAIN FRAME WITH HSRP D3S 300CC PTL-NB	Piaggio spare parts (POP)
6B002333WR	MAIN FRAME WITH HSRP D3S 300CC PTL-WR	Piaggio spare parts (POP)
6B002329WR	MAIN FRAME WITH HSRP D5S 300CC LPG - WR	Piaggio spare parts (POP)
6B002329BL	MAIN FRAME WITH HSRP D5S 300CC LPG -BL	Piaggio spare parts (POP)
6B002329BW	MAIN FRAME WITH HSRP D5S 300CC LPG -BW	Piaggio spare parts (POP)
6B002329BY	MAIN FRAME WITH HSRP D5S 300CC LPG -BY	Piaggio spare parts (POP)
6B002329CB	MAIN FRAME WITH HSRP D5S 300CC LPG -CB	Piaggio spare parts (POP)
6B002329EG	MAIN FRAME WITH HSRP D5S 300CC LPG -EG	Piaggio spare parts (POP)
6B002329GY	MAIN FRAME WITH HSRP D5S 300CC LPG -GY	Piaggio spare parts (POP)
6B002329NB	MAIN FRAME WITH HSRP D5S 300CC LPG -NB	Piaggio spare parts (POP)
6B001276BW	MAIN FRAME WITH HSRP_C/L-BW	Piaggio spare parts (POP)
6B001276BY	MAIN FRAME WITH HSRP_C/L-BY	Piaggio spare parts (POP)
6B001276CB	MAIN FRAME WITH HSRP_C/L-CB	Piaggio spare parts (POP)
6B001276EG	MAIN FRAME WITH HSRP_C/L-EG	Piaggio spare parts (POP)
6B001276GY	MAIN FRAME WITH HSRP_C/L-GY	Piaggio spare parts (POP)
6B001276NB	MAIN FRAME WITH HSRP_C/L-NB	Piaggio spare parts (POP)
6B001454LB	MAIN FRAME WITH HSRP_EV-LB	Piaggio spare parts (POP)
6B001275BW	MAIN FRAME WITH HSRP_PTL-BW	Piaggio spare parts (POP)
6B001275BY	MAIN FRAME WITH HSRP_PTL-BY	Piaggio spare parts (POP)
6B001275CB	MAIN FRAME WITH HSRP_PTL-CB	Piaggio spare parts (POP)
6B001275EG	MAIN FRAME WITH HSRP_PTL-EG	Piaggio spare parts (POP)
6B001275GY	MAIN FRAME WITH HSRP_PTL-GY	Piaggio spare parts (POP)
6B001275NB	MAIN FRAME WITH HSRP_PTL-NB	Piaggio spare parts (POP)
6B002325BL	MAIN FRAME WITH HSRP-BL	Piaggio spare parts (POP)
6B002244BL	MAIN FRAME WITH HSRP-BL	Piaggio spare parts (POP)
6B002325BW	MAIN FRAME WITH HSRP-BW	Piaggio spare parts (POP)
6B002244BW	MAIN FRAME WITH HSRP-BW	Piaggio spare parts (POP)
6B002325BY	MAIN FRAME WITH HSRP-BY	Piaggio spare parts (POP)
6B002244BY	MAIN FRAME WITH HSRP-BY	Piaggio spare parts (POP)

6B002325CB	MAIN FRAME WITH HSRP-CB	Piaggio spare parts (POP)
6B002244CB	MAIN FRAME WITH HSRP-CB	Piaggio spare parts (POP)
6B002325EG	MAIN FRAME WITH HSRP-EG	Piaggio spare parts (POP)
6B002244EG	MAIN FRAME WITH HSRP-EG	Piaggio spare parts (POP)
6B002325GY	MAIN FRAME WITH HSRP-GY	Piaggio spare parts (POP)
6B002244GY	MAIN FRAME WITH HSRP-GY	Piaggio spare parts (POP)
6B002325NB	MAIN FRAME WITH HSRP-NB	Piaggio spare parts (POP)
6B002244NB	MAIN FRAME WITH HSRP-NB	Piaggio spare parts (POP)
6B002325WR	MAIN FRAME WITH HSRP-WR	Piaggio spare parts (POP)
6B002244WR	MAIN FRAME WITH HSRP-WR	Piaggio spare parts (POP)
6B002773BW	MAIN FRAME WITHOUT DOORS_LDX+_BW	Piaggio spare parts (POP)
6B002773CB	MAIN FRAME WITHOUT DOORS_LDX+_CB	Piaggio spare parts (POP)
6B002773CO	MAIN FRAME WITHOUT DOORS_LDX+_CO	Piaggio spare parts (POP)
6B002773EG	MAIN FRAME WITHOUT DOORS_LDX+_EG	Piaggio spare parts (POP)
6B002773GY	MAIN FRAME WITHOUT DOORS_LDX+_GY	Piaggio spare parts (POP)
6B002773PA	MAIN FRAME WITHOUT DOORS_LDX+_PA	Piaggio spare parts (POP)
6B002773PB	MAIN FRAME WITHOUT DOORS_LDX+_PB	Piaggio spare parts (POP)
6B002773WR	MAIN FRAME WITHOUT DOORS_LDX+_WR	Piaggio spare parts (POP)
1A010094	MAIN HOUSING	Piaggio spare parts (POP)
127109018P	MAIN HOUSING	Piaggio spare parts (POP)
127109018	MAIN HOUSING	Piaggio spare parts (POP)
1A015742	MAIN HOUSING	Piaggio spare parts (POP)
1A016604	MAIN HOUSING	Piaggio spare parts (POP)
B002596	MAIN HOUSING	Piaggio spare parts (POP)
1F000610	MAIN HOUSING	Piaggio spare parts (POP)
B024077	MAIN HOUSING -510	Piaggio spare parts (POP)
SP1F0006104	MAIN HOUSING PORTER 700 - SPD	Piaggio spare parts (POP)
SP1A015743	MAIN HOUSING WITH I.P._SPD	Piaggio spare parts (POP)
127101016	MAIN HSG.	Piaggio spare parts (POP)
B024386SP	MAIN HSG. SUB ASSLY. PORTER 600 - SPD	Piaggio spare parts (POP)
B024386	MAIN HSG. SUB. ASSLY.	Piaggio spare parts (POP)
127119013	MAIN HSG.(EXTERNAL MTG)	Piaggio spare parts (POP)
127119013P	MAIN HSG.(EXTERNAL MTG)	Piaggio spare parts (POP)
LG4126126	Main Jet NO.75	Piaggio spare parts (POP)
932321	Main Jet(LAM)	Piaggio spare parts (POP)
940040	MAIN LEAF - BNA RR SUSPENSION	Piaggio spare parts (POP)
03G160873	main shaft	Piaggio spare parts (POP)
127304010	MAIN SHAFT	Piaggio spare parts (POP)
127451019R	MAIN SHAFT	Piaggio spare parts (POP)
B002092	MAIN SHAFT	Piaggio spare parts (POP)
127451019	MAIN SHAFT (MODIFIED)	Piaggio spare parts (POP)
127304515	MAIN SHAFT (VE)	Piaggio spare parts (POP)
SST94200	Main shaft Ball Brg Installer	Piaggio spare parts (POP)
SST94198	Main shaft Ball Brg Removal Tool	Piaggio spare parts (POP)
SST94070	MAIN SHAFT DEPTH CHECKING TOOL	Piaggio spare parts (POP)
SST94186	Main Shaft Engine Side Cover NRB Install	Piaggio spare parts (POP)
SST94182	Main Shaft Engine Side Cover NRB Removal	Piaggio spare parts (POP)

441027	MAIN SHAFT NR BEARING PRESSING	Piaggio spare parts (POP)
62961	MAIN SPRING FOR LEVER	Piaggio spare parts (POP)
6D000061	MAIN WHs PORTER 1000 (LHD)	Piaggio spare parts (POP)
1D002104	Main wiring Harness	Piaggio spare parts (POP)
1D002301	Main Wiring Harness BSIV HT	Piaggio spare parts (POP)
6D001024	MAIN,WIRING HARNESS	Piaggio spare parts (POP)
B077692	MAIN_WHs _ CITY DLX _ CNG (NEUTRAL SW)	Piaggio spare parts (POP)
B077691	MAIN_WHs _ CITY DLX _ LPG (NEUTRAL SW)	Piaggio spare parts (POP)
B077685	MAIN_WHs _CITY DLX _PETROL (NEUTRAL SW)	Piaggio spare parts (POP)
ESP650DCR012	MAINBEARINGBUSH-STD	Piaggio spare parts (POP)
661448	MAINF FRAME ASSLY WITH I.P. (PASS)	Piaggio spare parts (POP)
661448ED	MAINF FRAME ASSLY WITH I.P. (PASS)(CED)	Piaggio spare parts (POP)
970300530	MAINSHAFT NRB EXTRACTOR	Piaggio spare parts (POP)
B003324	MAJOR KIT W/CYL.	Piaggio spare parts (POP)
B003328	MAJOR KIT W/CYL.	Piaggio spare parts (POP)
929903	MAJOR KIT W/C	Piaggio spare parts (POP)
925839	MAJOR KIT CALIPER	Piaggio spare parts (POP)
B073244	MAJOR KIT D-51 CALLIPER-FRONT BRAKE	Piaggio spare parts (POP)
B073284	MAJOR KIT FOR 6.5" BOOSTER	Piaggio spare parts (POP)
925694	MAJOR KIT FOR TMC	Piaggio spare parts (POP)
925698	MAJOR KIT FOR WHEEL CYLINDER RR	Piaggio spare parts (POP)
B077155	MAJOR KIT TMC	Piaggio spare parts (POP)
B042976	MAJOR KIT TMC	Piaggio spare parts (POP)
B042720	MAJOR KIT TMC	Piaggio spare parts (POP)
925508	MAJOR KIT TMC (KBX 1008)	Piaggio spare parts (POP)
925626	MAJOR KIT TMC (KBX PART CODE 574)	Piaggio spare parts (POP)
925517	MAJOR KIT WHEEL CYL.FRT (KBX1006)	Piaggio spare parts (POP)
925522	MAJOR KIT WHEEL CYLINDER REAR (KBX 1003)	Piaggio spare parts (POP)
B073250	MAJOR KIT WHEEL CYLINDER-D220 REAR BRAKE	Piaggio spare parts (POP)
925573	MAJOR KIT WHL CYL. RR (KBX 1109)(FOR 6	Piaggio spare parts (POP)
B003501	MALE BUTTON ASSLY (PLASTIC)	Piaggio spare parts (POP)
F002H301534	Mandrel	Piaggio spare parts (POP)
F002H301524	Mandrel	Piaggio spare parts (POP)
970300565	Mandrel for gear cover oil seal kobra	Piaggio spare parts (POP)
970300561	Mandrel for input shaft clutch support	Piaggio spare parts (POP)
970300551	Mandrel for lay shaft main side bearing	Piaggio spare parts (POP)
970300566	Mandrel for plug fitment fip cam shaft	Piaggio spare parts (POP)
970300567	Mandrel for rear oil seal of fly wheel	Piaggio spare parts (POP)
889215	MANIFOLD 1st-2nd SPEED	Piaggio spare parts (POP)
889222	MANIFOLD 3rd-4th-5th-R SPEED	Piaggio spare parts (POP)
B011131	MANIFOLD WITH I.P.	Piaggio spare parts (POP)
B008778	MANUFACTURER PLATE FOR APE TRUK BNA	Piaggio spare parts (POP)
B041229	MANUFACTURER PLATE FOR PORTER 600	Piaggio spare parts (POP)
642302	MAP SENSOR	Piaggio spare parts (POP)
L2535038	MASS CONTAINER WITH IP	Piaggio spare parts (POP)
614005	MAT FLOOR , LH	Piaggio spare parts (POP)
B077411	MAT FLOOR RH	Piaggio spare parts (POP)

614006	MAT FLOOR RH	Piaggio spare parts (POP)
LG6495074	MAX OIL PRES.PISTON	Piaggio spare parts (POP)
KD6495074	MAX OIL PRES.PISTON	Piaggio spare parts (POP)
E07500428	MAX. SPEED SETTING BOLT	Piaggio spare parts (POP)
LG5625025	MAX.PRESS.SPRING LGA280/340	Piaggio spare parts (POP)
940141	MAXI FUSE 20A Porter-1000 Ph-II	Piaggio spare parts (POP)
940145	MAXI FUSE 20A Porter-700	Piaggio spare parts (POP)
940142	MAXI FUSE 30A Porter-1000 Ph-II	Piaggio spare parts (POP)
940146	MAXI FUSE 30A Porter-700	Piaggio spare parts (POP)
940143	MAXI FUSE 60A Porter-1000 Ph-II	Piaggio spare parts (POP)
940147	MAXI FUSE 60A Porter-700	Piaggio spare parts (POP)
940144	MAXI FUSE 80A Porter-1000 Ph-II	Piaggio spare parts (POP)
940148	MAXI FUSE 80A Porter-700	Piaggio spare parts (POP)
CM166501	MAXIMUM DIFFUSER PIPE	Piaggio spare parts (POP)
1A016116	MAXIMUM JET	Piaggio spare parts (POP)
1A010088	MAXIMUM JET	Piaggio spare parts (POP)
CM166404	MAXIMUM JET	Piaggio spare parts (POP)
CM166401	MAXIMUM JET	Piaggio spare parts (POP)
CM167701	MAXIMUM JET	Piaggio spare parts (POP)
CM167706	MAXIMUM JET	Piaggio spare parts (POP)
CM167708	MAXIMUM JET	Piaggio spare parts (POP)
CM167704	MAXIMUM JET	Piaggio spare parts (POP)
659753	MEMBER SUB ASSY SEAT RISER CTR	Piaggio spare parts (POP)
D5823187Z01	MEMBER, FLOOR SIDE, RH	Piaggio spare parts (POP)
LG5498031	MEMBRANE	Piaggio spare parts (POP)
E87027145	METAL TUBE WATER OUTLET	Piaggio spare parts (POP)
97756	METALLIC PLAIN WASHER	Piaggio spare parts (POP)
L7625311	METALLIC PLAIN WASHER	Piaggio spare parts (POP)
13812	METALLIC PLAIN WASHER (808001026)	Piaggio spare parts (POP)
6173	METALLIC PLAIN WASHER (808001026)	Piaggio spare parts (POP)
ED42406	METALLIC PLAIN WASHER FOR M6	Piaggio spare parts (POP)
180859	METALLIC SPRING CLAMP	Piaggio spare parts (POP)
272836	METRICAL SCREW WITH CROSS MOULD.	Piaggio spare parts (POP)
920013	MF Valve Sealing O- Ring v-5404-170	Piaggio spare parts (POP)
929939	Microswitch-K-0101-04-313	Piaggio spare parts (POP)
B025720	MIDDLE BRACKET	Piaggio spare parts (POP)
B006761	MIDDLE CROSS PIPE HOOD FRAME	Piaggio spare parts (POP)
661487	MIDDLE CROSS PIPE HOOD FRAME	Piaggio spare parts (POP)
KD5202105	MIN MAX LEVER	Piaggio spare parts (POP)
KD3171526	Min. Max. Regulator	Piaggio spare parts (POP)
1D001138	MIN.PRESSURE OIL SWITCH N.C.	Piaggio spare parts (POP)
641541	MIN.PRESSURE OIL SWITCH N.C.	Piaggio spare parts (POP)
E9176028	MIN.SPEED SETTING BOLT	Piaggio spare parts (POP)
KD3171521	MIN/MAX GOVERNOR ASSEMBLY	Piaggio spare parts (POP)
B003102CO	MINI 441CHASSIS WITH OUT DOORS C ORG	Piaggio spare parts (POP)
1A010089	MINIMUM JET	Piaggio spare parts (POP)
CM166602	MINIMUM JET	Piaggio spare parts (POP)

CM166601	MINIMUM JET	Piaggio spare parts (POP)
929904	MINOR KIT W/C	Piaggio spare parts (POP)
B003325	MINOR KIT W/CYL.	Piaggio spare parts (POP)
925845	MINOR KIT CALIPER	Piaggio spare parts (POP)
B073245	MINOR KIT D-51 CALLIPER-FRONT BRAKE	Piaggio spare parts (POP)
B073285	MINOR KIT FOR 6.5" BOOSTER	Piaggio spare parts (POP)
925695	MINOR KIT FOR TMC	Piaggio spare parts (POP)
925699	MINOR KIT FOR WHEEL CYLINDER RR	Piaggio spare parts (POP)
B042977	MINOR KIT TMC	Piaggio spare parts (POP)
B042721	MINOR KIT TMC	Piaggio spare parts (POP)
B077156	MINOR KIT TMC	Piaggio spare parts (POP)
925509	MINOR KIT TMC (KBX 1009)	Piaggio spare parts (POP)
925627	MINOR KIT TMC (KBX PART CODE 575)	Piaggio spare parts (POP)
B009622	MINOR KIT TMC(ape mini)	Piaggio spare parts (POP)
925521	MINOR KIT WHEEL CYL. FRT (KBX 1007)	Piaggio spare parts (POP)
925523	MINOR KIT WHEEL CYLINDER REAR (KBX 1004)	Piaggio spare parts (POP)
B073251	MINOR KIT WHEEL CYLINDER-D220 REAR BRAKE	Piaggio spare parts (POP)
925574	MINOR KIT WHL CYL. RR (KBX 1110)(FOR 6	Piaggio spare parts (POP)
940093	Mirror (inner) assembly with mtg. stay	Piaggio spare parts (POP)
B003164R	MIRROR ASSY LH	Piaggio spare parts (POP)
D8794087Z01	MIRROR ASSY LH, OUTER RR VIEW	Piaggio spare parts (POP)
B003172R	MIRROR ASSY RH	Piaggio spare parts (POP)
D8791087Z01	MIRROR ASSY RH, OUTER RR VIEW	Piaggio spare parts (POP)
D8781087Z01	MIRROR ASSY, INNER RR VIE	Piaggio spare parts (POP)
11017902A	MIRROR HOUSING LH	Piaggio spare parts (POP)
11017902B	MIRROR HOUSING RH	Piaggio spare parts (POP)
B07076A	MIRROR TUBULAR FRAME LH	Piaggio spare parts (POP)
B07076B	MIRROR TUBULAR FRAME RH	Piaggio spare parts (POP)
929911	Mixer Assembly	Piaggio spare parts (POP)
B009017	MIXER ASSEMBLY (VANAZ PT. NO. K-0158-01)	Piaggio spare parts (POP)
920076	Mixer assembly BSIII LPG (K-0435-01)	Piaggio spare parts (POP)
932244	Mixer Assembly(K-0180-01)Paxx200	Piaggio spare parts (POP)
643860	MIXER ASSEMBLY(VANAZ PT NO K-0122-23)	Piaggio spare parts (POP)
B078353	MIXER ASSEMBLY-CNG	Piaggio spare parts (POP)
B076435	MIXER ASSEMBLY-CNG	Piaggio spare parts (POP)
B024165	MIXER ASSEMBLY-CNG	Piaggio spare parts (POP)
B078639	MIXER ASSEMBLY-LPG	Piaggio spare parts (POP)
B076437	MIXER ASSEMBLY-LPG	Piaggio spare parts (POP)
B024164	MIXER ASSEMBLY-LPG	Piaggio spare parts (POP)
6A000427	MIXER ASSLY LPG.	Piaggio spare parts (POP)
643870	MIXER ASSY(VANAZ PT NO K-0415-08)	Piaggio spare parts (POP)
B009122	MIXER ASSY(VANAZ PT NO K-0435-01)	Piaggio spare parts (POP)
932266	Mixer assy.(K-0442-01) Paxx 200 LPG	Piaggio spare parts (POP)
LG3362037	Mixer Unit	Piaggio spare parts (POP)
E40016463	MIXING CAP ASSY.	Piaggio spare parts (POP)
LG2710087	Mixing Chamber Cover Assly.	Piaggio spare parts (POP)
LG9850157	Mixture Controller	Piaggio spare parts (POP)

L47756280	MLS HEAD GASKET KIT(1.5MM)	Piaggio spare parts (POP)
L47756290	MLS HEAD GASKET KIT(1.65MM)	Piaggio spare parts (POP)
L47756300	MLS HEAD GASKET KIT(1.80MM)	Piaggio spare parts (POP)
645153R	MOBILE CHARGER SOCKET	Piaggio spare parts (POP)
645153	MOBILE CHARGER W/O LAMP	Piaggio spare parts (POP)
B001695	MOBILE CHARGER WITH FLAP	Piaggio spare parts (POP)
B074905	MOBILE CHARGER WITH FLAP(UPGRADE)	Piaggio spare parts (POP)
SST94139	MOBILE VAN SERVICE SCHEDULE POSTER	Piaggio spare parts (POP)
KIT95033	Modi. Front Brake liners Kit (Paxx-200).	Piaggio spare parts (POP)
KIT96033R	Modified Ball KIT for 3Wh	Piaggio spare parts (POP)
LG2165131	MODIFIED INNER BELT GUARD	Piaggio spare parts (POP)
E400051135	MODIFIED R.C.LEVER	Piaggio spare parts (POP)
644305	MODULE COOLING	Piaggio spare parts (POP)
6A001525	MODULE LOCK PART	Piaggio spare parts (POP)
KD5600042	MOLLA/SPRING	Piaggio spare parts (POP)
KD5801582	MOLLA/SPRING	Piaggio spare parts (POP)
KD5625023	MOLLA/SPRING	Piaggio spare parts (POP)
A185020020	MOLY GREASE (CASTROL)	Piaggio spare parts (POP)
CM300903	MOT. 300 4T/2V BSVI APÈ AUTO 501 D+3 CNG	Piaggio spare parts (POP)
D8512087Z01	MOTOR & BRACKET ASSY, WIP	Piaggio spare parts (POP)
645047	MOTOR AND BRACKET ASSY WIPER	Piaggio spare parts (POP)
B075926	MOTOR AND BRACKET ASSY WIPER	Piaggio spare parts (POP)
B076132	MOTOR AND LINKAGE ASSY.	Piaggio spare parts (POP)
6D000455	MOTOR ASSEMBLY	Piaggio spare parts (POP)
6D000884	MOTOR ASSLY CABLE "U" 600mm	Piaggio spare parts (POP)
6D000885	MOTOR ASSLY CABLE "V" 560mm	Piaggio spare parts (POP)
6D000886	MOTOR ASSLY CABLE "W" 530mm	Piaggio spare parts (POP)
L4990195	MOTOR GEAR	Piaggio spare parts (POP)
L4990201	MOTOR GEAR	Piaggio spare parts (POP)
L4990200	MOTOR GEAR	Piaggio spare parts (POP)
894873	Motorcycle Cover	Piaggio spare parts (POP)
925673	MOTOR-WASHER TANK	Piaggio spare parts (POP)
D7555187Z03	MOULDING, ROOF DRIP S.FIN	Piaggio spare parts (POP)
E07518640	Mounting bracket	Piaggio spare parts (POP)
E870106110	MOUNTING BRACKET FORK	Piaggio spare parts (POP)
03G161812	mounting bracketmachining	Piaggio spare parts (POP)
ESP650DFP013	MOUNTING FLANGE-FIP	Piaggio spare parts (POP)
A01M120002	MOUNTING FLANGE-FIP	Piaggio spare parts (POP)
929937	Mounting Plate-K-0101-04-290	Piaggio spare parts (POP)
568103	MTG. BKT ONE WAY FUSE HOLDER	Piaggio spare parts (POP)
B073490	MTG. STUD FOR PLASTIC COVER	Piaggio spare parts (POP)
B006246	MUD FLAP	Piaggio spare parts (POP)
116103	MUD FLAP	Piaggio spare parts (POP)
B041054	MUD FLAP APE CITY	Piaggio spare parts (POP)
6A001599	MUD FLAP FOR RADIATOR GUARD	Piaggio spare parts (POP)
142424	MUDFLAP FOR REAR MUDGUARD	Piaggio spare parts (POP)
B001789	MUDFLAP MUDGUARD REAR	Piaggio spare parts (POP)

616603	MUDGUARD	Piaggio spare parts (POP)
B001725	MUDGUARD ASSLY REAR	Piaggio spare parts (POP)
B001725ED	MUDGUARD ASSLY REAR	Piaggio spare parts (POP)
B001730	MUDGUARD INNER REAR	Piaggio spare parts (POP)
B001730ED	MUDGUARD INNER REAR	Piaggio spare parts (POP)
B079012	MUDGUARD MTG. BRKT REAR S/A	Piaggio spare parts (POP)
B008210	MUDGUARD REAR	Piaggio spare parts (POP)
6B001812	MUDGUARD REAR LH	Piaggio spare parts (POP)
B073852	MUDGUARD REAR LH	Piaggio spare parts (POP)
6B001837	MUDGUARD REAR RH	Piaggio spare parts (POP)
B073853	MUDGUARD REAR RH	Piaggio spare parts (POP)
613872	MUDGUARD RR RH	Piaggio spare parts (POP)
612304	MUDGUARD RR, LH	Piaggio spare parts (POP)
D7662187Z01	MUDGUARD, FR FENDER	Piaggio spare parts (POP)
6C000519	MUFF CUP	Piaggio spare parts (POP)
6C000580	MUFF CUP	Piaggio spare parts (POP)
6C000175	MUFF CUP	Piaggio spare parts (POP)
E40027779	MUFFLER ASSEMBLY	Piaggio spare parts (POP)
B007310	MUFFLER ASSY	Piaggio spare parts (POP)
E40027730	MUFFLER ASSY WITH BRACKET G400WG	Piaggio spare parts (POP)
B074792	MUFFLER ASSY WITH MTG. BRACKETS	Piaggio spare parts (POP)
LG54606278	MUFFLER FOR LGA280 APE IND P1	Piaggio spare parts (POP)
1A012674	Muffler/Head gasket	Piaggio spare parts (POP)
6A000158	MULTI FUNCTION VALVE, 20.6LTR LPG CYL.	Piaggio spare parts (POP)
B075426	MULTIFUNCTION VALVE VANAZ	Piaggio spare parts (POP)
B073083	MULTIFUNCTION VALVE VANAZ	Piaggio spare parts (POP)
643866	MULTIFUNCTION VALVE(VANAZ PT NO V-5406)	Piaggio spare parts (POP)
L4990245	MULTIPLE GEAR	Piaggio spare parts (POP)
L4990196	MULTIPLE GEAR	Piaggio spare parts (POP)
L4990248	MULTIPLE GEAR	Piaggio spare parts (POP)
L4990228	MULTIPLE GEAR 5 SPEED	Piaggio spare parts (POP)
L4990236	MULTIPLE GEAR-MODIFIED	Piaggio spare parts (POP)
12546	MULTITOOTH LOCK WASHER M5 (827000540)	Piaggio spare parts (POP)
587969	NAME PLATE APE AUTO 3 D S	Piaggio spare parts (POP)
587968	NAME PLATE APE CARGO D 600	Piaggio spare parts (POP)
KD2375001	NAME PLATE SCREW	Piaggio spare parts (POP)
LG2375001	NAME PLATE SCREW	Piaggio spare parts (POP)
E90303028	NEEDLE BEARING	Piaggio spare parts (POP)
F002G20777	Needle Bearing	Piaggio spare parts (POP)
E87012227	NEEDLE BEARING (HK121812)	Piaggio spare parts (POP)
1A013352	NEEDLE BEARING 30x37x12	Piaggio spare parts (POP)
125289	NEEDLE BEARING -CRANK CASE, FRONT WHEEL	Piaggio spare parts (POP)
L1585264	NEEDLE BEARING DL 2016	Piaggio spare parts (POP)
LG3030028	NEEDLE BEARING DL 2820	Piaggio spare parts (POP)
KD3030028	NEEDLE BEARING DL 2820	Piaggio spare parts (POP)
SST94173	Needle bearing fitting tool for PTO cove	Piaggio spare parts (POP)
L1585222	NEEDLE BUSH HK 2016	Piaggio spare parts (POP)

889297	NEEDLE CAGE	Piaggio spare parts (POP)
889296	NEEDLE CAGE	Piaggio spare parts (POP)
1A001534	NEEDLE JET	Piaggio spare parts (POP)
B017541	NEEDLE JET	Piaggio spare parts (POP)
B019344	NEEDLE JET	Piaggio spare parts (POP)
1A010023	NEEDLE JET	Piaggio spare parts (POP)
E40006453	NEEDLE JET ASSY	Piaggio spare parts (POP)
E40006452	NEEDLE JET ASSY	Piaggio spare parts (POP)
1A010024	NEEDLE JET HOLDER	Piaggio spare parts (POP)
LG7996015	Needle Jet Type 262	Piaggio spare parts (POP)
E40006456	NEEDLE JET WASHER	Piaggio spare parts (POP)
932320	Needle Jet(LAM)	Piaggio spare parts (POP)
KD7770277	NEEDLE ROLLER 3X6 DIN5402	Piaggio spare parts (POP)
661282	NEEDLE ROLLER BEARING	Piaggio spare parts (POP)
F002G20576	NEEDLE ROLLER BEARING	Piaggio spare parts (POP)
1000917007	NEEDLE ROLLER BEARING	Piaggio spare parts (POP)
E40006457	NEEDLE VALVE ASSY	Piaggio spare parts (POP)
L1425214	NEEDLES BEARING HK 1512 Ina	Piaggio spare parts (POP)
930101017	NEPTUNE BLUE TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
E87008862	Net strainer(19mm Oil pan)	Piaggio spare parts (POP)
B074440	NEUTRAL GEAR SWITCH_UPGRADED	Piaggio spare parts (POP)
1A010016	NEUTRAL SWITCH	Piaggio spare parts (POP)
134110	NIPPLE	Piaggio spare parts (POP)
ED41972	Nipple	Piaggio spare parts (POP)
LG5953048	NIPPLE	Piaggio spare parts (POP)
03G160818	nipple crossgate selector mechanism	Piaggio spare parts (POP)
03G160871	nipple gear cable connection	Piaggio spare parts (POP)
940203	No Entry Bar – ape city 200 SS	Piaggio spare parts (POP)
940150	No Entry Bar – ape' city 200	Piaggio spare parts (POP)
LG2569746	NO-ANTIPH. AIR SHRO. GREY P.L.	Piaggio spare parts (POP)
1A004224	NON METAL WASHER	Piaggio spare parts (POP)
632858	NORMA TYPE CLAMP - 11 MM	Piaggio spare parts (POP)
21108	NORMAL HEXAGONAL NUT	Piaggio spare parts (POP)
L3240175	NORMAL HEXAGONAL NUT M 5	Piaggio spare parts (POP)
L3240176	NORMAL HEXAGONAL NUT M 8	Piaggio spare parts (POP)
SST94044	NOSE_TC	Piaggio spare parts (POP)
6C000039	NOT FLEXIBLE PIPE	Piaggio spare parts (POP)
2433314053	NOZZEL CAP NUT	Piaggio spare parts (POP)
660195	NOZZLE	Piaggio spare parts (POP)
KD6531643	Nozzle	Piaggio spare parts (POP)
F002C40521	NOZZLE	Piaggio spare parts (POP)
661833	NOZZLE & HOSE ASSY, FR WASHER	Piaggio spare parts (POP)
D8538087Z01	NOZZLE & HOSE ASSY, FR, WASHER	Piaggio spare parts (POP)
661924	NOZZLE (VANAZ P.NO.K-0101-13-010)	Piaggio spare parts (POP)
661822	NOZZLE (VANAZ PT.NO.K-0415-210)	Piaggio spare parts (POP)
F002C40562	NOZZLE ? BS-2	Piaggio spare parts (POP)
F002C8Z209	NOZZLE AND HOLDER ASSY	Piaggio spare parts (POP)

F002C8Z854	NOZZLE AND HOLDER ASSY	Piaggio spare parts (POP)
2433314182	NOZZLE RETAINING NUT	Piaggio spare parts (POP)
L4990214	NQPE PIAGGIO (CROWN WHEEL)	Piaggio spare parts (POP)
L4990216	NQPE PIAGGIO (CROWN WHEEL)	Piaggio spare parts (POP)
SST94175	NRB removal tool PTO Cover side	Piaggio spare parts (POP)
AP8127098	NUMBER PLATE LIGHT	Piaggio spare parts (POP)
B075977	NUMBER PLATE- REAR	Piaggio spare parts (POP)
662009	NUMBER PLATE- REAR	Piaggio spare parts (POP)
662235	NUMBER PLATE-FRONT	Piaggio spare parts (POP)
E105324008	NUT	Piaggio spare parts (POP)
E225324004	NUT	Piaggio spare parts (POP)
709052	Nut	Piaggio spare parts (POP)
D9411040600	NUT	Piaggio spare parts (POP)
KD32030768	NUT	Piaggio spare parts (POP)
E93240076	NUT	Piaggio spare parts (POP)
E1324010	NUT	Piaggio spare parts (POP)
LG3300274	Nut	Piaggio spare parts (POP)
D9004179059	NUT	Piaggio spare parts (POP)
D9412040800	NUT	Piaggio spare parts (POP)
261322	NUT	Piaggio spare parts (POP)
615769	NUT	Piaggio spare parts (POP)
E45324016	NUT	Piaggio spare parts (POP)
E308324009	NUT	Piaggio spare parts (POP)
LG3240164	NUT	Piaggio spare parts (POP)
E271324017	Nut	Piaggio spare parts (POP)
E9324018	NUT	Piaggio spare parts (POP)
E500324066	NUT	Piaggio spare parts (POP)
ESP650DNB034	NUT	Piaggio spare parts (POP)
D9411571200	NUT	Piaggio spare parts (POP)
L3300250	NUT	Piaggio spare parts (POP)
612825	NUT	Piaggio spare parts (POP)
D9004179081	NUT	Piaggio spare parts (POP)
D9411551200	NUT	Piaggio spare parts (POP)
261323	NUT	Piaggio spare parts (POP)
D9411541200	NUT	Piaggio spare parts (POP)
D9004179052	NUT	Piaggio spare parts (POP)
D9411040800	NUT	Piaggio spare parts (POP)
434078	NUT	Piaggio spare parts (POP)
ED41572	Nut	Piaggio spare parts (POP)
261319	NUT	Piaggio spare parts (POP)
615669	NUT	Piaggio spare parts (POP)
L3300247	NUT	Piaggio spare parts (POP)
D9004179075	NUT	Piaggio spare parts (POP)
261317	NUT	Piaggio spare parts (POP)
261318	NUT	Piaggio spare parts (POP)
KD3240009	Nut	Piaggio spare parts (POP)
1A017117	NUT	Piaggio spare parts (POP)

264878	NUT	Piaggio spare parts (POP)
604782	NUT	Piaggio spare parts (POP)
L3300253	NUT	Piaggio spare parts (POP)
L3300248	NUT	Piaggio spare parts (POP)
E87000232	NUT (CYLINDER	Piaggio spare parts (POP)
272176	Nut (stand)	Piaggio spare parts (POP)
B016869	NUT AND CABLE ADJUSTER	Piaggio spare parts (POP)
D9004171003	NUT CASTLE	Piaggio spare parts (POP)
15330	Nut for handlebar securing bolt-M10;H10	Piaggio spare parts (POP)
829232	Nut for securing front pulley assy.	Piaggio spare parts (POP)
ED41468	Nut injector	Piaggio spare parts (POP)
L3240033	NUT M10 X 1,5-UNI.5588-8S+ZN.B	Piaggio spare parts (POP)
E500324058	NUT M10X1.5	Piaggio spare parts (POP)
LG3300270	NUT M14X1 H.6 HEX.17	Piaggio spare parts (POP)
74521	NUT M14X1.5	Piaggio spare parts (POP)
E25324003	NUT M4X0.7	Piaggio spare parts (POP)
AP8150430	NUT M6 -UNI 7474-INOX A2-70	Piaggio spare parts (POP)
E10B140002	NUT M6_ Sogefi	Piaggio spare parts (POP)
LG3240008	NUT M6-Cl.8 (type 1-ISO	Piaggio spare parts (POP)
KD3240008	NUT M6-Cl.8 (type 1-ISO 4032)	Piaggio spare parts (POP)
E9324073	NUT M6X1	Piaggio spare parts (POP)
E31B060001	NUT M7X0.75	Piaggio spare parts (POP)
ESP650DNB018	NUT M7X0.75	Piaggio spare parts (POP)
E50000225	NUT M8*1.25*6(SS)	Piaggio spare parts (POP)
136426	NUT WITH COLLAR	Piaggio spare parts (POP)
659842	NUT WITH CONICAL WASHER M8 X 1.25 P	Piaggio spare parts (POP)
108213	NUT WITH SEAT	Piaggio spare parts (POP)
436783	NUT WITH SPRING WASHER	Piaggio spare parts (POP)
1A006988	NUT WITH SPRING WASHER	Piaggio spare parts (POP)
D9004170014	NUT, HEXAGON	Piaggio spare parts (POP)
D8516887Z01	NUT, HEXAGON	Piaggio spare parts (POP)
D9004170277	NUT, HEXAGON	Piaggio spare parts (POP)
D9004178002	NUT, LOCK	Piaggio spare parts (POP)
D9418401401	NUT, LOCK	Piaggio spare parts (POP)
D9004178043	NUT, LOCK	Piaggio spare parts (POP)
B074098	NUT, SELF-LOCKING M5 (SS)	Piaggio spare parts (POP)
D9004174001	NUT, WELD	Piaggio spare parts (POP)
D9004174003	NUT, WELD	Piaggio spare parts (POP)
D9422000800	NUT, WELD	Piaggio spare parts (POP)
D8516887Z02	NUT,HEXAGON	Piaggio spare parts (POP)
ESP650DNB021	NUT-CYLINDER HEAD M12x1.5	Piaggio spare parts (POP)
662426	NUT-GLASS FRONT DOOR.	Piaggio spare parts (POP)
01B070004	NutM6 (Grade 8)	Piaggio spare parts (POP)
6B002853	NXT FRONT STICKER	Piaggio spare parts (POP)
6B002854	NXT REAR STICKER	Piaggio spare parts (POP)
6B002852	NXT SIDE PANEL STICKER LH	Piaggio spare parts (POP)
6B002851	NXT SIDE PANEL STICKER RH	Piaggio spare parts (POP)

6B002978	NXT+ FRONT DECAL	Piaggio spare parts (POP)
6B002979	NXT+ LH SIDE WALL DECAL	Piaggio spare parts (POP)
6B002981	NXT+ REAR DECAL	Piaggio spare parts (POP)
6B002980	NXT+ RH SIDE WALL DECAL	Piaggio spare parts (POP)
15235	NYLOC NUT M10 (161157015)	Piaggio spare parts (POP)
B002790	NYLOC NUT M10X1.5 (30 04 004 5)	Piaggio spare parts (POP)
12136	NYLOC NUT M5 (802000525)	Piaggio spare parts (POP)
12138	NYLOC NUT M6	Piaggio spare parts (POP)
2438	NYLOC NUT M8(802000824)	Piaggio spare parts (POP)
568095	NYLOC NUT(EX-6844)	Piaggio spare parts (POP)
940017	Nylock Nut(truk plus)	Piaggio spare parts (POP)
03G160842	nylon sliding block	Piaggio spare parts (POP)
632191	O - RING	Piaggio spare parts (POP)
A01S090001	O - RING FOR OIL PICK UP ASSY	Piaggio spare parts (POP)
6707	O RING	Piaggio spare parts (POP)
E52006205	O RING	Piaggio spare parts (POP)
E268120034	O RING	Piaggio spare parts (POP)
E40006455	O RING	Piaggio spare parts (POP)
E91200087	O RING	Piaggio spare parts (POP)
E9041202013	O RING	Piaggio spare parts (POP)
E9120243	O RING	Piaggio spare parts (POP)
A01S100001	O RING	Piaggio spare parts (POP)
E260120016	O RING	Piaggio spare parts (POP)
E91200082	O RING	Piaggio spare parts (POP)
KD1200052	O RING	Piaggio spare parts (POP)
E904120213	O RING	Piaggio spare parts (POP)
F002H24798	O Ring	Piaggio spare parts (POP)
L1200368	O RING	Piaggio spare parts (POP)
L1200327	O RING	Piaggio spare parts (POP)
1410210017	O RING	Piaggio spare parts (POP)
925806	O RING	Piaggio spare parts (POP)
ED42501	O RING	Piaggio spare parts (POP)
LG1200406	O' Ring	Piaggio spare parts (POP)
LG1200408	O' Ring	Piaggio spare parts (POP)
LG1200405	O' Ring	Piaggio spare parts (POP)
L1200348	O' RING	Piaggio spare parts (POP)
LG1200407	O' Ring	Piaggio spare parts (POP)
L1200355	O' RING	Piaggio spare parts (POP)
6733	O- RING	Piaggio spare parts (POP)
14034	O- RING	Piaggio spare parts (POP)
1A005176	O- RING	Piaggio spare parts (POP)
1A005178	O- RING	Piaggio spare parts (POP)
B019220	O- RING	Piaggio spare parts (POP)
825420215	O RING - COVER PLATE	Piaggio spare parts (POP)
E87106222	O' RING - ID	Piaggio spare parts (POP)
SM26240011	o' Ring - Yoke	Piaggio spare parts (POP)
E5401213143	O RING (ALT.PT.NO. E50001212143)	Piaggio spare parts (POP)

932275	O' Ring (K-0102-19-020) Paxx 200	Piaggio spare parts (POP)
825120308	O- RING (PLUNGER SHAFT)	Piaggio spare parts (POP)
932265	O Ring (R-8101-760) Paxx 200 LPG	Piaggio spare parts (POP)
920045	O Ring (R-8105-170)	Piaggio spare parts (POP)
920047	O Ring (R-8105-610)	Piaggio spare parts (POP)
825090204	O- RING (SECTOR PLATE ASSLY COMP)	Piaggio spare parts (POP)
825080209	O- RING (SECTOR PLATE ASSLY)	Piaggio spare parts (POP)
L1200333	O RING 10,77 X 2,68	Piaggio spare parts (POP)
L1200332	O RING 129,77 X 3,53	Piaggio spare parts (POP)
L1200349	O RING 2.62X39.34 VITON	Piaggio spare parts (POP)
LG1200398	O ring 2025	Piaggio spare parts (POP)
L12000870	O RING 34,60 X 2,62	Piaggio spare parts (POP)
L1200336	O RING 34,60 X 2,62	Piaggio spare parts (POP)
L1200331	O RING 41,5 X 1	Piaggio spare parts (POP)
L1200334	O RING 78,97 X 3,53	Piaggio spare parts (POP)
825123207	O- RING CLUTCH COVER	Piaggio spare parts (POP)
LG1200293	O RING D23.1/17.86 2.62 THK	Piaggio spare parts (POP)
LG1200369	O RING D60.43/56.87 1.78 THK	Piaggio spare parts (POP)
KD1200376	O RING D79.46/75.9 1.78 THK	Piaggio spare parts (POP)
LG1200376	O RING D79.46/75.9 1.78 THK	Piaggio spare parts (POP)
LG1200381	O RING D92.18/88.62 1.78 THK	Piaggio spare parts (POP)
LG1202036	O RING DIA61 SILICON RUB	Piaggio spare parts (POP)
E40006223	O Ring For Air Filter	Piaggio spare parts (POP)
A01S110001	O RING FOR ROCKER COVER	Piaggio spare parts (POP)
L4775603	O ring Gasket circular section	Piaggio spare parts (POP)
632427	O RING HOUSING (ENGINETECH AIR FILTER)	Piaggio spare parts (POP)
E40006215	O' RING INSULATOR	Piaggio spare parts (POP)
03G162002	'O' RING KIT	Piaggio spare parts (POP)
KIT95003	O RING SET	Piaggio spare parts (POP)
KIT95003R	O RING SET	Piaggio spare parts (POP)
E40006217	O- RING WATER PUMP CASING	Piaggio spare parts (POP)
932235	O RING(K-0101-04-140)Paxx200	Piaggio spare parts (POP)
932238	O RING(K-0101-04-200)Paxx200	Piaggio spare parts (POP)
932240	O RING(K-0101-04-350)Paxx200	Piaggio spare parts (POP)
932242	O RING(K-0102-02-370)Paxx200	Piaggio spare parts (POP)
932223	O RING(R-8101-760)Paxx200	Piaggio spare parts (POP)
932231	O RING(R-8106-780)Paxx200	Piaggio spare parts (POP)
940051	O RING_BNA AIR FILTER ASSY	Piaggio spare parts (POP)
E50001213143	O RING-LUB. OIL FILTER	Piaggio spare parts (POP)
F002G20319	O.R.C. DRIVE	Piaggio spare parts (POP)
F002G20870	O.R.C.DRIVE	Piaggio spare parts (POP)
1006209602	O.R.C.DRIVE	Piaggio spare parts (POP)
E40006213	O' RING	Piaggio spare parts (POP)
940184	OBD II Pigtail Connector	Piaggio spare parts (POP)
B073380	OC SPRING_FRONT SHOCK ABSORBER (GABRIEL)	Piaggio spare parts (POP)
569050	ODOMETER CONTROL CABLE	Piaggio spare parts (POP)
611887	ODOMETER CONTROL CABLE NO.1 (ENGINE-SPLI	Piaggio spare parts (POP)

611888	ODOMETER CONTROL CABLE NO.2 (SPLITER - I	Piaggio spare parts (POP)
616762	ODOMETER- FAREMETER SPLITTER	Piaggio spare parts (POP)
LG4601202	OHC COVER GASKET	Piaggio spare parts (POP)
LG4601215	OHC COVER GASKET	Piaggio spare parts (POP)
B011394	OIL FILTER CAP	Piaggio spare parts (POP)
LG9580094	OIL BREATHER PIPE LGA280	Piaggio spare parts (POP)
B018401	OIL BULKHEAD	Piaggio spare parts (POP)
KD2175279	OIL CARTRID. SERIGRAPHY KOHLER	Piaggio spare parts (POP)
82960R	OIL CARTRIDGE FILTER	Piaggio spare parts (POP)
B018434	OIL CONTROL RING Ø62.6x1	Piaggio spare parts (POP)
B018435	OIL CONTROL RING Ø62.6x2.5	Piaggio spare parts (POP)
ED23593	OIL COOLER	Piaggio spare parts (POP)
E40020638	OIL COOLER BRACKET	Piaggio spare parts (POP)
LG7350390	OIL COOLER LGA	Piaggio spare parts (POP)
LG9485383	Oil Cooler Pipe (Bigger)	Piaggio spare parts (POP)
LG9485382	Oil Cooler Pipe (small)	Piaggio spare parts (POP)
LG6645717	OIL CUP LGA 280-340 FL	Piaggio spare parts (POP)
127911019	OIL DEFLECTOR (CLUTCH)	Piaggio spare parts (POP)
1F000634	OIL DEVIAT.UNIT	Piaggio spare parts (POP)
B016473	OIL DIPSTICK	Piaggio spare parts (POP)
889879	OIL DIPSTICK	Piaggio spare parts (POP)
B016472	oil dipstick complete	Piaggio spare parts (POP)
1A007047	OIL DIPSTICK COMPLETE	Piaggio spare parts (POP)
L1400523	OIL DIPSTICK WITH I.P. LOMB.	Piaggio spare parts (POP)
1A019526	OIL DIPSTICK WITH PLUG	Piaggio spare parts (POP)
1A017851	OIL DIPSTICK WITH PLUG	Piaggio spare parts (POP)
1A020550	OIL DIPSTICK WITH PLUG	Piaggio spare parts (POP)
1A014592	OIL DIPSTICK WITH PLUG	Piaggio spare parts (POP)
1F000605	OIL DRAIN FITTING	Piaggio spare parts (POP)
B011844	OIL DRAIN HOSE	Piaggio spare parts (POP)
LG9040029	OIL DRAIN MAGNETIC PLUG	Piaggio spare parts (POP)
KD9040029	OIL DRAIN MAGNETIC PLUG	Piaggio spare parts (POP)
KD9040047	OIL DRAIN MAGNETIC PLUG	Piaggio spare parts (POP)
LG9040047	OIL DRAIN MAGNETIC PLUG	Piaggio spare parts (POP)
1F000420	OIL DRAIN PIPE FROM SEPARATOR	Piaggio spare parts (POP)
LG9040025	OIL DRAIN PLUG	Piaggio spare parts (POP)
B010943	OIL DRAIN PLUG	Piaggio spare parts (POP)
974121	OIL DRAIN PLUG	Piaggio spare parts (POP)
1F000718	OIL DRAIN PLUG	Piaggio spare parts (POP)
KD9040012	OIL DRAIN PLUG M14	Piaggio spare parts (POP)
KD9040042	OIL DRAIN PLUG M14X1.5	Piaggio spare parts (POP)
KD90400500	OIL DRAIN PLUG M14X1.5	Piaggio spare parts (POP)
A01A090017	OIL DRAIN PLUG WITH WASHER	Piaggio spare parts (POP)
KD90321308	OIL FILLING CUP HPDC	Piaggio spare parts (POP)
E40002407	OIL FILLING PLUG	Piaggio spare parts (POP)
E43524009	OIL FILLING PLUG WITH O RING BSIV	Piaggio spare parts (POP)
B017540	OIL FILTER	Piaggio spare parts (POP)

1F000847	OIL FILTER	Piaggio spare parts (POP)
KD2175283	Oil Filter	Piaggio spare parts (POP)
857187	OIL FILTER - RSV 4 / TUONO V4	Piaggio spare parts (POP)
KD2175218	Oil Filter [new-smaller size]	Piaggio spare parts (POP)
B010593	OIL FILTER ADAPTOR	Piaggio spare parts (POP)
L2175213	OIL FILTER CARTRIDGE	Piaggio spare parts (POP)
889127	OIL FILTER COMPLETE	Piaggio spare parts (POP)
604779	CLUTCH CONTROL TRANSMISSION ASSLY.	Piaggio spare parts (POP)
ED42244	OIL FILTER ELEMENT (SPIN ON TYPE)	Piaggio spare parts (POP)
L1901178	OIL FILTER FITTING	Piaggio spare parts (POP)
LG5090031	OIL FILTER FOR OIL CUP	Piaggio spare parts (POP)
B011460	OIL FILTER GASKET	Piaggio spare parts (POP)
LG175A104	OIL FILTER LGA 280	Piaggio spare parts (POP)
E5409032088	OIL FILTER PLUG	Piaggio spare parts (POP)
ED42011	OIL FILTER PLUG	Piaggio spare parts (POP)
03G161207	OIL FILTER PLUG	Piaggio spare parts (POP)
B015598	OIL FILTER PLUG	Piaggio spare parts (POP)
KD59530958	OIL FILTER PLUG 15LD401	Piaggio spare parts (POP)
E10M110005	OIL FILTER PLUG BSIV	Piaggio spare parts (POP)
441033	OIL FILTER PRMOVAL & FITMENT TOOL	Piaggio spare parts (POP)
1A001283	OIL FILTER PROTECTION	Piaggio spare parts (POP)
SST94178	Oil Filter Removal Tool	Piaggio spare parts (POP)
B016856	OIL FILTER SCREW	Piaggio spare parts (POP)
1A009762	OIL FILTER SCREW	Piaggio spare parts (POP)
AP8140149	Oil Filter tool	Piaggio spare parts (POP)
E50010182	OIL FILTER WITH O RING	Piaggio spare parts (POP)
112898	OIL LEVEL ARM WITH PLUG	Piaggio spare parts (POP)
LG1400499	OIL LEVEL DIPSTICK LGA AUTOMOT	Piaggio spare parts (POP)
L9330161	OIL LEVEL MEAS.TUBE	Piaggio spare parts (POP)
L9330129	OIL LEVEL MEASURING STIC	Piaggio spare parts (POP)
L9330115	OIL LEVEL MEASURING STIK I.P.	Piaggio spare parts (POP)
L1400443	OIL LEVER ROD	Piaggio spare parts (POP)
ESP650DCH011	OIL MIST SEPERATOR (OMS)	Piaggio spare parts (POP)
E50008099	OIL PAN	Piaggio spare parts (POP)
E50008003	OIL PAN	Piaggio spare parts (POP)
E87018029	OIL PAN	Piaggio spare parts (POP)
E87018030	OIL PAN ASSEMBLY CONSIST SR	Piaggio spare parts (POP)
ESP650DLB012	OIL PAN ASSEMBLY WITH DRAIN PLUG	Piaggio spare parts (POP)
E075101100	Oil Pan Assy. Consisting of sr.nos 4,5	Piaggio spare parts (POP)
A01A090005	OIL PICK UP ASSEMBLY (STRAINER)	Piaggio spare parts (POP)
ESP650DLB003	OIL PICK UP PIPE ASSY	Piaggio spare parts (POP)
889877	OIL PICKUP PIPE	Piaggio spare parts (POP)
L5041276	OIL PR.SWITCH NC 0.6BAR	Piaggio spare parts (POP)
LG5041276	OIL PR.SWITCH NC 0.6BAR 1/8"	Piaggio spare parts (POP)
KD5041276	OIL PR.SWITCH NC 0.6BAR 1/8"	Piaggio spare parts (POP)
L5041265	OIL PRESSURE SIGNAL SWITCH	Piaggio spare parts (POP)
ED41447	OIL PRESSURE SWITCH	Piaggio spare parts (POP)

L5041273	OIL PRESSURE SWITCH	Piaggio spare parts (POP)
E87009706	OIL PRESSURE SWTCH	Piaggio spare parts (POP)
L9680048	OIL PRESSURE VALVE	Piaggio spare parts (POP)
829661	OIL PRESURE CONTROL VALVE	Piaggio spare parts (POP)
L66051230	OIL PUMP	Piaggio spare parts (POP)
B011618	OIL PUMP	Piaggio spare parts (POP)
B011857	OIL PUMP	Piaggio spare parts (POP)
ESP650DLB008	OIL PUMP ASSEMBLY	Piaggio spare parts (POP)
L6605106	Oil Pump Assly.	Piaggio spare parts (POP)
82948R	OIL PUMP ASSY	Piaggio spare parts (POP)
1A006877	OIL PUMP ASSY	Piaggio spare parts (POP)
L6605112	OIL PUMP ASSY	Piaggio spare parts (POP)
L6605105	OIL PUMP ASSY	Piaggio spare parts (POP)
L6605121	OIL PUMP ASSY	Piaggio spare parts (POP)
A01A090007	OIL PUMP ASSY. (G ROTOR) ASSEMBLY WITH G	Piaggio spare parts (POP)
L2181069	OIL PUMP CHAIN	Piaggio spare parts (POP)
L2181073	OIL PUMP CHAIN	Piaggio spare parts (POP)
B015026	OIL PUMP CHAIN (48 PITCHES)	Piaggio spare parts (POP)
L6453024	OIL PUMP CONTROLLING	Piaggio spare parts (POP)
B017042	OIL PUMP CROWN	Piaggio spare parts (POP)
L2816208	OIL PUMP CROWN	Piaggio spare parts (POP)
441030	OIL PUMP DRIVING GEAR HOLDING TOOL	Piaggio spare parts (POP)
LG6605115	OIL PUMP H.3.5MM LGA	Piaggio spare parts (POP)
1A001905R	OIL PUMP PINION GEAR	Piaggio spare parts (POP)
B017041	OIL PUMP PINION GEAR	Piaggio spare parts (POP)
KD1111225	OIL PUMP SHAFT	Piaggio spare parts (POP)
E50005567	OIL RECOMMENDATION CARD	Piaggio spare parts (POP)
LG9032086	OIL REFUELLING CAP	Piaggio spare parts (POP)
925792	OIL RESERVOIR BODY (WITH INTEGRAL BRACKE	Piaggio spare parts (POP)
889610	OIL RETAINER RING	Piaggio spare parts (POP)
E07527192	Oil return pipe	Piaggio spare parts (POP)
E07537193	Oil return pipe	Piaggio spare parts (POP)
LG8026282	OIL SCRAPED RING S85 D.74 CHR.	Piaggio spare parts (POP)
117402	OIL SEAL	Piaggio spare parts (POP)
183511	OIL SEAL	Piaggio spare parts (POP)
136434	OIL SEAL	Piaggio spare parts (POP)
196302	OIL SEAL	Piaggio spare parts (POP)
E50006328	OIL SEAL	Piaggio spare parts (POP)
E9121356	OIL SEAL	Piaggio spare parts (POP)
B002249	OIL SEAL	Piaggio spare parts (POP)
ED41942	Oil seal	Piaggio spare parts (POP)
847075	OIL SEAL	Piaggio spare parts (POP)
8771	OIL SEAL (18-24-4)	Piaggio spare parts (POP)
888472671	OIL SEAL (30X52X7)	Piaggio spare parts (POP)
ESP650DCR026	OIL SEAL (600CC)	Piaggio spare parts (POP)
888472475	OIL SEAL 24X47X7	Piaggio spare parts (POP)
888503377	OIL SEAL 33X50X7	Piaggio spare parts (POP)

KD1213576	OIL SEAL 40X55X7	Piaggio spare parts (POP)
825577	OIL SEAL 8X16X7	Piaggio spare parts (POP)
970300617	OIL SEAL ASSEMBLY TOOL (CRANKSHAFT)	Piaggio spare parts (POP)
AP8140189	Oil seal assembly tool d.43	Piaggio spare parts (POP)
AP8110068	Oil seal D18x24x3	Piaggio spare parts (POP)
LG54R0520	OIL SEAL D30/477 THK	Piaggio spare parts (POP)
LG1213356	OIL SEAL D40/17 7 THK	Piaggio spare parts (POP)
KD1213396	OIL SEAL D55/40 7 THK	Piaggio spare parts (POP)
SST94169	Oil seal fitting tool for crankcase BS6	Piaggio spare parts (POP)
E07506359	OIL SEAL FWE COVER	Piaggio spare parts (POP)
888472578	OIL SEAL GEAR BOX	Piaggio spare parts (POP)
441028	OIL SEAL ON MAIN SHAFT BALL BRG.PRESSING	Piaggio spare parts (POP)
MS254001	OIL SEAL PRESSING FIXTURE	Piaggio spare parts (POP)
441012	OIL SEAL PRESSING TOOL ADT SIDE WITH C/	Piaggio spare parts (POP)
970300564	Oil seal pressing tool for rubber boot	Piaggio spare parts (POP)
441003	OIL SEAL PRESSING TOOL FW SIDE (W/O C/S)	Piaggio spare parts (POP)
441004	OIL SEAL PRESSING TOOL FW SIDE(WITH C/S)	Piaggio spare parts (POP)
970300623	OIL SEAL PROTECTION ADPTOR COVER TOOL	Piaggio spare parts (POP)
441015	OIL SEAL PROTECTION TOOL ADAPTER SIDE	Piaggio spare parts (POP)
441014	OIL SEAL PROTECTION TOOL FLYWHEEL SIDE	Piaggio spare parts (POP)
970300572	Oil seal protector mandrel for cobra cr.	Piaggio spare parts (POP)
ESP650DCR014	OIL SEAL STD(CR.SHAFT SUPPORT FWE SIDE)	Piaggio spare parts (POP)
E60006356	Oil seal STD.	Piaggio spare parts (POP)
E91213060	Oil seal STD.	Piaggio spare parts (POP)
E271121076	Oil seal STD.	Piaggio spare parts (POP)
E07506314	Oil seal u/s 0.5mm	Piaggio spare parts (POP)
E07506301	Oil seal u/s 0.5mm	Piaggio spare parts (POP)
E07506315	Oil seal u/s 1.0mm	Piaggio spare parts (POP)
E07506302	Oil seal u/s 1.0mm	Piaggio spare parts (POP)
E60006339	OIL SEAL-CRANKSHAFT SUPPORT (FEW SIDE)	Piaggio spare parts (POP)
B011055	OIL SEPARATOR	Piaggio spare parts (POP)
1F000421	OIL SEPARATOR SUPPORT BRACKET WITH I.P.	Piaggio spare parts (POP)
E01A110002	OIL SEPERATOR	Piaggio spare parts (POP)
E40010738	Oil service kit BS II	Piaggio spare parts (POP)
E43510739	Oil service kit BS III	Piaggio spare parts (POP)
LG1261122	OIL SPLASH GUARD 47X35X7 P.	Piaggio spare parts (POP)
B019219	OIL SUCTION INSERT	Piaggio spare parts (POP)
LG9320194	OIL SUCTION PIPE	Piaggio spare parts (POP)
B012092	OIL SUMP - COMPLETE	Piaggio spare parts (POP)
1F000654	OIL SUMP ASSY	Piaggio spare parts (POP)
1F000429	OIL SUMP ASSY	Piaggio spare parts (POP)
889880	OIL SUMP ASSY	Piaggio spare parts (POP)
8898804	OIL SUMP ASSY	Piaggio spare parts (POP)
ED23628	OILCOOLER	Piaggio spare parts (POP)
ESP650DCH020	OILS EAL (FOR VALVE STEM)-STEM SEAL	Piaggio spare parts (POP)
ED42548	OILSEAL	Piaggio spare parts (POP)
E870161106	OINT SUPPORT FLYWHEEL SIDE	Piaggio spare parts (POP)

L4251244	OLDHAM COUPLING FOR GOVERNOR	Piaggio spare parts (POP)
58296R	ONE WAY CLUTCH ASSY	Piaggio spare parts (POP)
1A010696R	ONE WAY CLUTCH ASSY	Piaggio spare parts (POP)
680219	ONE WAY CLUTCH ASSY	Piaggio spare parts (POP)
1A017865	ONE WAY CLUTCH ASSY	Piaggio spare parts (POP)
SP1A018746	ONE WAY CLUTCH HUB ASSY - SPD	Piaggio spare parts (POP)
SP1A020455	ONE WAY CLUTCH HUB ASSY 300 CC- SPD	Piaggio spare parts (POP)
SP41A020456	ONE WAY CLUTCH HUB ASSY-200/230cc SPD	Piaggio spare parts (POP)
1A014399	ONE WAY CLUTCH SPRING	Piaggio spare parts (POP)
6A000584	ONEWAY VALVE	Piaggio spare parts (POP)
B074688	OPN, MAINT & WARR MANUAL CITY UPG PETROL	Piaggio spare parts (POP)
F002G20780	ORC	Piaggio spare parts (POP)
F002G20036	ORC DRIVE	Piaggio spare parts (POP)
1A018537	O-RING	Piaggio spare parts (POP)
3410210004	O-RING	Piaggio spare parts (POP)
889308	O-RING	Piaggio spare parts (POP)
1A017361	O-RING	Piaggio spare parts (POP)
B010681	O-RING	Piaggio spare parts (POP)
B018473	O-RING	Piaggio spare parts (POP)
1A014957	O-RING	Piaggio spare parts (POP)
E10G110015	O-RING	Piaggio spare parts (POP)
1A014956	O-RING	Piaggio spare parts (POP)
288474	O-RING (20,35x1,78)	Piaggio spare parts (POP)
L1200347	O-RING 11.1X1.78	Piaggio spare parts (POP)
AP8144007	O-ring 114	Piaggio spare parts (POP)
1A009702	O-RING 11X2	Piaggio spare parts (POP)
B012189	O-RING 15X2	Piaggio spare parts (POP)
KD1200034	O-RING 2025 6.07 x 1.78"	Piaggio spare parts (POP)
KD1200035	O-RING D11.22/7.66 1.78 THK	Piaggio spare parts (POP)
LG1200082	O-RING D31.89/26.50 2.62 THK	Piaggio spare parts (POP)
KD1200082	O-RING D31.89/26.50 2.62 THK	Piaggio spare parts (POP)
KD1200336	O-RING D39.84/34.6 2.62 THK	Piaggio spare parts (POP)
KD1200087	O-RING D39.84/34.6 2.62 THK	Piaggio spare parts (POP)
KD1200041	O-RING D8.04/4.48 1.78 THK	Piaggio spare parts (POP)
L1200377	O-RING DI=17.17 SP=1.78	Piaggio spare parts (POP)
L1200378	O-RING DI=45 SP=2	Piaggio spare parts (POP)
857472	O-RING GASKET	Piaggio spare parts (POP)
479986	O-RING GASKET	Piaggio spare parts (POP)
L4775595	O-RING GASKET	Piaggio spare parts (POP)
285536	O-RING GASKET 31.47x1.78	Piaggio spare parts (POP)
1A009592	O-RING KIT	Piaggio spare parts (POP)
ESP650DGS002	O-RING OIL PICKUPPIPE	Piaggio spare parts (POP)
03G160867	'O'-RING SELECTOR HOUSING	Piaggio spare parts (POP)
932282	O-Ring Starter Motor (Paxx2000)	Piaggio spare parts (POP)
925719	O-RING(FL-0101-060)	Piaggio spare parts (POP)
925748	O-RING(K-0101-04-140)	Piaggio spare parts (POP)
925750	O-RING(K-0102-02-370)	Piaggio spare parts (POP)

925725	O-RING(K-0401-18-040)	Piaggio spare parts (POP)
925728	O-RING(K-401-18-020)	Piaggio spare parts (POP)
925770	O-RING(R-8101-500)	Piaggio spare parts (POP)
925781	O-RING(R-8104-240)	Piaggio spare parts (POP)
925782	O-RING(R-8104-640)	Piaggio spare parts (POP)
925783	O-RING(R-8104-650)	Piaggio spare parts (POP)
03G161687	'O'-RING-CLUTCH SUPPORT TUBE	Piaggio spare parts (POP)
03G161809	'O'-RING-DIPSTICK	Piaggio spare parts (POP)
E87006209	O-RING-GOVERNOR COVER	Piaggio spare parts (POP)
929931	ORing-K-0101-04-020	Piaggio spare parts (POP)
661846	ORNAMENT	Piaggio spare parts (POP)
B003261	ORNAMENT CREST	Piaggio spare parts (POP)
B002198	ORNAMENT FRONT MUDGUARD	Piaggio spare parts (POP)
260841	ORNAMENT LH	Piaggio spare parts (POP)
576464	ORNAMENT,FR PIAGGIO	Piaggio spare parts (POP)
B023836R	ORVM MIRROR ASSLY -LH	Piaggio spare parts (POP)
B023837R	ORVM MIRROR ASSLY -RH	Piaggio spare parts (POP)
6C000041	OTIKAR CLAMP FOR BELLOW	Piaggio spare parts (POP)
B075263	OUTBOARD BOOT KIT	Piaggio spare parts (POP)
B075261	OUTBOARD JOINT - SHAFT KIT (LH)	Piaggio spare parts (POP)
B075260	OUTBOARD JOINT - SHAFT KIT (RH)	Piaggio spare parts (POP)
940023	OUTER BALL JOINT ASSY (ape mini)	Piaggio spare parts (POP)
6D000423	OUTER BEZEL LH	Piaggio spare parts (POP)
6D000388	OUTER BEZEL LH (PULSER GREY)	Piaggio spare parts (POP)
6D000432	OUTER BEZEL RH	Piaggio spare parts (POP)
6D000387	OUTER BEZEL RH (PULSER GREY)	Piaggio spare parts (POP)
B041121	OUTER COVER STEERING POST	Piaggio spare parts (POP)
L2920180	OUTER COWLING	Piaggio spare parts (POP)
B078716	OUTER REAR VIEW MIRROR LH ASSLY	Piaggio spare parts (POP)
643685	OUTER REAR VIEW MIRROR LH ASSLY	Piaggio spare parts (POP)
B008617	OUTER REAR VIEW MIRROR LH ASSLY (EXP)	Piaggio spare parts (POP)
B078715	OUTER REAR-VIEW MIRROR RH ASSLY.	Piaggio spare parts (POP)
643684	OUTER REAR-VIEW MIRROR RH ASSLY.	Piaggio spare parts (POP)
B008616	OUTER REAR-VIEW MIRROR RH ASSLY.(EXP)	Piaggio spare parts (POP)
1A017996	OUTER RING ONE WAY CLUTCH	Piaggio spare parts (POP)
B041481	OUTER STEERING COVER ASSLY	Piaggio spare parts (POP)
LG2165165	OUTER TIMING BELT COVER	Piaggio spare parts (POP)
LG2165083	OUTER TIMING BELT COVER	Piaggio spare parts (POP)
6A001037	OUTLET CAP O-RING	Piaggio spare parts (POP)
889120	OUTLET MANIFOLD THERMOSTAT ASM	Piaggio spare parts (POP)
B012438	OUTLET MANIFOLD THERMOSTAT ASM	Piaggio spare parts (POP)
6A001078	OUTLET NIPPLE, CNG REGULATOR	Piaggio spare parts (POP)
B011108	OUTLET PIPE (VACUUM PUMP)	Piaggio spare parts (POP)
6A001038	OUTLET PORT	Piaggio spare parts (POP)
L9685159	OUTLET VALVE	Piaggio spare parts (POP)
L96851860	OUTLET VALVE	Piaggio spare parts (POP)
L8000231	OUTLET VALVE SEAT	Piaggio spare parts (POP)

929984	Outlet-R-8104-632	Piaggio spare parts (POP)
L5800167	OUTSIDE SPRING FOR INTAKE/EXHAUST.VALVE	Piaggio spare parts (POP)
660167	OVAL HEAD SCREW (M6 X 1.0 X 18)	Piaggio spare parts (POP)
E40037129	Over Flow & Bleeding Pipe Assy.	Piaggio spare parts (POP)
E43527167	OVERFLOW & BLEEDING PIPE ASSEMBLY	Piaggio spare parts (POP)
E40027189	OVERFLOW & BLEEDING PIPE ASSY. (APE CITY	Piaggio spare parts (POP)
B041510	OVERFLOW & BLEEDING PIPE JALDOOT	Piaggio spare parts (POP)
E50017156	OVERFLOW PIPE	Piaggio spare parts (POP)
E10T120015	Overflow pipe (three way)	Piaggio spare parts (POP)
E10T120010	OVERFLOW PIPE COMMON	Piaggio spare parts (POP)
E40027131	OVERFLOWANDBLEEDINGPIPE(650)	Piaggio spare parts (POP)
E07530653	Oxycat supporting bracket	Piaggio spare parts (POP)
E87015534	OXYCAT (90 X 150) METALLIC	Piaggio spare parts (POP)
E43527721	OXYCAT BKT & THERMAL INSULATION ASSLY	Piaggio spare parts (POP)
E43518099	Oxycat Bkt & Thermal Insulation Assly.(1	Piaggio spare parts (POP)
E10G070007	Oxycat- Corning India(Sharda make)	Piaggio spare parts (POP)
E10G070014	Oxycat -D+5	Piaggio spare parts (POP)
E43517706	OXYCAT METALIC ASSY DIA 80 MM 5G/FT 3	Piaggio spare parts (POP)
B006385R	OXYCAT METALLIC ASSLY	Piaggio spare parts (POP)
B076414	OXYCAT METALLIC ASSLY (ECOCAT DOC+DOC)	Piaggio spare parts (POP)
B006385	OXYCAT METALLIC ASSLY (ECOCAT)	Piaggio spare parts (POP)
B006385P	OXYCAT METALLIC ASSLY (ECOCAT)-P	Piaggio spare parts (POP)
B076415	OXYCAT METALLIC ASSLY(SUD-CHEME DOC+DOC)	Piaggio spare parts (POP)
E87020637	OXYCAT MOUNTING BRACKET (FROM GEAR BOX)	Piaggio spare parts (POP)
E10G070015	Oxycat -Pass.& Cargo	Piaggio spare parts (POP)
SST94129	P 1000 Torque Chart Power Pack & Vehicle	Piaggio spare parts (POP)
B024168	P.T.CAP ASSLY WITH KEY	Piaggio spare parts (POP)
L4775568	PACKING	Piaggio spare parts (POP)
116498	PACKING	Piaggio spare parts (POP)
190479	PACKING	Piaggio spare parts (POP)
604724	PACKING	Piaggio spare parts (POP)
B041378	PACKING	Piaggio spare parts (POP)
L4775572	PACKING	Piaggio spare parts (POP)
124896	PACKING	Piaggio spare parts (POP)
191189	PACKING	Piaggio spare parts (POP)
E40016420	PACKING	Piaggio spare parts (POP)
L4650093	PACKING	Piaggio spare parts (POP)
127927R	PACKING	Piaggio spare parts (POP)
568997	PACKING	Piaggio spare parts (POP)
224566	PACKING	Piaggio spare parts (POP)
B041377	PACKING	Piaggio spare parts (POP)
848209	PACKING	Piaggio spare parts (POP)
613225	PACKING	Piaggio spare parts (POP)
613226	PACKING	Piaggio spare parts (POP)
613215	PACKING	Piaggio spare parts (POP)
851582	PACKING	Piaggio spare parts (POP)
613216	PACKING	Piaggio spare parts (POP)

125707	PACKING	Piaggio spare parts (POP)
615932	PACKING	Piaggio spare parts (POP)
652280	PACKING	Piaggio spare parts (POP)
6B001073	PACKING - SLIDING GLASS WINDOW	Piaggio spare parts (POP)
567747	PACKING BOOT	Piaggio spare parts (POP)
970300515	PACKING CYLINDER HEAD	Piaggio spare parts (POP)
L4431167	PACKING OF THE TIMING BELT COV	Piaggio spare parts (POP)
B003284	PACKING ON GLASS OPENING OUTLINE	Piaggio spare parts (POP)
568151	PACKING REAR SHUTTER	Piaggio spare parts (POP)
604761	PACKING SLIDING GLASS WINDOW	Piaggio spare parts (POP)
B002199	PACKING SOUND DAMPNER	Piaggio spare parts (POP)
L1200329	PACKING WITH CIRC. SECTION	Piaggio spare parts (POP)
614577	PACKING WITH CIRCULAR SECTION	Piaggio spare parts (POP)
D6644387Z01	PACKING, RR BODY	Piaggio spare parts (POP)
D4551987502	PACKING, STEERING LINK HO	Piaggio spare parts (POP)
925768	PAD(R-8101-180)	Piaggio spare parts (POP)
925769	PAD(R-8101-430)	Piaggio spare parts (POP)
D3132187Z03	PAD, PEDAL	Piaggio spare parts (POP)
660842	PAD, STEERING WHEEL	Piaggio spare parts (POP)
615060	PAD, STEERING WHEEL	Piaggio spare parts (POP)
929964	Pad-R-8101-430	Piaggio spare parts (POP)
L6010097	PADS	Piaggio spare parts (POP)
020922Y	PADS Diagnostic System	Piaggio spare parts (POP)
AP8133798	Pads pair	Piaggio spare parts (POP)
893931	Pads pair	Piaggio spare parts (POP)
AP8133614	Pads pair	Piaggio spare parts (POP)
604757	PAN HEAD SCREW (PHILIPS TYPE)	Piaggio spare parts (POP)
B001493	PAN SELF TAP SCREW 4SG X 16AB	Piaggio spare parts (POP)
8265	PAN SELF TP SCREW 10SGX13AB	Piaggio spare parts (POP)
15727	PAN SELF TP SCREW 4SGX9.5AB	Piaggio spare parts (POP)
18536	PAN SELF TP SCREW 6SGX13AB	Piaggio spare parts (POP)
8451	PAN SELF TP SCREW 6SGX13AB	Piaggio spare parts (POP)
8455	PAN SELF TP SCREW 8SGX13B	Piaggio spare parts (POP)
15911	PAN SELF TP SCREW 8SGX16AB	Piaggio spare parts (POP)
645138	PANEL - INSTRUMENTATION CLUSTER	Piaggio spare parts (POP)
614008	PANEL ,FR DOOR TR	Piaggio spare parts (POP)
B005907	PANEL ASSY INSTRUMENT W/DIFFUSOR	Piaggio spare parts (POP)
612755	PANEL BACK	Piaggio spare parts (POP)
AP8140426	Panel hooks	Piaggio spare parts (POP)
614831	PANEL INSTR	Piaggio spare parts (POP)
657948ED	PANEL S/A FLOOR , FR CORNER LH 870-CED	Piaggio spare parts (POP)
657953ED	PANEL S/A FLOOR , FR CORNER RH 870-CED	Piaggio spare parts (POP)
644681	PANEL S/A FLOOR, FR CORNER LH	Piaggio spare parts (POP)
644681ED	PANEL S/A FLOOR, FR CORNER LH- (CED)	Piaggio spare parts (POP)
657948	PANEL S/A FLOOR, FR CORNER LH 870/1000	Piaggio spare parts (POP)
657953	PANEL S/A FLOOR, FR CORNER RH 870/1000	Piaggio spare parts (POP)
644682	PANEL S/A FLOOR,FR CORNER RH	Piaggio spare parts (POP)

644682ED	PANEL S/A FLOOR,FR CORNER RH - (CED)	Piaggio spare parts (POP)
B002513	PANEL S/ASSLY FR DOOR LH -4 WH(CED)	Piaggio spare parts (POP)
B002522	PANEL S/ASSLY FR DOOR RH -4 WH(CED)	Piaggio spare parts (POP)
B075001	PANEL SUB-ASSY, FR DOOR LH	Piaggio spare parts (POP)
D6700287Z01	PANEL SUB-ASSY, FR DOOR LH	Piaggio spare parts (POP)
D6700187Z01	PANEL SUB-ASSY, FR DOOR RH	Piaggio spare parts (POP)
D6711287Z014	PANEL, FR DOOR, OUTSIDE L	Piaggio spare parts (POP)
B074487	PANEL, FR DOOR, OUTSIDE LH	Piaggio spare parts (POP)
566084	PANEL, FR SIDE, LH	Piaggio spare parts (POP)
566083	PANEL, FR SIDE, RH	Piaggio spare parts (POP)
B075922	PANEL, FRONT (RHD)	Piaggio spare parts (POP)
932274	Paper Filter (K-0102-19-040) Paxx 200	Piaggio spare parts (POP)
KD4501151	PAPER GASKET -EX.MANIF.HYTTIT60	Piaggio spare parts (POP)
660341	PARKING BRAKE TRANSMISSION S/A	Piaggio spare parts (POP)
B006485	PARKING BRAKE TRANSMISSION SUB ASSEMBLY	Piaggio spare parts (POP)
B041774	PARKING BRAKE TRANSMISSION SUB ASSLY	Piaggio spare parts (POP)
B002338	PARKING BRAKE TRANSMISSION SUB ASSLY	Piaggio spare parts (POP)
602332	PARKING BRAKE TRANSMISSION SUB-ASSLY	Piaggio spare parts (POP)
925807	PARKING BULB HOLDER	Piaggio spare parts (POP)
569070	PARKING DRIVE CONTR.CABLE	Piaggio spare parts (POP)
925591	PARKING LAMP HOLDER WITH WIRES (LUMAX)	Piaggio spare parts (POP)
925592	PARKING LAMP HOLDER WITH WIRES (NEOLITE	Piaggio spare parts (POP)
E87009118	PARRALEL KEY	Piaggio spare parts (POP)
6B002596	PARTITION KIT - APE AUTO DX BS VI	Piaggio spare parts (POP)
6B002597	PARTITION KIT - APE CITY BS IV & VI	Piaggio spare parts (POP)
B074161	PARTITION COVER-CALX IND	Piaggio spare parts (POP)
6B002758	PARTITION DRIVER & PASS - APE CITY BS4&6	Piaggio spare parts (POP)
6B002760	PARTITION DRIVER & PASS - AUTO DX BS VI	Piaggio spare parts (POP)
6B002761	PARTITION DRIVER & PASS APE AUTO DX BS 4	Piaggio spare parts (POP)
6B002759	PARTITION DRIVER & PASS APE CITY+ BS4&6	Piaggio spare parts (POP)
6B002762	PARTITION DRIVER & PASS AUTO+ BS 4 & 6	Piaggio spare parts (POP)
6B002600	PARTITION KIT - APE AUTO DX BS IV	Piaggio spare parts (POP)
6B002599	PARTITION KIT - APE AUTO PLUS BS IV & VI	Piaggio spare parts (POP)
6B002598	PARTITION KIT- APE CITY PLUS BS IV & VI	Piaggio spare parts (POP)
B001907BL	PASENGER BODY WITH TAIL GATE BSIII BLACK	Piaggio spare parts (POP)
B001907BW	PASENGER BODY WITH TAIL GATE BSIII BW	Piaggio spare parts (POP)
B001907CB	PASENGER BODY WITH TAIL GATE BSIII C BLU	Piaggio spare parts (POP)
B001907GY	PASENGER BODY WITH TAIL GATE BSIII GY	Piaggio spare parts (POP)
B001907WR	PASENGER BODY WITH TAIL GATE BSIII W RED	Piaggio spare parts (POP)
B002523BL	PASS BODY (UPGRADE) WITH TAIL GATE-BLACK	Piaggio spare parts (POP)
B079094BW	PASS BODY APE CITY PLUS_BW	Piaggio spare parts (POP)
B079094BY	PASS BODY APE CITY PLUS_BY	Piaggio spare parts (POP)
B079094CB	PASS BODY APE CITY PLUS_CB	Piaggio spare parts (POP)
B079094EG	PASS BODY APE CITY PLUS_EG	Piaggio spare parts (POP)
B079094GY	PASS BODY APE CITY PLUS_GY	Piaggio spare parts (POP)
B079094NB	PASS BODY APE CITY PLUS_NB	Piaggio spare parts (POP)
B024364EG	PASS BODY APE PAX (PTL/DIESEL)- E.GREEN	Piaggio spare parts (POP)

B075154EG	PASS BODY PAX UPGR SNORKL C/L (SPD)-EG	Piaggio spare parts (POP)
B075154BL	PASS BODY PAX UPGR SNORKL C/L (SPD)-BLK	Piaggio spare parts (POP)
B075154GY	PASS BODY PAX UPGR SNORKL C/L (SPD)-GY	Piaggio spare parts (POP)
B075142BL	PASS BODY PAX UPGR SNORKL P/D (SPD)-BLK	Piaggio spare parts (POP)
B075142CB	PASS BODY PAX UPGR SNORKL P/D (SPD)-CB	Piaggio spare parts (POP)
B075142EG	PASS BODY PAX UPGR SNORKL P/D (SPD)-EG	Piaggio spare parts (POP)
B075142GY	PASS BODY PAX UPGR SNORKL P/D (SPD)-GY	Piaggio spare parts (POP)
B075142PK	PASS BODY PAX UPGR SNORKL P/D (SPD)-PK	Piaggio spare parts (POP)
B075142WR	PASS BODY PAX UPGR SNORKL P/D (SPD)-WR	Piaggio spare parts (POP)
6B000409BL	PASS BODY WITH TAIL GATE 501 BS6_DSL-BL	Piaggio spare parts (POP)
6B000409BW	PASS BODY WITH TAIL GATE 501 BS6_DSL-BW	Piaggio spare parts (POP)
6B000409BY	PASS BODY WITH TAIL GATE 501 BS6_DSL-BY	Piaggio spare parts (POP)
6B000409CB	PASS BODY WITH TAIL GATE 501 BS6_DSL-CB	Piaggio spare parts (POP)
6B000409EG	PASS BODY WITH TAIL GATE 501 BS6_DSL-EG	Piaggio spare parts (POP)
6B000409GY	PASS BODY WITH TAIL GATE 501 BS6_DSL-GY	Piaggio spare parts (POP)
6B000409WR	PASS BODY WITH TAIL GATE 501 BS6_DSL-WR	Piaggio spare parts (POP)
B042731BL	PASS BODY WITH TAIL GATE BSIII BLACK DTL	Piaggio spare parts (POP)
B042731CB	PASS BODY WITH TAIL GATE BSIII C BLU DTL	Piaggio spare parts (POP)
B042731EG	PASS BODY WITH TAIL GATE BSIII E GRN DTL	Piaggio spare parts (POP)
B042731GY	PASS BODY WITH TAIL GATE BSIII G YLW DTL	Piaggio spare parts (POP)
B042731WR	PASS BODY WITH TAIL GATE BSIII W RED DTL	Piaggio spare parts (POP)
B042731BW	PASS BODY WITH TAIL GATE BSIII WHITE DTL	Piaggio spare parts (POP)
B001907EG	PASS BODY WITH TAIL GATE BSIII_ECO GRN	Piaggio spare parts (POP)
B009703BL	PASS BODY WITH TAIL GATE D 5 S BLACK-BL	Piaggio spare parts (POP)
B002286EG	PASS BODY WITH TAIL GATE-CNG/LPG UPGR EG	Piaggio spare parts (POP)
B002286BY	PASS BODY WITH TAILGATCNG/LPG UPGR BLACK	Piaggio spare parts (POP)
B074517	PASS DOOR ASSLY, LH	Piaggio spare parts (POP)
B074518	PASS DOOR ASSLY, RH	Piaggio spare parts (POP)
B078043	PASS DRIVER SEAT ASSY- APE AUTO PLUS	Piaggio spare parts (POP)
632998	PASS DRIVER SEAT ASSY-501	Piaggio spare parts (POP)
645127	PASS DRIVER SEAT ASSY-501	Piaggio spare parts (POP)
B076023	PASS DRIVER SEAT ASSY-501 BSIV	Piaggio spare parts (POP)
B002875	PASS DRIVER SEAT ASSY-501 CNG	Piaggio spare parts (POP)
B077471	PASS DRIVER SEAT ASSY-501 CNG BSIV	Piaggio spare parts (POP)
B001293	PASS DRIVER SEAT ASSY-APE CITY DOM	Piaggio spare parts (POP)
B002779	PASS DRIVER SEAT ASSY-APE CITY LPG DOM	Piaggio spare parts (POP)
645248	PASS SEAT & RUBBER BUFFER-501 EXP (KENYA	Piaggio spare parts (POP)
6B000794	PASS SEAT ASSLY	Piaggio spare parts (POP)
B001287	PASS SEAT BACK REST APE CITY DOM AP	Piaggio spare parts (POP)
B001290	PASS SEAT BOTTOM -APE CITY DOM	Piaggio spare parts (POP)
632288	PASS WINDSCREEN FRAME ASSLY.	Piaggio spare parts (POP)
B002523GY	PASS(UPGRD)BODY WITH T- GATE-GOLD.YELLOW	Piaggio spare parts (POP)
6B000021BW	PASS. BODY APE AUTO DXL_D+3_BW	Piaggio spare parts (POP)
6B000021CB	PASS. BODY APE AUTO DXL_D+3_CB	Piaggio spare parts (POP)
6B000021EG	PASS. BODY APE AUTO DXL_D+3_EG	Piaggio spare parts (POP)
6B000021GY	PASS. BODY APE AUTO DXL_D+3_GY	Piaggio spare parts (POP)
B075560BL	PASS. BODY APE CITY DLX BSIV PTL - BL	Piaggio spare parts (POP)

B075560CB	PASS. BODY APE CITY DLX BSIV PTL - CB	Piaggio spare parts (POP)
B075560EG	PASS. BODY APE CITY DLX BSIV PTL - EG	Piaggio spare parts (POP)
B075560GY	PASS. BODY APE CITY DLX BSIV PTL - GY	Piaggio spare parts (POP)
B075560WR	PASS. BODY APE CITY DLX BSIV PTL - WR	Piaggio spare parts (POP)
6B002868BL	Pass. Body Ape city+ C/L MF BS6-BL	Piaggio spare parts (POP)
6B002868BW	Pass. Body Ape city+ C/L MF BS6-BW	Piaggio spare parts (POP)
6B002868BY	Pass. Body Ape city+ C/L MF BS6-BY	Piaggio spare parts (POP)
6B002868CB	Pass. Body Ape city+ C/L MF BS6-CB	Piaggio spare parts (POP)
6B002868EG	Pass. Body Ape city+ C/L MF BS6-EG	Piaggio spare parts (POP)
6B002868GY	Pass. Body Ape city+ C/L MF BS6-GY	Piaggio spare parts (POP)
6B002868NB	Pass. Body Ape city+ C/L MF BS6-NB	Piaggio spare parts (POP)
6B002868WR	Pass. Body Ape city+ C/L MF BS6-WR	Piaggio spare parts (POP)
B075500BL	PASS. BODY CITY DLX BSIV (CNG/LPG) - BL	Piaggio spare parts (POP)
B075500CB	PASS. BODY CITY DLX BSIV (CNG/LPG) - CB	Piaggio spare parts (POP)
B075500EG	PASS. BODY CITY DLX BSIV (CNG/LPG) - EG	Piaggio spare parts (POP)
B075500GY	PASS. BODY CITY DLX BSIV (CNG/LPG) - GY	Piaggio spare parts (POP)
B075500NB	PASS. BODY CITY DLX BSIV (CNG/LPG) - NB	Piaggio spare parts (POP)
B075500WR	PASS. BODY CITY DLX BSIV (CNG/LPG) - WR	Piaggio spare parts (POP)
B077736	PASS.- REAR CARPET (D+5)	Piaggio spare parts (POP)
632999	PASS. SEAT & RUBBER BUFFER	Piaggio spare parts (POP)
661624	PASS. SEAT AND RUBBER BUFFER (VE)	Piaggio spare parts (POP)
B075444	PASS. SEAT ASSLY (WIRE MESH)	Piaggio spare parts (POP)
B079276	PASS. SEAT ASSLY (WIRE MESH)- D5S	Piaggio spare parts (POP)
B009526	PASS. SEAT ASSLY REAR COMPLETE D5S	Piaggio spare parts (POP)
B009527	PASS. SEAT FRONT ASSLY COMPLETE D5S	Piaggio spare parts (POP)
B075560NB	PASS.BODY APE CITY DLX BSIV PTL - NB	Piaggio spare parts (POP)
B075733BL	PASS.BODY APE CITY DLX DIESEL BSIV - BL	Piaggio spare parts (POP)
B075733CB	PASS.BODY APE CITY DLX DIESEL BSIV - CB	Piaggio spare parts (POP)
B075733EG	PASS.BODY APE CITY DLX DIESEL BSIV - EG	Piaggio spare parts (POP)
B075733GY	PASS.BODY APE CITY DLX DIESEL BSIV - GY	Piaggio spare parts (POP)
B075733WR	PASS.BODY APE CITY DLX DIESEL BSIV - WR	Piaggio spare parts (POP)
B079129BL	PASS.BODY W/ TAILGATE CNG/LPG DTL - BL	Piaggio spare parts (POP)
B079129EG	PASS.BODY W/ TAILGATE CNG/LPG DTL - EG	Piaggio spare parts (POP)
B079129GY	PASS.BODY W/ TAILGATE CNG/LPG DTL - GY	Piaggio spare parts (POP)
B009701	PASS.-SPACE REAR CARPET (V.E)	Piaggio spare parts (POP)
B002380BY	PASSENGER BODY ASSLY APE CITY BLACK	Piaggio spare parts (POP)
B002380GY	PASSENGER BODY ASSLY APE CITY G YELLOW	Piaggio spare parts (POP)
B024512	PASSENGER BACKREST S/A APE CITY PAX	Piaggio spare parts (POP)
6B001822	PASSENGER BACKREST S/A APE CITY PAX FR	Piaggio spare parts (POP)
6B002127BL	PASSENGER BODY - Auto + CNG_BS6-BL	Piaggio spare parts (POP)
6B002127BW	PASSENGER BODY - Auto + CNG_BS6-BW	Piaggio spare parts (POP)
6B002127BY	PASSENGER BODY - Auto + CNG_BS6-BY	Piaggio spare parts (POP)
6B002127CB	PASSENGER BODY - Auto + CNG_BS6-CB	Piaggio spare parts (POP)
6B002127EG	PASSENGER BODY - Auto + CNG_BS6-EG	Piaggio spare parts (POP)
6B002127GY	PASSENGER BODY - Auto + CNG_BS6-GY	Piaggio spare parts (POP)
6B002127NB	PASSENGER BODY - Auto + CNG_BS6-NB	Piaggio spare parts (POP)
6B002127WR	PASSENGER BODY - Auto + CNG_BS6-WR	Piaggio spare parts (POP)

6B000021BL	PASSENGER BODY APE AUTO DXL D+3 - BY	Piaggio spare parts (POP)
6B001379BW	PASSENGER BODY APE CITY+ BS6 - BW	Piaggio spare parts (POP)
6B001379BY	PASSENGER BODY APE CITY+ BS6 - BY	Piaggio spare parts (POP)
6B001379CB	PASSENGER BODY APE CITY+ BS6 - CB	Piaggio spare parts (POP)
6B001379EG	PASSENGER BODY APE CITY+ BS6 - EG	Piaggio spare parts (POP)
6B001379GY	PASSENGER BODY APE CITY+ BS6 - GY	Piaggio spare parts (POP)
6B001379NB	PASSENGER BODY APE CITY+ BS6 - NB	Piaggio spare parts (POP)
B024835BY	PASSENGER BODY APE PAX (CNG/LPG) BY	Piaggio spare parts (POP)
B024835EG	PASSENGER BODY APE PAX (CNG/LPG) EG	Piaggio spare parts (POP)
B024835GY	PASSENGER BODY APE PAX (CNG/LPG) GY	Piaggio spare parts (POP)
B024364CED	PASSENGER BODY APE PAX (PET/DSL)_CED	Piaggio spare parts (POP)
B024364BY	PASSENGER BODY APE PAX (PETROL/DIESEL)BY	Piaggio spare parts (POP)
B024364GY	PASSENGER BODY APE PAX (PETROL/DIESEL)GY	Piaggio spare parts (POP)
B006580GY	PASSENGER BODY ASSLY APE CITY GY	Piaggio spare parts (POP)
B006580BW	PASSENGER BODY ASSLY APE CITY BW	Piaggio spare parts (POP)
B006580BY	PASSENGER BODY ASSLY APE CITY BY	Piaggio spare parts (POP)
B006580CB	PASSENGER BODY ASSLY APE CITY CB	Piaggio spare parts (POP)
B076375BW	PASSENGER BODY ASSLY CNG/LPG BSIV -BW	Piaggio spare parts (POP)
B076375BY	PASSENGER BODY ASSLY CNG/LPG BSIV -BY	Piaggio spare parts (POP)
B076375CB	PASSENGER BODY ASSLY CNG/LPG BSIV -CB	Piaggio spare parts (POP)
B076375EG	PASSENGER BODY ASSLY CNG/LPG BSIV -EG	Piaggio spare parts (POP)
B076375GY	PASSENGER BODY ASSLY CNG/LPG BSIV -GY	Piaggio spare parts (POP)
B076375NB	PASSENGER BODY ASSLY CNG/LPG BSIV -NB	Piaggio spare parts (POP)
B076375WR	PASSENGER BODY ASSLY CNG/LPG BSIV -WR	Piaggio spare parts (POP)
568705	PASSENGER BODY ASSLY COMPLETE	Piaggio spare parts (POP)
B077028	PASSENGER BODY ASSLY EURO CITY PETROL	Piaggio spare parts (POP)
B077028ED	PASSENGER BODY ASSLY EURO CITY PETROL_ED	Piaggio spare parts (POP)
B078476	PASSENGER BODY ASSLY PETROL EURO-4	Piaggio spare parts (POP)
B078476BL	PASSENGER BODY ASSLY PETROL EURO-4_BL	Piaggio spare parts (POP)
B078476BW	PASSENGER BODY ASSLY PETROL EURO-4_BW	Piaggio spare parts (POP)
B078476CB	PASSENGER BODY ASSLY PETROL EURO-4_CB	Piaggio spare parts (POP)
B078476EG	PASSENGER BODY ASSLY PETROL EURO-4_EG	Piaggio spare parts (POP)
B078476GY	PASSENGER BODY ASSLY PETROL EURO-4_GY	Piaggio spare parts (POP)
B078476WR	PASSENGER BODY ASSLY PETROL EURO-4_WR	Piaggio spare parts (POP)
B074196BW	PASSENGER BODY ASSLY. GAS UPGRADE-BW	Piaggio spare parts (POP)
B074196BY	PASSENGER BODY ASSLY. GAS UPGRADE-BY	Piaggio spare parts (POP)
B074196CB	PASSENGER BODY ASSLY. GAS UPGRADE-CB	Piaggio spare parts (POP)
B074196EG	PASSENGER BODY ASSLY. GAS UPGRADE-EG	Piaggio spare parts (POP)
B074196GY	PASSENGER BODY ASSLY. GAS UPGRADE-GY	Piaggio spare parts (POP)
B074182BW	PASSENGER BODY ASSLY. PET/DSL UPGRADE-BW	Piaggio spare parts (POP)
B074182BY	PASSENGER BODY ASSLY. PET/DSL UPGRADE-BY	Piaggio spare parts (POP)
B074182CB	PASSENGER BODY ASSLY. PET/DSL UPGRADE-CB	Piaggio spare parts (POP)
B074182EG	PASSENGER BODY ASSLY. PET/DSL UPGRADE-EG	Piaggio spare parts (POP)
B074182GY	PASSENGER BODY ASSLY. PET/DSL UPGRADE-GY	Piaggio spare parts (POP)
B074182WR	PASSENGER BODY ASSLY. PET/DSL UPGRADE-WR	Piaggio spare parts (POP)
B078306BW	PASSENGER BODY D5S APE AUTO + CNG-LPG_BW	Piaggio spare parts (POP)
B078306BY	PASSENGER BODY D5S APE AUTO + CNG-LPG_BY	Piaggio spare parts (POP)

B078306CB	PASSENGER BODY D5S APE AUTO + CNG-LPG_CB	Piaggio spare parts (POP)
B078306EG	PASSENGER BODY D5S APE AUTO + CNG-LPG_EG	Piaggio spare parts (POP)
B078306GY	PASSENGER BODY D5S APE AUTO + CNG-LPG_GY	Piaggio spare parts (POP)
B078306WR	PASSENGER BODY D5S APE AUTO + CNG-LPG_WR	Piaggio spare parts (POP)
B077526BL	PASSENGER BODY D5S_BL	Piaggio spare parts (POP)
B077526BW	PASSENGER BODY D5S_BW	Piaggio spare parts (POP)
B077526EG	PASSENGER BODY D5S_EG	Piaggio spare parts (POP)
B077526GY	PASSENGER BODY D5S_GY	Piaggio spare parts (POP)
B075154BY	PASSENGER BODY PAX UPGRADE SNORKL C/L	Piaggio spare parts (POP)
B075142BY	PASSENGER BODY PAX UPGRADE SNORKL P/D	Piaggio spare parts (POP)
6B002233BL	PASSENGER BODY W/ TAIL GATE(DTL) BS3-BL	Piaggio spare parts (POP)
6B002233BW	PASSENGER BODY W/ TAIL GATE(DTL) BS3-BW	Piaggio spare parts (POP)
6B002233BY	PASSENGER BODY W/ TAIL GATE(DTL) BS3-BY	Piaggio spare parts (POP)
6B002233CB	PASSENGER BODY W/ TAIL GATE(DTL) BS3-CB	Piaggio spare parts (POP)
6B002233EG	PASSENGER BODY W/ TAIL GATE(DTL) BS3-EG	Piaggio spare parts (POP)
6B002233GY	PASSENGER BODY W/ TAIL GATE(DTL) BS3-GY	Piaggio spare parts (POP)
6B002233NB	PASSENGER BODY W/ TAIL GATE(DTL) BS3-NB	Piaggio spare parts (POP)
6B002233WR	PASSENGER BODY W/ TAIL GATE(DTL) BS3-WR	Piaggio spare parts (POP)
661432	PASSENGER BODY WITH TAIL GATE (UPGRADE)	Piaggio spare parts (POP)
6B000409	PASSENGER BODY WITH TAIL GATE(DTL)	Piaggio spare parts (POP)
6B002023	PASSENGER CARPET	Piaggio spare parts (POP)
632974	PASSENGER CLOSURE LH G YELLOW	Piaggio spare parts (POP)
632972	PASSENGER CLOSURE LH JET BLACK	Piaggio spare parts (POP)
632973	PASSENGER CLOSURE RH JET BLACK	Piaggio spare parts (POP)
6B002399	PASSENGER COMPARTMENT CARPET	Piaggio spare parts (POP)
587955	PASSENGER COMPARTMENT CARPET	Piaggio spare parts (POP)
605027	PASSENGER COMPARTMENT CARPET (RHD)	Piaggio spare parts (POP)
661493	PASSENGER COMPARTMENT CARPET(UPGRADE)	Piaggio spare parts (POP)
6B001596ED	PASSENGER DOOR COMPLETE ASSLY LH_ED	Piaggio spare parts (POP)
6B001597ED	PASSENGER DOOR COMPLETE ASSLY RH_ED	Piaggio spare parts (POP)
6B001549ED	PASSENGER DOOR COMPLETE ASSLY RH-ED	Piaggio spare parts (POP)
6B001758	PASSENGER REAR CARPET	Piaggio spare parts (POP)
6B000401	PASSENGER REAR CARPET - DSL	Piaggio spare parts (POP)
604578	PASSENGER SEAT	Piaggio spare parts (POP)
661375	PASSENGER SEAT ASSLY - 501 DOM	Piaggio spare parts (POP)
B078320	PASSENGER SEAT ASSLY - MID BODY	Piaggio spare parts (POP)
6B001800	PASSENGER SEAT ASSLY - MID BODY	Piaggio spare parts (POP)
6B001680	PASSENGER SEAT ASSLY - MID BODY	Piaggio spare parts (POP)
6B000935	PASSENGER SEAT ASSLY (DXL) (ALT FUEL)	Piaggio spare parts (POP)
6B002682	PASSENGER SEAT BACKREST ASSEMBLY	Piaggio spare parts (POP)
6B003045	PASSENGER SEAT BACKREST ASSLY	Piaggio spare parts (POP)
6B001883	PASSENGER SEAT BOTTOM	Piaggio spare parts (POP)
6B002684	PASSENGER SEAT BOTTOM ASSEMBLY	Piaggio spare parts (POP)
6B003047	PASSENGER SEAT BOTTOM ASSEMBLY	Piaggio spare parts (POP)
6B002412	PASSENGER SEAT S/A	Piaggio spare parts (POP)
B024516	PASSENGER SEAT S/A PAX BOTTOM	Piaggio spare parts (POP)
6B001823	PASSENGER SEAT S/A PAX BOTTOM FR	Piaggio spare parts (POP)

6B001878	PASSENGER SEAT-ELECTRIC	Piaggio spare parts (POP)
930101011	PASSION MAROON TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101011A	PASSION MAROON TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B078096	PASS-SPACE REAR CARPET (V.E.)	Piaggio spare parts (POP)
855252	Pasta three bond	Piaggio spare parts (POP)
141664	PAWL RETURN SPRING	Piaggio spare parts (POP)
940067	Paxx UG -TMC Major Kit	Piaggio spare parts (POP)
940068	Paxx. UG-TMC Minor Kit	Piaggio spare parts (POP)
L9080300	PC BUSH LDW 482 0.85% THROAT	Piaggio spare parts (POP)
6A000477	P-CLAMP, FUEL PIPE	Piaggio spare parts (POP)
SST94092	PE 1005 PISTON ASS. TOOL	Piaggio spare parts (POP)
SST94093	PE 1007 TAPPET SETTINGS TOOL	Piaggio spare parts (POP)
SST94094	PE 1013 FLY WHEEL LOCKING TOOL	Piaggio spare parts (POP)
SST94095	PE 1018 FUEL FILTER PANNEL	Piaggio spare parts (POP)
SST94089	PE INJECTION PUMP TIMIMG SETTINGS GAUGE	Piaggio spare parts (POP)
SST94090	PE INSERTION FOR INJECTOR REMOVAL	Piaggio spare parts (POP)
SST941120	PE1006 IDLER SHAFT LOCKING TOOL	Piaggio spare parts (POP)
SST941121	PE1008 TDC LOCLING TOOL	Piaggio spare parts (POP)
SST941122	PE1010 VALVE SPRING COMPRESSOR	Piaggio spare parts (POP)
SST941123	PE1014 CAMSHAFT LOCKING TOOL	Piaggio spare parts (POP)
6C000045	Pedal assly Clutch And Brake	Piaggio spare parts (POP)
B003134	PEDAL ASSY	Piaggio spare parts (POP)
B005848	PEDAL ASSY, CLUTCH & BRAKE (RHD)	Piaggio spare parts (POP)
1E001035	PEDAL ASSY, CLUTCH & BRAKE (RHD)	Piaggio spare parts (POP)
B074382	PEDAL ASSY, CLUTCH & BRAKE (RHD)	Piaggio spare parts (POP)
B002604	PEDAL BRACKET ASSEMBLY (BARE)	Piaggio spare parts (POP)
632784	PEDAL GROUP SUB ASSEMBLY	Piaggio spare parts (POP)
652423	PEDAL S/A CLUTCH	Piaggio spare parts (POP)
614249	PEDAL SUB ASSLY BRAKE	Piaggio spare parts (POP)
SST94143	PERIODIC MAINT SCHED.CITY CNG/LPG/DSL	Piaggio spare parts (POP)
SST94144	PERIODIC MAINTENANCE SCHED. PORTER 1000	Piaggio spare parts (POP)
SST94141	PERIODIC MAINTENANCE SCHEDULE 501 W	Piaggio spare parts (POP)
SST94145	PERIODIC MAINTENANCE SCHEDULE PORTER 700	Piaggio spare parts (POP)
B076732	PETROL SOLENOID BSIV	Piaggio spare parts (POP)
6A000500	PETROL SOLENOID WITH BKT.	Piaggio spare parts (POP)
LG8350025	Petrol Stop Needle	Piaggio spare parts (POP)
SST94096	PG 1009 INJECTOR SCREW REMOVING TOOL	Piaggio spare parts (POP)
SST94097	PG 1012 REAR OIL OGIVES	Piaggio spare parts (POP)
SST94098	PG 1014 PISTON PROTRUSION	Piaggio spare parts (POP)
SST94099	PG 1016 VALVE OIL SEAL DRIFT	Piaggio spare parts (POP)
SST94100	PG 1020 DIFF CASE BEARING INSTALLER	Piaggio spare parts (POP)
SST94101	PG 1021 DIFF CASE OUTER BITTMENT DOLLY	Piaggio spare parts (POP)
SST94102	PG 1022 OIL SEAL DOLLY	Piaggio spare parts (POP)
SST94105	PG 1024 GEAR PRESSING DOLLY WITH ADAPTOR	Piaggio spare parts (POP)
SST94106	PG 1027 DIFF LOCKING TOOL	Piaggio spare parts (POP)
SST94109	PG 1031 BRB BEARING FITTMENT DOLLY	Piaggio spare parts (POP)
SST94110	PG 1032 SH1 NRB BEARING PULLER	Piaggio spare parts (POP)

SST94111	PG 1032 SH2 NRB BEARING PULLER	Piaggio spare parts (POP)
SST94112	PG 1033 CLUTCH CENTERING TOOL	Piaggio spare parts (POP)
SST94113	PG1025 SH1 DIFF CASE BEARING PULLER	Piaggio spare parts (POP)
SST94114	PG1025 SH2 DIFF CASE BEARING PULLER	Piaggio spare parts (POP)
SST94115	PG1025 SH3 DIFF CASE BEARING PULLER	Piaggio spare parts (POP)
SST94116	PG1029 SH1 DIFF CASE BEARING PULLER	Piaggio spare parts (POP)
SST94117	PG1029 SH2 DIFF CASE BEARING PULLER	Piaggio spare parts (POP)
15996	PHIL RD HD SCREW M4X12	Piaggio spare parts (POP)
B074539	PHILIPS COUNTER SUNK HEAD SCREW M5X14	Piaggio spare parts (POP)
E40020430	PHILIPS HEAD SCREW (M5x8)	Piaggio spare parts (POP)
661925	PHILLIP PAN HEAD SCREW (M5 X 0.8 X 16)	Piaggio spare parts (POP)
B074468	PHILLIP PAN HEAD SCREW (M5 X 0.8 X 25)	Piaggio spare parts (POP)
ESK8694	PHILLIPS HEAD SCREW	Piaggio spare parts (POP)
929938	Phillips Screw-K-0101-04-300	Piaggio spare parts (POP)
929940	Phillips Screw-K-0101-04-320	Piaggio spare parts (POP)
B001503	PHILP RD HD SCREW (M4 X 20)	Piaggio spare parts (POP)
KD9820181	PHL HEAD SCR D3.53X6.5L	Piaggio spare parts (POP)
KD9820168	PHL HEAD SCR D3.9X9.5L	Piaggio spare parts (POP)
KD9865320	PHL HEAD SCR D3.9X9.5L	Piaggio spare parts (POP)
B078925	PIAGGIO STICKER (VISUAL BARRIER)	Piaggio spare parts (POP)
662139	PIAGGIO TAIL GATE (SANVA) STICKER FOR DA	Piaggio spare parts (POP)
662138	PIAGGIO TAIL GATE (SANVA) STICKER FOR LI	Piaggio spare parts (POP)
662137	PIAGGIO TAIL GATE (SUYASH) STICKER FOR D	Piaggio spare parts (POP)
662136	PIAGGIO TAIL GATE (SUYASH) STICKER FOR L	Piaggio spare parts (POP)
662323	PIAGGIO TAIL GATE (YESHSHREE) STICKER FO	Piaggio spare parts (POP)
587670R	PIANO SWITCH THREE POSITION	Piaggio spare parts (POP)
297029	Piano Washer	Piaggio spare parts (POP)
B003736BG	PICK UP CHASSIS WITH CAB DOORS BSIII-BG	Piaggio spare parts (POP)
B003736BW	PICK UP CHASSIS WITH CAB DOORS BSIII-BW	Piaggio spare parts (POP)
B003736CB	PICK UP CHASSIS WITH CAB DOORS BSIII-CB	Piaggio spare parts (POP)
B003736GY	PICK UP CHASSIS WITH CAB DOORS BSIII-GY	Piaggio spare parts (POP)
B003736SY	PICK UP CHASSIS WITH CAB DOORS BSIII-SY	Piaggio spare parts (POP)
B003736WR	PICK UP CHASSIS WITH CAB DOORS BSIII-WR	Piaggio spare parts (POP)
A03G130003	PICK UP COIL WITH DUST SEAL	Piaggio spare parts (POP)
E40005439	PICK UP COIL WITH DUST SEAL	Piaggio spare parts (POP)
B002818	PICK UP TRAY SIDE PANEL -CED	Piaggio spare parts (POP)
831443	PICK-UP	Piaggio spare parts (POP)
B002520CB	PICKUP CHASSIS WITH DOORS-CHARMING BLUE	Piaggio spare parts (POP)
B002520SY	PICKUP CHASSIS WITH DOORS-SAHARA YELLOW	Piaggio spare parts (POP)
661491	PIG TAIL - CABIN LAMP (PICK UP)	Piaggio spare parts (POP)
B003595R	PIG TAIL - CABIN LAMP APE MINI 441	Piaggio spare parts (POP)
B003595	PIG TAIL - CABIN LAMP MINI TRUK	Piaggio spare parts (POP)
B003110	PIG TAIL - FUEL TANK	Piaggio spare parts (POP)
B003110R	PIG TAIL - FUEL TANK	Piaggio spare parts (POP)
B001628	PIG TAIL - MOBILE CHARGER (APE TRUK PLU	Piaggio spare parts (POP)
B073320R	PIG TAIL- CABIN LAMP (NEW)-PASSENGER	Piaggio spare parts (POP)
661492	PIG TAIL- CABIN LAMP (PASS UPGRADE)	Piaggio spare parts (POP)

B041842R	PIG TAIL- COURTESY LAMP (EURO CITY)	Piaggio spare parts (POP)
B075178R	PIG TAIL- DRIVER CABIN LAMP (UPGRADE)	Piaggio spare parts (POP)
B008000	PIG TAIL -HT COIL APE CITY	Piaggio spare parts (POP)
B074442	PIG TAIL-AUTO HEAD LAMP	Piaggio spare parts (POP)
B077234	PIG TAIL-AUTO HEAD LAMP (CLASSIC EURO 4)	Piaggio spare parts (POP)
B041875	PIGTAIL CHARGING SYSTEM	Piaggio spare parts (POP)
B041985	PIGTAIL FOR THERMAL SW.	Piaggio spare parts (POP)
6D000945	PIGTAIL, ALTERNATOR	Piaggio spare parts (POP)
6D000452	PIGTAIL, BATTERY CABLE	Piaggio spare parts (POP)
6D001293	PIGTAIL, EBOX	Piaggio spare parts (POP)
6D000808	PIGTAIL, E-BOX	Piaggio spare parts (POP)
6D000936	PIGTAIL, E-BOX	Piaggio spare parts (POP)
6D001164	PIGTAIL, E-BOX	Piaggio spare parts (POP)
6D000939	PIGTAIL, E-BOX	Piaggio spare parts (POP)
6D000450	PIGTAIL, E-BOX	Piaggio spare parts (POP)
6D001087	PIGTAIL, FUEL FEED PUMP	Piaggio spare parts (POP)
6D000571	PIGTAIL, GLOW PLUG	Piaggio spare parts (POP)
6D000773	PIGTAIL, INJECTOR	Piaggio spare parts (POP)
6D000930	PIGTAIL, LICENCE PLATE LAMP	Piaggio spare parts (POP)
6D000374	PIGTAIL, LICENCE PLATE LAMP	Piaggio spare parts (POP)
6D000621	PIGTAIL, LPG MFV	Piaggio spare parts (POP)
6D000948	PIGTAIL, MUSIC SYSTEM	Piaggio spare parts (POP)
6D000345	PIGTAIL, SOC INDICATION	Piaggio spare parts (POP)
6D000931	PIGTAIL, TAIL LAMP LH	Piaggio spare parts (POP)
6D000932	PIGTAIL, TAIL LAMP RH	Piaggio spare parts (POP)
6D000667	PIGTAIL, VEHICLE SPEED SENSOR	Piaggio spare parts (POP)
6D001133	PIGTAIL,DC DC CONVERTER	Piaggio spare parts (POP)
6D001181	PIGTAIL,EBOX EX	Piaggio spare parts (POP)
6D001132	PIGTAIL,FUEL FEED PUMP	Piaggio spare parts (POP)
6D000719	PIGTAIL. FAREMETER	Piaggio spare parts (POP)
B073455	PIGTAIL_THERMAL SW_ENGINE - 510	Piaggio spare parts (POP)
LG4126124	Pillot Jet No.30	Piaggio spare parts (POP)
CM167801	PILOT JET	Piaggio spare parts (POP)
CM167802	PILOT JET	Piaggio spare parts (POP)
CM167803	PILOT JET	Piaggio spare parts (POP)
1A010025	PILOT SCREW	Piaggio spare parts (POP)
116332	PIN	Piaggio spare parts (POP)
E276843023	PIN	Piaggio spare parts (POP)
616807	PIN	Piaggio spare parts (POP)
198661	PIN	Piaggio spare parts (POP)
B076605	PIN	Piaggio spare parts (POP)
E270840056	Pin	Piaggio spare parts (POP)
E98420002	PIN	Piaggio spare parts (POP)
177133	PIN	Piaggio spare parts (POP)
227810	PIN	Piaggio spare parts (POP)
567500	PIN	Piaggio spare parts (POP)
E5007200048	PIN	Piaggio spare parts (POP)

E07500902	Pin	Piaggio spare parts (POP)
D6861787Z01	PIN	Piaggio spare parts (POP)
1A010192	PIN	Piaggio spare parts (POP)
1A008473	PIN	Piaggio spare parts (POP)
B014235	PIN	Piaggio spare parts (POP)
B074262	PIN	Piaggio spare parts (POP)
B010557	PIN	Piaggio spare parts (POP)
178811	PIN	Piaggio spare parts (POP)
1A012011	PIN	Piaggio spare parts (POP)
652001	PIN	Piaggio spare parts (POP)
E500620009	PIN	Piaggio spare parts (POP)
D9004243017	PIN	Piaggio spare parts (POP)
L6231237	PIN	Piaggio spare parts (POP)
L6231247	PIN	Piaggio spare parts (POP)
1A016577	PIN	Piaggio spare parts (POP)
E500620008	PIN	Piaggio spare parts (POP)
L6231236	PIN	Piaggio spare parts (POP)
E270614013	Pin	Piaggio spare parts (POP)
E283623092	Pin	Piaggio spare parts (POP)
132129	PIN	Piaggio spare parts (POP)
E500614080	PIN	Piaggio spare parts (POP)
AP9100197	Pin	Piaggio spare parts (POP)
611746	PIN	Piaggio spare parts (POP)
020719Y	PIN	Piaggio spare parts (POP)
03G160839	pin anti rotation interlock	Piaggio spare parts (POP)
03G160852	Pin cross gate lever	Piaggio spare parts (POP)
888042	PIN - INJECTOR CLAMP SUPPORT	Piaggio spare parts (POP)
108803	PIN AIR DEFLECTOR CLOSING LEVER	Piaggio spare parts (POP)
ED30956	PIN CAM FOLLOWER	Piaggio spare parts (POP)
127013013	PIN CLUTCH	Piaggio spare parts (POP)
E87000933	PIN CONTROL LEVER	Piaggio spare parts (POP)
KD841R013	PIN D3X11	Piaggio spare parts (POP)
KD841R043	PIN D4X16	Piaggio spare parts (POP)
020894Y	PIN EXTRACTOR	Piaggio spare parts (POP)
660033	PIN FOR AIR DEFLECTOR (SS)	Piaggio spare parts (POP)
970300525	PIN FOR CAMSHAFT TIMING	Piaggio spare parts (POP)
020851Y	Pin for counter-shaft	Piaggio spare parts (POP)
970300516	PIN FOR CRANKSHAFT TIMING	Piaggio spare parts (POP)
ED43397	Pin for feed pump	Piaggio spare parts (POP)
ED41931	PIN FOR FEED PUMP	Piaggio spare parts (POP)
E07508919	Pin for governor gear	Piaggio spare parts (POP)
604589	PIN FOR LEVER	Piaggio spare parts (POP)
126053016	PIN FOR ROLLER	Piaggio spare parts (POP)
L6185023	PIN FOR ROLLER	Piaggio spare parts (POP)
126022017	PIN FOR SLIDER BLOCK	Piaggio spare parts (POP)
E87000929	PIN GOVERNOR FLYWIEGHT	Piaggio spare parts (POP)
925835	PIN KIT	Piaggio spare parts (POP)

E270614116	Pin lever assy.	Piaggio spare parts (POP)
ED41961	Pin lever assy. Consisting of sr. nos.	Piaggio spare parts (POP)
L6231234	PIN OF IDLER	Piaggio spare parts (POP)
B024005	PIN RC GEAR SHIFT	Piaggio spare parts (POP)
B024004	PIN RC LEVER HINGE	Piaggio spare parts (POP)
970300547	Pin removing tool for main shaft selecto	Piaggio spare parts (POP)
L1970453	PIN RETAIN BUSH	Piaggio spare parts (POP)
020470Y	Pin retainers installation	Piaggio spare parts (POP)
03G160410	pin reverse assy	Piaggio spare parts (POP)
E271201523	Pin with cam	Piaggio spare parts (POP)
LG95801128	Pinch Tube for Breather LGA 280	Piaggio spare parts (POP)
D4554087513	PINION ASSY, STEERING	Piaggio spare parts (POP)
B002091	PINION SHAFT	Piaggio spare parts (POP)
127503018	PINION SHAFT (MODIFIED)	Piaggio spare parts (POP)
441038	PINION SHAFT BALL BEARING PRESSING	Piaggio spare parts (POP)
441044	PINION SHAFT FITTING TOOL	Piaggio spare parts (POP)
925679	PIN-LEVER ROTATION SEAT FRAME S/A	Piaggio spare parts (POP)
E500614175	PIN-RACK CONTROL LEVER	Piaggio spare parts (POP)
E50017128	PIPE	Piaggio spare parts (POP)
E50017196	PIPE	Piaggio spare parts (POP)
A01A090004	PIPE - ROCKER LUBRICATION	Piaggio spare parts (POP)
ESP650DFP025	PIPE (FIPINLET)	Piaggio spare parts (POP)
ESP650DLB001	PIPE (PTO COVER TO VACUUM PUMP)	Piaggio spare parts (POP)
ESP650DFP026	PIPE (VACUUM MODULATOR TO EGR VALVE)	Piaggio spare parts (POP)
ESP650DFP015	PIPE (VACUUM PUMP TO VACUUM MODULATOR)	Piaggio spare parts (POP)
E87137128	PIPE ADAPTOR TO MODULATOR	Piaggio spare parts (POP)
03G161215	pipe and bracket assy rear lubrication	Piaggio spare parts (POP)
6A001042	PIPE ASM FILLING VALVE TO HP REGULATOR	Piaggio spare parts (POP)
1E001290	PIPE ASSY, COOL AIR INTAKE, N°1 UPR.	Piaggio spare parts (POP)
1E002538	PIPE ASSY, FUEL (SICHUAN TECH)	Piaggio spare parts (POP)
B025742	PIPE ASSY, CONVERTER(BASF Ø4 "x3"15g/ft3)	Piaggio spare parts (POP)
B010692	PIPE BLOW-BY	Piaggio spare parts (POP)
B076007	PIPE CLIP 1 WAY	Piaggio spare parts (POP)
B076241	PIPE CLIP 2WAY	Piaggio spare parts (POP)
1A006593	PIPE COOL AIR INTAKE	Piaggio spare parts (POP)
E87027174	PIPE DRAIN OIL SEPERATOR	Piaggio spare parts (POP)
E43507357	PIPE EGR ON OFF EGR	Piaggio spare parts (POP)
E43510825	PIPE EXHAUST	Piaggio spare parts (POP)
E40010844	Pipe Exhaust (Exhaust Flange To Oxycat)	Piaggio spare parts (POP)
ESP650DLB005	PIPE FEW LUBRICATION	Piaggio spare parts (POP)
ED41150	PIPE FILTER TO FUEL PUMP	Piaggio spare parts (POP)
E50017104	PIPE FILTER TO PUMP	Piaggio spare parts (POP)
ESP650DLB006	PIPE FIP LUBRICATION	Piaggio spare parts (POP)
1A010109	PIPE FITTING	Piaggio spare parts (POP)
1A017312	PIPE FROM WATER PUMP TO CYLINDER	Piaggio spare parts (POP)
1A017297	PIPE FROM WATER PUMP TO RADIATOR	Piaggio spare parts (POP)
889603	PIPE HP - PUMP TO RAIL	Piaggio spare parts (POP)

889595	PIPE HP - RAIL TO INJECTOR	Piaggio spare parts (POP)
889596	PIPE HP - RAIL TO INJECTOR	Piaggio spare parts (POP)
B010955	PIPE HP-PUMP TO RAIL	Piaggio spare parts (POP)
E87027172	PIPE INLET - OIL SEPERATOR	Piaggio spare parts (POP)
B079273	PIPE KIT FOR HOOD FRAME ASSLY	Piaggio spare parts (POP)
6B001759	PIPE KIT FOR HOOD FRAME ASSLY	Piaggio spare parts (POP)
B002307	PIPE LUGGAGE COMPARTMENT	Piaggio spare parts (POP)
E87137126	PIPE MODULATOR TO EGR VALVE	Piaggio spare parts (POP)
B009757	PIPE NO 1 AIR CLEANER (SNORKEL)	Piaggio spare parts (POP)
B041659	PIPE NO 1 SUB ASSLY	Piaggio spare parts (POP)
B041425	PIPE NO 2 AIR CLEANER (SNORKEL)	Piaggio spare parts (POP)
B041660	PIPE NO 2 SUB ASSLY	Piaggio spare parts (POP)
ESP650DLB007	PIPE OIL RETURN (CYL.HEAD TO CRANKCASE)	Piaggio spare parts (POP)
ESP650DLB014	PIPE OIL RETURN (OMS TO CRANKCASE)	Piaggio spare parts (POP)
ESP650DLB004	PIPE OIL RETURN (VACUUM PUMP TO OIL PAN)	Piaggio spare parts (POP)
645298	PIPE OUTLET	Piaggio spare parts (POP)
E87027173	PIPE OUTLET OIL SEPERATOR	Piaggio spare parts (POP)
E87037121	PIPE OUTLET OIL SEPERATOR	Piaggio spare parts (POP)
E50017198	PIPE OVERFLOW	Piaggio spare parts (POP)
ED31570	PIPE OVERFLOW	Piaggio spare parts (POP)
E500071100	PIPE PUMP OVERFLOW	Piaggio spare parts (POP)
E87027118	PIPE ROCKER	Piaggio spare parts (POP)
ESP650DLB002	PIPE ROCKER LUBRICATION	Piaggio spare parts (POP)
B001433	PIPE S/A - BODY HEADER	Piaggio spare parts (POP)
B001434	PIPE S/A - MIDDLE	Piaggio spare parts (POP)
B003943	PIPE S/A OUTLET/INLET RADIATOR	Piaggio spare parts (POP)
658244	PIPE S/A OUTLET/INLET RADIATOR	Piaggio spare parts (POP)
614123	PIPE S/A OUTLET/INLET RADIATOR,	Piaggio spare parts (POP)
B001918	PIPE SIDE FRONT	Piaggio spare parts (POP)
B075608	PIPE STRUCTURED CYLINDER MTG ASSLY-CNG	Piaggio spare parts (POP)
B075616	PIPE STRUCTURED CYLINDER MTG ASSLY-LPG	Piaggio spare parts (POP)
B041782	PIPE STRUCTURED CYLINDER MTG ASSLY-LPG	Piaggio spare parts (POP)
ED41186	PIPE TANK TO FEED PUMP	Piaggio spare parts (POP)
E40017129	PIPE TANK TO FEED PUMP	Piaggio spare parts (POP)
E40017131	PIPE TANK TO FEED PUMP(PASS)	Piaggio spare parts (POP)
E50017103	PIPE TANK TO FILTER	Piaggio spare parts (POP)
L7330341	PIPE UNION FOR OIL FILTER	Piaggio spare parts (POP)
E87137127	PIPE VACCUM PUMP TO ADAPTOR	Piaggio spare parts (POP)
B025727	PIPE, AIR FILTER OUTLET	Piaggio spare parts (POP)
1E001640	PIPE, BY-PASS AND EXPANSION TANK RETURN	Piaggio spare parts (POP)
1E001234	PIPE, COOL AIR INTAKE, N°1 LWR.	Piaggio spare parts (POP)
1E000927	PIPE, COOL AIR INTAKE, N°2	Piaggio spare parts (POP)
1E000956	PIPE, COOL AIR INTAKE, N°3	Piaggio spare parts (POP)
B073351	PIPE, COOL AIR INTAKE, NO.3	Piaggio spare parts (POP)
1E001611	Pipe, Fuel Filter - High Pressure Pump	Piaggio spare parts (POP)
B007750	PIPE, FUEL FILTER- HIGH PRESSURE PUMP	Piaggio spare parts (POP)
E10T070007	PIPE-EGR	Piaggio spare parts (POP)

E10T070002	PIPE-EXHAUST(EXHAUST FLANGE TO OXYCAT)	Piaggio spare parts (POP)
B073134	PIPES ASSY RADIATOR OUTLET/INLET	Piaggio spare parts (POP)
B025884	PIPES ASSY RADIATOR OUTLET/INLET	Piaggio spare parts (POP)
B025883	PIPES S/A RADIATOR OULET/INLET	Piaggio spare parts (POP)
B023515	PIPES S/A, RADIATOR OUTLET, No1	Piaggio spare parts (POP)
E50006495029	PISTON	Piaggio spare parts (POP)
E400105164	PISTON	Piaggio spare parts (POP)
E5406500850	PISTON	Piaggio spare parts (POP)
940204	Piston "A" grade BSIV	Piaggio spare parts (POP)
940205	Piston "B" grade BSIV	Piaggio spare parts (POP)
E53010595	PISTON &RING ASSY STD	Piaggio spare parts (POP)
KD6502423	PISTON 15LD441	Piaggio spare parts (POP)
KD6502469	PISTON 15LD441	Piaggio spare parts (POP)
L6501924	PISTON 'A'	Piaggio spare parts (POP)
L6501472	PISTON A CLASS	Piaggio spare parts (POP)
940168	Piston A grade BSII	Piaggio spare parts (POP)
940170	Piston A grade BSIII	Piaggio spare parts (POP)
E870105205B	PISTON ASSEMBLY	Piaggio spare parts (POP)
ESP650DBP003	PISTON ASSEMBLY	Piaggio spare parts (POP)
A01A050004	PISTON ASSEMBLY	Piaggio spare parts (POP)
E870105207	PISTON ASSEMBLY	Piaggio spare parts (POP)
B011439	PISTON ASSEMBLY	Piaggio spare parts (POP)
889740	PISTON ASSEMBLY	Piaggio spare parts (POP)
E87020554	PISTON ASSEMBLY (CONSIST OF	Piaggio spare parts (POP)
E40020509	PISTON ASSLY A MOD BS-II	Piaggio spare parts (POP)
E40020510	PISTON ASSLY B MOD BS-II	Piaggio spare parts (POP)
E40020512	PISTON ASSLY C MOD BS-II	Piaggio spare parts (POP)
L6501961	PISTON ASSLY CL A	Piaggio spare parts (POP)
L6501962	PISTON ASSLY CL B	Piaggio spare parts (POP)
E400105201	PISTON ASSLY GRADE - A	Piaggio spare parts (POP)
E400105202	PISTON ASSLY GRADE - B	Piaggio spare parts (POP)
E400105203	PISTON ASSLY GRADE - C	Piaggio spare parts (POP)
E40010598	PISTON ASSLY GRADE B	Piaggio spare parts (POP)
E40010599	PISTON ASSLY GRADE C	Piaggio spare parts (POP)
441036	PISTON ASSLY HOLDING TOOL	Piaggio spare parts (POP)
KIT95127R	Piston Assly. Ape 501_300CC CNG &LPG BS6	Piaggio spare parts (POP)
KIT95102R	Piston Assly. Ape 501_300CC PTL BSVI	Piaggio spare parts (POP)
E40020537	PISTON ASSLY-CNG	Piaggio spare parts (POP)
KIT1U000024	Piston Assy	Piaggio spare parts (POP)
E87120583	Piston Assy	Piaggio spare parts (POP)
1U000024	PISTON ASSY	Piaggio spare parts (POP)
KD6502904	Piston assy	Piaggio spare parts (POP)
KD6502468	Piston assy	Piaggio spare parts (POP)
LG6502322	Piston Assy 0.50	Piaggio spare parts (POP)
LG6502323	Piston Assy 1.0	Piaggio spare parts (POP)
KIT96057R	Piston Assy 230CC	Piaggio spare parts (POP)
KIT96042R	Piston Assy APE CITY+BS4/Ape city BS6CNG	Piaggio spare parts (POP)

E40020563	PISTON ASSY GRADE "A"	Piaggio spare parts (POP)
E40020564	PISTON ASSY GRADE "B"	Piaggio spare parts (POP)
E43520571	PISTON ASSY GRADE 'A'	Piaggio spare parts (POP)
E40020538	PISTON ASSY GRADE 'B'	Piaggio spare parts (POP)
E43520572	PISTON ASSY GRADE 'B'	Piaggio spare parts (POP)
KD6502913	Piston Assy KD441 [Menp]	Piaggio spare parts (POP)
LG6502321	Piston Assy STD	Piaggio spare parts (POP)
E075105161	Piston assy. Grade 'A' with ring set pis	Piaggio spare parts (POP)
E075105162	Piston assy. Grade 'B' with ring set pis	Piaggio spare parts (POP)
KIT96053R	Piston Assy.230_C/L_BS6	Piaggio spare parts (POP)
KIT96055R	Piston Assy.230CC_(PTL BS6)	Piaggio spare parts (POP)
E10A050001	PISTON ASSY.GRADE"A"SUITABLE FOR Ø20PIN	Piaggio spare parts (POP)
E10A050001A	PISTON ASSY.GRADE"A"SUITABLE FOR Ø20PIN	Piaggio spare parts (POP)
E10A050001B	PISTON ASSY.GRADE"B"SUITABLE FOR Ø20PIN	Piaggio spare parts (POP)
E40010597	PISTON ASSY.STD.(GRADE A)WHITE COLOUR	Piaggio spare parts (POP)
L6501925	PISTON 'B'	Piaggio spare parts (POP)
L6501473	PISTON B CLASS	Piaggio spare parts (POP)
E40020535	PISTON B GRADE	Piaggio spare parts (POP)
940169	Piston B grade BSII	Piaggio spare parts (POP)
L6501810	PISTON 'C'	Piaggio spare parts (POP)
L6501474	PISTON C CLASS	Piaggio spare parts (POP)
1A008823	PISTON COOLING JET	Piaggio spare parts (POP)
L6501926	PISTON 'D'	Piaggio spare parts (POP)
L6501475	PISTON D CLASS	Piaggio spare parts (POP)
LG6502254	PISTON D.74 LGA280 AUTOMO	Piaggio spare parts (POP)
L65021648	PISTON D86 LDW 482 SP	Piaggio spare parts (POP)
L6501476	PISTON E CLASS	Piaggio spare parts (POP)
925504	PISTON FRT (KBX P 7633789)	Piaggio spare parts (POP)
E40020506	PISTON GR A GL400 II (MOD)	Piaggio spare parts (POP)
E40020507	PISTON GR B - GL400 BS II (MOD)	Piaggio spare parts (POP)
B019006	PISTON Ø62.6	Piaggio spare parts (POP)
1A013355	PISTON Ø62.6	Piaggio spare parts (POP)
1A018094	PISTON Ø62.6	Piaggio spare parts (POP)
1A017605	PISTON Ø62.6	Piaggio spare parts (POP)
B014442	PISTON Ø62.6	Piaggio spare parts (POP)
1A005857	PISTON Ø62.6	Piaggio spare parts (POP)
1A019355	PISTON Ø72	Piaggio spare parts (POP)
1A012387	PISTON PIN	Piaggio spare parts (POP)
E50011404	PISTON PIN	Piaggio spare parts (POP)
L84801158	PISTON PIN	Piaggio spare parts (POP)
ESP650DBP006	PISTON PIN	Piaggio spare parts (POP)
L8480115	PISTON PIN	Piaggio spare parts (POP)
L8480107	PISTON PIN	Piaggio spare parts (POP)
482335	PISTON PIN U	Piaggio spare parts (POP)
KD8480103	PISTON PIN 15LD400	Piaggio spare parts (POP)
LG8480120	PISTON PIN 17X55 LGA AUTOMOT.	Piaggio spare parts (POP)
293404	PISTON PIN 50cc	Piaggio spare parts (POP)

KD1160065	PISTON PIN CIRCLIP	Piaggio spare parts (POP)
LG1160059	PISTON PIN CIRCLIP	Piaggio spare parts (POP)
486294	PISTON RING	Piaggio spare parts (POP)
E43502767	PISTON RING (OIL)	Piaggio spare parts (POP)
KD8026244	PISTON RING 1°SEAT D86 15LD440	Piaggio spare parts (POP)
KD8026245	PISTON RING 2°SEAT D86 15LD400	Piaggio spare parts (POP)
970300503	PISTON RING COMPRESSOR	Piaggio spare parts (POP)
970300591	PISTON RING COMPRESSOR	Piaggio spare parts (POP)
1A009621R	PISTON RING GROUP	Piaggio spare parts (POP)
E07501499	Piston ring set	Piaggio spare parts (POP)
A01A050003	PISTON RING SET	Piaggio spare parts (POP)
ESP650DBP004	PISTON RING SET	Piaggio spare parts (POP)
E87011435	PISTON RING SET	Piaggio spare parts (POP)
L8211269	PISTON RING SET	Piaggio spare parts (POP)
L8211263	PISTON RING SET STD	Piaggio spare parts (POP)
E53010474	PISTON RING SET 0.5 MM O/S	Piaggio spare parts (POP)
E40011420	PISTON RING SET MOD BS-II	Piaggio spare parts (POP)
E40011420P	PISTON RING SET MOD BS-II	Piaggio spare parts (POP)
E40001428	PISTON RING SET STANDARD.	Piaggio spare parts (POP)
E43511440	PISTON RING SET STD	Piaggio spare parts (POP)
E53010476	PISTON RING SET STD.	Piaggio spare parts (POP)
L6501920	PISTON SET STD	Piaggio spare parts (POP)
L6502173	PISTON SET STD A LDW 422 (BS II	Piaggio spare parts (POP)
L6502176	PISTON SET STD D LDW 422 (BS II	Piaggio spare parts (POP)
L6502174	PISTON SET STD B LDW 422 (BS II	Piaggio spare parts (POP)
L65022588	PISTON SET STD D86 LDW 482	Piaggio spare parts (POP)
L6502177	PISTON SET STD E LDW 422 (BS II	Piaggio spare parts (POP)
1A010100	PISTON SPRING	Piaggio spare parts (POP)
B016392	PISTON SPRING	Piaggio spare parts (POP)
932237	PISTON SUB ASSY.(K-0101-04-07)Paxx200	Piaggio spare parts (POP)
441031	PISTON TDC LOCATION	Piaggio spare parts (POP)
E40006449	PISTON VALVE	Piaggio spare parts (POP)
B016829	PISTON VALVE SPRING	Piaggio spare parts (POP)
113099	PIVOT	Piaggio spare parts (POP)
B009460	PIVOT BREACKET	Piaggio spare parts (POP)
925811	PIVOT BUSH	Piaggio spare parts (POP)
925809	PIVOT BUSH (MOTOR)	Piaggio spare parts (POP)
604558	PIVOT FOR LEVER FOR CLOSING DOORS	Piaggio spare parts (POP)
604972	PIVOT GASKET-APE LOGO PLATE	Piaggio spare parts (POP)
925797	PIVOT HOUSING ASSY.	Piaggio spare parts (POP)
L6231238	PIVOT WITH I. P.	Piaggio spare parts (POP)
B024472	PL DASHBOARD _601HBAR(FOR INST CLUSTER	Piaggio spare parts (POP)
B008167	PL WASHER 12X3.2X1	Piaggio spare parts (POP)
16670	PL WASHER 12X4.5X1	Piaggio spare parts (POP)
6078	PL WASHER 12X5.2X1	Piaggio spare parts (POP)
6125	PL WASHER 14X6.4X1.5	Piaggio spare parts (POP)
16620	PL WASHER 14X8X0.2	Piaggio spare parts (POP)

3058	PL WASHER 15 X 8.4 X 1.5	Piaggio spare parts (POP)
16626	PL WASHER 18X10.5X2	Piaggio spare parts (POP)
6018	PL WASHER 19X5.1X1	Piaggio spare parts (POP)
13861	PL WASHER 20 X 8.2 X 2.5	Piaggio spare parts (POP)
48197	PL WASHER 24X16X1.5	Piaggio spare parts (POP)
87067	PL WASHER 30.5X14.3X2	Piaggio spare parts (POP)
13782	PL WASHER 8X3.2X0.5	Piaggio spare parts (POP)
KD7625007	PL WASHER D12/6 1 THK	Piaggio spare parts (POP)
LG7625332	PL WASHER D12/6.4 1.6 THK	Piaggio spare parts (POP)
L7620017	PL WASHER D14/6.2 0.5 THK C70	Piaggio spare parts (POP)
LG7625286	PL WASHER D20/6.2 2 THK	Piaggio spare parts (POP)
LG7625306	PL WASHER D20/8.5 2 THK	Piaggio spare parts (POP)
KD7626043	PL WASHER D40/14.5 9 THK SP	Piaggio spare parts (POP)
3057	PL. WASHER 13 X 7 X 1	Piaggio spare parts (POP)
KD7625303	PL. WASHER D10/6.5 1.5 THK	Piaggio spare parts (POP)
KD7625105	PL. WASHER D15/8.2 0.5 THK STE	Piaggio spare parts (POP)
LG7625105	PL. WASHER D15/8.2 0.5 THK STE	Piaggio spare parts (POP)
KD1301245	PL. WASHER D28/16 0.5 THK C67	Piaggio spare parts (POP)
658258	PL. WASHER M12	Piaggio spare parts (POP)
KD1301354	PL.WASHER D29.8/18 0.5 THK C67	Piaggio spare parts (POP)
116831	PLAIN METALLIC WASHER (826000828)	Piaggio spare parts (POP)
16603	PLAIN METTALIC WASHER (826000529)	Piaggio spare parts (POP)
13880	PLAIN WASHER	Piaggio spare parts (POP)
E50000307	PLAIN WASHER	Piaggio spare parts (POP)
13950	PLAIN WASHER	Piaggio spare parts (POP)
E50000307A	PLAIN WASHER	Piaggio spare parts (POP)
E97626048	PLAIN WASHER	Piaggio spare parts (POP)
E5762510	PLAIN WASHER	Piaggio spare parts (POP)
3062	PLAIN WASHER	Piaggio spare parts (POP)
E50000643	PLAIN WASHER	Piaggio spare parts (POP)
13092	PLAIN WASHER	Piaggio spare parts (POP)
272932	PLAIN WASHER	Piaggio spare parts (POP)
L1175085	PLAIN WASHER	Piaggio spare parts (POP)
709056	PLAIN WASHER	Piaggio spare parts (POP)
13754	PLAIN WASHER	Piaggio spare parts (POP)
632471	PLAIN WASHER	Piaggio spare parts (POP)
E45762512	PLAIN WASHER	Piaggio spare parts (POP)
E97626065	PLAIN WASHER	Piaggio spare parts (POP)
3056	PLAIN WASHER	Piaggio spare parts (POP)
3068	PLAIN WASHER	Piaggio spare parts (POP)
13958	PLAIN WASHER	Piaggio spare parts (POP)
1A004222	PLAIN WASHER	Piaggio spare parts (POP)
L7490019	PLAIN WASHER	Piaggio spare parts (POP)
1A020581	PLAIN WASHER	Piaggio spare parts (POP)
B012365	PLAIN WASHER	Piaggio spare parts (POP)
78186	PLAIN WASHER	Piaggio spare parts (POP)
889301	PLAIN WASHER	Piaggio spare parts (POP)

B074099	PLAIN WASHER (SS)	Piaggio spare parts (POP)
B074101	PLAIN WASHER (SS)	Piaggio spare parts (POP)
E500762589	Plain Washer 0.3 mm	Piaggio spare parts (POP)
E270762502	Plain Washer 0.5 mm	Piaggio spare parts (POP)
3060	PLAIN WASHER 10.5 X 18 X 2	Piaggio spare parts (POP)
6066	PLAIN WASHER 10.5 X 38 X 3	Piaggio spare parts (POP)
6177	PLAIN WASHER 16 X 8.5 X 1	Piaggio spare parts (POP)
B008915	PLAIN WASHER 16.6X10.2X1	Piaggio spare parts (POP)
2383	PLAIN WASHER 20 X 8.5 X 2	Piaggio spare parts (POP)
286328	PLAIN WASHER 20X10.2X2	Piaggio spare parts (POP)
B024489	PLAIN WASHER 20X10.2X2.5	Piaggio spare parts (POP)
660031	PLAIN WASHER 5.2 X 18 X 2 (SS)	Piaggio spare parts (POP)
660032	PLAIN WASHER 6.2 X 18 X 2 (SS)	Piaggio spare parts (POP)
13755	PLAIN WASHER 6.5 X 20 X 2	Piaggio spare parts (POP)
140728	PLAIN WASHER 8.5 X 24 X 3	Piaggio spare parts (POP)
E1762507	PLAIN WASHER FOR M6 ROR FDC LEVER	Piaggio spare parts (POP)
604973	PLAIN WASHER M6	Piaggio spare parts (POP)
808000826	PLAIN WASHER M8	Piaggio spare parts (POP)
KD7625008	PLAIN WASHERS 6,4X12,5X1,6	Piaggio spare parts (POP)
LG7625008	PLAIN WASHERS 6,4X12,5X1,6	Piaggio spare parts (POP)
LG7626051	PLAIN WASHERS 6X20X2	Piaggio spare parts (POP)
KD7625061	PLAIN WASHERS 8,4X16X3	Piaggio spare parts (POP)
LG7625061	PLAIN WASHERS 8,4X16X3	Piaggio spare parts (POP)
E87000675	PLAINWASHER	Piaggio spare parts (POP)
E97626043	PLAINWASHER	Piaggio spare parts (POP)
ESP650DNB035	PLAINWASHER	Piaggio spare parts (POP)
13842	PLANE METALLIC WASHER	Piaggio spare parts (POP)
1A002661	PLANE SPRING	Piaggio spare parts (POP)
1A010026	PLANE WASHER	Piaggio spare parts (POP)
B009744	PLANE WASHER M12	Piaggio spare parts (POP)
1F000613	PLANETARY GEAR	Piaggio spare parts (POP)
B011886	PLANETARY GEAR	Piaggio spare parts (POP)
1F000612	PLANETARY GEAR WASHER	Piaggio spare parts (POP)
LG9695030	PLASTIC BREATHER	Piaggio spare parts (POP)
E10G110005	PLASTIC CAP- AIR FILTER FLANGE BSIV	Piaggio spare parts (POP)
E87006416	PLASTIC CAP FOR AIR INLET MANIFOLD	Piaggio spare parts (POP)
E87006424	PLASTIC CAP FOR AIR VENT AT THERMSTAT	Piaggio spare parts (POP)
E87006417	PLASTIC CAP FOR EXHAUST MANIFOLD	Piaggio spare parts (POP)
E87006422	PLASTIC CAP FOR WATER OUTLET BYPASS	Piaggio spare parts (POP)
E87006418	PLASTIC CAP FOR WATER OUTLET MANIFOLD	Piaggio spare parts (POP)
E87006421	PLASTIC CAP FOR WATER PUMP BYPASS	Piaggio spare parts (POP)
E87006419	PLASTIC CAP FOR WATER PUMP INLET	Piaggio spare parts (POP)
145298	PLASTIC CLAMP	Piaggio spare parts (POP)
6C000460	Plastic clamp_Tommy bar	Piaggio spare parts (POP)
6B000049	PLASTIC COVER	Piaggio spare parts (POP)
6B001312	PLASTIC COVER ATTACHMENT LH	Piaggio spare parts (POP)
6B001313	PLASTIC COVER ATTACHMENT RH	Piaggio spare parts (POP)

B024501	PLASTIC COVER PLUG-CARGO	Piaggio spare parts (POP)
6D000289	PLASTIC COVER-ELECT CLUSTER	Piaggio spare parts (POP)
B073492	PLASTIC COVER-ELECT CLUSTER	Piaggio spare parts (POP)
B042631	PLASTIC DASHBOARD -APE CLASSIC NEW	Piaggio spare parts (POP)
6B001462	PLASTIC FASTENER	Piaggio spare parts (POP)
B075843	PLASTIC HOSE CLIP	Piaggio spare parts (POP)
B075842	PLASTIC HOSE CLIP	Piaggio spare parts (POP)
6B001785	PLASTIC PART INNER LH	Piaggio spare parts (POP)
6B001389	PLASTIC PART INNER LH	Piaggio spare parts (POP)
6B001786	PLASTIC PART INNER RH	Piaggio spare parts (POP)
6B001388	PLASTIC PART INNER RH	Piaggio spare parts (POP)
B078265	PLASTIC TIE	Piaggio spare parts (POP)
L6370592	PLATE	Piaggio spare parts (POP)
108834	PLATE	Piaggio spare parts (POP)
569375	PLATE	Piaggio spare parts (POP)
1A017957	PLATE	Piaggio spare parts (POP)
614069	PLATE	Piaggio spare parts (POP)
575268	PLATE	Piaggio spare parts (POP)
567733	PLATE	Piaggio spare parts (POP)
569244	PLATE	Piaggio spare parts (POP)
569377	PLATE	Piaggio spare parts (POP)
615592	PLATE	Piaggio spare parts (POP)
264045	PLATE	Piaggio spare parts (POP)
264046	PLATE	Piaggio spare parts (POP)
567945	PLATE	Piaggio spare parts (POP)
615549	PLATE - BRAKE PEDAL 870	Piaggio spare parts (POP)
B003658	PLATE CNG	Piaggio spare parts (POP)
B003657	PLATE LPG	Piaggio spare parts (POP)
B003652	PLATE PETROL	Piaggio spare parts (POP)
E87015566	PLATE TIMING	Piaggio spare parts (POP)
652008	PLATE - WASHER TANK MTG (501-CARGO)	Piaggio spare parts (POP)
B003811	PLATE AIR FILTER MTG LGA280	Piaggio spare parts (POP)
652418	PLATE- APE	Piaggio spare parts (POP)
632435	PLATE APE AUTO CNG	Piaggio spare parts (POP)
632299	PLATE ASSLY	Piaggio spare parts (POP)
190462	PLATE ASSY	Piaggio spare parts (POP)
615034	PLATE ASSY BRAKE BACKING FR, LH	Piaggio spare parts (POP)
615035	PLATE ASSY BRAKE BACKING FR. RH.	Piaggio spare parts (POP)
662510	PLATE ASSY. DOOR LOCK STRIKER	Piaggio spare parts (POP)
B074544	PLATE BRAKE BACKING RR LH	Piaggio spare parts (POP)
658197	PLATE BRAKE BACKING RR LH	Piaggio spare parts (POP)
B074545	PLATE BRAKE BACKING RR RH	Piaggio spare parts (POP)
658198	PLATE BRAKE BACKING RR RH	Piaggio spare parts (POP)
643762	PLATE CARR.	Piaggio spare parts (POP)
1A012155	PLATE CLUTCH	Piaggio spare parts (POP)
1A019390	PLATE CLUTCH	Piaggio spare parts (POP)
1A019387	PLATE CLUTCH ASSLY	Piaggio spare parts (POP)

1A012151	PLATE CLUTCH ASSY	Piaggio spare parts (POP)
KD8510184	PLATE COMPLETE	Piaggio spare parts (POP)
520221019	PLATE ENGINE SIDE COVER	Piaggio spare parts (POP)
ED33241	PLATE FEED PUMP	Piaggio spare parts (POP)
1E000829	PLATE FOR FIXING THE HEATER BRACKET	Piaggio spare parts (POP)
217167	PLATE FOR PULLER LEVER ASSEMBLY	Piaggio spare parts (POP)
136916	PLATE FOR RETAINING THE BRAKE FLEX. PIPE	Piaggio spare parts (POP)
889320	PLATE FOR SAFETY PIN PALLET TAPER	Piaggio spare parts (POP)
660751	PLATE FRONT DOME	Piaggio spare parts (POP)
B041459	PLATE FRONT DOME -APE CITY	Piaggio spare parts (POP)
660796	PLATE FRONT DOME STICKER	Piaggio spare parts (POP)
L6370741	PLATE GEAR BOX	Piaggio spare parts (POP)
B003411	PLATE GEARBOX S/A	Piaggio spare parts (POP)
1A017154	PLATE HUB	Piaggio spare parts (POP)
1A017640	PLATE HUB	Piaggio spare parts (POP)
587707	PLATE LEFT FRONT	Piaggio spare parts (POP)
B009345	PLATE LEFT FRONT	Piaggio spare parts (POP)
587705	PLATE LEFT REAR	Piaggio spare parts (POP)
B009344	PLATE LEFT REAR	Piaggio spare parts (POP)
632566	PLATE LOW EMISSION ADVANCED POWER PAC	Piaggio spare parts (POP)
587706	PLATE RIGHT FRONT	Piaggio spare parts (POP)
B009342	PLATE RIGHT FRONT	Piaggio spare parts (POP)
587704	PLATE RIGHT REAR	Piaggio spare parts (POP)
B009343	PLATE RIGHT REAR	Piaggio spare parts (POP)
614787	PLATE S/A CONTACT	Piaggio spare parts (POP)
614411	PLATE S/A BRAKE BACKING FR LH	Piaggio spare parts (POP)
614412	PLATE S/A BRAKE BACKING FR RH	Piaggio spare parts (POP)
662329	PLATE S/A BRAKE BACKING RR LH	Piaggio spare parts (POP)
662330	PLATE S/A BRAKE BACKING RR RH	Piaggio spare parts (POP)
B024990	PLATE S/A SIDE FRAME	Piaggio spare parts (POP)
B042827	PLATE S/A SIDE FRAME RH	Piaggio spare parts (POP)
662532	PLATE S/A SIDE FRAME RH 'QI 870'	Piaggio spare parts (POP)
657966	PLATE S/A SIDE GATE , LH	Piaggio spare parts (POP)
657969	PLATE S/A SIDE GATE , RH	Piaggio spare parts (POP)
652589	PLATE S/A SIDE GATE RH	Piaggio spare parts (POP)
615598	PLATE SIDE	Piaggio spare parts (POP)
B042826	PLATE SIDE S/A FRAME LH	Piaggio spare parts (POP)
B001311	PLATE SOFT TOP SUPPORT (L.H.)	Piaggio spare parts (POP)
B006767	PLATE SOFT TOP SUPPORT (L.H.)	Piaggio spare parts (POP)
B001310	PLATE SOFT TOP SUPPORT (R.H.)	Piaggio spare parts (POP)
B006768	PLATE SOFT TOP SUPPORT (R.H.)	Piaggio spare parts (POP)
B074498	PLATE SPRING MTG HANDLE BAR	Piaggio spare parts (POP)
E40001766	PLATE STARTER	Piaggio spare parts (POP)
E40021702	PLATE STARTOR MOTOR	Piaggio spare parts (POP)
1E001027	PLATE SUB-ASSY, DISC BRAKE TORQUE	Piaggio spare parts (POP)
E87015127	Plate Throttle Cable	Piaggio spare parts (POP)
B009083	PLATE WITH NUT	Piaggio spare parts (POP)

193724	PLATE(OPTION SHIM PLATE)	Piaggio spare parts (POP)
D9004183025	PLATE, SPING	Piaggio spare parts (POP)
E5406360073	PLATE,STARTER	Piaggio spare parts (POP)
643940	PLATFORM ASSLY (VE)	Piaggio spare parts (POP)
6B002861ED	PLATFORM ASSLY. 501 APE E-XTRA EX&LX-ED	Piaggio spare parts (POP)
6B002861GY	PLATFORM ASSLY. 501 APE E-XTRA EX&LX-GY	Piaggio spare parts (POP)
6B002861LB	PLATFORM ASSLY. 501 APE E-XTRA EX&LX-LB	Piaggio spare parts (POP)
6B002861NB	PLATFORM ASSLY. 501 APE E-XTRA EX&LX-NB	Piaggio spare parts (POP)
6B002782ED	PLATFORM ASSLY.APE 501 E-XTRA FX-ED	Piaggio spare parts (POP)
6B002782GY	PLATFORM ASSLY.APE 501 E-XTRA FX-GY	Piaggio spare parts (POP)
6B002782LB	PLATFORM ASSLY.APE 501 E-XTRA FX-LB	Piaggio spare parts (POP)
6B002782NB	PLATFORM ASSLY.APE 501 E-XTRA FX-NB	Piaggio spare parts (POP)
6B002749BW	PLATFORM S/A LDX+ BS6_BW	Piaggio spare parts (POP)
6B002749CB	PLATFORM S/A LDX+ BS6_CB	Piaggio spare parts (POP)
6B002749CO	PLATFORM S/A LDX+ BS6_CO	Piaggio spare parts (POP)
6B002749ED	PLATFORM S/A LDX+ BS6_ED	Piaggio spare parts (POP)
6B002749EG	PLATFORM S/A LDX+ BS6_EG	Piaggio spare parts (POP)
6B002749GY	PLATFORM S/A LDX+ BS6_GY	Piaggio spare parts (POP)
6B002749PA	PLATFORM S/A LDX+ BS6_PA	Piaggio spare parts (POP)
6B002749PB	PLATFORM S/A LDX+ BS6_PB	Piaggio spare parts (POP)
6B002749WR	PLATFORM S/A LDX+ BS6_WR	Piaggio spare parts (POP)
B006818GY	PLATFORM S/A LOWER PART (DAC) BSIII GY	Piaggio spare parts (POP)
B006818BW	PLATFORM S/A LOWER PART (DAC) BSIII BW	Piaggio spare parts (POP)
B006818CB	PLATFORM S/A LOWER PART (DAC) BSIII CB	Piaggio spare parts (POP)
B006818CO	PLATFORM S/A LOWER PART (DAC) BSIII CO	Piaggio spare parts (POP)
B006818SY	PLATFORM S/A LOWER PART (DAC) BSIII SY	Piaggio spare parts (POP)
B006818WR	PLATFORM S/A LOWER PART (DAC) BSIII WR	Piaggio spare parts (POP)
643940BW	PLATFORM S/A LOWER PART-BIANCO WHITE	Piaggio spare parts (POP)
643940BG	PLATFORM S/A LOWER PART-BRILLIANT GREEN	Piaggio spare parts (POP)
643940CB	PLATFORM S/A LOWER PART-CHARMING BLUE	Piaggio spare parts (POP)
643940GY	PLATFORM S/A LOWER PART-GOLDEN YELLOW	Piaggio spare parts (POP)
643940PM	PLATFORM S/A LOWER PART-PASSION MAROON	Piaggio spare parts (POP)
643940SY	PLATFORM S/A LOWER PART-SAHARA YELLOW	Piaggio spare parts (POP)
B042526ED	PLATFORM SUB ASSLY DTL 501 LD-CED	Piaggio spare parts (POP)
020877Y	PLIERS	Piaggio spare parts (POP)
020888Y	PLIERS TOOL	Piaggio spare parts (POP)
616944	PLUG	Piaggio spare parts (POP)
643599	PLUG	Piaggio spare parts (POP)
B042392	PLUG	Piaggio spare parts (POP)
E500900038	PLUG	Piaggio spare parts (POP)
ED42098	PLUG	Piaggio spare parts (POP)
190517	PLUG	Piaggio spare parts (POP)
119241	PLUG	Piaggio spare parts (POP)
178838	PLUG	Piaggio spare parts (POP)
568717	PLUG	Piaggio spare parts (POP)
632701	PLUG	Piaggio spare parts (POP)
B003416	PLUG	Piaggio spare parts (POP)

B076198	PLUG	Piaggio spare parts (POP)
125998	PLUG	Piaggio spare parts (POP)
263898	PLUG	Piaggio spare parts (POP)
888330	PLUG	Piaggio spare parts (POP)
889177	PLUG	Piaggio spare parts (POP)
190255	PLUG	Piaggio spare parts (POP)
L9080244	PLUG	Piaggio spare parts (POP)
L9080247	PLUG	Piaggio spare parts (POP)
L9080253	PLUG	Piaggio spare parts (POP)
E60020426	plug	Piaggio spare parts (POP)
E500906011	PLUG	Piaggio spare parts (POP)
644302	PLUG	Piaggio spare parts (POP)
661825	PLUG	Piaggio spare parts (POP)
616813	PLUG	Piaggio spare parts (POP)
615656	PLUG	Piaggio spare parts (POP)
889257	PLUG	Piaggio spare parts (POP)
568131	PLUG (DOME D=21 MM)	Piaggio spare parts (POP)
B024242	PLUG A PILLAR BNA	Piaggio spare parts (POP)
A01G120020	Plug Air vent+o ring for Inl Pump DSLBS6	Piaggio spare parts (POP)
KD9080132	PLUG AVSEAL D6 02961-00607	Piaggio spare parts (POP)
L9080133	PLUG AVSEAL D8 02961-008	Piaggio spare parts (POP)
LG9080133	PLUG AVSEAL D8 02961-00810	Piaggio spare parts (POP)
E07506012	Plug dia. 5.5mm	Piaggio spare parts (POP)
E07508982	Plug dia. 5mm	Piaggio spare parts (POP)
E87016005A	PLUG DIA8	Piaggio spare parts (POP)
B009149	PLUG DIP STICK (MT-441)	Piaggio spare parts (POP)
125012015	PLUG F.M.HOUSING(40734)	Piaggio spare parts (POP)
124105011	PLUG FAREMETER (40822)	Piaggio spare parts (POP)
124106015	PLUG FOR FAREMETER	Piaggio spare parts (POP)
B018991	PLUG FOR FAREMETER	Piaggio spare parts (POP)
LG7330408	PLUG FOR OIL FILTER	Piaggio spare parts (POP)
B002509	PLUG FOR SQ7 HOLE ON DOME	Piaggio spare parts (POP)
B009157	PLUG HOLE DIA 18	Piaggio spare parts (POP)
B006847	PLUG HOLE -DIA 50	Piaggio spare parts (POP)
B009160	PLUG HOLE DIA. 15	Piaggio spare parts (POP)
E87000490	PLUG INLET WATER MANIFOLD	Piaggio spare parts (POP)
E50000433	PLUG LUB OIL FILTER	Piaggio spare parts (POP)
L9080252	PLUG M 20X1,5	Piaggio spare parts (POP)
ESP650DNB007	PLUG Ø4	Piaggio spare parts (POP)
E87016023A	PLUG OIL HOLE	Piaggio spare parts (POP)
E5009060011	PLUG ON OIL FILTER	Piaggio spare parts (POP)
E50000475	PLUG RELIEF VALVE	Piaggio spare parts (POP)
LG1901195	PLUG SCREW M14X1.5	Piaggio spare parts (POP)
L9027016	PLUG TCEI M10 X 1 DIN908	Piaggio spare parts (POP)
L90270190	PLUG TCEI M10 X 1 DIN908	Piaggio spare parts (POP)
932222	PLUG(R-8105-420)Paxx200	Piaggio spare parts (POP)
932229	PLUG(R-8106-VI-080)Paxx200	Piaggio spare parts (POP)

568288	PLUG, CAB ROOF	Piaggio spare parts (POP)
B004631	PLUG, HOLE	Piaggio spare parts (POP)
D9004871154	PLUG, HOLE	Piaggio spare parts (POP)
B041453	PLUG, HOLE	Piaggio spare parts (POP)
B041477	PLUG, HOLE	Piaggio spare parts (POP)
B041454	PLUG, HOLE	Piaggio spare parts (POP)
D9004480086	PLUG, HOLE	Piaggio spare parts (POP)
B041670	PLUG, HOLE	Piaggio spare parts (POP)
B041436	PLUG, HOLE	Piaggio spare parts (POP)
D9004871098	PLUG,HOLE	Piaggio spare parts (POP)
E50005578	PLUGFORSTUDM8	Piaggio spare parts (POP)
ESP650DNB009	PLUGØ10	Piaggio spare parts (POP)
E87000488	PLUGRELIEF VALVE	Piaggio spare parts (POP)
B074963	PLUG-TANK RETURN NIPPLE	Piaggio spare parts (POP)
120159014	PLUNGER	Piaggio spare parts (POP)
SM26240027	Plunger Assy	Piaggio spare parts (POP)
E500721535	PLUNGER GUIDE	Piaggio spare parts (POP)
SM26242732	Plunger Return Spring	Piaggio spare parts (POP)
1A005204	PLUNGER SHAFT	Piaggio spare parts (POP)
1A001457	PLUNGER SHAFT	Piaggio spare parts (POP)
1A010548	PLUNGER SHAFT	Piaggio spare parts (POP)
1A007659	PLUNGER SHAFT	Piaggio spare parts (POP)
1A014753	PLUNGER SHAFT	Piaggio spare parts (POP)
B018947	PLUNGER SHAFT ASSY	Piaggio spare parts (POP)
644298	POCKET, CONSOLE BOX	Piaggio spare parts (POP)
SM26258012	Pole Screw	Piaggio spare parts (POP)
894335	Polo jersey di nylon L	Piaggio spare parts (POP)
889884	POLY VEE V 5PK BELT	Piaggio spare parts (POP)
KD6605090	POMPA OLIO/OIL PUMP F	Piaggio spare parts (POP)
660121	POP RIVET	Piaggio spare parts (POP)
567893	POP RIVET 4X9.5(1601-0512)	Piaggio spare parts (POP)
6B001518	POP UP KNOB	Piaggio spare parts (POP)
6B001741	POP UP KNOB (CITY+)	Piaggio spare parts (POP)
6B001539	POP UP KNOB ASSLY	Piaggio spare parts (POP)
6B001742	POP UP KNOB ASSLY RH (CITY +)	Piaggio spare parts (POP)
SST94134	PORTER 1000 ENGINE EXPLODED VIEW	Piaggio spare parts (POP)
SST94135	PORTER 1000 GEAR BOX EXPLODED VIEW	Piaggio spare parts (POP)
SST94136	PORTER 1000 WIRING DIAGRAM	Piaggio spare parts (POP)
SST94131	Porter 700 ENGINE EXPLODED VIEW	Piaggio spare parts (POP)
SST94132	Porter 700 GEAR BOX EXPLODED VIEW	Piaggio spare parts (POP)
SST94130	Porter 700 Torque Chart - Power Pack	Piaggio spare parts (POP)
SST94133	Porter 700 WIRING DIAGRAM	Piaggio spare parts (POP)
6B001018	PORTER VX NAME DECAL DOOR LH	Piaggio spare parts (POP)
6B001017	PORTER VX NAME DECAL DOOR RH	Piaggio spare parts (POP)
6B001015	PORTER VX STYLING DECAL DOOR LH	Piaggio spare parts (POP)
6B001014	PORTER VX STYLING DECAL DOOR RH	Piaggio spare parts (POP)
KIT95062R	Porter-600 special Tool Kit-full	Piaggio spare parts (POP)

KIT95063R	Porter-600 special Tool Kit-Mini	Piaggio spare parts (POP)
6D000366	POTENTIOMETER, BRAKE	Piaggio spare parts (POP)
6B002165	POWER MAX STICKER - CARGO	Piaggio spare parts (POP)
B003836	POWER PACK ASSLY 501 BSII	Piaggio spare parts (POP)
6D000917	POWER RELAY NC TYPE W/ RESISTOR 20A	Piaggio spare parts (POP)
B006432	POWER TRAIN ASSY (LDW 482 BS III)	Piaggio spare parts (POP)
660829	POWER TRAIN ASSY (LDW 482 WITHOUT CATCO	Piaggio spare parts (POP)
6C000249	POWERPACK ASLY KIT	Piaggio spare parts (POP)
6A001836	POWERPACK ASSLY. KIT	Piaggio spare parts (POP)
6A001877	POWERPACK ASSLY. KIT	Piaggio spare parts (POP)
6C000156	POWERPACK MTG ASSLY FRONT	Piaggio spare parts (POP)
6C000158	POWERPACK MTG ASSLY REAR	Piaggio spare parts (POP)
B008233	POWER-TRAIN ASSY 'QI 870' BS-III	Piaggio spare parts (POP)
643849	PR GAUGE (VANAZ PT NO K-0501-02)	Piaggio spare parts (POP)
652242	PRE- HEATING CONTROL (GDU)	Piaggio spare parts (POP)
L9080882	PREC. CHAMBER 0.85% T. CLASS C	Piaggio spare parts (POP)
L9080883	PREC. CHAMBER 0.85% T. CLASS D	Piaggio spare parts (POP)
L9080881	PREC. CHAMBER 0.85% T.CLASS B	Piaggio spare parts (POP)
645008	PREHEATER DEVICE (180 SEC POST GLOW)	Piaggio spare parts (POP)
632710	PREHEATER DEVICE W/O POST GLOW	Piaggio spare parts (POP)
614738	PRE-HEATING CONTROL	Piaggio spare parts (POP)
970300563	Pressing mandrel for lip seal & bush	Piaggio spare parts (POP)
970300518	PRESSING PUNCH CLUSTER GEAR BALL BEARING	Piaggio spare parts (POP)
970300522	PRESSING PUNCH DIFF CAGE BALL BRG	Piaggio spare parts (POP)
970300519	PRESSING PUNCH MAINSHAFT NRB	Piaggio spare parts (POP)
970300558	Pressing tool for bearing on shaft	Piaggio spare parts (POP)
970300555	Pressing tool for bush clutch release	Piaggio spare parts (POP)
970300556	Pressing tool for c clip axial gear reta	Piaggio spare parts (POP)
E04M090004	PRESSUR ERELIEF VALVE	Piaggio spare parts (POP)
ESP650DFP012	PRESSUR ERELIEF VALVE	Piaggio spare parts (POP)
2433124388	PRESSURE BOLT	Piaggio spare parts (POP)
6A000557	PRESSURE CAP	Piaggio spare parts (POP)
B006561	PRESSURE CAP	Piaggio spare parts (POP)
920072	Pressure gauge BSIII CNG,APE CITY CNG (I	Piaggio spare parts (POP)
659913	PRESSURE GAUGE MTG. BKT.	Piaggio spare parts (POP)
6A001113	PRESSURE GAUGE PROTECTION CAP	Piaggio spare parts (POP)
932300	Pressure Gauge with Sensor	Piaggio spare parts (POP)
127721012	PRESSURE PLATE OUTER	Piaggio spare parts (POP)
920038	PRESSURE PLATE OUTER (520JT05202)	Piaggio spare parts (POP)
127693019	PRESSURE PLATE OUTER (VE)	Piaggio spare parts (POP)
B078011	PRESSURE REGULATOR (CNG)	Piaggio spare parts (POP)
B078012	PRESSURE REGULATOR (LPG)	Piaggio spare parts (POP)
B078013	PRESSURE REGULATOR BRACKET	Piaggio spare parts (POP)
E2929680014	Pressure relief valve	Piaggio spare parts (POP)
A01A090009	PRESSURE RELIEF VALVE ASSY.	Piaggio spare parts (POP)
2433124446	PRESSURE SPINDLE	Piaggio spare parts (POP)
E60009715	PRESSURE SWITCH	Piaggio spare parts (POP)

1A009436	PRIMARY DRIVEN GEAR	Piaggio spare parts (POP)
970300504	PRIMARY GEAR CONE EXTRACTOR	Piaggio spare parts (POP)
SST96032	Primary Gear Holding Tools	Piaggio spare parts (POP)
970300513	PRIMARY GEAR LOCKING TOOL	Piaggio spare parts (POP)
1F000687	PRIMARY GEAR SHAFT	Piaggio spare parts (POP)
1F000711	PRIMARY GEAR SHAFT	Piaggio spare parts (POP)
889211	PRIMARY GEAR SHAFT	Piaggio spare parts (POP)
889336	PRIMARY GEAR SHAFT ASSEMBLY	Piaggio spare parts (POP)
1A014026	PRIMARY IDLE DRIVEN GEAR	Piaggio spare parts (POP)
1A013308	PRIMARY SHAFT	Piaggio spare parts (POP)
1A017356	PRIMARY SHAFT	Piaggio spare parts (POP)
L4950125	PRIMARY TRANSMISSION DRIVEN GEAR LDW 422	Piaggio spare parts (POP)
L4950126	PRIMARY TRASMIS. DRIVEN G	Piaggio spare parts (POP)
E50006812	PRIMING LEVER WITH SPRING & SPINDLE	Piaggio spare parts (POP)
605342	PROFILE LONG FOR CARPET	Piaggio spare parts (POP)
6B001946	PROFILE RIM COVER JOINT	Piaggio spare parts (POP)
587962	PROFILE SECTION LONG FOR CARPET	Piaggio spare parts (POP)
587961	PROFILE SECTION SHORT FOR CARPET	Piaggio spare parts (POP)
605340	PROFILE SECTION SHORT FOR CARPET	Piaggio spare parts (POP)
6B000009	PROFILE SIDE	Piaggio spare parts (POP)
6C000564	PROPELLER SHAFT ASSLY LH	Piaggio spare parts (POP)
B024782	PROPELLER SHAFT LEFT SIDE	Piaggio spare parts (POP)
587686	PROPELLER SHAFT RIGHT SIDE	Piaggio spare parts (POP)
B024783	PROPELLER SHAFT RIGHT SIDE	Piaggio spare parts (POP)
6C000174	PROPELLER SHAFT S/A	Piaggio spare parts (POP)
6C000338	PROPELLER SHAFT S/A	Piaggio spare parts (POP)
B008928	PROPELLER SHAFT S/A	Piaggio spare parts (POP)
6C000578	PROPELLER SHAFT S/A	Piaggio spare parts (POP)
B023940	PROPELLER SHAFT S/A	Piaggio spare parts (POP)
B078401	PROPELLER SHAFT S/A - MID BODY	Piaggio spare parts (POP)
6C000557	PROPELLER SHAFT S/A RIGHT SIDE	Piaggio spare parts (POP)
B002234	PROPELLER SHAFT S/ASSLY LEFT SIDE(441GB)	Piaggio spare parts (POP)
B002235	PROPELLER SHAFT S/ASSLY RIGHT SIDE(441GB)	Piaggio spare parts (POP)
B024960	PROPELLER SHAFT S/ASSLY. LH-510	Piaggio spare parts (POP)
B024962	PROPELLER SHAFT S/ASSLY. RH-510	Piaggio spare parts (POP)
587687	PROPELLER SHAFT SUB ASSLY LT	Piaggio spare parts (POP)
B024437	PROPELLER SHAFT SUB ASSLY LT	Piaggio spare parts (POP)
B024440	PROPELLER SHAFT SUB ASSLY RIGHT SIDE	Piaggio spare parts (POP)
587685	PROPELLER SHAFT SUB ASSLY RT	Piaggio spare parts (POP)
KD9000224	PROT.CAP FOR INTAKE ELBOW	Piaggio spare parts (POP)
KD9000225	PROT.CAP FOR OIL PRESS.SWITCH	Piaggio spare parts (POP)
970300574	Protecting manderl for f.w.e.cover guidi	Piaggio spare parts (POP)
604758	PROTECTION	Piaggio spare parts (POP)
193836	PROTECTION	Piaggio spare parts (POP)
602069	PROTECTION	Piaggio spare parts (POP)
569486	PROTECTION	Piaggio spare parts (POP)
925500	PROTECTION (BOOT KBX 7434124)	Piaggio spare parts (POP)

118806	PROTECTION BELLOW	Piaggio spare parts (POP)
B076295	PROTECTION BELLOW- GEAR CABLE	Piaggio spare parts (POP)
6A001396	PROTECTION BRACKET	Piaggio spare parts (POP)
1A017558	PROTECTION CAP	Piaggio spare parts (POP)
642537	PROTECTION CAP	Piaggio spare parts (POP)
126902	PROTECTION COLLER CABLE	Piaggio spare parts (POP)
109892	PROTECTION CUP REAR HUB	Piaggio spare parts (POP)
109227	PROTECTION GROMMET	Piaggio spare parts (POP)
661634	PROTECTION GUIDE LH (DOOR SEAL) (VE)	Piaggio spare parts (POP)
661635	PROTECTION GUIDE RH (DOOR SEAL) (VE)	Piaggio spare parts (POP)
127301	PROTECTION PACKING DOOR	Piaggio spare parts (POP)
194946	PROTECTION PACKING LOWER PART L.H. DOOR	Piaggio spare parts (POP)
B007654	PROTECTION RING	Piaggio spare parts (POP)
B076819	PROTECTION SLEEVE	Piaggio spare parts (POP)
660252	PROTECTION SLEEVE FOR LATCH - HOOK - (6	Piaggio spare parts (POP)
587826	PROTECTION,HORN	Piaggio spare parts (POP)
B006575	PROTECTIVE COVER	Piaggio spare parts (POP)
B011644	PROTECTIVE COVERING	Piaggio spare parts (POP)
B012142	PROTECTIVE COVERING CCV VALVE	Piaggio spare parts (POP)
E50010687	PROTECTIVE PLATE	Piaggio spare parts (POP)
D5382187Z01	PROTECTOR, FR SIDE	Piaggio spare parts (POP)
D5382387Z01	PROTECTOR, FR SIDE PANEL,	Piaggio spare parts (POP)
D6614887Z01	PROTECTOR, TAIL GATE LOCK	Piaggio spare parts (POP)
E43521745.	PTO COVER	Piaggio spare parts (POP)
E43521745	PTO COVER	Piaggio spare parts (POP)
E271664561	PTO cover (bare)	Piaggio spare parts (POP)
E07507514	PTO cover assy. Consisting of 17,18,21	Piaggio spare parts (POP)
E50007540	PTO COVER ASSY. CONSISTING OF 2,4,5	Piaggio spare parts (POP)
A01A010003	PTO COVER WITH BUSH	Piaggio spare parts (POP)
ESP650DCR009	PTO END COVER ASSEMBLY	Piaggio spare parts (POP)
B023340	PUFFER LATERAL LIMIT	Piaggio spare parts (POP)
6A001235	PULASATION DAMPNER AND FILTER	Piaggio spare parts (POP)
6A001274	PULASATION DAMPNER AND FILTER	Piaggio spare parts (POP)
1E001561	PULL HANDLE FR. DOOR INSIDE	Piaggio spare parts (POP)
D7481187Z01	PULL, HANDLE FR DOOR, INS	Piaggio spare parts (POP)
970300521	PULLER FOR ADVANCE REGULATOR	Piaggio spare parts (POP)
MS422619	Puller for bearing bush of valve c/s	Piaggio spare parts (POP)
970300543	Puller for bearing bush of valve camshaf	Piaggio spare parts (POP)
970300614	PULLER FOR CRANK SHAFT BRG REMOVAL TOOL	Piaggio spare parts (POP)
970300586	PULLER FOR CRANK SHAFT PULLEY REMOVAL	Piaggio spare parts (POP)
SST94194	Puller for Flywheel 75 series	Piaggio spare parts (POP)
970300585	PULLER FOR LOP GEAR REMOVAL	Piaggio spare parts (POP)
SST94060	PULLER FOR MAIN BEARING	Piaggio spare parts (POP)
T09000119	PULLER FOR NEEDLE BEARING & SEALING RING	Piaggio spare parts (POP)
970300587	PULLER FOR REMOVAL OF GEAR FUEL CAM SHA	Piaggio spare parts (POP)
T09000487	PULLER FOR REMOVING FLYWHEEL	Piaggio spare parts (POP)
T09000118	PULLER FOR REMOVING MAIN BUSH	Piaggio spare parts (POP)

970300599	Puller for shaft input bush removal	Piaggio spare parts (POP)
921302	PULLER-NEEDLE BRG.M/SHAFT FROM E/COVER	Piaggio spare parts (POP)
921408	PULLER-REMOVING BALL BRG. FROM E/COVER	Piaggio spare parts (POP)
928407	PULLER-REMOVING BALL BRG.7066 FROM COVER	Piaggio spare parts (POP)
925108	PULLER-REMOVING BALL BRG.ON M/SHAFT FROM	Piaggio spare parts (POP)
928205	PULLER-REMOVING BRG.98205 FROM GB/COVER	Piaggio spare parts (POP)
925406	PULLER-REMOVING IDLER GEAR BRONZE BUSHES	Piaggio spare parts (POP)
B011930	PULLEY - CRANKSHAFT	Piaggio spare parts (POP)
889882	PULLEY - CRANKSHAFT	Piaggio spare parts (POP)
E87007635	PULLEY c/s	Piaggio spare parts (POP)
B075475	PULLEY FOR HAND BRAKE	Piaggio spare parts (POP)
567898	PULLEY FOR HAND BRAKE	Piaggio spare parts (POP)
LG6975370	PULLEY FOR TIMING BELT	Piaggio spare parts (POP)
LG6975407	PULLEY FOR TIMING BELT	Piaggio spare parts (POP)
478261	PULLEY SHAFT BEARING	Piaggio spare parts (POP)
ED42807	Pulley water pump	Piaggio spare parts (POP)
ED41099	PULLEY,STARTING	Piaggio spare parts (POP)
E500696069	PULLEY,STARTING	Piaggio spare parts (POP)
970300604	PULLY HOOLDING TOOL	Piaggio spare parts (POP)
6A000740	PULSATION DAMPENR AND FILTER ASSLY.	Piaggio spare parts (POP)
6A000523	PULSATION DAMPENR AND FILTER ASSLY.	Piaggio spare parts (POP)
6A000497	PULSATION DAMPNER WITH FILTER	Piaggio spare parts (POP)
ED33767	PULSER COIL	Piaggio spare parts (POP)
E30979003	PULSER MOUNTING SCREW	Piaggio spare parts (POP)
E40015418	PULSOR COIL WITH DUST SEAL	Piaggio spare parts (POP)
LG2595052	PUMP COVER APE INDIA	Piaggio spare parts (POP)
F002B10602	PUMP ELEMENT	Piaggio spare parts (POP)
F002F21098	PUMP HOUSING	Piaggio spare parts (POP)
L9345105	PUMP INJ. CONNec. TUBE	Piaggio spare parts (POP)
L9345101	PUMP INJECTOR CONNECTING TUBE	Piaggio spare parts (POP)
L9345104	PUMP INJECTOR CONNECTING TUBE	Piaggio spare parts (POP)
1A012681	Pump Shaft Water	Piaggio spare parts (POP)
B041455	PUMP SWITCH (JALDOOT)	Piaggio spare parts (POP)
L1380081	PUMP-REGULATOR CONNECTING ROD	Piaggio spare parts (POP)
96890341254	Punch	Piaggio spare parts (POP)
921206	PUNCH FOR ASSEMBLING NEEDLE BRG.E/COVER	Piaggio spare parts (POP)
970300506	PUNCH FOR CROSS PIECE CAULKING	Piaggio spare parts (POP)
970300532	PUNCH FOR OIL SEAL FITMENT	Piaggio spare parts (POP)
T09000064	PUNCH FOR REMOVING WORN VALVE GUIDES	Piaggio spare parts (POP)
970300528	PUNCH FOR SEALING RING ON VALVE GUIDE	Piaggio spare parts (POP)
932201	PUNCH FOR TAP OUT MAIN SHAFT	Piaggio spare parts (POP)
441022	PUNCH FOR TAP OUT MAIN SHAFT	Piaggio spare parts (POP)
970300628	Punch on tapout main shaft	Piaggio spare parts (POP)
020863Y	PUNCH TOOL	Piaggio spare parts (POP)
020862Y	PUNCH TOOL	Piaggio spare parts (POP)
020861Y	PUNCH TOOL	Piaggio spare parts (POP)
19135781	PUNCH-ASSLY OF BRG.TYPE NADELLA RR.H	Piaggio spare parts (POP)

921100	PUNCH-BALL BRG.ON E/COVER WITH 925704	Piaggio spare parts (POP)
926009	PUNCH-FITTING BALL BRG.7066 ON GB/COVER	Piaggio spare parts (POP)
925704	PUNCH-FITTING IDLER GEAR BRONZE BUSHES	Piaggio spare parts (POP)
925300	PUNCH-FITTING M/SHAFT BRG.IN M/HSG.WITH	Piaggio spare parts (POP)
924101	PUNCH-FITTING M/SHAFT INTO M/HSG. BRG.	Piaggio spare parts (POP)
970300625	Punch-fitting main shaft bearing in hous	Piaggio spare parts (POP)
970300626	Punch-fitting shaft pinion on GB cover	Piaggio spare parts (POP)
928301	PUNCH-FITTING SHAFT PINION ON GB/COVER	Piaggio spare parts (POP)
19135783	PUNCH-FOR RING SEAL ASSLY ON RR WHL.HUB	Piaggio spare parts (POP)
929217	PUNCH-REMOVING PLUG &BUSH FROM F.M. HSG.	Piaggio spare parts (POP)
19121071	PUNCH-RING SEAL & BRG. ON HALF CASING	Piaggio spare parts (POP)
19120781	PUNCH-RING SEAL &BRG.ASSLY	Piaggio spare parts (POP)
19135785	PUNCH-RING SEAL ASSY BALL BRG.RR WHL.HUB	Piaggio spare parts (POP)
1A017882	PURGE SOLENOID VALVE	Piaggio spare parts (POP)
640762	PUSH BUTTON	Piaggio spare parts (POP)
L7195138	PUSH BUTTON	Piaggio spare parts (POP)
642032	PUSH BUTTON	Piaggio spare parts (POP)
8103	PUSH BUTTON SWITCH	Piaggio spare parts (POP)
AP8150450	PUSH ON FASTENERS FOR 5mm SHAFT	Piaggio spare parts (POP)
L7865123	PUSH PULL GEAR CONTROL BOX	Piaggio spare parts (POP)
E87007343	PUSH ROD	Piaggio spare parts (POP)
E43507331	PUSH ROD	Piaggio spare parts (POP)
E500141016	PUSH ROD	Piaggio spare parts (POP)
B002659	PUSH ROD	Piaggio spare parts (POP)
587702	PUSH ROD	Piaggio spare parts (POP)
KD5151125	PUSH ROD RETAINER	Piaggio spare parts (POP)
E43507359	PUSH ROD SET	Piaggio spare parts (POP)
E87007358	PUSH ROD SET	Piaggio spare parts (POP)
A01A060010	PUSH ROD SET	Piaggio spare parts (POP)
ESP650DCH015	PUSH ROD SET	Piaggio spare parts (POP)
ESP650DKT008	Push Rod Set	Piaggio spare parts (POP)
E07507344	Push rod set	Piaggio spare parts (POP)
E500952046	PUSH ROD TUBE	Piaggio spare parts (POP)
E5009520029	PUSH ROD TUBE	Piaggio spare parts (POP)
L7865126	PUSH-PULL GEAR CONTROL B	Piaggio spare parts (POP)
L7865128	PUSH-PULL GEAR CONTROL BOX	Piaggio spare parts (POP)
KD1410183	PUSHROD COMPL.MECH.TAP.15Id400	Piaggio spare parts (POP)
925758	PVC COATED STEEL TUBE ASSLY.-1(K-0122-01	Piaggio spare parts (POP)
925762	PVC COATED STEEL TUBE(K-0122-22-010)	Piaggio spare parts (POP)
925763	PVC COATED STEEL TUBE(K-0122-23-010)	Piaggio spare parts (POP)
ED23672	QUICK CABLE ASSEMBLY	Piaggio spare parts (POP)
127404016R	R C GEAR	Piaggio spare parts (POP)
127404016	R C GEAR	Piaggio spare parts (POP)
124002013	R.C. GEAR	Piaggio spare parts (POP)
227403011R	R.C. GEAR (CARGO)	Piaggio spare parts (POP)
227403011	R.C. GEAR (CARGO) MODIFIED.	Piaggio spare parts (POP)
116213	R.H. BLOCK	Piaggio spare parts (POP)

127902	R.H. BRAKE JAW HOLDING CABLE PLATE	Piaggio spare parts (POP)
602128	R.H. COMPLETE FRONT SHOE WITH PIN	Piaggio spare parts (POP)
163666	R.H. VENT WINDOW ASSY.	Piaggio spare parts (POP)
E40015458	R.R.UNIT	Piaggio spare parts (POP)
614830	RACCORD (FUEL FILLER)	Piaggio spare parts (POP)
KD7270281	RACCORDO/UNION	Piaggio spare parts (POP)
KD7270219	RACCORDO/UNION	Piaggio spare parts (POP)
KD7270280	RACCORDO/UNION	Piaggio spare parts (POP)
KD7270104	RACCORDO/UNION FV C10	Piaggio spare parts (POP)
896806	Racing Back Protector	Piaggio spare parts (POP)
894862	RACING SCREEN RSV4	Piaggio spare parts (POP)
E500520319	RACK CONTROL LEVER	Piaggio spare parts (POP)
E283520144	Rack control lever	Piaggio spare parts (POP)
E07505105	Rack control lever assy.	Piaggio spare parts (POP)
D4552187509	RACK, STEERING	Piaggio spare parts (POP)
B075495	RACKET BRAKE SWITCH MTG. ASSLY	Piaggio spare parts (POP)
6A000826	RAD. MOUNTING LH BRACKET ASSLY.	Piaggio spare parts (POP)
6A000825	RAD. MOUNTING RH BRACKET ASSLY.	Piaggio spare parts (POP)
L3010236	RADIAL BALL BEARING	Piaggio spare parts (POP)
7066R	RADIAL BALL BEARING	Piaggio spare parts (POP)
L3010237	RADIAL BALL BEARING	Piaggio spare parts (POP)
L3010273	RADIAL BALL BEARING 6012	Piaggio spare parts (POP)
6A000238	RADIATOR	Piaggio spare parts (POP)
6A001143	RADIATOR ASSEMBLY	Piaggio spare parts (POP)
645250	RADIATOR ASSLY	Piaggio spare parts (POP)
B007305	RADIATOR ASSLY	Piaggio spare parts (POP)
6A000965	RADIATOR ASSLY - TTR	Piaggio spare parts (POP)
644505	RADIATOR ASSY	Piaggio spare parts (POP)
B025735	RADIATOR ASSY	Piaggio spare parts (POP)
B025735R	RADIATOR ASSY	Piaggio spare parts (POP)
B006557	RADIATOR ASSY.	Piaggio spare parts (POP)
940029	RADIATOR CORE (Porter 600)	Piaggio spare parts (POP)
1A020416	RADIATOR COVER	Piaggio spare parts (POP)
1A012707	Radiator cover	Piaggio spare parts (POP)
940038	RADIATOR DRAIN PLUG WITH RING_PORTER 600	Piaggio spare parts (POP)
925669	RADIATOR FAN	Piaggio spare parts (POP)
6A001484	RADIATOR FAN MOTOR SHROUD ASSEMBLY	Piaggio spare parts (POP)
6A000631	RADIATOR GAURD ASSLY	Piaggio spare parts (POP)
645132	Radiator grille	Piaggio spare parts (POP)
B042656	RADIATOR GUARD	Piaggio spare parts (POP)
645094	RADIATOR GUARD	Piaggio spare parts (POP)
6A000824	RADIATOR GUARD	Piaggio spare parts (POP)
659751	RADIATOR HOSE	Piaggio spare parts (POP)
1E001633	RADIATOR HOSE OUTLET N°1	Piaggio spare parts (POP)
B007573	RADIATOR HOSE OUTLET NO.1	Piaggio spare parts (POP)
6A000279	RADIATOR INLET HOSE	Piaggio spare parts (POP)
B077257	RADIATOR INLET HOSE	Piaggio spare parts (POP)

B041051	RADIATOR INLET HOSE	Piaggio spare parts (POP)
B006349	RADIATOR INLET HOSE NO.1	Piaggio spare parts (POP)
B074104	RADIATOR INLET HOSE NO.1	Piaggio spare parts (POP)
6A000966	RADIATOR MTG. BRACKET - LH	Piaggio spare parts (POP)
6A000967	RADIATOR MTG. BRACKET - RH	Piaggio spare parts (POP)
6A000280	Radiator outlet hose	Piaggio spare parts (POP)
B041052	RADIATOR OUTLET HOSE	Piaggio spare parts (POP)
B077240	RADIATOR OUTLET HOSE	Piaggio spare parts (POP)
B074239	RADIATOR OUTLET HOSE	Piaggio spare parts (POP)
645299	RADIATOR OUTLET HOSE NO. 2	Piaggio spare parts (POP)
645297	RADIATOR OUTLET HOSE NO.1	Piaggio spare parts (POP)
1A012459	Radiator pipe to water pump	Piaggio spare parts (POP)
1A012447	RADIATOR SUPPORT	Piaggio spare parts (POP)
1A020129	RADIATOR SUPPORT	Piaggio spare parts (POP)
1A020010	RADIATOR SUPPORT GASKET	Piaggio spare parts (POP)
03G160740	rail 1	Piaggio spare parts (POP)
03G160741	rail 2	Piaggio spare parts (POP)
B023998	RAIL MAIN	Piaggio spare parts (POP)
6D000877	RAIL PRESURE SENSOR COUPLER PIGTAIL	Piaggio spare parts (POP)
B024711	RAIL REVERSE WITH PIN	Piaggio spare parts (POP)
B023997	RAIL REVERSE WITHOUT PIN	Piaggio spare parts (POP)
940113	Rain Protection cover city 200 LH_BLK	Piaggio spare parts (POP)
940113Y	Rain Protection cover city 200 LH_YLW	Piaggio spare parts (POP)
940115	Rain Protection cover city 200 RH_BLK	Piaggio spare parts (POP)
940115Y	Rain Protection cover city 200 RH_YLW	Piaggio spare parts (POP)
940112	Rain Protection cover LH 501_BLK	Piaggio spare parts (POP)
940112Y	Rain Protection cover LH 501_YLW	Piaggio spare parts (POP)
940114	Rain Protection cover RH 501_BLK	Piaggio spare parts (POP)
940114Y	Rain Protection cover RH 501_YLW	Piaggio spare parts (POP)
LG5800199	RAPID ASSY M6 NUT	Piaggio spare parts (POP)
567897	RATCHET , HAND BRAKE CONTROL	Piaggio spare parts (POP)
B042794	RATCHET , HAND BRAKE CONTROL	Piaggio spare parts (POP)
L7625313	RAW PLAIN WASHER 5,4X10X0,8	Piaggio spare parts (POP)
3055	RAW WASHER (808000527)	Piaggio spare parts (POP)
B002090	RC GEAR	Piaggio spare parts (POP)
227404015	RC GEAR CARGO (VE)	Piaggio spare parts (POP)
E5405200998	RC LEVER ASSY.	Piaggio spare parts (POP)
6B002830	REAR 2D CHROMEX STICKER	Piaggio spare parts (POP)
661490	REAR AVM - APE TRUK PLUS	Piaggio spare parts (POP)
6A001480	REAR AVM SUPPORT BKT ASSLY	Piaggio spare parts (POP)
B003286	REAR AVM SUPPORT BKT ASSLY	Piaggio spare parts (POP)
B024374	REAR AXLE COMPLETE	Piaggio spare parts (POP)
B002354	REAR AXLE COMPLETE	Piaggio spare parts (POP)
6C000336	REAR AXLE COMPLETE	Piaggio spare parts (POP)
B077458	REAR AXLE COMPLETE	Piaggio spare parts (POP)
B008848	REAR AXLE S/A LH BNA	Piaggio spare parts (POP)
B008930	REAR AXLE S/A RH BNA	Piaggio spare parts (POP)

1A009586	REAR BRACKET ASSY	Piaggio spare parts (POP)
6C000271	REAR BRAKE ASSEMBLY	Piaggio spare parts (POP)
6C000342	REAR BRAKE ASSEMBLY RH	Piaggio spare parts (POP)
B003249	REAR BRAKE ASSLY LH	Piaggio spare parts (POP)
B003267	REAR BRAKE ASSLY RH	Piaggio spare parts (POP)
851889	Rear brake lever	Piaggio spare parts (POP)
858785	Rear brake lever	Piaggio spare parts (POP)
AP8121223	Rear brake lever pin	Piaggio spare parts (POP)
856808	Rear Brake pedal	Piaggio spare parts (POP)
B003330	REAR BRAKE SHOE KIT LH	Piaggio spare parts (POP)
B003331	REAR BRAKE SHOE KIT RH	Piaggio spare parts (POP)
940005	REAR BRAKE SHOE SET L/H	Piaggio spare parts (POP)
940005A	REAR BRAKE SHOE SET L/H	Piaggio spare parts (POP)
940006	REAR BRAKE SHOE SET R/H.	Piaggio spare parts (POP)
940006A	REAR BRAKE SHOE SET R/H.	Piaggio spare parts (POP)
B073315	REAR BRAKE TUBE LH	Piaggio spare parts (POP)
B073316	REAR BRAKE TUBE RH	Piaggio spare parts (POP)
569310	REAR Bumper	Piaggio spare parts (POP)
662004	REAR BUMPER	Piaggio spare parts (POP)
940106	Rear Bumper Guard – Ape City 200	Piaggio spare parts (POP)
940202	Rear Bumper Guard – ape city 200 SS	Piaggio spare parts (POP)
569311	REAR BUMPER SUPPORT LICENCE PLATE ASSLY	Piaggio spare parts (POP)
6B003231	REAR CARPET	Piaggio spare parts (POP)
6B002259	REAR CARPET	Piaggio spare parts (POP)
6B002015	REAR CARPET	Piaggio spare parts (POP)
6B002545	REAR CARPET	Piaggio spare parts (POP)
6B002016	REAR CARPET	Piaggio spare parts (POP)
6B002258	REAR CARPET	Piaggio spare parts (POP)
6B002014	REAR CARPET	Piaggio spare parts (POP)
604604	REAR CARPET PASSENGER BODY(OPTIMIZED)	Piaggio spare parts (POP)
6B002640	REAR CHROMEX STICKER	Piaggio spare parts (POP)
6B002639	REAR CHROMEX STICKER	Piaggio spare parts (POP)
B001661	REAR CROSS MEMBER	Piaggio spare parts (POP)
6A001417	REAR CROSS MEMBER ASSLY. MOTOR MTG.	Piaggio spare parts (POP)
6A000701	REAR ENGINE MOUNT ASSEMBLY	Piaggio spare parts (POP)
6A000701ED	REAR ENGINE MOUNT ASSEMBLY	Piaggio spare parts (POP)
B002084	REAR ENGINE MOUNTING BRACKET ASSLY	Piaggio spare parts (POP)
E87020617	REAR ENGINE MOUNTING BRACKETMACHINED	Piaggio spare parts (POP)
6A001499	REAR ENGINE MOUNTING CROSS MEMBER ASSLY.	Piaggio spare parts (POP)
1E000800	REAR ENGINE MOUNTING, S/A	Piaggio spare parts (POP)
B023469	REAR ENGINE MOUNTING, S/A	Piaggio spare parts (POP)
B002433	REAR ENGINE MTG ASSLY	Piaggio spare parts (POP)
6A000682	REAR ENGINE SUPPORT ASSEMBLY	Piaggio spare parts (POP)
6A000682ED	REAR ENGINE SUPPORT ASSEMBLY	Piaggio spare parts (POP)
662476	REAR ENGINE SUPPT. ARM ASSLY.	Piaggio spare parts (POP)
567480	REAR FLAP	Piaggio spare parts (POP)
569000	REAR FLOOR DOOR ASSLY	Piaggio spare parts (POP)

587798	REAR HATCH ASSLY WITH LATCH BOLT(PASS)	Piaggio spare parts (POP)
643915	REAR HATCH ASSLY WITH LATCH BOLT(PASS) (Piaggio spare parts (POP)
B042726ED	REAR HATCH WITH LATCH BOLT PASS DTL-CED	Piaggio spare parts (POP)
894945	REAR INDICATOR	Piaggio spare parts (POP)
894946	REAR INDICATOR	Piaggio spare parts (POP)
B024643BW	REAR LAMP	Piaggio spare parts (POP)
B024642BW	REAR LAMP	Piaggio spare parts (POP)
B024641	REAR LAMPS SUPPORT	Piaggio spare parts (POP)
6B000558	REAR LH FENDER	Piaggio spare parts (POP)
B002303	REAR MOST FRAME ASSLY	Piaggio spare parts (POP)
B042619	REAR MUDGRD & MUDFLAP SUB ASSY.(Classic)	Piaggio spare parts (POP)
604515	ENGINE STOP CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
B006585	REAR MUDGUARD	Piaggio spare parts (POP)
6B002644	REAR MUDGUARD	Piaggio spare parts (POP)
B042612	REAR MUDGUARD (APE CLASSIC)	Piaggio spare parts (POP)
193707	REAR PACKING DOOR	Piaggio spare parts (POP)
661816	REAR PANEL LH (PLASTIC)	Piaggio spare parts (POP)
B073275	REAR PANEL LH (PLASTIC)	Piaggio spare parts (POP)
661815	REAR PANEL RH (PLASTIC)	Piaggio spare parts (POP)
B073274	REAR PANEL RH (PLASTIC)	Piaggio spare parts (POP)
B002407	REAR PART OF CENTRAL BEAM ASSLY	Piaggio spare parts (POP)
B077559	REAR PASS SEAT ASSLY D55	Piaggio spare parts (POP)
6B000986	REAR PASS SEAT ASSLY LH	Piaggio spare parts (POP)
6B000987	REAR PASS SEAT ASSLY RH	Piaggio spare parts (POP)
B006769	REAR PIPE FOR FRAME	Piaggio spare parts (POP)
B001205	REAR PIPE FOR FRAME (COVERING)	Piaggio spare parts (POP)
604705	REAR PIPE FOR FRAME (COVERING)	Piaggio spare parts (POP)
605404	REAR POSITION AND STOP LI	Piaggio spare parts (POP)
B006937	REAR PROFILE FOR COVER	Piaggio spare parts (POP)
AP8224164	Rear Reflector, Red	Piaggio spare parts (POP)
AP8124718	REAR REFLECTOR, RED	Piaggio spare parts (POP)
587964	REAR REFLEX REFLECTOR	Piaggio spare parts (POP)
6B000557	REAR RH FENDER	Piaggio spare parts (POP)
B074515	REAR RUBBER BUMPER SUPPORT BKT	Piaggio spare parts (POP)
567524	REAR RUBBER BUMPER SUPPORT BKT	Piaggio spare parts (POP)
B041887	REAR SEAT BELT.BKT-EURO CITY	Piaggio spare parts (POP)
6B001586	REAR SEAT MTG. BRACKET S/A	Piaggio spare parts (POP)
6B000740	REAR SEAT MTG. BRACKET S/A	Piaggio spare parts (POP)
B042226	REAR SHOCK ABSORBER	Piaggio spare parts (POP)
6C000446	REAR SHOCK ABSORBER	Piaggio spare parts (POP)
136451R	REAR SHOCK ABSORBER ASSLY	Piaggio spare parts (POP)
137527	REAR SHUTTER PACKING	Piaggio spare parts (POP)
AP8121890	Rear stand bush	Piaggio spare parts (POP)
E870101104	REAR SUPPORT BUSH	Piaggio spare parts (POP)
661420	REAR SUPPORT PIPE (FRAME COVERING)	Piaggio spare parts (POP)
B006765	REAR SUPPORT PIPE HOOD FRAME LEFT	Piaggio spare parts (POP)
B006766	REAR SUPPORT PIPE HOOD FRAME RIGHT	Piaggio spare parts (POP)

6C000801	REAR SUSPENSION SPRING	Piaggio spare parts (POP)
6B001829	REAR TAIL GATE STICKER	Piaggio spare parts (POP)
605403	REAR TURN SIGNAL LAMP ASS	Piaggio spare parts (POP)
567569	REAR UP HATCH WITH I.P.	Piaggio spare parts (POP)
643641ED	REAR UPPER HATCH WITH I.P DEL VAN – CED	Piaggio spare parts (POP)
604770	REAR UPPER HATCH WITH I.P.	Piaggio spare parts (POP)
B002846	REAR UPPER HATCH WITH I.P. (CED)	Piaggio spare parts (POP)
B001948	REAR VIEW MIRROR LH	Piaggio spare parts (POP)
587614	REAR VIEW MIRROR ASSLY	Piaggio spare parts (POP)
B075222	REAR VIEW MIRROR ASSLY LH_CALEX IND	Piaggio spare parts (POP)
643684R	REAR VIEW MIRROR ASSLY- RH	Piaggio spare parts (POP)
B075223	REAR VIEW MIRROR ASSLY RH_CALEX IND	Piaggio spare parts (POP)
643685R	REAR VIEW MIRROR ASSLY-LH	Piaggio spare parts (POP)
643613	REAR VIEW MIRROR ATTACHMENT	Piaggio spare parts (POP)
568271	REAR VIEW MIRROR ATTACHMENT	Piaggio spare parts (POP)
B078071	REAR VIEW MIRROR LH (D5S)	Piaggio spare parts (POP)
B073665	REAR VIEW MIRROR LH (PAX DLX)	Piaggio spare parts (POP)
B074027	REAR VIEW MIRROR LH (PAX DLX)	Piaggio spare parts (POP)
604666	REAR VIEW MIRROR LH ASSLY(DEL. VAN)	Piaggio spare parts (POP)
B001949	REAR VIEW MIRROR RH	Piaggio spare parts (POP)
B078070	REAR VIEW MIRROR RH (D5S)	Piaggio spare parts (POP)
B073666	REAR VIEW MIRROR RH (PAX DLX)	Piaggio spare parts (POP)
B074028	REAR VIEW MIRROR RH (PAX DLX)	Piaggio spare parts (POP)
B001948R	REAR VIEW MIRRORS LH (APE CITY)	Piaggio spare parts (POP)
B001949R	REAR VIEW MIRRORS RH (APE CITY)	Piaggio spare parts (POP)
B025672CED	Rear Visual barrier (CED coated)	Piaggio spare parts (POP)
B006807	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
B002466	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
6B000552	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
6B001132	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
6B001146	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
6B000189	REAR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
6B002704	REAR VISUAL BARRIER ASSLY (6 ft DSL)	Piaggio spare parts (POP)
643670	REAR VISUAL BARRIER ASSLY (VE)	Piaggio spare parts (POP)
6B001133	REAR VISUAL BARRIER ASSLY D5S	Piaggio spare parts (POP)
B077597	REAR VISUAL BARRIER ASSLY D5S	Piaggio spare parts (POP)
643886	Rear wheel	Piaggio spare parts (POP)
L1015075	REAR WHEEL AXLE	Piaggio spare parts (POP)
136430	REAR WHEEL AXLE WITH PI	Piaggio spare parts (POP)
6C000662	REAR WHEEL HUB	Piaggio spare parts (POP)
6C000530	REAR WHEEL HUB	Piaggio spare parts (POP)
B002344	REAR WHEEL HUB	Piaggio spare parts (POP)
587620	REAR WHEEL L.H. TUBE	Piaggio spare parts (POP)
587622	REAR WHEEL R.H. TUBE	Piaggio spare parts (POP)
B003202	REAR WINDOW PACKING	Piaggio spare parts (POP)
AP8705021	Rear Workshop stand	Piaggio spare parts (POP)
1E001064	REAR-BRAKE DRUM ø220	Piaggio spare parts (POP)

6B001153R	REAR-VIEW MIRROR ASSLY LH	Piaggio spare parts (POP)
6B001152R	REAR-VIEW MIRROR ASSLY RH	Piaggio spare parts (POP)
6A000664	RECTANGULAR CLAMP	Piaggio spare parts (POP)
1A012154	RED FRICTION PLATE	Piaggio spare parts (POP)
6B002540	RED REFLECTIVE TAPE	Piaggio spare parts (POP)
6B002537	RED REFLECTIVE TAPE	Piaggio spare parts (POP)
6B002538	RED REFLECTIVE TAPE	Piaggio spare parts (POP)
6B002544	RED REFLECTIVE TAPE	Piaggio spare parts (POP)
478115	REFERENCE DOWEL	Piaggio spare parts (POP)
B015591	REFERENCE DOWEL	Piaggio spare parts (POP)
435571	REFERENCE DOWEL	Piaggio spare parts (POP)
L4307016	REFERENCE DOWEL	Piaggio spare parts (POP)
B015592	REFERENCE DOWEL (D.9,5 H=15)	Piaggio spare parts (POP)
239388	REFERENCE PLUG (D9,5 H15)	Piaggio spare parts (POP)
294519	REFLECTOR	Piaggio spare parts (POP)
925812	REFLECTOR BUSH	Piaggio spare parts (POP)
B006739	REFLECTOR TAPE RED (FOR REAR SIDE)	Piaggio spare parts (POP)
652413	REFLECTOR TAPE RED (FOR REAR SIDE)	Piaggio spare parts (POP)
652412	REFLECTOR TAPE WHITE (FOR FRONT BUMPER)	Piaggio spare parts (POP)
932295	Reflector(Paxx 200)	Piaggio spare parts (POP)
652414	REFLEX REFLECTOR WHITE	Piaggio spare parts (POP)
96890341104	Reg. Brush	Piaggio spare parts (POP)
1A019389	REG. FRICTION PLATE	Piaggio spare parts (POP)
L5201257	REG. LEVER ASSY WITH FIX	Piaggio spare parts (POP)
B003150	REG. NUMBER PLATES	Piaggio spare parts (POP)
L2165147	REG.CASE ASSY 4500 RPM SPARES	Piaggio spare parts (POP)
567515	REGISTER	Piaggio spare parts (POP)
6B001129	REGISTRATION NUMBER PLATE	Piaggio spare parts (POP)
B006582	REGISTRATION NUMBER PLATE (BLACK)	Piaggio spare parts (POP)
L9680046	REGUL. VALVE FOR OIL PRESSURE	Piaggio spare parts (POP)
L2165104	REGULAT.CASE SUB-ASSY 3800 RPM	Piaggio spare parts (POP)
L5201163	REGULATING LEVER ASSEMBLY	Piaggio spare parts (POP)
KD5496375	REGULATING MASSES LEVER	Piaggio spare parts (POP)
F002F51128	Regulating Sleeve	Piaggio spare parts (POP)
L9850136	REGULATION SCREW	Piaggio spare parts (POP)
ED33790	REGULATOR	Piaggio spare parts (POP)
ED22158	REGULATOR	Piaggio spare parts (POP)
ED23790	REGULATOR	Piaggio spare parts (POP)
614595	REGULATOR	Piaggio spare parts (POP)
645067	REGULATOR ASSY, FR. DOOR WINDOW LH	Piaggio spare parts (POP)
B073694	REGULATOR ASSY, FR. DOOR WINDOW LH	Piaggio spare parts (POP)
645066	REGULATOR ASSY, FR. DOOR WINDOW RH	Piaggio spare parts (POP)
B073693	REGULATOR ASSY, FR. DOOR WINDOW RH	Piaggio spare parts (POP)
L2165105	REGULATOR CASE	Piaggio spare parts (POP)
L2610082	REGULATOR CASE COVER	Piaggio spare parts (POP)
940164	Regulator O/H Kit -02RR00101023	Piaggio spare parts (POP)
6A001390	REGULATOR PROTECTION GUARD	Piaggio spare parts (POP)

B009165	REGULATOR WASHER	Piaggio spare parts (POP)
L5496374	REGULATUR COUNTER WEIGHT	Piaggio spare parts (POP)
B001374	REINF HEAD END LH	Piaggio spare parts (POP)
B001390	REINF HEAD END RH	Piaggio spare parts (POP)
B073169	REINF. SILL CROSS	Piaggio spare parts (POP)
B001094	REINFORCEMENT CROSS MEMBER - RH	Piaggio spare parts (POP)
B001095	REINFORCEMENT CROSS MEMBER- LH	Piaggio spare parts (POP)
B002586	REINFORCEMENT PLATE, END PIECE	Piaggio spare parts (POP)
B002653	REINFORCEMENT PLATE, SIDE PANEL	Piaggio spare parts (POP)
B075923	REINFORCEMENT SUB-ASSY FRONT PANEL UPPER	Piaggio spare parts (POP)
604684	REINFORCEMENT-GLOVE BOX COVER	Piaggio spare parts (POP)
615647	RELAY	Piaggio spare parts (POP)
AP8224462	Relay	Piaggio spare parts (POP)
B003727	RELAY 12 V- NC	Piaggio spare parts (POP)
AP8112927	RELAY 12V-150A	Piaggio spare parts (POP)
925665	RELAY WIPER INTERMITTANCE	Piaggio spare parts (POP)
660319	RELAY-FAN MOTOR	Piaggio spare parts (POP)
895701	Relè iniezione con cappuccio	Piaggio spare parts (POP)
E87000940	RELIEF VALVE	Piaggio spare parts (POP)
ED42914	Relief valve assly. consisting of sr.nos	Piaggio spare parts (POP)
E560968013	RELIEF VALVE ASSY	Piaggio spare parts (POP)
E5609680013	RELIEF VALVE BODY	Piaggio spare parts (POP)
294076	REMOTE CONTR.SWITCH	Piaggio spare parts (POP)
B023726	REMOTE CONTR.SWITCH RELAY:12V 30A)BG LIN	Piaggio spare parts (POP)
B023726R	REMOTE CONTROL SWITCH	Piaggio spare parts (POP)
KD27505098	REMOTE CONTROLS PANEL 15LD441	Piaggio spare parts (POP)
B006559	REMOTE FILLER NECK ASSY.	Piaggio spare parts (POP)
660876	REMOTE FILLER UNIT	Piaggio spare parts (POP)
B009253	REMOTE FILLER UNIT	Piaggio spare parts (POP)
B042179	REMOTE FILLER UNIT WITH BULLNOSE CONNECT	Piaggio spare parts (POP)
ED31988	Remote speed housing assy. Consisting o	Piaggio spare parts (POP)
E43501847	REMOTE THROTTLE AND STOP CONTROL	Piaggio spare parts (POP)
E10A110006	REMOTE THROTTLE AND STOP CONTROL FOR REA	Piaggio spare parts (POP)
B073254	REPAIR ADJUSTER KIT RH - D220 REAR BRAKE	Piaggio spare parts (POP)
B073255	REPAIR ADJUSTER KIT RH - D220 REAR BRAKE	Piaggio spare parts (POP)
B009297	RESERVOIR MTG. BRACKET ASSY.	Piaggio spare parts (POP)
B041089	RETRACTOR FOR AIR FILTER	Piaggio spare parts (POP)
B041090	RETRACTOR FOR AIR FILTER	Piaggio spare parts (POP)
932247	Restrictor - 1 for CNG / LPG(K-0180-020)	Piaggio spare parts (POP)
932246	Restrictor - 2 for CNG(K-0180-010)Paxx2	Piaggio spare parts (POP)
932271	Restrictor 2 for LPG(K-0442-180)Paxx 20	Piaggio spare parts (POP)
B075308	RESTRICTOR AIR FILTER INLET	Piaggio spare parts (POP)
B074845	RESTRICTOR AIR FILTER INLET	Piaggio spare parts (POP)
B041445	RESTRICTOR AIR FILTER INLET	Piaggio spare parts (POP)
B024937	RESTRICTOR AIR FILTER INLET	Piaggio spare parts (POP)
B024936	RESTRICTOR AIR FILTER INLET	Piaggio spare parts (POP)
E34M140001	RESTRICTOR INLET: ID 16	Piaggio spare parts (POP)

E34M140003	RESTRICTOR OUTLET: ID 20	Piaggio spare parts (POP)
2916600006	RETAINER	Piaggio spare parts (POP)
E271640007	Retainer (Valve spring)	Piaggio spare parts (POP)
AP8120622	RETAINER 6X12,35X0,55 POLYTHENE	Piaggio spare parts (POP)
889607	RETAINER CIRCLIP	Piaggio spare parts (POP)
LG3430174	Retainer Disc	Piaggio spare parts (POP)
888204	RETAINER MAIN IDLER	Piaggio spare parts (POP)
E07500608	Retainer plate	Piaggio spare parts (POP)
ESK8832	RETAINER PLATE	Piaggio spare parts (POP)
A01G120021	Retainer ring for Inline Pump _DSL BS6	Piaggio spare parts (POP)
889969	RETAINER SECONDARY IDLER SHAFT	Piaggio spare parts (POP)
888062	RETAINER SPRING	Piaggio spare parts (POP)
LG6400084	Retainer with half-collets	Piaggio spare parts (POP)
925749	RETAINER(K-0102-02-360)	Piaggio spare parts (POP)
932241	RETAINER(K-0102-02-l-360)Paxx200	Piaggio spare parts (POP)
D6777187Z01	RETAINER, DOOR TRIM	Piaggio spare parts (POP)
03G161661	retainerclutch lever	Piaggio spare parts (POP)
ESP650DCH016	RETAINER-VALVE SPRING	Piaggio spare parts (POP)
950300405	RETAINING COMPUND	Piaggio spare parts (POP)
120164019	RETAINING PLATE	Piaggio spare parts (POP)
1A017163	RETAINING RING	Piaggio spare parts (POP)
L1301353	Retaining ring	Piaggio spare parts (POP)
B042762	RETAINING SPRING FOR BRAKE PIPING	Piaggio spare parts (POP)
179013	RETAINING SPRING FOR BRAKE PIPING	Piaggio spare parts (POP)
F000CD1025	Retaining Washer	Piaggio spare parts (POP)
L9346077	RETURN PIPING(INJ.-PUMP 493843)	Piaggio spare parts (POP)
E505568046	RETURN SPRING	Piaggio spare parts (POP)
616547	RETURN SPRING FOR BRAKE PEDAL	Piaggio spare parts (POP)
616546	RETURN SPRING FOR CLUTCH PEDAL	Piaggio spare parts (POP)
616588	RETURN SPRING FOR THROTTLE PEDAL	Piaggio spare parts (POP)
116087	RETURN SPRING FRONT JAWS	Piaggio spare parts (POP)
116086	RETURN SPRING REAR JAWS	Piaggio spare parts (POP)
L5660099	RETURNING SPRING	Piaggio spare parts (POP)
L5675020	RETURNING SPRING	Piaggio spare parts (POP)
1A008804	REVERSE CABLE REACTION BRACKET	Piaggio spare parts (POP)
03G160830	reverse detent ramp	Piaggio spare parts (POP)
B015817	REVERSE GEAR	Piaggio spare parts (POP)
B017134	REVERSE GEAR	Piaggio spare parts (POP)
1A008666R	REVERSE GEAR	Piaggio spare parts (POP)
1A008670R	REVERSE GEAR	Piaggio spare parts (POP)
1A006806	REVERSE GEAR	Piaggio spare parts (POP)
1A013636	REVERSE GEAR	Piaggio spare parts (POP)
1A014913	REVERSE GEAR	Piaggio spare parts (POP)
1A008547	REVERSE GEAR	Piaggio spare parts (POP)
1A017639	REVERSE GEAR	Piaggio spare parts (POP)
1A011337	REVERSE GEAR	Piaggio spare parts (POP)
L4920067	REVERSE GEAR	Piaggio spare parts (POP)

L4920076	REVERSE GEAR	Piaggio spare parts (POP)
SST94165	Reverse Gear cable Setting tool	Piaggio spare parts (POP)
6A001305	REVERSE GEAR CONTROL CABLE	Piaggio spare parts (POP)
567690	REVERSE GEAR COUPLING SPRING	Piaggio spare parts (POP)
B076926	REVERSE GEAR COUPLING SPRING	Piaggio spare parts (POP)
6A000070	REVERSE GEAR INNER CABLE	Piaggio spare parts (POP)
127111011	REVERSE GEAR SPRING	Piaggio spare parts (POP)
660356	REVERSE GEAR TRANSMISSION CABLE	Piaggio spare parts (POP)
889242	REVERSE IDLE GEAR	Piaggio spare parts (POP)
889240	REVERSE IDLE GEAR ASSY	Piaggio spare parts (POP)
SP1F000737	REVERSE IDLE GEAR ASSY SPD GB 700 / 1000	Piaggio spare parts (POP)
889243	REVERSE IDLE GEAR RETAINER	Piaggio spare parts (POP)
1F000736	REVERSE IDLE GEAR SUPPORT	Piaggio spare parts (POP)
B042583SP	REVERSE IDLER GEAR ASSLY-PO 600 GB-SPD	Piaggio spare parts (POP)
B042583	REVERSE IDLER GEAR ASSLY-PORTER 600 GB	Piaggio spare parts (POP)
925692	REVERSE LAMP LENS	Piaggio spare parts (POP)
L1111234	REVERSE MOTION SHAFT WITH IP	Piaggio spare parts (POP)
L1111219	REVERSE MOTION SHAFT WITH P.I.	Piaggio spare parts (POP)
B041163	REVERSE RETAIN BOLT	Piaggio spare parts (POP)
B016905	REVERSE SHAFT	Piaggio spare parts (POP)
1A009926	REVERSE SHAFT	Piaggio spare parts (POP)
B018990	REVERSE SHAFT	Piaggio spare parts (POP)
B018989	REVERSE SHAFT WITH I.P.	Piaggio spare parts (POP)
SP1A009945	REVERSE SHAFT WITH I.P._SPD	Piaggio spare parts (POP)
889229	REVERSE SPEED DRIVEN GEAR	Piaggio spare parts (POP)
1F000591	REVERSE SPEED DRIVEN GEAR	Piaggio spare parts (POP)
889287	REVERSE SPEED SENSOR	Piaggio spare parts (POP)
B012479	REVERSE SWITCH SENSOR	Piaggio spare parts (POP)
B041195	REVERSE SWITCH-510	Piaggio spare parts (POP)
AP8210007	RH ball joint M6	Piaggio spare parts (POP)
B008946	RH BRAKE/SHOE S/A	Piaggio spare parts (POP)
6B002566	RH DOOR DECAL (BLUE)	Piaggio spare parts (POP)
6B002934	RH DOOR DECAL (EX)	Piaggio spare parts (POP)
6B002932	RH DOOR DECAL (FX)	Piaggio spare parts (POP)
6B002936	RH DOOR DECAL(LX)	Piaggio spare parts (POP)
567684	RH DOOR SUB ASSLY	Piaggio spare parts (POP)
B002847	RH DOOR SUB ASSLY (CED)	Piaggio spare parts (POP)
B003233	RH DOOR WINDOW REGULATOR	Piaggio spare parts (POP)
178818	RH FORK	Piaggio spare parts (POP)
853403	RH front turn indicator	Piaggio spare parts (POP)
853401	RH front turn indicator	Piaggio spare parts (POP)
178819	RH GEAR	Piaggio spare parts (POP)
894880	RH handguard	Piaggio spare parts (POP)
156413	RH HANDLE WITH LOCK ASSLY	Piaggio spare parts (POP)
178824	RH JUMPER	Piaggio spare parts (POP)
128805	RH LEVER FOR CLAMPING THE SIDE PANEL 3W	Piaggio spare parts (POP)
128805ED	RH LEVER FOR CLAMPING THE SIDE PANEL CED	Piaggio spare parts (POP)

632477	RH LIGHT UNIT	Piaggio spare parts (POP)
B073317	RH PLASTIC CLOSURE PANEL	Piaggio spare parts (POP)
B073382	RH PLASTIC CLOSURE PANEL- APE PAX	Piaggio spare parts (POP)
AP8104921	RH rearview mirror	Piaggio spare parts (POP)
890878	RH rearview mirror	Piaggio spare parts (POP)
6B002938	RH SIDE WALL DECAL	Piaggio spare parts (POP)
6B003400	RH SIDE WALL DECAL	Piaggio spare parts (POP)
6B002625	RH SIDE WALL DECAL (BLUE)	Piaggio spare parts (POP)
178820	RH STRUT	Piaggio spare parts (POP)
180004	RH TRANSPARENT LENS	Piaggio spare parts (POP)
AP8127699	RH transparent lens show - Euro only	Piaggio spare parts (POP)
B008942	RH TRIANGLE S/A-501	Piaggio spare parts (POP)
B073816	RH UPPER COVER DASHBOARD	Piaggio spare parts (POP)
163666SP	RH VENT WINDOW ASSY.3W CARGO -SPD	Piaggio spare parts (POP)
599677	RIDGE	Piaggio spare parts (POP)
602122	RIGHT BRAKE ASSLY.	Piaggio spare parts (POP)
602123	RIGHT BRAKE JAW HOLDING HOLDING CABLE PL	Piaggio spare parts (POP)
660814	RIGHT ENGINE COVER	Piaggio spare parts (POP)
B024944	RIGHT ENGINE UNDER COVER	Piaggio spare parts (POP)
645151	RIGHT ENGINE UNDER COVER ASSY	Piaggio spare parts (POP)
B009111	RIGHT ENGINE UNDER COVER ASSY (BS-III)	Piaggio spare parts (POP)
567534	RIGHT FABRIC PROTECTION	Piaggio spare parts (POP)
AP8118649	Right half handlebar	Piaggio spare parts (POP)
B002275	RIGHT REAR LAMPS WHITE	Piaggio spare parts (POP)
605400	RIGHT REAR LIGHT TAXI BLACK	Piaggio spare parts (POP)
6B001496R	RIGHT REAR-VIEW MIRROR	Piaggio spare parts (POP)
896663	RIGHT REAR-VIEW MIRROR	Piaggio spare parts (POP)
613015	RIM	Piaggio spare parts (POP)
B024645	RIM COVER FOR JNT BET CABIN & WINDSHIELD	Piaggio spare parts (POP)
B076247	RIM COVER FOR JNT BET CABIN & WINDSHIELD	Piaggio spare parts (POP)
190393	RIM COVERAGE JOINT	Piaggio spare parts (POP)
925803	RIM WITH MOTOR MNTG BRKT (LH)	Piaggio spare parts (POP)
6417	RING	Piaggio spare parts (POP)
77055	RING	Piaggio spare parts (POP)
643738	RING	Piaggio spare parts (POP)
434947	RING	Piaggio spare parts (POP)
661267	RING	Piaggio spare parts (POP)
137051	RING	Piaggio spare parts (POP)
431044	RING	Piaggio spare parts (POP)
109117	RING	Piaggio spare parts (POP)
615989	RING	Piaggio spare parts (POP)
L1301349	RING	Piaggio spare parts (POP)
03G160308	ring - dog	Piaggio spare parts (POP)
L4775672	RING & GASKET SET LDW 482 BS II	Piaggio spare parts (POP)
L8205124	RING AND GASKET SET ASS.Y (without gaske	Piaggio spare parts (POP)
6A000532	RING CLAMP	Piaggio spare parts (POP)
121131019	RING CLUTCH	Piaggio spare parts (POP)

ESP650DNB002	RING DOWEL	Piaggio spare parts (POP)
ESP650DNB001	RING DOWEL	Piaggio spare parts (POP)
03G160007	ring dowel casing assy (Out dia 10 x in	Piaggio spare parts (POP)
441035	RING FITMENT ON PISTON	Piaggio spare parts (POP)
226662	RING FOR ELASTIC SUPPORT	Piaggio spare parts (POP)
226596	RING FOR ELASTIC SUPPORT	Piaggio spare parts (POP)
632979	RING FOR ELASTIC SUPPORT.	Piaggio spare parts (POP)
KD1160056	RING FOR FRAME STOP	Piaggio spare parts (POP)
150579	RING FOR HOLDING (TYPE JF 101 174)	Piaggio spare parts (POP)
020856Y	RING FOR PISTON	Piaggio spare parts (POP)
E40009648	RING GEAR	Piaggio spare parts (POP)
E07509640	Ring gear	Piaggio spare parts (POP)
E87009652	RING GEAR	Piaggio spare parts (POP)
L2816206	RING GEAR	Piaggio spare parts (POP)
1A021204	RING NUT	Piaggio spare parts (POP)
108874	RING NUT	Piaggio spare parts (POP)
1A017994	RING NUT	Piaggio spare parts (POP)
B016147	RING NUT	Piaggio spare parts (POP)
1F0004784	RING NUT	Piaggio spare parts (POP)
889246	RING NUT	Piaggio spare parts (POP)
108872	RING NUT	Piaggio spare parts (POP)
03G161685	ring oil barrier (rear)shaft lay	Piaggio spare parts (POP)
KIT1U000023	RING SET	Piaggio spare parts (POP)
1U000023	RING SET	Piaggio spare parts (POP)
KD8211282	RING SET	Piaggio spare parts (POP)
L8211275	RING SET STD LDW 482	Piaggio spare parts (POP)
LG8211267	Ring Set 0.50 O/s	Piaggio spare parts (POP)
LG8211268	Ring Set 1.00 O/s	Piaggio spare parts (POP)
KD8211286	Ring Set KD441 [Menp]	Piaggio spare parts (POP)
LG8211266	Ring Set STD	Piaggio spare parts (POP)
KIT95103R	Ring Set. Ape 501_300CC AF	Piaggio spare parts (POP)
261337	RING, E	Piaggio spare parts (POP)
E27602816036	RING, GEAR STARTER	Piaggio spare parts (POP)
D9671119014	RING, O	Piaggio spare parts (POP)
D9671119025	RING, O	Piaggio spare parts (POP)
D9004520104	RING, SHAFT SNAP	Piaggio spare parts (POP)
D9004520189	RING, SHAFT SNAP	Piaggio spare parts (POP)
D9615103500	RING, SNAP	Piaggio spare parts (POP)
E50009629	RING,GEAR,STARTER	Piaggio spare parts (POP)
03G161684	ringoil barrier front shaft lay	Piaggio spare parts (POP)
604603	RIVET (AVDEL 1601 - 0619)	Piaggio spare parts (POP)
LG742A125	RIVET CONNECTING D.3	Piaggio spare parts (POP)
5745	RIVET DIA5 X 7 MM	Piaggio spare parts (POP)
B003335	RIVET WINDOW SLIDING GLASS	Piaggio spare parts (POP)
E270985002	Rocker adjusting screw	Piaggio spare parts (POP)
KD3300265	ROCKER ARM ADJUSTMENT NUT	Piaggio spare parts (POP)
B011058	ROCKER ARM ASSY	Piaggio spare parts (POP)

KD2125775	ROCKER ARM COVER	Piaggio spare parts (POP)
KD2125752	ROCKER ARM COVER ASSY.	Piaggio spare parts (POP)
KD1541176	ROCKER ARM FOR MECH. TAP 15LD	Piaggio spare parts (POP)
1A013013	ROCKER ARM GROUP	Piaggio spare parts (POP)
83062R	ROCKER ARM GROUP	Piaggio spare parts (POP)
ED43407	ROCKER ARM KIT	Piaggio spare parts (POP)
B017431	ROCKER ARM NUT	Piaggio spare parts (POP)
B017113	ROCKER ARM SHAFT	Piaggio spare parts (POP)
1A012424	Rocker Arm Shaft	Piaggio spare parts (POP)
SST94058	ROCKER ARM SHAFT PULLER	Piaggio spare parts (POP)
KD9850144	ROCKER ARM STUD	Piaggio spare parts (POP)
ED41789	ROCKER BOX COVER ASSLY	Piaggio spare parts (POP)
E50006610	ROCKER BOX COVER ASSY	Piaggio spare parts (POP)
E10A110001	ROCKER BOX COVER ASSY. WITH OIL FILLING	Piaggio spare parts (POP)
E43502764	ROCKER COVER ASSEMBLY WITH PLUG	Piaggio spare parts (POP)
ED41620	Rocker cover assy. Consisting of sr.nos	Piaggio spare parts (POP)
A01A110001	ROCKER COVER ASSEMBLY	Piaggio spare parts (POP)
ESP650DCH002	ROCKER COVER ASSEMBLY	Piaggio spare parts (POP)
E5402125627	ROCKER COVER ASSLY	Piaggio spare parts (POP)
E40006653	ROCKER COVER ASSLY.	Piaggio spare parts (POP)
E04A110009	ROCKER COVER ASSY	Piaggio spare parts (POP)
E87006636	ROCKER COVER ASSY	Piaggio spare parts (POP)
E43502711	ROCKER COVER GASKET	Piaggio spare parts (POP)
E87006627	ROCKER COVER MACHINED	Piaggio spare parts (POP)
E60021777	ROCKER COVER-PORTER 600	Piaggio spare parts (POP)
E87006628	ROCKER FLUCRUM	Piaggio spare parts (POP)
E288604527	Rocker fulcrum	Piaggio spare parts (POP)
E500604526	ROCKER FULCRUM	Piaggio spare parts (POP)
E5406045038	ROCKER FULCRUM	Piaggio spare parts (POP)
ESP650DCH004	ROCKER FULCRUM	Piaggio spare parts (POP)
E87000960	Rocker fulcrum	Piaggio spare parts (POP)
E87000972	ROCKER FULCRUM WITH PLUG	Piaggio spare parts (POP)
E40015134	ROCKER LEVER ASSLY EXHAUST WITH 11 & 12	Piaggio spare parts (POP)
E40015133	ROCKER LEVER ASSLY INTAKE WITH 11 & 12	Piaggio spare parts (POP)
E50005195	ROCKER LEVER ASSY - EXHAUST	Piaggio spare parts (POP)
E43502769	ROCKER LEVER ASSY EXH	Piaggio spare parts (POP)
E43502768	ROCKER LEVER ASSY INLET	Piaggio spare parts (POP)
E07501825	Rocker lever assy. exhaust	Piaggio spare parts (POP)
E07501826	Rocker lever assy. inlet	Piaggio spare parts (POP)
E53005137	ROCKER LEVER EXHAUST	Piaggio spare parts (POP)
E50005137	ROCKER LEVER EXHAUST	Piaggio spare parts (POP)
E870051116	ROCKER LEVER EXHAUST	Piaggio spare parts (POP)
E53005136	ROCKER LEVER INLET	Piaggio spare parts (POP)
E50005136	ROCKER LEVER INLET	Piaggio spare parts (POP)
E870051115	ROCKER LEVER INLET	Piaggio spare parts (POP)
E40015121	ROCKER LEVER SET	Piaggio spare parts (POP)
E07505169	Rocker lever set	Piaggio spare parts (POP)

ESP650DCH024	Rocker lever set	Piaggio spare parts (POP)
E10A060009	ROCKER LEVER SET_BSIV	Piaggio spare parts (POP)
E07537194	Rocker lubrication pipe	Piaggio spare parts (POP)
E07537113	Rocker lubrication pipe	Piaggio spare parts (POP)
888211	ROCKER SHAFT ASSEMBLY	Piaggio spare parts (POP)
B012198	ROCKER SHAFT ASSEMBLY	Piaggio spare parts (POP)
E53006610	ROCKERCOVER	Piaggio spare parts (POP)
E50005196	ROCKERLEVERASSY-INLET	Piaggio spare parts (POP)
888256	ROCKERSHAFT SUPPORT	Piaggio spare parts (POP)
L7200719	ROD	Piaggio spare parts (POP)
920049	Rod (V-5406-350)	Piaggio spare parts (POP)
D4546087Z01	ROD ASSY, TIE	Piaggio spare parts (POP)
L5201160	ROD CONTROL LEVER SUB-ASSY	Piaggio spare parts (POP)
L7200733	ROD FOR FEED PUMP	Piaggio spare parts (POP)
L1390060	ROD FOR SLEEVE	Piaggio spare parts (POP)
L1111221	ROD FOR SPRING	Piaggio spare parts (POP)
L1557143	ROD GUIDING BLOCK	Piaggio spare parts (POP)
6C000433	ROD, JACK MOUNTING	Piaggio spare parts (POP)
KD2125701	ROKER ARM COVER	Piaggio spare parts (POP)
847906	Roller	Piaggio spare parts (POP)
604781	ROLLER	Piaggio spare parts (POP)
1410300220	ROLLER	Piaggio spare parts (POP)
126052012	ROLLER (40673)	Piaggio spare parts (POP)
1A007028	ROLLER BEARING	Piaggio spare parts (POP)
B012282	ROLLER BEARING	Piaggio spare parts (POP)
1F000669	ROLLER BEARING	Piaggio spare parts (POP)
889294	ROLLER BEARING	Piaggio spare parts (POP)
107718	ROLLER BUSH	Piaggio spare parts (POP)
128486	ROLLER CAGE	Piaggio spare parts (POP)
889295	ROLLER CAGE	Piaggio spare parts (POP)
LG7770175	ROLLER D.4x5	Piaggio spare parts (POP)
E87006823	ROLLER TAPPET	Piaggio spare parts (POP)
A01G120005	ROLLER TAPPET	Piaggio spare parts (POP)
E10G120003	ROLLER TAPPET	Piaggio spare parts (POP)
888677	ROLLER TAPPET	Piaggio spare parts (POP)
ESP650DFS002	ROLLER TAPPET	Piaggio spare parts (POP)
KD7215133	ROLLER TAPPET 15LD400	Piaggio spare parts (POP)
3418700004	ROLLER TAPPET ASSLY -FUEL INJECTION PUMP	Piaggio spare parts (POP)
3418700010	Roller Tappet For Pump	Piaggio spare parts (POP)
KD9765182	ROLLER TAPPET SCREW FOR LOCK	Piaggio spare parts (POP)
B003959	ROLLER THRUST BEARING	Piaggio spare parts (POP)
940158	Roof Intersecting pipes V1	Piaggio spare parts (POP)
940103	Roof Intersecting pipes_HFI	Piaggio spare parts (POP)
214772	ROOF LAMP	Piaggio spare parts (POP)
940101	Roof Pipes incl.of Carrier Attchmnt pipe	Piaggio spare parts (POP)
940156	Roof Pipes V1 incl.of Carrier Attchmnt p	Piaggio spare parts (POP)
ED42189	ROTOR	Piaggio spare parts (POP)

660868	ROTOR	Piaggio spare parts (POP)
L7750123	ROTOR	Piaggio spare parts (POP)
ED22588	ROTOR (LPG/CNG)	Piaggio spare parts (POP)
680070	ROTOR ASSEMBLY WITH HUB	Piaggio spare parts (POP)
KD77501598	ROTOR FOR INEL ALT. 15LD441	Piaggio spare parts (POP)
MER940001	Round Neck T Shirt-White -S_CV	Piaggio spare parts (POP)
E87007735	ROUND SILENCER	Piaggio spare parts (POP)
18211	ROUND SPLINE	Piaggio spare parts (POP)
7100000004	RPM Sensor	Piaggio spare parts (POP)
B002837	RR HATCH ASSLY WITH LATCH BOLT(PASS)CED	Piaggio spare parts (POP)
B002836	RR HATCH ASSLY WITH LATCH BOLT(PASS)CED	Piaggio spare parts (POP)
567968	RR PANEL LH ASSLY	Piaggio spare parts (POP)
567966	RR PANEL RH ASSEMBLY	Piaggio spare parts (POP)
616605	RR SIDE PANEL LEFT ASSEMB	Piaggio spare parts (POP)
605428	RR SIDE PANEL RIGHT	Piaggio spare parts (POP)
567722	RR STOPPER SPARE WHEEL	Piaggio spare parts (POP)
661476	RR SUPPORT PIPE, FRAME COVERING RH	Piaggio spare parts (POP)
6C000462ED	RR SUSP SUPPORT C/S MBER RH BKT ASSLY-ED	Piaggio spare parts (POP)
6C000101	Rr TRAILING ARM ASSLY - RH WITH BUSH	Piaggio spare parts (POP)
6C000097	Rr TRAILING ARM ASSLY-LH WITH BUSH	Piaggio spare parts (POP)
KD73623868	RR UNIT 12 V 20 A	Piaggio spare parts (POP)
KD7362382	RR UNIT 12V-20A INEL SK5010154	Piaggio spare parts (POP)
B009506	RR UNIT KD441	Piaggio spare parts (POP)
LG7362374	RR UNIT LGA 280/340	Piaggio spare parts (POP)
LG7362389	RR UNIT LGA 280/340	Piaggio spare parts (POP)
568708	RR VIEW MIRROR ASSLY	Piaggio spare parts (POP)
567955	RR VISUAL BARRIER ASSLY	Piaggio spare parts (POP)
895720	RSV4 Baseball Cap	Piaggio spare parts (POP)
569160	RUBBER BOOT	Piaggio spare parts (POP)
ED41779	RUBBER BOOT	Piaggio spare parts (POP)
B008056	RUBBER BUFFER WITH SCREW	Piaggio spare parts (POP)
79375	RUBBER BUMPER	Piaggio spare parts (POP)
567586	RUBBER BUMPER	Piaggio spare parts (POP)
568289	RUBBER BUMPER	Piaggio spare parts (POP)
B002470	RUBBER BUMPER	Piaggio spare parts (POP)
568289P	RUBBER BUMPER	Piaggio spare parts (POP)
B042098	RUBBER BUMPER	Piaggio spare parts (POP)
616889	RUBBER BUMPER, RR GATE	Piaggio spare parts (POP)
B023895	RUBBER BUSH	Piaggio spare parts (POP)
920022	RUBBER BUSH 0.5 LCA	Piaggio spare parts (POP)
B009232	RUBBER BUSH CYLINDER COVER	Piaggio spare parts (POP)
B003654	RUBBER BUSH ENGINE DOOR	Piaggio spare parts (POP)
660843	RUBBER BUSHING REAR SUSPENSION	Piaggio spare parts (POP)
LG2145078	Rubber Cap	Piaggio spare parts (POP)
KD9000241	RUBBER CAP FOR ADJ BANJO	Piaggio spare parts (POP)
KD2145037	RUBBER CAP FOR ADJ BANJO	Piaggio spare parts (POP)
925804	RUBBER CAP WITH BREATHER HOLE	Piaggio spare parts (POP)

604759	RUBBER CAP-STEERING COLUMN	Piaggio spare parts (POP)
B074275	RUBBER DAMPER	Piaggio spare parts (POP)
925888	RUBBER GASKET FOR TANK UNIT	Piaggio spare parts (POP)
ESP650DGS009	RUBBER GASKET(ROCKER COVER)	Piaggio spare parts (POP)
116971	RUBBER GROMMET	Piaggio spare parts (POP)
B002794	RUBBER GROMMET (15 11 005 0)	Piaggio spare parts (POP)
E270477537	Rubber joint	Piaggio spare parts (POP)
B076836	RUBBER PACKING	Piaggio spare parts (POP)
632413	RUBBER PACKING	Piaggio spare parts (POP)
569191	RUBBER PACKING	Piaggio spare parts (POP)
652105	RUBBER PACKING - PRIMARY FUEL FILTER	Piaggio spare parts (POP)
925603	RUBBER PACKING - TAIL LAMP (LUMAX)	Piaggio spare parts (POP)
B006598	RUBBER PACKING LH/RH	Piaggio spare parts (POP)
B006599	RUBBER PACKING REAR LH/RH	Piaggio spare parts (POP)
B006600	RUBBER PACKING REAR MIDDLE	Piaggio spare parts (POP)
B006892	RUBBER PACKING SIDE MIDDLE	Piaggio spare parts (POP)
B002187	RUBBER PACKING-FUEL FILTER	Piaggio spare parts (POP)
6A001247	RUBBER PAD	Piaggio spare parts (POP)
6A001248	RUBBER PAD	Piaggio spare parts (POP)
569178	RUBBER PAD	Piaggio spare parts (POP)
6A001300	RUBBER PAD BOTTOM	Piaggio spare parts (POP)
B079362	RUBBER PAD BOTTOM	Piaggio spare parts (POP)
B074024	RUBBER PAD FOOT STEP	Piaggio spare parts (POP)
6A000131	RUBBER PAD LOWER	Piaggio spare parts (POP)
6A001476	RUBBER PAD LOWER, CYLINDER MTG.	Piaggio spare parts (POP)
ESP650DFP006	RUBBER PAD(VACCUM MODULATOR)	Piaggio spare parts (POP)
LG9590024	Rubber Pipe	Piaggio spare parts (POP)
L9080276	RUBBER PLUG FOR TUBE DIA	Piaggio spare parts (POP)
567461	RUBBER PROTECTION FOR PEDAL	Piaggio spare parts (POP)
B041513	RUBBER PROTECTOR	Piaggio spare parts (POP)
B041473	RUBBER RIB	Piaggio spare parts (POP)
KD9693007	RUBBER SAFETY VALVE (BLACK)	Piaggio spare parts (POP)
605003	RUBBER SHOCK ABSORBER	Piaggio spare parts (POP)
605003P	RUBBER SHOCK ABSORBER	Piaggio spare parts (POP)
AP8220238	Rubber spacer	Piaggio spare parts (POP)
B076290	RUBBER SPRING	Piaggio spare parts (POP)
B078604	RUBBER SPRING D5S	Piaggio spare parts (POP)
6A001524	RUBBER STOPPER	Piaggio spare parts (POP)
B077168	RUBBER STOPPER	Piaggio spare parts (POP)
B079308	RUBBER STOPPER TAIL GATE	Piaggio spare parts (POP)
632185	RUBBER STRAP LOWER	Piaggio spare parts (POP)
632184	RUBBER STRAP UPPER	Piaggio spare parts (POP)
604863	RUBBER STRAP UPPER	Piaggio spare parts (POP)
659857	RUBBER STRAP UPPER	Piaggio spare parts (POP)
6C000048	RUBBER STRIPE	Piaggio spare parts (POP)
AP8144564	Rubber w/ insert	Piaggio spare parts (POP)
6C000525	RUBBER WASHER	Piaggio spare parts (POP)

B002792	RUBBER WASHER (15 05 030 0)	Piaggio spare parts (POP)
AP8120531	RUBBER WITH INSERT	Piaggio spare parts (POP)
568275	RUBBER-STOP	Piaggio spare parts (POP)
261078	RUN, FR DOOR GLASS, LH	Piaggio spare parts (POP)
261077	RUN, FR DOOR GLASS, RH	Piaggio spare parts (POP)
B075934	RUN,FR DOOR GLASS,LH	Piaggio spare parts (POP)
659979	RUN,FR DOOR GLASS,LH	Piaggio spare parts (POP)
B075933	RUN,FR DOOR GLASS,RH	Piaggio spare parts (POP)
659980	RUN,FR DOOR GLASS,RH	Piaggio spare parts (POP)
L6010098	RUNNER	Piaggio spare parts (POP)
B041549	RUNNING IN INSTRUCTION	Piaggio spare parts (POP)
930101677	S.YELLOW TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
930101677A	S.YELLOW TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B073048	S/A BKT FIXING PIPE AIR INTAKE LATERAL	Piaggio spare parts (POP)
B073050	S/A BKT, FIXING PIPE AIR INTAKE, LOWER	Piaggio spare parts (POP)
B073047	S/A BRACKET FIXING PIPE AIR INTAKE UPPER	Piaggio spare parts (POP)
B023833	S/A OF PIVOT & HAT BKT-LH	Piaggio spare parts (POP)
B023838	S/A OF PIVOT & HAT BKT-RH	Piaggio spare parts (POP)
B073623	S/A PLASTIC FUEL TANK (10LTR)	Piaggio spare parts (POP)
B007775	S/A PLATE, ACCELERATOR PEDAL SUPPORT	Piaggio spare parts (POP)
B077271	S/A PLATIC FUEL TANK (3L)	Piaggio spare parts (POP)
B042390	S/A PLATIC FUEL TANK (3L)	Piaggio spare parts (POP)
B023638	S\A CONNECTION BRACKET, ENGINE-LEFT SILE	Piaggio spare parts (POP)
SM26240080	S2-Solenoid Switch	Piaggio spare parts (POP)
652062	SAFETY BELT	Piaggio spare parts (POP)
L7200722	SAFETY DOWEL	Piaggio spare parts (POP)
940149	Safety Guard Fr Mudguard – ape' city 200	Piaggio spare parts (POP)
940201	Safety Guard Fr Mudguard –ape city 200SS	Piaggio spare parts (POP)
L6231235	SAFETY PIVOT	Piaggio spare parts (POP)
LG6370602	SAFETY PLATE	Piaggio spare parts (POP)
ED41240	SAFETY REGULATOR	Piaggio spare parts (POP)
680166	SAFETY RELAY DEVICE	Piaggio spare parts (POP)
LG91490688	SAFETY RELAYS	Piaggio spare parts (POP)
LG91490650	SAFETY RELAYS MICO	Piaggio spare parts (POP)
E10G110020	SAFETY RETAINER BSIV	Piaggio spare parts (POP)
CM292102	SAFETY VALVE	Piaggio spare parts (POP)
E40006648	SAFETY VALVE Assembly for BS-II	Piaggio spare parts (POP)
E43506649	SAFETY VALVE Assembly for BS-III	Piaggio spare parts (POP)
KD2750311	SAFETY VALVE COVER	Piaggio spare parts (POP)
E1969693007	SAFETY VALVE LM TYPE	Piaggio spare parts (POP)
1F000615	SATELITE GEAR WASHER	Piaggio spare parts (POP)
1F000614	SATELITE PIN	Piaggio spare parts (POP)
1F000616	SATELLITE GEAR	Piaggio spare parts (POP)
889235	SATELLITE GEAR	Piaggio spare parts (POP)
B011858	SATELLITE PIN	Piaggio spare parts (POP)
1A011778	SATELLITE PIN RETAINER	Piaggio spare parts (POP)
1A017264	SATELLITE PIN RETAINER	Piaggio spare parts (POP)

970300554	scale for timing marking of 2g 870	Piaggio spare parts (POP)
10022	SCREW	Piaggio spare parts (POP)
LG7645001	SCHNOOR WASHER D.5,3X9	Piaggio spare parts (POP)
486295	Scraper Ring	Piaggio spare parts (POP)
486355	Scraper Ring	Piaggio spare parts (POP)
1A012392	SCRAPER RING Ø72x2	Piaggio spare parts (POP)
107952	SCREEN	Piaggio spare parts (POP)
E500981002	SCREW	Piaggio spare parts (POP)
E50000405	SCREW	Piaggio spare parts (POP)
E51981002	SCREW	Piaggio spare parts (POP)
D9004159188	SCREW	Piaggio spare parts (POP)
319359	SCREW	Piaggio spare parts (POP)
809903	SCREW	Piaggio spare parts (POP)
267115	SCREW	Piaggio spare parts (POP)
E90979037	SCREW	Piaggio spare parts (POP)
ED41228	SCREW	Piaggio spare parts (POP)
E90979039	SCREW	Piaggio spare parts (POP)
E9176005	SCREW	Piaggio spare parts (POP)
D9321955016	SCREW	Piaggio spare parts (POP)
889290	SCREW	Piaggio spare parts (POP)
15715	SCREW	Piaggio spare parts (POP)
295822	SCREW	Piaggio spare parts (POP)
E2101770009	SCREW	Piaggio spare parts (POP)
568134	SCREW	Piaggio spare parts (POP)
30228	SCREW	Piaggio spare parts (POP)
436669	SCREW	Piaggio spare parts (POP)
198662	SCREW	Piaggio spare parts (POP)
E260175501	SCREW	Piaggio spare parts (POP)
AP8224470	SCREW	Piaggio spare parts (POP)
D9327056012	SCREW	Piaggio spare parts (POP)
D9356755014	SCREW	Piaggio spare parts (POP)
E264973008	SCREW	Piaggio spare parts (POP)
434541	SCREW	Piaggio spare parts (POP)
KD994A001	Screw	Piaggio spare parts (POP)
LG9820233	Screw	Piaggio spare parts (POP)
15640	SCREW	Piaggio spare parts (POP)
E270973010	SCREW	Piaggio spare parts (POP)
LG1770127	SCREW	Piaggio spare parts (POP)
KD9820142	SCREW	Piaggio spare parts (POP)
258248	SCREW	Piaggio spare parts (POP)
614772	SCREW	Piaggio spare parts (POP)
889318	SCREW	Piaggio spare parts (POP)
E9973016	SCREW	Piaggio spare parts (POP)
644833	SCREW	Piaggio spare parts (POP)
645088	SCREW	Piaggio spare parts (POP)
652020	SCREW	Piaggio spare parts (POP)
B011960	SCREW	Piaggio spare parts (POP)

D9004159110	SCREW	Piaggio spare parts (POP)
E505193049	SCREW	Piaggio spare parts (POP)
430207	SCREW	Piaggio spare parts (POP)
B018678	SCREW	Piaggio spare parts (POP)
414835	SCREW	Piaggio spare parts (POP)
889289	SCREW	Piaggio spare parts (POP)
E50000114	SCREW	Piaggio spare parts (POP)
179927	SCREW	Piaggio spare parts (POP)
889302	SCREW	Piaggio spare parts (POP)
632594	SCREW	Piaggio spare parts (POP)
261315	SCREW	Piaggio spare parts (POP)
612453	SCREW	Piaggio spare parts (POP)
889305	SCREW	Piaggio spare parts (POP)
614865	SCREW	Piaggio spare parts (POP)
969972	SCREW	Piaggio spare parts (POP)
B000379	SCREW	Piaggio spare parts (POP)
E10M120019	SCREW - BSIV ENGINE	Piaggio spare parts (POP)
889970	SCREW M6X20 SX	Piaggio spare parts (POP)
B075313	SCREW PHILIPS HEAD M6X25	Piaggio spare parts (POP)
889190	SCREW - TIP ASSY	Piaggio spare parts (POP)
1A012453	SCREW - TIP ASSY	Piaggio spare parts (POP)
SM26258671	Screw & Sealing Washer Assy.	Piaggio spare parts (POP)
E87000951A	SCREW (FDC)	Piaggio spare parts (POP)
296170	SCREW (CYLINDER HEAD	Piaggio spare parts (POP)
6D000425	SCREW 3.5 * 10	Piaggio spare parts (POP)
LG9730008	SCREW 6X10-5931-8.8+Zn.B	Piaggio spare parts (POP)
KD1760003	SCREW 6X12-5739-8G+ZN.B	Piaggio spare parts (POP)
127017019	SCREW ADJUSTER	Piaggio spare parts (POP)
197071	SCREW ADJUSTER M6	Piaggio spare parts (POP)
157716	SCREW ANCHORE	Piaggio spare parts (POP)
31091	SCREW BOLT SHANK THREADED COMPLETELY	Piaggio spare parts (POP)
E45175504	SCREW BREATHER PLUG	Piaggio spare parts (POP)
841915	SCREW CILINDR.SOCKET HEAD	Piaggio spare parts (POP)
1A009767	SCREW CYLINDRICAL HEAD HEXAGON SOCKET	Piaggio spare parts (POP)
1A010096	SCREW DRAIN	Piaggio spare parts (POP)
B016390	SCREW DRAIN	Piaggio spare parts (POP)
E50005309	SCREW DRIVER	Piaggio spare parts (POP)
662520	SCREW DRIVER	Piaggio spare parts (POP)
567458	SCREW DRIVER (-) & (+) 80	Piaggio spare parts (POP)
L1770196	SCREW EN 1662 M6X45 F 8.	Piaggio spare parts (POP)
L1755095	SCREW EN 1662-M5X16-F-8.	Piaggio spare parts (POP)
LG1755095	SCREW EN 1662-M5X16-F-8.8"	Piaggio spare parts (POP)
E87000948	SCREW EXCESS FUEL	Piaggio spare parts (POP)
126054010	SCREW FOR BRACKET	Piaggio spare parts (POP)
O20852Y	SCREW FOR CRANKSHAFT	Piaggio spare parts (POP)
B001402	SCREW FOR DOOR KNOB	Piaggio spare parts (POP)
L9820200	SCREW FOR FLYWHEEL	Piaggio spare parts (POP)

B010534	SCREW FOR PIPE FITTING	Piaggio spare parts (POP)
1A018816	SCREW FOR PIPE FITTING	Piaggio spare parts (POP)
L9820187	SCREW FOR SECURING CONROD-CAP	Piaggio spare parts (POP)
E270982073	Screw governor lever M6x1	Piaggio spare parts (POP)
L1780150	SCREW M 10X18	Piaggio spare parts (POP)
L9800141	SCREW M 6X16	Piaggio spare parts (POP)
L1780154	SCREW M 6X25	Piaggio spare parts (POP)
433122	SCREW M10x6	Piaggio spare parts (POP)
L1901190	SCREW M12X1,5 FOR PRESSUR	Piaggio spare parts (POP)
L1901176	SCREW M12X1.5 CONN.INJECT PUMP	Piaggio spare parts (POP)
940211	Screw M4 (SM-AR-171)	Piaggio spare parts (POP)
568750	SCREW M4 X 16 (811 0416 2 3)	Piaggio spare parts (POP)
LG9730435	Screw M5 x 20	Piaggio spare parts (POP)
LG9730095	SCREW M5x12 UNI5931-8	Piaggio spare parts (POP)
B074100	SCREW M6 (SS)	Piaggio spare parts (POP)
319446	SCREW M6X10	Piaggio spare parts (POP)
18639	SCREW M6X20	Piaggio spare parts (POP)
E406177005	SCREW M8 X 1.25 X 22	Piaggio spare parts (POP)
E47177007	SCREW M8X1.25X30	Piaggio spare parts (POP)
LG9730118	SCREW M8x22 UNI5931-8.8+Z	Piaggio spare parts (POP)
KD9730449	SCREW M8x22 UNI5931-8.8+Z	Piaggio spare parts (POP)
KD9730118	SCREW M8x22 UNI5931-8.8+Zn.B	Piaggio spare parts (POP)
LG995A004	SCREW M8x40 ISO 8765-	Piaggio spare parts (POP)
830198	SCREW M8X50	Piaggio spare parts (POP)
KD7260053	SCREW NIPPLE	Piaggio spare parts (POP)
L9080257	SCREW PLUG M 12X1,5	Piaggio spare parts (POP)
888671	SCREW ROLLER FOLLOWER GUIDE	Piaggio spare parts (POP)
KD9730115	SCREW SHCS M5X14 5931 8.8+Zn.B	Piaggio spare parts (POP)
662287	SCREW TAPPING	Piaggio spare parts (POP)
L1770198	SCREW TE EN 1662 M8X40 N	Piaggio spare parts (POP)
120237012	SCREW TERMINAL	Piaggio spare parts (POP)
115817	SCREW TERMINAL	Piaggio spare parts (POP)
B074568	Screw terminal	Piaggio spare parts (POP)
120250014	SCREW TERMINAL ASSLY	Piaggio spare parts (POP)
B076078	SCREW TERMINAL ASSLY(REVERSE CABLE)	Piaggio spare parts (POP)
604563	SCREW TERMINAL ASSLY.-DEL.VAN.DOOR	Piaggio spare parts (POP)
604561	SCREW TERMINAL ASSLY-CLUTCH CONTROL	Piaggio spare parts (POP)
604562	SCREW TERMINAL ASSLY-ENGINE STOP,D.C.&	Piaggio spare parts (POP)
B024379	SCREW TERMINAL ASSLY-ENGINE STOP,D.C.&	Piaggio spare parts (POP)
B076364	SCREW TERMINAL ASSLY-GEAR CONTROL	Piaggio spare parts (POP)
B076365	SCREW TERMINAL ASSLY-GEAR CONTROL	Piaggio spare parts (POP)
604560	SCREW TERMINAL ASSLY-GEAR CONTROL	Piaggio spare parts (POP)
568110	SCREW TERMINAL M5	Piaggio spare parts (POP)
ESP650DNB019	SCREW VALVE ADJUSTING M7X0.75	Piaggio spare parts (POP)
E31M060003	SCREW VALVE ADJUSTING M7X0.75	Piaggio spare parts (POP)
872182	SCREW W/FLANGE	Piaggio spare parts (POP)
645207	SCREW WITH CONICAL WASHER	Piaggio spare parts (POP)

18623	SCREW WITH CROSS SLOTTED CYLIN.HEAD	Piaggio spare parts (POP)
B016620	SCREW WITH CYLINDRICAL HEAD M5x21	Piaggio spare parts (POP)
L98201420	SCREW WITH CYLINDRICAL M 10X25	Piaggio spare parts (POP)
L1780149	SCREW WITH CYLINDRICAL M 10X45	Piaggio spare parts (POP)
L9790150	SCREW WITH CYLINDRICAL M 5	Piaggio spare parts (POP)
L9790163	SCREW WITH CYLINDRICAL M 5X20	Piaggio spare parts (POP)
L9790160	SCREW WITH CYLINDRICAL M 6X14	Piaggio spare parts (POP)
L9790156	SCREW WITH CYLINDRICAL M 6X20	Piaggio spare parts (POP)
L9790159	SCREW WITH CYLINDRICAL M 6X20	Piaggio spare parts (POP)
L9790155	SCREW WITH CYLINDRICAL M 6X25	Piaggio spare parts (POP)
L9790152	SCREW WITH CYLINDRICAL SOCKET HEAD M 6X1	Piaggio spare parts (POP)
L9790164	SCREW WITH CYLINDRICAL SOCKET HEAD M 8X3	Piaggio spare parts (POP)
L9790153	SCREW WITH CYLINDRICAL SOCKET HEAD M6X20	Piaggio spare parts (POP)
108805	SCREW WITH WIDE HEAD (FEMALE)	Piaggio spare parts (POP)
660027	SCREW WITH WIDE HEAD (FEMALE) (SS)	Piaggio spare parts (POP)
108804	SCREW WITH WIDE HEAD (MALE)	Piaggio spare parts (POP)
660026	SCREW WITH WIDE HEAD (MALE) (SS)	Piaggio spare parts (POP)
8432	Screw x legshield beading tighten. flap	Piaggio spare parts (POP)
920050	Screw(V-5404-190)	Piaggio spare parts (POP)
D9004157025	SCREW, CROSSRECESS PAN	Piaggio spare parts (POP)
D9353055012	SCREW, TAPPING	Piaggio spare parts (POP)
D9004168057	SCREW, TAPPING	Piaggio spare parts (POP)
D9354015014	SCREW, TAPPING	Piaggio spare parts (POP)
D9354056020	SCREW, TAPPING	Piaggio spare parts (POP)
662236	SCREW, TAPPING	Piaggio spare parts (POP)
D9004159230	SCREW, W/WASHER	Piaggio spare parts (POP)
D9338515020	SCREW, W/WASHER	Piaggio spare parts (POP)
E40000477	SCREW,STATOR MOUNTING	Piaggio spare parts (POP)
E52200434	SCREWHEXHEAD	Piaggio spare parts (POP)
E99732047	SCREW-OIL SUCTION BULB	Piaggio spare parts (POP)
F000CD1010	Seal	Piaggio spare parts (POP)
1002391095	SEAL	Piaggio spare parts (POP)
L1261114	SEAL	Piaggio spare parts (POP)
L1261116	SEAL	Piaggio spare parts (POP)
1000500094	SEAL	Piaggio spare parts (POP)
889099	SEAL	Piaggio spare parts (POP)
L1261113	SEAL	Piaggio spare parts (POP)
889968	SEAL	Piaggio spare parts (POP)
L1261112	SEAL	Piaggio spare parts (POP)
L1261115	SEAL	Piaggio spare parts (POP)
882072	SEAL - CRANCKSHAFT REAR	Piaggio spare parts (POP)
882171	SEAL - CRANKSHAFT FRONT	Piaggio spare parts (POP)
882207	SEAL - VALVE GUIDE	Piaggio spare parts (POP)
B073084	SEAL BOX (VANAZ)	Piaggio spare parts (POP)
643883	SEAL BOX(VANAZ PT NO K-0401-18)	Piaggio spare parts (POP)
925827	SEAL CAP	Piaggio spare parts (POP)
03G162001	SEAL KIT	Piaggio spare parts (POP)

E40016404	SEAL PUSH ROD	Piaggio spare parts (POP)
B017177	SEAL RING	Piaggio spare parts (POP)
20359	SEAL RING	Piaggio spare parts (POP)
1000207001	SEAL RING	Piaggio spare parts (POP)
B011111	SEAL RING	Piaggio spare parts (POP)
6C000312R	SEAL RING	Piaggio spare parts (POP)
1A006674	SEAL RING	Piaggio spare parts (POP)
889291	SEAL RING	Piaggio spare parts (POP)
857083	SEAL RING (O-RING)	Piaggio spare parts (POP)
6A000349	SEAL RING (O-RING)	Piaggio spare parts (POP)
857176	SEAL RING (O-RING)	Piaggio spare parts (POP)
843186	SEAL RING (O-RING)	Piaggio spare parts (POP)
1F000727	SEAL RING (O-RING)	Piaggio spare parts (POP)
1F000626	SEAL RING (O-RING)	Piaggio spare parts (POP)
1A012373	Seal ring 12x22x6	Piaggio spare parts (POP)
1A012684	Seal ring 22x36x7	Piaggio spare parts (POP)
B016120	SEAL RING 25X35X7	Piaggio spare parts (POP)
LG1213392	SEAL RING 28X38X7	Piaggio spare parts (POP)
KD1213392	SEAL RING 28X38X7	Piaggio spare parts (POP)
1A000236	SEAL RING 30X52X7	Piaggio spare parts (POP)
1A012369	Seal ring 34x44x8	Piaggio spare parts (POP)
B016166	SEAL RING 35X47X6	Piaggio spare parts (POP)
1A002685	SEAL RING 35X47X6	Piaggio spare parts (POP)
1D001198	SEAL RINGS KIT	Piaggio spare parts (POP)
E40006212	SEAL- WATER HOLE	Piaggio spare parts (POP)
D9004303094	SEAL, DUST	Piaggio spare parts (POP)
D4545787203	SEAL, STEERING LINK DUST NO. 1	Piaggio spare parts (POP)
D9004313015	SEAL, TYPE K OIL	Piaggio spare parts (POP)
SM26246176	Sealing assy kit	Piaggio spare parts (POP)
F000CD1007	Sealing Cap	Piaggio spare parts (POP)
E9451030109	SEALING RING	Piaggio spare parts (POP)
B002788	SEALING RING (15 11 001 0)	Piaggio spare parts (POP)
ED42001	Sealing tube	Piaggio spare parts (POP)
1410555005	SEALING WASHER	Piaggio spare parts (POP)
B041178	SEALING WASHER	Piaggio spare parts (POP)
9431030172	SEALING WASHER	Piaggio spare parts (POP)
929934	Sealing Washer-K-0101-04-050	Piaggio spare parts (POP)
03G161202	SEAL-REAR COVER	Piaggio spare parts (POP)
ED43686	SEALSPARKPLUG	Piaggio spare parts (POP)
ED43687	SEALSPARKPLUGCAP	Piaggio spare parts (POP)
612801	SEAT	Piaggio spare parts (POP)
643895	SEAT	Piaggio spare parts (POP)
108871	SEAT	Piaggio spare parts (POP)
6B000173	SEAT	Piaggio spare parts (POP)
888214	SEAT - INJECTOR - TWIN	Piaggio spare parts (POP)
660283	SEAT ASSY (CO-DRIVER)	Piaggio spare parts (POP)
B041131	SEAT ASSY LH (CO-DRIVER)	Piaggio spare parts (POP)

B077064	SEAT ASSY LH (CO-DRIVER)	Piaggio spare parts (POP)
615072	SEAT ASSY RH	Piaggio spare parts (POP)
B041130	SEAT ASSY RH (DRIVER)	Piaggio spare parts (POP)
B075352	SEAT ASSY RH (DRIVER)	Piaggio spare parts (POP)
B075350	SEAT ASSY, FR RH	Piaggio spare parts (POP)
D4847087Z02	SEAT ASSY, FR SPRING UPR	Piaggio spare parts (POP)
568083	SEAT BACK	Piaggio spare parts (POP)
6B003050	SEAT BACK REST ASSEMBLY	Piaggio spare parts (POP)
632145	SEAT BACK WITH STUFFING (CARGO)	Piaggio spare parts (POP)
B078074	SEAT BELT FOR EXPORT (3W-TANZANIA)	Piaggio spare parts (POP)
E87018330	SEAT EXHAUST VALVE	Piaggio spare parts (POP)
E87018331	SEAT INLET VALVE	Piaggio spare parts (POP)
616901	SEAT OF LAMP LEFT	Piaggio spare parts (POP)
616900	SEAT OF LAMP RIGHT	Piaggio spare parts (POP)
882218	SEAT SPRING	Piaggio spare parts (POP)
567562	SEAT SUPPORT PIPE (COMM)	Piaggio spare parts (POP)
605480	SEAT SUPPORT PIPE TAXI ASSLY	Piaggio spare parts (POP)
920046	Seat(R-8105-300)	Piaggio spare parts (POP)
932218	SEAT(R-8106-320)Paxx200	Piaggio spare parts (POP)
932211	SEAT(R-8106-V-060)Paxx200	Piaggio spare parts (POP)
932263	Seat(R-8106-XI-070) Paxx 200 LPG	Piaggio spare parts (POP)
889609	SECOND COMPRESSION RING	Piaggio spare parts (POP)
127302517R	SECOND SPEED GEAR	Piaggio spare parts (POP)
L4990230	SECOND SPEED GEAR	Piaggio spare parts (POP)
L4990192	SECOND SPEED GEAR	Piaggio spare parts (POP)
L4990246	SECOND SPEED GEAR	Piaggio spare parts (POP)
127302517	SECOND SPEED GEAR (VE)	Piaggio spare parts (POP)
B073987	SECONDARY FUEL FILTER	Piaggio spare parts (POP)
B018471	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A010159	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A006686	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A009778	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A011341	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A015212	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1A017112	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1F000448	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
1F000713	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
889212	SECONDARY GEAR SHAFT	Piaggio spare parts (POP)
889203	SECONDARY GEAR SHAFT ASSEMBLY	Piaggio spare parts (POP)
SP1F000714	SECONDARY GEAR SHAFT ASSLY- GB 1000 SPD	Piaggio spare parts (POP)
1A013336	SECONDARY SHAFT	Piaggio spare parts (POP)
1A010977	SECONDARY SHAFT KIT	Piaggio spare parts (POP)
1A010976	SECONDARY SHAFT KIT	Piaggio spare parts (POP)
643753	SECTION BAR FOR HOOP NO. 1(VE)	Piaggio spare parts (POP)
SP127650017	SECTOR & CONNECT PLATE & LEVER ASSLY OLD	Piaggio spare parts (POP)
SPB042620	SECTOR & CONNECT PLATE & LEVER ASSLY SPD	Piaggio spare parts (POP)
B042620	SECTOR & CONNECTOR PLATE & LEVER ASSLY	Piaggio spare parts (POP)

127650017	SECTOR & CONNECTOR PLATE & LEVER ASSLY	Piaggio spare parts (POP)
127660012	SECTOR & CONNECTOR PLATE WITH PIN ASSLY	Piaggio spare parts (POP)
B002115	SECTOR & CONNECTOR PLATE WITH PIN ASSLY	Piaggio spare parts (POP)
1A013359	Sector and connector assembly	Piaggio spare parts (POP)
SP1A003853	SECTOR AND LEVER ASSLY APE PAX - SPD	Piaggio spare parts (POP)
1A003853	SECTOR AND LEVER ASSY	Piaggio spare parts (POP)
B002151	SECTOR PLATE ASSEMBLY COMPLETE	Piaggio spare parts (POP)
128060013	SECTOR PLATE ASSLY COMP	Piaggio spare parts (POP)
SP1A001468	SECTOR PLATE LEVER ASSY I.P.APE PAX-SPD	Piaggio spare parts (POP)
1A001468	SECTOR PLATE LEVER ASSY WITH I.P.	Piaggio spare parts (POP)
140603	SECURITY LOCK CYLINDER (SHIM PLATE)1.0TH	Piaggio spare parts (POP)
1F000622	SEGER FOR HOLE DIAMETER 47 THICK. 1.75	Piaggio spare parts (POP)
1A017265	SEGER FOR SHAFT	Piaggio spare parts (POP)
1F000577	SEGER FOR SHAFT DIA.25 TH.1.2	Piaggio spare parts (POP)
888337	SEGER RING	Piaggio spare parts (POP)
889266	SEGER RING	Piaggio spare parts (POP)
B010641	SEGER RING	Piaggio spare parts (POP)
889304	SEGER RING	Piaggio spare parts (POP)
B011122	SELECTING AND SHIFTING BRACKET I.P.	Piaggio spare parts (POP)
1F000734	SELECTING AND SHIFTING BRACKET I.P.	Piaggio spare parts (POP)
L3960019	SELECTION FORK GEAR	Piaggio spare parts (POP)
441034	SELECTION OF BP KIT GASKET	Piaggio spare parts (POP)
889270	SELECTION SPRING 1st-2nd SPEED	Piaggio spare parts (POP)
889268	SELECTION SPRING 5th-R SPEED	Piaggio spare parts (POP)
889256	SELECTION-SHIFTING LEVER	Piaggio spare parts (POP)
03G160876	SELECTOR BOLT-LEVER	Piaggio spare parts (POP)
03G160874	SELECTOR BOLT-SHIFT FINGER	Piaggio spare parts (POP)
B003174	SELECTOR CABLE	Piaggio spare parts (POP)
646199	SELECTOR GEAR CONTROL	Piaggio spare parts (POP)
03G160856	selector housing machined	Piaggio spare parts (POP)
03A160856	SELECTOR HOUSING ASSEMBLY	Piaggio spare parts (POP)
L8570003	SELECTOR SPIDER CONTROL	Piaggio spare parts (POP)
L8570002	SELECTOR SPIDER CONTROL	Piaggio spare parts (POP)
614064	SELECTOR, GEAR CONTROL	Piaggio spare parts (POP)
231370	SELF BRAKING NUT M10	Piaggio spare parts (POP)
645024	SELF BREAKING NUT M10 X 1.25P W/FLANGE C	Piaggio spare parts (POP)
L3203098	SELF LOCKIN HEX NUT	Piaggio spare parts (POP)
E93203092	SELF LOCKING NUT	Piaggio spare parts (POP)
B003124	SELF LOCKING NUT M12X1.5	Piaggio spare parts (POP)
B009429	SELF TAP SCREW AB 3.5 X 38	Piaggio spare parts (POP)
18534	SELF TAPING SCREW	Piaggio spare parts (POP)
1A000024	Self tapping screw	Piaggio spare parts (POP)
15733	SELF TAPPING SCREW	Piaggio spare parts (POP)
660168	SELF TAPPING SCREW	Piaggio spare parts (POP)
632608	SELF TAPPING SCREW	Piaggio spare parts (POP)
6A000827	SELF TAPPING SCREW	Piaggio spare parts (POP)
258146	SELF TAPPING SCREW (3X20)	Piaggio spare parts (POP)

925817	SELF TAPPING SCREW (DIA 2.9X19)	Piaggio spare parts (POP)
659765	SELF TAPPING SCREW (M6 X 20)	Piaggio spare parts (POP)
660029	SELF TAPPING SCREW 7 SG X 19 (SS)	Piaggio spare parts (POP)
18519	SELF TAPPING SCREW AB 3.5 X 32	Piaggio spare parts (POP)
9000	SELF TP SCREW 4SGX13AB	Piaggio spare parts (POP)
568692	SELF TP SCREW 6SGX16	Piaggio spare parts (POP)
18630	SELF TP SCREW 6SGX25AB	Piaggio spare parts (POP)
15737	SELF-TAPPING SCREW	Piaggio spare parts (POP)
L9820186	SELF-TAPPING SCREW	Piaggio spare parts (POP)
B041668	SELF-TAPPING SCREW AB 4.8 X 19	Piaggio spare parts (POP)
L8057022	SEMICONICAL CLIP	Piaggio spare parts (POP)
1A011438	SENSOR	Piaggio spare parts (POP)
E04G130003	SENSOR - ENGINE SPEED	Piaggio spare parts (POP)
F002H24915	Sensor +WH	Piaggio spare parts (POP)
B017077	SENSOR SUPPORT PLATE	Piaggio spare parts (POP)
B076818	SEPARATOR CLAMP	Piaggio spare parts (POP)
B078014	SEPERATOR CLAMP	Piaggio spare parts (POP)
SM26131236	Serrated Flange Nut	Piaggio spare parts (POP)
SST94167	Service Wall Charts Set - Spanish	Piaggio spare parts (POP)
A01A040003	SET - BOLTS WITH BIG END BEARING	Piaggio spare parts (POP)
KIT95018	SET 1-2 SYNCRO HUB_PORTER 600	Piaggio spare parts (POP)
KIT95018R	SET 1-2 SYNCRO HUB_PORTER 600	Piaggio spare parts (POP)
KIT95015	SET 1-2 SYNCRO SLEEVE_PORTER 600	Piaggio spare parts (POP)
KIT95017	SET 3-4 SYNCRO HUB_PORTER 600	Piaggio spare parts (POP)
KIT95017R	SET 3-4 SYNCRO HUB_PORTER 600	Piaggio spare parts (POP)
KIT95016	SET 3-4 SYNCRO SLEEVE_PORTER 600	Piaggio spare parts (POP)
B009166	SET -ADAPTOR COUPLERS - COMBI SWITCH	Piaggio spare parts (POP)
E50002274	SET OF " O " RINGS	Piaggio spare parts (POP)
E87006214	Set of "O" rings	Piaggio spare parts (POP)
B024167	SET OF 2 HANDLES LH/RH WITH KEY	Piaggio spare parts (POP)
E530022241	SET OF BUSHES STD.	Piaggio spare parts (POP)
E53002224	SET OF BUSHES STD.	Piaggio spare parts (POP)
E53002225	SET OF BUSHES U/S 0.25MM	Piaggio spare parts (POP)
E53002226	SET OF BUSHES U/S 0.50MM	Piaggio spare parts (POP)
E53002227	SET OF BUSHES U/S 0.75MM	Piaggio spare parts (POP)
E53002228	SET OF BUSHES U/S 1.00MM	Piaggio spare parts (POP)
E52005171	SET OF CAM FOLLOWERS	Piaggio spare parts (POP)
ESK5565	SET OF JOINTS	Piaggio spare parts (POP)
E43526175	SET OF JOINTS	Piaggio spare parts (POP)
E87026154	SET OF JOINTS	Piaggio spare parts (POP)
E40026125	SET OF JOINTS GL 400 IIA	Piaggio spare parts (POP)
E07502230	Set of main bearing bush (0.5 u/s)	Piaggio spare parts (POP)
E07502231	Set of main bearing bush (1.0 u/s)	Piaggio spare parts (POP)
E40002291	Set of main bearing bush (std)	Piaggio spare parts (POP)
E07502229	Set of main bearing bush (std.)	Piaggio spare parts (POP)
ESP650DKT001	Set Of Main Bearing Bush(Std)	Piaggio spare parts (POP)
E50006329	SET OF OIL SEALS	Piaggio spare parts (POP)

ESP650DKT012	SET OF OIL SEALS	Piaggio spare parts (POP)
E87006349	SET OF OIL SEALS	Piaggio spare parts (POP)
ESP650DKT009	Set Of Oil Seals(Std)	Piaggio spare parts (POP)
E50007334	SET OF PUSH RODS	Piaggio spare parts (POP)
E53005170	SET OF ROCKER LEVER 530	Piaggio spare parts (POP)
E87015143	Set of rocker levers	Piaggio spare parts (POP)
E50006190	SET OF RUBBER SLEEVES	Piaggio spare parts (POP)
E50016170	SET OF RUBBER SLEEVES	Piaggio spare parts (POP)
KIT96015R	Set of Stem & Cross M7 -Diesel	Piaggio spare parts (POP)
KIT95032	Set of Stem & Cross M9 -Diesel	Piaggio spare parts (POP)
E43522234	Set of valve guides	Piaggio spare parts (POP)
E40002258	SET OF VALVE GUIDES	Piaggio spare parts (POP)
ESP650DKT005	SET OF VALVE GUIDES (STD) (INLET & EXH)	Piaggio spare parts (POP)
E50002223	SET OF VALVE GUIDES 0.5MM	Piaggio spare parts (POP)
E50002222	SET OF VALVE GUIDES STD.	Piaggio spare parts (POP)
L4896655	SET OF VALVE LDA LDW	Piaggio spare parts (POP)
E07512208	Set of valve seat Consisting of sr.nos 3	Piaggio spare parts (POP)
A01A020006	SET OF VALVE SEAT INSERT (INLET AND EXHA	Piaggio spare parts (POP)
ESP650DKT003	SET OF VALVE SEAT INSERTS (STD)(INLET&EX	Piaggio spare parts (POP)
E400022104	SET OF VALVES	Piaggio spare parts (POP)
E50002241	SET OF VALVES	Piaggio spare parts (POP)
E40002261	SET OF VALVES	Piaggio spare parts (POP)
KIT1U000020	SET OF VALVES	Piaggio spare parts (POP)
SST94103	SH1 GEAR PULLER WITH TWO FITTMENT	Piaggio spare parts (POP)
SST94104	SH2 GEAR PULLER WITH TWO FITTMENT	Piaggio spare parts (POP)
B009637	SHACKEL PLATE FRONT	Piaggio spare parts (POP)
B009458	SHACKLE ASSEMBLY	Piaggio spare parts (POP)
B023900	SHACKLE PLATE ASSLY	Piaggio spare parts (POP)
03G161611	shaft clutch release	Piaggio spare parts (POP)
03G160666	shaft drive	Piaggio spare parts (POP)
03G160218	shaft input	Piaggio spare parts (POP)
03G160339	shaft lay	Piaggio spare parts (POP)
03G160425	shaft reverse idler	Piaggio spare parts (POP)
D4522087Z01	SHAFT ASSY, STEERING INT.	Piaggio spare parts (POP)
L6231233	SHAFT FOR SIDE PINIONS	Piaggio spare parts (POP)
L6231283	SHAFT FOR SIDE PINIONS	Piaggio spare parts (POP)
L1055080	SHAFT GEAR	Piaggio spare parts (POP)
B023991	SHAFT MAIN	Piaggio spare parts (POP)
127501010	SHAFT PINION	Piaggio spare parts (POP)
127540016	SHAFT PINION & PLUG FM ASSLY	Piaggio spare parts (POP)
B024022	SHAFT REVERSE GEAR ASSEMBLY	Piaggio spare parts (POP)
B042581	SHAFT REVERSE IDLER	Piaggio spare parts (POP)
B023996	SHAFT REVERSE IDLER	Piaggio spare parts (POP)
B023437	SHAFT S/A STEERING LWR W/DOUBLE JOINT	Piaggio spare parts (POP)
614819	SHAFT STEERING MAIN S/A	Piaggio spare parts (POP)
940020	Shaft Sub assembly(truk plus)	Piaggio spare parts (POP)
D3132487Z02	SHAFT, PEDAL	Piaggio spare parts (POP)

1F000026	sheet assembly with gasket	Piaggio spare parts (POP)
A01G140011	SHEET METAL MOUNTING BKT - OMS MTG.	Piaggio spare parts (POP)
KD5140026	SHEET METAL ROCKER ARM COVER	Piaggio spare parts (POP)
1A012725	Sheet-Steel for Camshaft	Piaggio spare parts (POP)
662160BW	SHELL ASSLY BODY 870	Piaggio spare parts (POP)
B008020BW	SHELL ASSY- BNA CHASSIS WITH DOORS-BW	Piaggio spare parts (POP)
B073443BW	SHELL ASSY BODY, PORTER 1000 WITH DRS_BW	Piaggio spare parts (POP)
B073443ED	SHELL ASSY BODY, PORTER 1000 WITH DRS_ED	Piaggio spare parts (POP)
B073443GY	SHELL ASSY BODY, PORTER 1000 WITH DRS_GY	Piaggio spare parts (POP)
B073443LB	SHELL ASSY BODY, PORTER 1000 WITH DRS_LB	Piaggio spare parts (POP)
B073443NB	SHELL ASSY BODY, PORTER 1000 WITH DRS_NB	Piaggio spare parts (POP)
B073443WR	SHELL ASSY BODY, PORTER 1000 WITH DRS_WR	Piaggio spare parts (POP)
B041114BW	SHELL ASSY BODY, PORTER 600 WITH DOOR	Piaggio spare parts (POP)
B074910ED	SHELL ASSY BODY, PORTER 700 WITH DOOR ED	Piaggio spare parts (POP)
B074910BW	SHELL ASSY BODY, PORTER 700 WITH DOOR-BW	Piaggio spare parts (POP)
B074910CO	SHELL ASSY BODY, PORTER 700 WITH DOOR-CO	Piaggio spare parts (POP)
B074910LB	SHELL ASSY BODY, PORTER 700 WITH DOOR-LB	Piaggio spare parts (POP)
B074910NB	SHELL ASSY BODY, PORTER 700 WITH DOOR-NB	Piaggio spare parts (POP)
B074910PA	SHELL ASSY BODY, PORTER 700 WITH DOOR-PA	Piaggio spare parts (POP)
B074910PB	SHELL ASSY BODY, PORTER 700 WITH DOOR-PB	Piaggio spare parts (POP)
B074910SY	SHELL ASSY BODY, PORTER 700 WITH DOOR-SY	Piaggio spare parts (POP)
B074910WR	SHELL ASSY BODY, PORTER 700 WITH DOOR-WR	Piaggio spare parts (POP)
B002487WR	SHELL ASSY, BODY S/A MAIN482(W/O DOOR)WR	Piaggio spare parts (POP)
660872	SHIELD DUST COVER LH	Piaggio spare parts (POP)
660871	SHIELD DUST COVER RH	Piaggio spare parts (POP)
B074780	shift & select bracket s/a	Piaggio spare parts (POP)
B077763	shift & select bracket s/a	Piaggio spare parts (POP)
587631	GASOLINE CONTROL TRANSMISSION ASSLY	Piaggio spare parts (POP)
660345	SHIFT CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
6A000068	SHIFT CONTROL INNER CABLE	Piaggio spare parts (POP)
B076306	SHIFT CONTROL TRANSMISSION ASSLY NO 1	Piaggio spare parts (POP)
660346	SHIFT CONTROL TRANSMISSION ASSLY NO 1	Piaggio spare parts (POP)
B076307	SHIFT CONTROL TRANSMISSION ASSLY NO 2	Piaggio spare parts (POP)
660343	SHIFT CONTROL TRANSMISSION ASSLY NO 2	Piaggio spare parts (POP)
03G160772	shift finger machined	Piaggio spare parts (POP)
B003175	SHIFTER CABLE	Piaggio spare parts (POP)
B024001	SHIFTER REVERSE	Piaggio spare parts (POP)
F000CD1026	Shim	Piaggio spare parts (POP)
L3525114	SHIM	Piaggio spare parts (POP)
B041263	SHIM	Piaggio spare parts (POP)
B041264	SHIM	Piaggio spare parts (POP)
127758015	SHIM	Piaggio spare parts (POP)
2430101035	SHIM	Piaggio spare parts (POP)
L3525116	SHIM	Piaggio spare parts (POP)
L3525131	SHIM	Piaggio spare parts (POP)
120205019	SHIM - HARD BUSH	Piaggio spare parts (POP)
E5004580057	Shim 0.05 MM For Fuel Pump	Piaggio spare parts (POP)

E87026127	SHIM 0.1 MM	Piaggio spare parts (POP)
E500458029	SHIM 0.1 MM.	Piaggio spare parts (POP)
E87026116	SHIM 0.2 MM	Piaggio spare parts (POP)
E500458023	SHIM 0.3 MM.	Piaggio spare parts (POP)
E87026115	SHIM 0.5 MM TIMING	Piaggio spare parts (POP)
E500458024	SHIM 0.5 MM.	Piaggio spare parts (POP)
KD6000113	SHIM 4.0MM	Piaggio spare parts (POP)
KD6000114	SHIM 4.1MM	Piaggio spare parts (POP)
KD6000115	SHIM 4.2MM	Piaggio spare parts (POP)
KD6000116	SHIM 4.3MM	Piaggio spare parts (POP)
KD6000117	SHIM 4.4MM	Piaggio spare parts (POP)
KD6000118	SHIM 4.5MM	Piaggio spare parts (POP)
KD6000119	SHIM 4.6MM	Piaggio spare parts (POP)
KD6000120	SHIM 4.7MM	Piaggio spare parts (POP)
KD6000121	SHIM 4.8MM	Piaggio spare parts (POP)
KD6000122	SHIM 4.9MM	Piaggio spare parts (POP)
KD6000129	SHIM 5.0	Piaggio spare parts (POP)
KD6000130	SHIM 5.1MM	Piaggio spare parts (POP)
B041263R	SHIM 510 GEARBOX	Piaggio spare parts (POP)
ESP650DNB010	SHIM FIP	Piaggio spare parts (POP)
B008236	SHIM FOR BLOCK (1.0 THK)	Piaggio spare parts (POP)
B008237	SHIM FOR BLOCK (2.0 THK)	Piaggio spare parts (POP)
CM240201	SHIM FUEL PUMP THICKNESS 0.1	Piaggio spare parts (POP)
CM240202	SHIM FUEL PUMP THICKNESS 0.2	Piaggio spare parts (POP)
CM240203	SHIM FUEL PUMP THICKNESS 0.3	Piaggio spare parts (POP)
CM240204	SHIM FUEL PUMP THICKNESS 0.4	Piaggio spare parts (POP)
CM240205	SHIM FUEL PUMP THICKNESS 0.5	Piaggio spare parts (POP)
CM240206	SHIM FUEL PUMP THICKNESS 0.6	Piaggio spare parts (POP)
CM240207	SHIM FUEL PUMP THICKNESS 0.7	Piaggio spare parts (POP)
CM240208	SHIM FUEL PUMP THICKNESS 0.8	Piaggio spare parts (POP)
CM240209	SHIM FUEL PUMP THICKNESS 0.9	Piaggio spare parts (POP)
CM240210	SHIM FUEL PUMP THICKNESS 1.0	Piaggio spare parts (POP)
L7701249	SHIM WASHER	Piaggio spare parts (POP)
L7352055	SHIM WASHER	Piaggio spare parts (POP)
1A017161	SHIM WASHER	Piaggio spare parts (POP)
L7701214	SHIM WASHER	Piaggio spare parts (POP)
L7352070	SHIM WASHER 0,3 MM	Piaggio spare parts (POP)
L7352078	SHIM WASHER 0.2 MM	Piaggio spare parts (POP)
L7701229	SHIM WASHER 1,20	Piaggio spare parts (POP)
L7701228	SHIM WASHER 1,25	Piaggio spare parts (POP)
L7701231	SHIM WASHER 1,30	Piaggio spare parts (POP)
L7701230	SHIM WASHER 1,35	Piaggio spare parts (POP)
L7701232	SHIM WASHER 1,40	Piaggio spare parts (POP)
L7701239	SHIM WASHER 1,45	Piaggio spare parts (POP)
L7701240	SHIM WASHER 1,50	Piaggio spare parts (POP)
L7701241	SHIM WASHER 1,55	Piaggio spare parts (POP)
L7701234	SHIM WASHER 1,60	Piaggio spare parts (POP)

L7701235	SHIM WASHER 1,65	Piaggio spare parts (POP)
L7701242	SHIM WASHER 1,70	Piaggio spare parts (POP)
L7701233	SHIM WASHER 1,75	Piaggio spare parts (POP)
L7701256	SHIM WASHER 1.05	Piaggio spare parts (POP)
L7701255	SHIM WASHER 1.10	Piaggio spare parts (POP)
L7701254	SHIM WASHER 1.15	Piaggio spare parts (POP)
L7701209	SHIM WASHER 1.20	Piaggio spare parts (POP)
L7701210	SHIM WASHER 1.30	Piaggio spare parts (POP)
L7701211	SHIM WASHER 1.40	Piaggio spare parts (POP)
L7701257	SHIM WASHER 1.80	Piaggio spare parts (POP)
L7701196	SHIM WASHER 1.85+0-0.05	Piaggio spare parts (POP)
L7701197	SHIM WASHER 1.90+0-0.05	Piaggio spare parts (POP)
L7701198	SHIM WASHER 1.95+0-0.05	Piaggio spare parts (POP)
LG7520016	SHIM WASHER 19,2X25,8X0.3 C70	Piaggio spare parts (POP)
L7701200	SHIM WASHER 2.05+0-0.05	Piaggio spare parts (POP)
237246	SHIM WASHER 20X10.2X1	Piaggio spare parts (POP)
632719	SHOCK ABSORBER , FR TYPE	Piaggio spare parts (POP)
B073690	SHOCK ABSORBER ASSLY FRONT	Piaggio spare parts (POP)
B008117	SHOCK ABSORBER ASSLY FRONT	Piaggio spare parts (POP)
B006746	SHOCK ABSORBER ASSY, FR. RH	Piaggio spare parts (POP)
B006747	SHOCK ABSORBER ASSY, FR.LH	Piaggio spare parts (POP)
662451	SHOCK ABSORBER ASSY. FR LH	Piaggio spare parts (POP)
662450	SHOCK ABSORBER ASSY.FR RH	Piaggio spare parts (POP)
569246R	SHOCK ABSORBER FRONT	Piaggio spare parts (POP)
569246	SHOCK ABSORBER FRONT	Piaggio spare parts (POP)
569246RP	SHOCK ABSORBER FRONT	Piaggio spare parts (POP)
136451	SHOCK ABSORBER REAR	Piaggio spare parts (POP)
B076292	SHOCK ABSORBER REAR - BSIV	Piaggio spare parts (POP)
645131	SHOCK ABSORBER REAR (DAMPER)	Piaggio spare parts (POP)
652408	SHOCK ABSORBER RR	Piaggio spare parts (POP)
B003327	SHOE HOLD DOWN KIT	Piaggio spare parts (POP)
KIT95036	SHOE HOLD DOWN KIT	Piaggio spare parts (POP)
B042669	Shoe hold down kit - RR	Piaggio spare parts (POP)
B042676	SHOE KIT - FR	Piaggio spare parts (POP)
925787	SHOE KIT FRONT LH	Piaggio spare parts (POP)
925788	SHOE KIT FRONT RH	Piaggio spare parts (POP)
B073252	SHOE KIT LH - D220 REAR BRAKE	Piaggio spare parts (POP)
B042667	SHOE KIT LH - RR	Piaggio spare parts (POP)
925789	SHOE KIT REAR LH	Piaggio spare parts (POP)
929901	SHOE KIT REAR LH APE TRUCK+	Piaggio spare parts (POP)
925790	SHOE KIT REAR RH	Piaggio spare parts (POP)
929902	SHOE KIT REAR RH APE TRUCK+	Piaggio spare parts (POP)
B073253	SHOE KIT RH - D220 REAR BRAKE	Piaggio spare parts (POP)
B042665	SHOE KIT RH - RR	Piaggio spare parts (POP)
B042670	Shoe Return Spring kit - RR	Piaggio spare parts (POP)
B003003	SHOE RETURN SPRING LOWER	Piaggio spare parts (POP)
B003004	SHOE RETURN SPRING UPPER	Piaggio spare parts (POP)

L1257171	SHOULDER FOR SPROCKET	Piaggio spare parts (POP)
523011013R	SHOULDER RING	Piaggio spare parts (POP)
523011013	SHOULDER RING 1.5 MM THK	Piaggio spare parts (POP)
523013011	SHOULDER RING 1.85 MM THK.	Piaggio spare parts (POP)
523014015	SHOULDER RING 2.00 MM THK	Piaggio spare parts (POP)
B016206	SHOULDER WASHER	Piaggio spare parts (POP)
661266	SHOULDER WASHER	Piaggio spare parts (POP)
267064	SHOULDER WASHER	Piaggio spare parts (POP)
SM26254709	Shroud	Piaggio spare parts (POP)
LG2569745	SHROUD (GREEN)	Piaggio spare parts (POP)
1A006740	SHROUD EXHAUST SIDE	Piaggio spare parts (POP)
B018025	SHROUD EXHAUST SIDE	Piaggio spare parts (POP)
E5405066053	SHROUD PLATE(EXH.)	Piaggio spare parts (POP)
E5405066054	SHROUD PLATE(INLET)	Piaggio spare parts (POP)
L9080245	SHUTTER CAP	Piaggio spare parts (POP)
L9080263	SHUTTER CAP	Piaggio spare parts (POP)
L9080243	SHUTTER CAP	Piaggio spare parts (POP)
L9080260	SHUTTER CUP	Piaggio spare parts (POP)
L9080280	SHUTTER CUP DIA.14	Piaggio spare parts (POP)
KD50664098	SIDE COOLING AIR METAL SHEET	Piaggio spare parts (POP)
B024006	SIDE COVER	Piaggio spare parts (POP)
B075373	SIDE COVER	Piaggio spare parts (POP)
B023979	SIDE COVER REAR ASSLY LH	Piaggio spare parts (POP)
B002356	SIDE COVER REAR ASSLY LH	Piaggio spare parts (POP)
B002356ED	SIDE COVER REAR ASSLY LH	Piaggio spare parts (POP)
B023981	SIDE COVER REAR ASSLY RH	Piaggio spare parts (POP)
B002355	SIDE COVER REAR ASSLY RH	Piaggio spare parts (POP)
B002355ED	SIDE COVER REAR ASSLY RH	Piaggio spare parts (POP)
602298	SIDE GASKET	Piaggio spare parts (POP)
632334	SIDE GATE ASSY (LWB)	Piaggio spare parts (POP)
B042449ED	SIDE GATE PANEL LH DTL PORTER 600-CED	Piaggio spare parts (POP)
B042450ED	SIDE GATE PANEL RH DTL PORTER 600-CED	Piaggio spare parts (POP)
662526	SIDE LAMP ASSY. LH	Piaggio spare parts (POP)
662527	SIDE LAMP ASSY. RH	Piaggio spare parts (POP)
6B000089ED	SIDE PANEL ASSLY (DTL)_LDX+_CED	Piaggio spare parts (POP)
B073523ED	SIDE PANEL ASSLY APE CITY CARGO-CED	Piaggio spare parts (POP)
B042513ED	SIDE PANEL ASSLY PICK UP (DTL) –CED	Piaggio spare parts (POP)
643816	SIDE PANEL LEFT (VE)	Piaggio spare parts (POP)
B073367	SIDE PANEL STICKER (PASS UPGRADE)	Piaggio spare parts (POP)
B073368	SIDE PANEL STICKER (PASS UPGRADE)	Piaggio spare parts (POP)
L6480073	SIDE PINION	Piaggio spare parts (POP)
L6480079	SIDE PINION	Piaggio spare parts (POP)
6B002584	SIDE PROFILE LH	Piaggio spare parts (POP)
6B003007	SIDE PROFILE LH - PAINTED	Piaggio spare parts (POP)
6B002585	SIDE PROFILE RH	Piaggio spare parts (POP)
6B003008	SIDE PROFILE RH – Painted	Piaggio spare parts (POP)
B003169	SILENCER	Piaggio spare parts (POP)

E07517704	Silencer	Piaggio spare parts (POP)
L5460543	SILENCER ASSEMBLY	Piaggio spare parts (POP)
KD54606808	SILENCER ASSY 15LD441	Piaggio spare parts (POP)
B009420	SILENCER ASSY.- BS III (VER. FLANGE)	Piaggio spare parts (POP)
E87007760	SILENCER ELLIPTICAL	Piaggio spare parts (POP)
E07530654	Silencer mounting bracket	Piaggio spare parts (POP)
B073224	SILENCER MTG. BRKT ON GB	Piaggio spare parts (POP)
E40007730	SILENCER WITH CATCON	Piaggio spare parts (POP)
B006245	SILENCER WITH CATCON CITY PTL/CNG/LPG	Piaggio spare parts (POP)
661249	SILENCER, DOOR LOCK	Piaggio spare parts (POP)
D6975987Z01	SILENCER, DOOR LOCK LINK	Piaggio spare parts (POP)
D6614687Z01	SILENCER, GATE LOCK	Piaggio spare parts (POP)
75708	SILENT BLOCK	Piaggio spare parts (POP)
566545	SILENT BLOCK	Piaggio spare parts (POP)
888560	SILENT BLOCK OIL SUCTION PIPE	Piaggio spare parts (POP)
E87006822C	SINGLE CYLINDER	Piaggio spare parts (POP)
929950	Single Nozzle Flow Control K-0415-08	Piaggio spare parts (POP)
F002G21084	SINTERED BUSH	Piaggio spare parts (POP)
1000301080	SINTERED BUSH	Piaggio spare parts (POP)
1000301056	SINTERED METAL BUSHING	Piaggio spare parts (POP)
587904	SINTERED WASHER HANDLE BAR (41769)	Piaggio spare parts (POP)
484034	SIZING NOZZLE	Piaggio spare parts (POP)
6A001010	SLEEVE	Piaggio spare parts (POP)
B009432	SLEEVE	Piaggio spare parts (POP)
6A000755	SLEEVE	Piaggio spare parts (POP)
6A001079	SLEEVE	Piaggio spare parts (POP)
632823	SLEEVE	Piaggio spare parts (POP)
B024775	SLEEVE	Piaggio spare parts (POP)
568607	Sleeve	Piaggio spare parts (POP)
613311	SLEEVE	Piaggio spare parts (POP)
E500197087	SLEEVE - OIL PAN	Piaggio spare parts (POP)
B023995	SLEEVE 1-2_RC	Piaggio spare parts (POP)
B041194	SLEEVE 3-4	Piaggio spare parts (POP)
644516	SLEEVE COLLAR PROTECTION	Piaggio spare parts (POP)
ED40208	Sleeve double oil seal	Piaggio spare parts (POP)
L5375025	SLEEVE FOR 1° 2° RM	Piaggio spare parts (POP)
970300570	Sleeve for crank shaft gear fitment	Piaggio spare parts (POP)
SST94171	Sleeve for oil seal fitment GL400 Engine	Piaggio spare parts (POP)
1A017298	SLEEVE FROM THERMOSTAT TO RADIATOR	Piaggio spare parts (POP)
L5375021	Sleeve insertion 1st - 2nd and reverse	Piaggio spare parts (POP)
L5375027	Sleeve insertion 1st - 2nd and reverse	Piaggio spare parts (POP)
L5375022	Sleeve insertion 3rd - 4th and 5th gear	Piaggio spare parts (POP)
L5375026	Sleeve insertion 3rd - 4th and 5th gear	Piaggio spare parts (POP)
LG7330388	SLEEVE OIL UNION	Piaggio spare parts (POP)
E500474018	SLEEVE PUSH ROD	Piaggio spare parts (POP)
E43526174	SLEEVE SET CONSISTING OF 7,8	Piaggio spare parts (POP)
E10M140001	SLEEVE_ Sogefi	Piaggio spare parts (POP)

ESP650DFP022	SLEEVE-FIP-MACHINED	Piaggio spare parts (POP)
E500474025	SLEEVE-PUSH ROD TUBE	Piaggio spare parts (POP)
1A007051	SLIDER	Piaggio spare parts (POP)
B017493	SLIDER	Piaggio spare parts (POP)
B018673	SLIDER	Piaggio spare parts (POP)
1A011345	SLIDER	Piaggio spare parts (POP)
1A010187	SLIDER BLOCK	Piaggio spare parts (POP)
1A015211	SLIDER BLOCK	Piaggio spare parts (POP)
643656	SLIDER BLOCK (SINTERED)	Piaggio spare parts (POP)
126021013	SLIDER BLOCK (40641)	Piaggio spare parts (POP)
112867	SLIDER BLOCK PROP SHAFT	Piaggio spare parts (POP)
112867R	SLIDER BLOCK PROP. SHAFT	Piaggio spare parts (POP)
B024003	SLIDER BLOCK R.C.GEAR	Piaggio spare parts (POP)
120321019	SLIDER BLOCK R.C.GEAR	Piaggio spare parts (POP)
614059	SLIDING BLOCK	Piaggio spare parts (POP)
6C000319	SLIDING BLOCK	Piaggio spare parts (POP)
03G160608	SLIDING BLOCK-SLIDING JOINT	Piaggio spare parts (POP)
B012304	SLIDING BUSH	Piaggio spare parts (POP)
B017133	SLIDING GEAR	Piaggio spare parts (POP)
1A008671R	SLIDING GEAR	Piaggio spare parts (POP)
1A013371	SLIDING GEAR	Piaggio spare parts (POP)
B015816	SLIDING GEAR	Piaggio spare parts (POP)
1A006807	SLIDING GEAR	Piaggio spare parts (POP)
1A013373	SLIDING GEAR	Piaggio spare parts (POP)
1A010632	SLIDING GEAR	Piaggio spare parts (POP)
1A008667R	SLIDING GEAR	Piaggio spare parts (POP)
1A017638	SLIDING GEAR	Piaggio spare parts (POP)
1A013372	SLIDING GEAR	Piaggio spare parts (POP)
1A014912	SLIDING GEAR	Piaggio spare parts (POP)
1A009779	SLIDING GEAR	Piaggio spare parts (POP)
1A011338	SLIDING GEAR	Piaggio spare parts (POP)
1A013633	SLIDING GEAR	Piaggio spare parts (POP)
849477	SLIDING PAD	Piaggio spare parts (POP)
1A012925	SLIDING WASHER	Piaggio spare parts (POP)
L7701199	SLIDING WASHER	Piaggio spare parts (POP)
6B001067	SLIDING WINDOW ASSY	Piaggio spare parts (POP)
565380	SLINGER	Piaggio spare parts (POP)
186445	SLOT CAP	Piaggio spare parts (POP)
30242	SLOT CH HD SCREW M5X10	Piaggio spare parts (POP)
E70979023	SLOTTED CHEESE HEAD SCREW M5X0.8	Piaggio spare parts (POP)
15618	SLT PAN HD SCREW M6X25	Piaggio spare parts (POP)
SM26024046A	SM-76 starter motor	Piaggio spare parts (POP)
L1585228	SMALL END BUSH	Piaggio spare parts (POP)
1A010185	SMALL NUT	Piaggio spare parts (POP)
6B002916	SMART TECH ENGINE CNG STICKER	Piaggio spare parts (POP)
6B002915	SMART TECH ENGINE LPG STICKER	Piaggio spare parts (POP)
6B002917	SMART TECH ENGINE PETROL STICKER	Piaggio spare parts (POP)

6A000836	SNAP FIT BKT., FILTER MTG (ARAYMOND)	Piaggio spare parts (POP)
970300517	SNAP GAUGE FOR MAINSHAFT HEIGHT ASSLY	Piaggio spare parts (POP)
E260116506	Snap ring	Piaggio spare parts (POP)
E500116008	SNAP RING	Piaggio spare parts (POP)
E87010917	SNAP RING GEAR FIP CAMSHAFT	Piaggio spare parts (POP)
1A010781	SNORKEL AIRBOX	Piaggio spare parts (POP)
B019289	SNORKEL AIRBOX	Piaggio spare parts (POP)
1A009164	SNORKEL AIRBOX	Piaggio spare parts (POP)
1A011716	SNORKEL AIRBOX	Piaggio spare parts (POP)
1A017578	SNORKEL AIRBOX	Piaggio spare parts (POP)
6A001154	SNORKEL BOX ASSEMBLY	Piaggio spare parts (POP)
6A000675	SNORKEL BOX ASSEMBLY	Piaggio spare parts (POP)
6A001171	SNORKEL BOX ASSEMBLY CARGO	Piaggio spare parts (POP)
6A000669	SNORKEL COLUMN ASSEMBLY	Piaggio spare parts (POP)
6A001266	SNORKEL HOLE CLOSURE BRACKET	Piaggio spare parts (POP)
6A001156	SNORKEL HOSE	Piaggio spare parts (POP)
6A001152	SNORKEL INTAKE GRILL ASSEMBLY	Piaggio spare parts (POP)
6A001161	SNORKEL LOWER HOSE	Piaggio spare parts (POP)
B075819	SNORKEL PIPE S/A	Piaggio spare parts (POP)
B074077	SNORKEL PIPE S/A	Piaggio spare parts (POP)
6A001593	SNORKEL SPRING BAND ASSEMBLY	Piaggio spare parts (POP)
6A001009	SNORKEL UPPER HOSE	Piaggio spare parts (POP)
6A001014	SNORKEL UPPER PLATE ASM	Piaggio spare parts (POP)
KD992R024	SOC HEAD CAP SCR M10X25 1.5P U	Piaggio spare parts (POP)
KD9730010	SOC HEAD CAP SCR M6X16L STEEL	Piaggio spare parts (POP)
LG9730010	SOC HEAD CAP SCR M6X16L STEEL	Piaggio spare parts (POP)
KD9730012	SOC HEAD CAP SCR M6X20L STEEL	Piaggio spare parts (POP)
KD9730301	SOC HEAD CAP SCR M6X20L STEEL	Piaggio spare parts (POP)
LG9730012	SOC HEAD CAP SCR M6X20L STEEL	Piaggio spare parts (POP)
KD9732078	SOC HEAD CAP SCR M6X25 8.8	Piaggio spare parts (POP)
KD9732016	SOC HEAD CAP SCR M6X40L 8.8	Piaggio spare parts (POP)
KD9730024	SOC HEAD CAP SCR M8X16L 1.25P	Piaggio spare parts (POP)
KD9730031	SOC HEAD CAP SCR M8X40L 1.25P	Piaggio spare parts (POP)
LG9730032	SOC HEAD CAP SCR M8X45L 8.8	Piaggio spare parts (POP)
KD9730032	SOC HEAD CAP SCR M8X45L 8.8	Piaggio spare parts (POP)
L9730035	SOC HEAD CAP SCR M8X65L 8.8	Piaggio spare parts (POP)
KD9732084	SOC HEAD SCR M6X12L UNI5931 ST	Piaggio spare parts (POP)
KD9732074	SOC HEAD SCR M8X20L UNI5931 ST	Piaggio spare parts (POP)
MS254006	SOCKET FOR INJECTOR	Piaggio spare parts (POP)
970300545	Socket for locking nut for in put shaft	Piaggio spare parts (POP)
646139	SOCKET HEAD BOLT M12 x 1.25 x 85	Piaggio spare parts (POP)
L1780153	SOCKET HEAD CAP SCREW	Piaggio spare parts (POP)
B003105	SOCKET HEAD CAP SCREW M10	Piaggio spare parts (POP)
819064530	SOCKET HEAD CAP SCREW M6 X45	Piaggio spare parts (POP)
B003855	SOCKET HEAD CAP SCREW M8	Piaggio spare parts (POP)
568096	SOCKET HEAD CAP SCREW M8 X20 (819082037	Piaggio spare parts (POP)
1A002311	SOCKET HEAD SCREW	Piaggio spare parts (POP)

1A000402	SOCKET HEAD SCREW	Piaggio spare parts (POP)
6A001045	SOCKET HEAD SCREW (ALLEN SCREW) M10X1.5	Piaggio spare parts (POP)
660057	SOCKET HEAD SCREW (M12 X 1.75 X 30L) GR	Piaggio spare parts (POP)
660058	SOCKET HEAD SCREW (M12 X 1.75 X 45L) GR	Piaggio spare parts (POP)
269755	SOCKET HEAD SCREW (M8x12)	Piaggio spare parts (POP)
B074557	SOCKET HEAD SCREW M12 X 52 GR 12.9	Piaggio spare parts (POP)
6A001146	SOCKET HEADED SCREW M10	Piaggio spare parts (POP)
675378	SOCKET WRENCH 16	Piaggio spare parts (POP)
932205	Soft Drink Carrier kit for export	Piaggio spare parts (POP)
B041179R	SOFT TOP ASLY	Piaggio spare parts (POP)
6B002468R	SOFT TOP ASSEMBLY - FR	Piaggio spare parts (POP)
6B002450R	SOFT TOP ASSEMBLY - NON FR	Piaggio spare parts (POP)
6B002949	SOFT TOP ASSEMBLY (BLACK)	Piaggio spare parts (POP)
6B002955	SOFT TOP ASSEMBLY (BLACK-NON FR)	Piaggio spare parts (POP)
6B002954	SOFT TOP ASSEMBLY (BROWN)	Piaggio spare parts (POP)
6B002952	SOFT TOP ASSEMBLY (GREEN)	Piaggio spare parts (POP)
6B002951	SOFT TOP ASSEMBLY (GREY)	Piaggio spare parts (POP)
6B002953	SOFT TOP ASSEMBLY (WHITE)	Piaggio spare parts (POP)
6B002950	SOFT TOP ASSEMBLY (YELLOW-BLACK INNER)	Piaggio spare parts (POP)
B079215	SOFT TOP ASSEMBLY BLACK (APE CITY PLUS)	Piaggio spare parts (POP)
6B001353	SOFT TOP ASSEMBLY BLACK (FR)	Piaggio spare parts (POP)
B077474	SOFT TOP ASSEMBLY BLACK (FR)BSIV VAVE	Piaggio spare parts (POP)
6B001355	SOFT TOP ASSEMBLY GREEN -OPEN TYPE.(FR)	Piaggio spare parts (POP)
6B001354	SOFT TOP ASSEMBLY YELLOW (FR)	Piaggio spare parts (POP)
B009699	SOFT TOP ASSEMBLY. 5S	Piaggio spare parts (POP)
6B001801	SOFT TOP ASSLY	Piaggio spare parts (POP)
6B001990R	SOFT TOP ASSLY	Piaggio spare parts (POP)
B076258R	SOFT TOP ASSLY - FR	Piaggio spare parts (POP)
6B001789	SOFT TOP ASSLY YELLOW-NON FR	Piaggio spare parts (POP)
644922	SOFT TOP ASSLY (601-TAXI)	Piaggio spare parts (POP)
6B002960	SOFT TOP ASSLY (BROWN-NON FR)	Piaggio spare parts (POP)
6B002958	SOFT TOP ASSLY (GREEN-NON FR)	Piaggio spare parts (POP)
6B002957	SOFT TOP ASSLY (GREY-NON FR)	Piaggio spare parts (POP)
B041637R	SOFT TOP ASSLY- (OPEN)	Piaggio spare parts (POP)
B042974R	SOFT TOP ASSLY- (OPEN)	Piaggio spare parts (POP)
B074162	SOFT TOP ASSLY (OPEN)-CALEX IND	Piaggio spare parts (POP)
6B002959	SOFT TOP ASSLY (WHITE-NON FR)	Piaggio spare parts (POP)
6B002956	SOFT TOP ASSLY (YELLOW-BLACK INR-NFR)	Piaggio spare parts (POP)
B075220R	SOFT TOP ASSLY 501	Piaggio spare parts (POP)
6B000182R	SOFT TOP ASSLY 501 WATERCOOLED	Piaggio spare parts (POP)
6B001987	SOFT TOP ASSLY BLACK	Piaggio spare parts (POP)
6B000121	SOFT TOP ASSLY BLACK 501 WATER COOLED	Piaggio spare parts (POP)
6B001906	SOFT TOP ASSLY BLACK- NON FR	Piaggio spare parts (POP)
B001986	SOFT TOP ASSLY BLK (501 PASS DSL)BSII MH	Piaggio spare parts (POP)
587940	SOFT TOP ASSLY BLK (501 PASS OLD)	Piaggio spare parts (POP)
B076561	SOFT TOP ASSLY BLK (APE CITY DSL STD)	Piaggio spare parts (POP)
B002261	SOFT TOP ASSLY BLK (APE CITY DSL/PTL)	Piaggio spare parts (POP)

B006787	SOFT TOP ASSLY BLK 501 REG	Piaggio spare parts (POP)
B075220	SOFT TOP ASSLY BLK 501 REG VA/VE	Piaggio spare parts (POP)
B077742	SOFT TOP ASSLY BLK 501 REG VA/VE (D+5)	Piaggio spare parts (POP)
B077742R	SOFT TOP ASSLY BLK 501 REG VA/VE (D+5)	Piaggio spare parts (POP)
661380	SOFT TOP ASSLY BLK 501 UPGR BSII	Piaggio spare parts (POP)
B009654	SOFT TOP ASSLY BLK CITY DSL/PTL EXPORT	Piaggio spare parts (POP)
B076269	SOFT TOP ASSLY BROWN COLOUR (CLOSE)BSIV	Piaggio spare parts (POP)
B042980	SOFT TOP ASSLY BROWN COLOUR CLOSE	Piaggio spare parts (POP)
B074640R	SOFT TOP ASSLY CLOSED	Piaggio spare parts (POP)
B042973R	SOFT TOP ASSLY CLOSED	Piaggio spare parts (POP)
B076494R	SOFT TOP ASSLY CLOSED NON FR	Piaggio spare parts (POP)
B074640	SOFT TOP ASSLY COLOUR BLACK (CLOSE)	Piaggio spare parts (POP)
B076258	SOFT TOP ASSLY COLOUR BLACK (CLOSE)BSIV	Piaggio spare parts (POP)
B076501	SOFT TOP ASSLY COLOUR BLACK (CLOSE)NFR	Piaggio spare parts (POP)
B042973	SOFT TOP ASSLY COLOUR BLACK CLOSED	Piaggio spare parts (POP)
B074175	SOFT TOP ASSLY COLOUR GREEN (CLOSED)	Piaggio spare parts (POP)
B075445	SOFT TOP ASSLY COLOUR GREEN (CLOSE)	Piaggio spare parts (POP)
B076265	SOFT TOP ASSLY COLOUR GREEN (CLOSE) BSIV	Piaggio spare parts (POP)
B076505	SOFT TOP ASSLY COLOUR WHITE (CLOSE)	Piaggio spare parts (POP)
B075446	SOFT TOP ASSLY COLOUR WHITE (CLOSE)	Piaggio spare parts (POP)
B076267	SOFT TOP ASSLY COLOUR WHITE (CLOSE)BSIV	Piaggio spare parts (POP)
B009652	SOFT TOP ASSLY EGRN CITY CNG (B'DESH)	Piaggio spare parts (POP)
B076908	SOFT TOP ASSLY GREEN CITY DSL STD)	Piaggio spare parts (POP)
6B001360	SOFT TOP ASSLY GREEN -OPEN TYPE.(NON FR)	Piaggio spare parts (POP)
B009279	SOFT TOP ASSLY GREY CITY LPG (PINK)	Piaggio spare parts (POP)
6B001638	SOFT TOP ASSLY MID BODY OPEN APE CITY+AF	Piaggio spare parts (POP)
6B001637	SOFT TOP ASSLY MID BODY OPEN APECITY+AF	Piaggio spare parts (POP)
6B001824R	SOFT TOP ASSLY NON FR	Piaggio spare parts (POP)
B076909	SOFT TOP ASSLY WHITE APE CITY DSL	Piaggio spare parts (POP)
B075269	SOFT TOP ASSLY YELLOW	Piaggio spare parts (POP)
6B001988	SOFT TOP ASSLY YELLOW	Piaggio spare parts (POP)
B079214	SOFT TOP ASSLY YELLOW (APE CITY PLUS)	Piaggio spare parts (POP)
6B001989	SOFT TOP ASSLY YELLOW (BLACK INNER)	Piaggio spare parts (POP)
B076907	SOFT TOP ASSLY YELLOW APE CITY DSL STD	Piaggio spare parts (POP)
6B001913	SOFT TOP ASSLY YELLOW BLACK INNER FR	Piaggio spare parts (POP)
6B001790	SOFT TOP ASSLY YELLOW BLACK INNER-NON FR	Piaggio spare parts (POP)
B076494	SOFT TOP ASSLY YELLOW COL (CLOSE) NON FR	Piaggio spare parts (POP)
B074641	SOFT TOP ASSLY YELLOW COLOUR (CLOSE)	Piaggio spare parts (POP)
B076260	SOFT TOP ASSLY YELLOW COLOUR (CLOSE)BSIV	Piaggio spare parts (POP)
B042978	SOFT TOP ASSLY YELLOW COLOUR CLOSE	Piaggio spare parts (POP)
645003	SOFT TOP ASSLY YLW (501 CNG/LPG)	Piaggio spare parts (POP)
B009091	SOFT TOP ASSLY YLW 501 CNG/LPG	Piaggio spare parts (POP)
B009091R	SOFT TOP ASSLY YLW 501 CNG/LPG	Piaggio spare parts (POP)
B006332	SOFT TOP ASSLY YLW CITY CNG/LPG	Piaggio spare parts (POP)
B079214R	SOFT TOP ASSLY YLW/BLK (APEC CITY PLUS)	Piaggio spare parts (POP)
B075269R	SOFT TOP ASSLY YLW/BLK 501 CNG/LPG BSIV	Piaggio spare parts (POP)
6B000932R	SOFT TOP ASSLY. - DXL CNG/LPG	Piaggio spare parts (POP)

6B000119	SOFT TOP ASSLY. (501 -WATERCOOLED)	Piaggio spare parts (POP)
6B000931	SOFT TOP ASSLY. D5 CNG/LPG - YELLOW	Piaggio spare parts (POP)
6B000934	SOFT TOP ASSLY. -DXL CNG/LPG - YELLOW	Piaggio spare parts (POP)
B041637	SOFT TOP ASSLY-BLACK (OPEN)	Piaggio spare parts (POP)
B074574	SOFT TOP ASSLY-BROWN COLOUR (OPEN)	Piaggio spare parts (POP)
B042974	SOFT TOP ASSLY-COLOUR BLACK (OPEN)	Piaggio spare parts (POP)
6B000929R	SOFT TOP ASSLY-FR	Piaggio spare parts (POP)
B042979	SOFT TOP ASSLY-GREY COLOUR (CLOSE)	Piaggio spare parts (POP)
B076262	SOFT TOP ASSLY-GREY COLOUR (CLOSE)BSIV	Piaggio spare parts (POP)
B041638	SOFT TOP ASSLY-PRM GREEN (OPEN)	Piaggio spare parts (POP)
B042981	SOFT TOP ASSLY-PRM GREEN COLOUR (OPEN)	Piaggio spare parts (POP)
B041639	SOFT TOP ASSLY-WHITE (OPEN)	Piaggio spare parts (POP)
B042982	SOFT TOP ASSLY-WHITE COLOUR (OPEN)	Piaggio spare parts (POP)
B042240	SOFT TOP ASSLY-YELLOW (OPEN)	Piaggio spare parts (POP)
B042995	SOFT TOP ASSLY-YELLOW COLOUR OPEN	Piaggio spare parts (POP)
B076503	SOFT TOP ASSY GREEN COLOUR NFR	Piaggio spare parts (POP)
6B000222	SOFT TOP ASSY. (APE AUTO DXL)	Piaggio spare parts (POP)
B074627R	SOFTTOP ASSLY 501 BS III (B`DESH)	Piaggio spare parts (POP)
B074627	SOFTTOP ASSLY EGREEN 501 BS III (B`DESH)	Piaggio spare parts (POP)
B074638	SOFTTOP ASSLY WITH COL BLACK (B`DESH)	Piaggio spare parts (POP)
F002G20776	Solenoid Switch	Piaggio spare parts (POP)
F002G20259	SOLENOID SWITCH	Piaggio spare parts (POP)
F002G20980	SOLENOID SWITCH	Piaggio spare parts (POP)
F002G20884	SOLENOID SWITCH	Piaggio spare parts (POP)
F002G20321	SOLENOID SWITCH	Piaggio spare parts (POP)
B074960	SOLENOID VALVE	Piaggio spare parts (POP)
925785	SOLENOID VALVE (S-0102)	Piaggio spare parts (POP)
925745	SOLENOID VALVE(S-0101)	Piaggio spare parts (POP)
920012	Solenoid Valve-S-0101-IV	Piaggio spare parts (POP)
662422	SOLID OIL BALL CAGE (LOWER) SKF - 7104	Piaggio spare parts (POP)
662423	SOLID OIL BALL CAGE (UPPER) SKF - 7105	Piaggio spare parts (POP)
F002G20044	SOLENOID SWITCH	Piaggio spare parts (POP)
1A012728	Soundless timing chain	Piaggio spare parts (POP)
B015018	SOUNDLESS TIMING CHAIN	Piaggio spare parts (POP)
E1756504	Sp Washer for Rear Cover Stud	Piaggio spare parts (POP)
E870051119	SPRING LINK	Piaggio spare parts (POP)
E270155721	Spacer	Piaggio spare parts (POP)
231908	SPACER	Piaggio spare parts (POP)
1E003639	SPACER	Piaggio spare parts (POP)
624456	SPACER	Piaggio spare parts (POP)
125181	SPACER	Piaggio spare parts (POP)
632809	SPACER	Piaggio spare parts (POP)
B014066	SPACER	Piaggio spare parts (POP)
230560	SPACER	Piaggio spare parts (POP)
B074329	SPACER	Piaggio spare parts (POP)
1A017601	SPACER	Piaggio spare parts (POP)
1E000356	SPACER	Piaggio spare parts (POP)

108788	SPACER	Piaggio spare parts (POP)
119181	SPACER	Piaggio spare parts (POP)
B002327	SPACER	Piaggio spare parts (POP)
1A006628	SPACER	Piaggio spare parts (POP)
1A020403	SPACER	Piaggio spare parts (POP)
568336	SPACER	Piaggio spare parts (POP)
L3525115	SPACER	Piaggio spare parts (POP)
107827	SPACER	Piaggio spare parts (POP)
1E000754	SPACER	Piaggio spare parts (POP)
E500600036	SPACER	Piaggio spare parts (POP)
E87000305	SPACER	Piaggio spare parts (POP)
267065	SPACER	Piaggio spare parts (POP)
569241	SPACER	Piaggio spare parts (POP)
1A007179	SPACER	Piaggio spare parts (POP)
219299	SPACER	Piaggio spare parts (POP)
CM240300	SPACER	Piaggio spare parts (POP)
B042461	SPACER	Piaggio spare parts (POP)
1A010461	SPACER	Piaggio spare parts (POP)
B018472	SPACER	Piaggio spare parts (POP)
L3527521	SPACER	Piaggio spare parts (POP)
613349	SPACER DOOR HEADLAMP	Piaggio spare parts (POP)
03G160347	spacer lubrication	Piaggio spare parts (POP)
889060	SPACER - ROCKER SHAFT	Piaggio spare parts (POP)
889061	SPACER - ROCKER SHAFT	Piaggio spare parts (POP)
889062	SPACER - ROCKER SHAFT	Piaggio spare parts (POP)
889087	SPACER - ROCKER SHAFT	Piaggio spare parts (POP)
888213	SPACER - ROCKER SHAFT	Piaggio spare parts (POP)
888259	SPACER - ROCKERSHAFT	Piaggio spare parts (POP)
605278	SPACER - STEERING WHEEL	Piaggio spare parts (POP)
B076999	SPACER _ BATTERY TRAY	Piaggio spare parts (POP)
KD3527626	SPACER 15LD441	Piaggio spare parts (POP)
03G160220	spacer 34 shaft input	Piaggio spare parts (POP)
03G160207	spacer 5 bearing	Piaggio spare parts (POP)
KD3526170	SPACER D5XD11X4	Piaggio spare parts (POP)
B001258	SPACER DISC FRONT WHEEL MTG	Piaggio spare parts (POP)
B041181	SPACER DISC FRONT WHEEL MTG (ALUMIN .)	Piaggio spare parts (POP)
B024371	SPACER DISC FRONT WHEEL MTG (VE)	Piaggio spare parts (POP)
B077461	SPACER DISC FRONT WHEEL MTG (ALUMIN.)	Piaggio spare parts (POP)
E283352619	Spacer engine feet	Piaggio spare parts (POP)
E07516155	Spacer for fuel pump 2.4mm.	Piaggio spare parts (POP)
1A012429	Spacer for chain tightening rod	Piaggio spare parts (POP)
485868	SPACER FOR CHAIN TIGHTNING ROD	Piaggio spare parts (POP)
B006487	SPACER FOR CLUTCH PEDAL	Piaggio spare parts (POP)
020860Y	SPACER FOR ENGINE BRACKET	Piaggio spare parts (POP)
KD3527639	Spacer For Gear Box Adaptor	Piaggio spare parts (POP)
602187	SPACER FOR PEDAL-BRAKE	Piaggio spare parts (POP)
LG8335227	SPACER FOR TAPPET 3.80 MM	Piaggio spare parts (POP)

LG8335229	SPACER FOR TAPPET 3.90 MM	Piaggio spare parts (POP)
LG8335230	SPACER FOR TAPPET 3.95 MM	Piaggio spare parts (POP)
LG8335231	SPACER FOR TAPPET 4.00 MM	Piaggio spare parts (POP)
LG8335232	SPACER FOR TAPPET 4.05 MM	Piaggio spare parts (POP)
LG8335233	SPACER FOR TAPPET 4.10 MM	Piaggio spare parts (POP)
LG8335234	SPACER FOR TAPPET 4.15 MM	Piaggio spare parts (POP)
LG8335235	SPACER FOR TAPPET 4.20 MM	Piaggio spare parts (POP)
LG8335236	SPACER FOR TAPPET 4.25 MM	Piaggio spare parts (POP)
L8335216	SPACER FOR TAPPET GAP TUNING 3,25	Piaggio spare parts (POP)
L8335217	SPACER FOR TAPPET GAP TUNING 3,30 mm	Piaggio spare parts (POP)
L8335218	SPACER FOR TAPPET GAP TUNING 3,35	Piaggio spare parts (POP)
L8335219	SPACER FOR TAPPET GAP TUNING 3,40	Piaggio spare parts (POP)
L8335220	SPACER FOR TAPPET GAP TUNING 3,45	Piaggio spare parts (POP)
L8335221	SPACER FOR TAPPET GAP TUNING 3,50 mm	Piaggio spare parts (POP)
L8335222	SPACER FOR TAPPET GAP TUNING 3,55	Piaggio spare parts (POP)
L8335223	SPACER FOR TAPPET GAP TUNING 3,60	Piaggio spare parts (POP)
L8335224	SPACER FOR TAPPET GAP TUNING 3,65	Piaggio spare parts (POP)
L8335225	SPACER FOR TAPPET GAP TUNING 3,70	Piaggio spare parts (POP)
L8335226	SPACER FOR TAPPET GAP TUNING 3,75	Piaggio spare parts (POP)
L8335227	SPACER FOR TAPPET GAP TUNING 3,80	Piaggio spare parts (POP)
L8335228	SPACER FOR TAPPET GAP TUNING 3,85	Piaggio spare parts (POP)
L8335229	SPACER FOR TAPPET GAP TUNING 3,90	Piaggio spare parts (POP)
L8335230	SPACER FOR TAPPET GAP TUNING 3,95	Piaggio spare parts (POP)
L8335231	SPACER FOR TAPPET GAP TUNING 4.00 mm	Piaggio spare parts (POP)
L8335232	SPACER FOR TAPPET GAP TUNING 4.05	Piaggio spare parts (POP)
L8335233	SPACER FOR TAPPET GAP TUNING 4.10 mm	Piaggio spare parts (POP)
L8335234	SPACER FOR TAPPET GAP TUNING 4.15	Piaggio spare parts (POP)
L8335235	SPACER FOR TAPPET GAP TUNING 4.20	Piaggio spare parts (POP)
L8335236	SPACER FOR TAPPET GAP TUNING 4.25 mm	Piaggio spare parts (POP)
L8335237	SPACER FOR TAPPET GAP TUNING 4.30 mm	Piaggio spare parts (POP)
L8335238	SPACER FOR TAPPET GAP TUNING 4.35	Piaggio spare parts (POP)
L8335239	SPACER FOR TAPPET GAP TUNING 4.40 mm	Piaggio spare parts (POP)
L8335240	SPACER FOR TAPPET GAP TUNING 4.45	Piaggio spare parts (POP)
L8335241	SPACER FOR TAPPET GAP TUNING 4.50	Piaggio spare parts (POP)
L8335242	SPACER FOR TAPPET GAP TUNING 4.55	Piaggio spare parts (POP)
L8335243	SPACER FOR TAPPET GAP TUNING 4.60	Piaggio spare parts (POP)
643539	SPACER FRONT SHOCK ABSORBER	Piaggio spare parts (POP)
E87000682	SPACER FULCRUM BRACKET	Piaggio spare parts (POP)
B006899	SPACER GEAR BOX -(M/C)	Piaggio spare parts (POP)
604698	SPACER HORN MOUNTING	Piaggio spare parts (POP)
L3525124	SPACER L=12.3	Piaggio spare parts (POP)
E87000688	SPACER PULLY CRANK	Piaggio spare parts (POP)
645118	SPACER RADIATOR GUARD MTG.	Piaggio spare parts (POP)
B076308	SPACER REGISTRATION LAMP	Piaggio spare parts (POP)
ED42246	SPACER STARTING PULLEY	Piaggio spare parts (POP)
652124	SPACER WASHER	Piaggio spare parts (POP)
1A008743	SPACER WASHER	Piaggio spare parts (POP)

B016160	SPACER WASHER	Piaggio spare parts (POP)
B006875	SPACER WASHER	Piaggio spare parts (POP)
127913017	SPACER WASHER - CLUTCH	Piaggio spare parts (POP)
632852	SPACER WASHER FOR BRAKE PEDAL	Piaggio spare parts (POP)
B003334	SPACER WINDOW SLIDING GLASS	Piaggio spare parts (POP)
B042317	SPACER-RC LEVER	Piaggio spare parts (POP)
E87005607	SPACERWATER PUMP	Piaggio spare parts (POP)
B042624	SPANER OIL FILTER	Piaggio spare parts (POP)
E7230052	SPANNER 10 X 13	Piaggio spare parts (POP)
E9230053	SPANNER 17 X 19	Piaggio spare parts (POP)
E40035554	SPANNER SPARK PLUG	Piaggio spare parts (POP)
B041542	SPARE KIT FOR JALDOOT FOR XTRA LD	Piaggio spare parts (POP)
KITB041542R	SPARE KIT FOR JALDOOT FOR XTRA LD	Piaggio spare parts (POP)
604971	SPARE WHEEL FRAME MTG. BKT	Piaggio spare parts (POP)
613849	SPARE WHEEL LOCK ASSLY	Piaggio spare parts (POP)
645057	SPARE WHEEL LOCK ASSY	Piaggio spare parts (POP)
925668	SPARE WHEEL LOCK ASSY WITH KEY	Piaggio spare parts (POP)
940132	SPARE WHEEL LOCK ASSY WITH KEY	Piaggio spare parts (POP)
662339	SPARE WHEEL LOCK ASSY,	Piaggio spare parts (POP)
940133	SPARE WHEEL LOCK ASSY, WITH KEY	Piaggio spare parts (POP)
B024179	SPARE WHEEL LOCK WITH KEY	Piaggio spare parts (POP)
KD1051346	SPAREPART CMP CRANKSHAFT	Piaggio spare parts (POP)
L7362339	SPARK ADVANCE REGULATOR ASS.	Piaggio spare parts (POP)
L9820201	SPARK ADVANCE SETTING SCREW	Piaggio spare parts (POP)
ED43661	SPARK PLUG	Piaggio spare parts (POP)
643367	SPARK PLUG	Piaggio spare parts (POP)
1A017408	SPARK PLUG	Piaggio spare parts (POP)
E40024008	SPARK PLUG	Piaggio spare parts (POP)
E40024023	SPARK PLUG BOSCH FR7DE	Piaggio spare parts (POP)
1A017559	SPARK PLUG CAP	Piaggio spare parts (POP)
ED23685	SPARK PLUG CAP	Piaggio spare parts (POP)
643149	SPARK PLUG CAP	Piaggio spare parts (POP)
639687	SPARK PLUG CR8EKB	Piaggio spare parts (POP)
828209	SPARK PLUG CR9EB	Piaggio spare parts (POP)
B014732	SPARK PLUG HOLE GASKET	Piaggio spare parts (POP)
829981	SPARK PLUG NGK CR7EKB	Piaggio spare parts (POP)
1A017560	SPARK PLUG PROTECTION CAP	Piaggio spare parts (POP)
1A001795	SPARK PLUG PROTECTION COLLAR	Piaggio spare parts (POP)
680180	SPARK PLUG PROTECTION COLLAR	Piaggio spare parts (POP)
B041787	SPARK PLUG SPANNER	Piaggio spare parts (POP)
441041	SPARK PLUG SPANNER	Piaggio spare parts (POP)
616841	Spark.plug CABLE	Piaggio spare parts (POP)
ED32624	SPARKPLUGSPANNER	Piaggio spare parts (POP)
KIT95049R	SPD KIT 1_ENGINE PARTS -7	Piaggio spare parts (POP)
KIT95050R	SPD KIT 2_ENGINE PARTS -6	Piaggio spare parts (POP)
KIT95051R	SPD KIT 3_CLUTCH GB PARTS-12	Piaggio spare parts (POP)
KIT95052R	SPD KIT 4_BRAKE SUSPENSION PARTS-8	Piaggio spare parts (POP)

KIT95053R	SPD KIT 5_VEHICLE PARTS-17	Piaggio spare parts (POP)
KIT95054R	SPD KIT 6_CONSUMABLES 1 -13	Piaggio spare parts (POP)
KIT95055R	SPD KIT 7_CONSUMABLES 2 -10	Piaggio spare parts (POP)
KIT95070R	SPD KIT ASSY. CRANKSHAFT WITH SLEEVE	Piaggio spare parts (POP)
KIT95068R	SPD KIT BARREL PISTON MOD BS-II	Piaggio spare parts (POP)
KIT95087R	SPD KIT BRAKE DRUM	Piaggio spare parts (POP)
KIT95069R	SPD KIT CAM FOLLOWER	Piaggio spare parts (POP)
KIT95077R	SPD KIT CAM SHAFT	Piaggio spare parts (POP)
KIT95078R	SPD KIT CLUSTER GEAR	Piaggio spare parts (POP)
KIT95099R	SPD KIT CLUTCH BOX	Piaggio spare parts (POP)
KIT95094R	SPD KIT COMPLETE GEAR SHIFTER HSG ASSLY	Piaggio spare parts (POP)
KIT95073R	SPD KIT CON ROD BOLT	Piaggio spare parts (POP)
KIT95067R	SPD KIT CRANK SHAFT GL 400	Piaggio spare parts (POP)
KIT95071R	SPD KIT CRANK SHAFT(SPLINED)	Piaggio spare parts (POP)
KIT95098R	SPD KIT CROSS (ALT.CONST. 221569)	Piaggio spare parts (POP)
KIT95072R	SPD KIT CYLINDER AND PISTON ASSY	Piaggio spare parts (POP)
KIT96002R	SPD KIT DRIVEN PLATE ASLY	Piaggio spare parts (POP)
KIT96003R	SPD KIT DRIVING PLATE THK. 2.0 MM	Piaggio spare parts (POP)
KIT96011R	SPD KIT DRVG + PRES PLATE	Piaggio spare parts (POP)
KIT96000R	SPD KIT DUMPER ENGINE MOUNTING	Piaggio spare parts (POP)
KIT95092R	SPD KIT ENGINE GEAR	Piaggio spare parts (POP)
KIT95096R	SPD KIT FLEXIBLE COUPLING	Piaggio spare parts (POP)
KIT95079R	SPD KIT GEAR FD (PAS)	Piaggio spare parts (POP)
KIT95081R	SPD KIT Gear Sun & Differential Gear	Piaggio spare parts (POP)
KIT95074R	SPD KIT HALF OH GL-400 IIA ENGINE	Piaggio spare parts (POP)
KIT95075R	SPD KIT HALF OVERHAUL G 435 AIII ENGINE	Piaggio spare parts (POP)
KIT95082R	SPD KIT IDLER GEAR	Piaggio spare parts (POP)
KIT95086R	SPD KIT IDLER GEAR (CARGO)	Piaggio spare parts (POP)
KIT95076R	SPD KIT LUB OIL PUMP ASSLY	Piaggio spare parts (POP)
KIT95083R	SPD KIT MAIN SHAFT	Piaggio spare parts (POP)
KIT95080R	SPD KIT MAIN SHAFT	Piaggio spare parts (POP)
KIT96004R	SPD KIT OIL FILTER ELEMENT -SPIN ON	Piaggio spare parts (POP)
KIT95085R	SPD KIT PINION SHAFT (MODIFIED)	Piaggio spare parts (POP)
KIT95084R	SPD KIT R C GEAR	Piaggio spare parts (POP)
KIT95089R	SPD KIT R.C. GEAR (CARGO)	Piaggio spare parts (POP)
KIT95088R	SPD KIT RUBBER BUMPER	Piaggio spare parts (POP)
KIT95093R	SPD KIT SECOND SPEED GEAR	Piaggio spare parts (POP)
KIT95091R	SPD KIT SHAFT PINION	Piaggio spare parts (POP)
KIT95097R	SPD KIT SPEED GEAR 3RD	Piaggio spare parts (POP)
KIT95090R	SPD KIT SPEED GEAR FIRST	Piaggio spare parts (POP)
KIT95095R	SPD KIT SPEED GEAR FOURTH	Piaggio spare parts (POP)
KIT96001R	SPD KIT STEM GEAR OPERATING	Piaggio spare parts (POP)
SP1A017997	SPD ONE WAY CLUTCH HUB ASSY	Piaggio spare parts (POP)
B012004	SPECIAL NUT	Piaggio spare parts (POP)
1E001216	SPECIAL SCREW	Piaggio spare parts (POP)
872635	SPECIAL SCREW	Piaggio spare parts (POP)
LG9730433	SPECIAL SCREW FOR HEAD LGA 280	Piaggio spare parts (POP)

1A013298	special screw M6x1	Piaggio spare parts (POP)
B016368	SPECIAL STUD	Piaggio spare parts (POP)
289422	SPECIAL STUD	Piaggio spare parts (POP)
B010699	SPECIAL STUD	Piaggio spare parts (POP)
6C000015	SPECIAL STUD - M12	Piaggio spare parts (POP)
LG9865305	SPECIAL STUD FOR COIL	Piaggio spare parts (POP)
127301018	SPEED GEAR 1ST	Piaggio spare parts (POP)
1F000752	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A009578R	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A001912	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A008770	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A010160	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A015215	SPEED GEAR 1ST	Piaggio spare parts (POP)
1A011286	SPEED GEAR 1st	Piaggio spare parts (POP)
1A014871	SPEED GEAR 1st	Piaggio spare parts (POP)
B002094	SPEED GEAR 1ST	Piaggio spare parts (POP)
127302012	SPEED GEAR 2ND	Piaggio spare parts (POP)
1F000753	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A010700R	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A001913	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A010161	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A009433	SPEED GEAR 2nd	Piaggio spare parts (POP)
1A015219	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A011287	SPEED GEAR 2nd	Piaggio spare parts (POP)
B002087	SPEED GEAR 2ND	Piaggio spare parts (POP)
1A014872	SPEED GEAR 2nd	Piaggio spare parts (POP)
127303016R	SPEED GEAR 3RD	Piaggio spare parts (POP)
127303016	SPEED GEAR 3RD	Piaggio spare parts (POP)
1A010162	SPEED GEAR 3RD	Piaggio spare parts (POP)
1A009434	SPEED GEAR 3rd	Piaggio spare parts (POP)
1A001914	SPEED GEAR 3RD	Piaggio spare parts (POP)
1A011288	SPEED GEAR 3rd	Piaggio spare parts (POP)
1A014873	SPEED GEAR 3rd	Piaggio spare parts (POP)
1A015218	SPEED GEAR 3RD	Piaggio spare parts (POP)
127307012	SPEED GEAR 4TH	Piaggio spare parts (POP)
1A010163	SPEED GEAR 4TH	Piaggio spare parts (POP)
1A009435	SPEED GEAR 4th	Piaggio spare parts (POP)
1A011289	SPEED GEAR 4th	Piaggio spare parts (POP)
1A001915	SPEED GEAR 4TH	Piaggio spare parts (POP)
1A014874	SPEED GEAR 4th	Piaggio spare parts (POP)
127305014	SPEED GEAR 4TH	Piaggio spare parts (POP)
1A015217	SPEED GEAR 4TH	Piaggio spare parts (POP)
1A015216	SPEED GEAR 5TH	Piaggio spare parts (POP)
127309515R	SPEED GEAR FIRST	Piaggio spare parts (POP)
127309515	SPEED GEAR FIRST (VE)	Piaggio spare parts (POP)
127306513R	SPEED GEAR FOURTH	Piaggio spare parts (POP)
127306513	SPEED GEAR FOURTH (VE)	Piaggio spare parts (POP)

123004014	SPEED GEAR II	Piaggio spare parts (POP)
123005018	SPEED GEAR III	Piaggio spare parts (POP)
123006012	SPEED GEAR IV	Piaggio spare parts (POP)
646196	SPEED GEAR SHIFT S/A	Piaggio spare parts (POP)
127307517	SPEED GEAR THIRD (VE)	Piaggio spare parts (POP)
L2535029	SPEED GOV. COUNTERWEIGHT CONTAINER WITH	Piaggio spare parts (POP)
6D000311	SPEED SENSOR	Piaggio spare parts (POP)
889209	SPEED SENSOR	Piaggio spare parts (POP)
B041030	SPEEDO CABLE	Piaggio spare parts (POP)
970300582	Speedo gear bearing mounting tool	Piaggio spare parts (POP)
6A001463	SPEEDO METER CABLE ASSY.	Piaggio spare parts (POP)
SST96033	Speedo Worm Gear Removal Tools	Piaggio spare parts (POP)
B076208	SPEEDOCABLE	Piaggio spare parts (POP)
645124	SPEEDOCABLE - VE	Piaggio spare parts (POP)
652174	SPEEDOMETER	Piaggio spare parts (POP)
605357	SPEEDOMETER	Piaggio spare parts (POP)
587674	Speedometer	Piaggio spare parts (POP)
B041742	SPEEDOMETER	Piaggio spare parts (POP)
SP1F0006304	SPEEDOMETER ASSEMBLY- GB 700 SPD	Piaggio spare parts (POP)
SP1A013346	SPEEDOMETER ASSEMBLY_SPD	Piaggio spare parts (POP)
632227	SPEEDOMETER ASSLY	Piaggio spare parts (POP)
604568	SPEEDOMETER ASSLY MY 2001	Piaggio spare parts (POP)
632353	Speedometer CABLE	Piaggio spare parts (POP)
6A001070	SPEEDOMETER CABLE	Piaggio spare parts (POP)
661769	SPEEDOMETER CABLE ASSY	Piaggio spare parts (POP)
6A001453	Speedometer cable assy	Piaggio spare parts (POP)
6A001454	Speedometer cable assy	Piaggio spare parts (POP)
6A001452	Speedometer cable assy	Piaggio spare parts (POP)
6A001451	Speedometer cable assy	Piaggio spare parts (POP)
6A001450	Speedometer cable assy	Piaggio spare parts (POP)
1C002784	Speedometer drive	Piaggio spare parts (POP)
1A013344	SPEEDOMETER DRIVEN GEAR	Piaggio spare parts (POP)
1F000629	SPEEDOMETER DRIVEN GEAR	Piaggio spare parts (POP)
1F000618	SPEEDOMETER DRIVING GEAR	Piaggio spare parts (POP)
6A000888	SPEEDOMETER FLEX. TRANS.	Piaggio spare parts (POP)
117404	SPEEDOMETER GEAR	Piaggio spare parts (POP)
1A008621	SPEEDOMETER GEAR	Piaggio spare parts (POP)
1A010720	SPEEDOMETER GEAR AXLE	Piaggio spare parts (POP)
1F000632	SPEEDOMETER IMPULSE GENERATOR	Piaggio spare parts (POP)
1A013345	SPEEDOMETER SUPPORT	Piaggio spare parts (POP)
1F000628	SPEEDOMETER SUPPORT	Piaggio spare parts (POP)
1A011271	SPHERICAL PIN	Piaggio spare parts (POP)
01G020003	SPHERICAL WASHER	Piaggio spare parts (POP)
6A000944	SPIGOT	Piaggio spare parts (POP)
925766	SPIGOT(K-0401-19-020)	Piaggio spare parts (POP)
661911	SPIGOT(VANAZ P.NO.K-0401-19-020)	Piaggio spare parts (POP)
970300583	SPIN OIL FILTER REMOVAL TOOL	Piaggio spare parts (POP)

A03G120006	SPIN ON FILTER	Piaggio spare parts (POP)
L4950124	SPINDLE	Piaggio spare parts (POP)
03G161711	spindle speedo drive	Piaggio spare parts (POP)
SM26640843	Spindle Assy	Piaggio spare parts (POP)
615673	SPINDLE RR	Piaggio spare parts (POP)
613854	SPINDLE STEERING KNUCKL	Piaggio spare parts (POP)
851940	Splash Guard Kit	Piaggio spare parts (POP)
03G161691	Spline Guider drive shaft	Piaggio spare parts (POP)
03G161690	Spline guider i/p shaft	Piaggio spare parts (POP)
E10A060006	SPLIT CAMSHAFT_501 BSIV	Piaggio spare parts (POP)
E9280003	SPLIT PIN	Piaggio spare parts (POP)
E7102800049	SPLIT PIN	Piaggio spare parts (POP)
E200280002	Split pin	Piaggio spare parts (POP)
12761	SPLIT PIN	Piaggio spare parts (POP)
567920	SPLIT PIN	Piaggio spare parts (POP)
12790	SPLIT PIN	Piaggio spare parts (POP)
568737	SPLIT PIN 4 X 25 (821 0425 2 2)	Piaggio spare parts (POP)
B003422	SPLIT PIN 2.5 X 25	Piaggio spare parts (POP)
01B150108	SPLIT PIN 2X10	Piaggio spare parts (POP)
12778	SPLIT PIN 3X20	Piaggio spare parts (POP)
821042522	SPLIT PIN 4 X25 (568737)	Piaggio spare parts (POP)
644281	SPONDA LATERAL	Piaggio spare parts (POP)
920105	Sponge Gasket (O Ring BS III)	Piaggio spare parts (POP)
B002054	SPOT LAMP	Piaggio spare parts (POP)
632873	SPRING	Piaggio spare parts (POP)
E07508215	Spring	Piaggio spare parts (POP)
E283580086	Spring	Piaggio spare parts (POP)
E7105801037	SPRING	Piaggio spare parts (POP)
LG5800223	Spring	Piaggio spare parts (POP)
LG5800224	Spring	Piaggio spare parts (POP)
L5755156	SPRING	Piaggio spare parts (POP)
E5005680046	SPRING	Piaggio spare parts (POP)
E5205801462	SPRING	Piaggio spare parts (POP)
ED41968	Spring	Piaggio spare parts (POP)
E1965755128	SPRING	Piaggio spare parts (POP)
286406	SPRING	Piaggio spare parts (POP)
LG5680141	Spring	Piaggio spare parts (POP)
L5801597	SPRING	Piaggio spare parts (POP)
179929	SPRING	Piaggio spare parts (POP)
127179	SPRING	Piaggio spare parts (POP)
L5695009	SPRING	Piaggio spare parts (POP)
E2925755062	Spring	Piaggio spare parts (POP)
127755013	SPRING	Piaggio spare parts (POP)
LG5800225	Spring	Piaggio spare parts (POP)
L5800175	SPRING	Piaggio spare parts (POP)
E270555007	Spring	Piaggio spare parts (POP)
E6330555008	Spring	Piaggio spare parts (POP)

LG5680142	Spring	Piaggio spare parts (POP)
E500572532	SPRING	Piaggio spare parts (POP)
1A012378	SPRING	Piaggio spare parts (POP)
108785	SPRING	Piaggio spare parts (POP)
1A009090	SPRING	Piaggio spare parts (POP)
659918	SPRING	Piaggio spare parts (POP)
1A006970	SPRING	Piaggio spare parts (POP)
E270565505	Spring	Piaggio spare parts (POP)
E500575549	SPRING	Piaggio spare parts (POP)
AP9100195	Spring	Piaggio spare parts (POP)
AP9100196	Spring	Piaggio spare parts (POP)
178750	SPRING	Piaggio spare parts (POP)
225549	SPRING	Piaggio spare parts (POP)
178808R	SPRING	Piaggio spare parts (POP)
178808	SPRING	Piaggio spare parts (POP)
228307	SPRING	Piaggio spare parts (POP)
245038	SPRING	Piaggio spare parts (POP)
L5801595	SPRING	Piaggio spare parts (POP)
L5801609	SPRING	Piaggio spare parts (POP)
2434614030	SPRING	Piaggio spare parts (POP)
CM013203	SPRING	Piaggio spare parts (POP)
616931	SPRING	Piaggio spare parts (POP)
614419	SPRING	Piaggio spare parts (POP)
03G160823	spring into gear detent	Piaggio spare parts (POP)
03G160814	spring cross gate bias	Piaggio spare parts (POP)
03G160868	spring reverse detent	Piaggio spare parts (POP)
03G160834	spring reverse/5th	Piaggio spare parts (POP)
60565	SPRING WASHER WITH TONGUE	Piaggio spare parts (POP)
E5205655140	SPRING (LOW IDLE SPRING)	Piaggio spare parts (POP)
KD5600038	SPRING ACC. LEVER 15LD	Piaggio spare parts (POP)
E5405725043	SPRING AIR BUFFLE	Piaggio spare parts (POP)
E87008219	SPRING ARM	Piaggio spare parts (POP)
660906	SPRING BAND HOSE CLAMP	Piaggio spare parts (POP)
B075707	SPRING BAND HOSE CLAMP (DIA 10)	Piaggio spare parts (POP)
B041798	SPRING BAND HOSE CLAMP DIA 8.6	Piaggio spare parts (POP)
B041852	SPRING BAND HOSE CLIP (DIA. 9.4)	Piaggio spare parts (POP)
KD3630113	SPRING CLAMP D.10,4-11	Piaggio spare parts (POP)
129015015	SPRING CLIP	Piaggio spare parts (POP)
1A019392	SPRING CLUTCH	Piaggio spare parts (POP)
127185012	SPRING -CLUTCH COVER	Piaggio spare parts (POP)
120163015	SPRING CLUTCH RETURN	Piaggio spare parts (POP)
L7980088	SPRING CUP IDLING SPEED	Piaggio spare parts (POP)
L7701227	SPRING CUPWASHER	Piaggio spare parts (POP)
1410501000	SPRING DISK	Piaggio spare parts (POP)
E50000901	SPRING DOWEL	Piaggio spare parts (POP)
B043317	Spring drive rubber	Piaggio spare parts (POP)
E87008218	SPRING EXCESS FUEL	Piaggio spare parts (POP)

E50008201	SPRING EXCESS FUEL	Piaggio spare parts (POP)
658810	SPRING FIXING ON RIM HEADLIGHT	Piaggio spare parts (POP)
ED41886	Spring for excess fuel lever.	Piaggio spare parts (POP)
L5801596	SPRING FOR IDLING	Piaggio spare parts (POP)
L5600050	SPRING FOR LEVEL OF MAXIMUM	Piaggio spare parts (POP)
108356	SPRING FOR LOCK	Piaggio spare parts (POP)
L5695010	SPRING FOR NEUTRAL POSITION	Piaggio spare parts (POP)
485655	SPRING FOR OIL PRESSURE VALVE	Piaggio spare parts (POP)
L5801593	SPRING FOR OIL REGULATION VAL	Piaggio spare parts (POP)
119735	SPRING FOR PROTECTORS	Piaggio spare parts (POP)
115531	SPRING FOR R.H. LOCK	Piaggio spare parts (POP)
L5600043	SPRING FOR STOP LEVER	Piaggio spare parts (POP)
105010	SPRING FOR WEDGE	Piaggio spare parts (POP)
925506	SPRING FRT (P 7530871)	Piaggio spare parts (POP)
126003011	SPRING GEAR SHIFTER ASSLY	Piaggio spare parts (POP)
925772	SPRING GUIDE(R-81015-620)	Piaggio spare parts (POP)
925723	SPRING GUIDE(R-8105-620)	Piaggio spare parts (POP)
932212	SPRING GUIDE(R-8106-VI-500)Paxx200	Piaggio spare parts (POP)
B006853	SPRING HANDLE BAR	Piaggio spare parts (POP)
B073257	SPRING KIT - D220 REAR BRAKE	Piaggio spare parts (POP)
3414603002	SPRING LOCK WASHER	Piaggio spare parts (POP)
2918740007	SPRING LOCK WASHER; FOR M8	Piaggio spare parts (POP)
L5801598	SPRING MAX	Piaggio spare parts (POP)
E40015172	SPRING MINIMAX ASSY	Piaggio spare parts (POP)
8588	SPRING PIN	Piaggio spare parts (POP)
L8430119	SPRING PIN	Piaggio spare parts (POP)
L8430118	SPRING PIN	Piaggio spare parts (POP)
B011486	SPRING PIN	Piaggio spare parts (POP)
B011484	SPRING PIN	Piaggio spare parts (POP)
03G160731	spring pin shift fork	Piaggio spare parts (POP)
17702	SPRING PIN (120309011)	Piaggio spare parts (POP)
8808	SPRING PIN 2.5X14	Piaggio spare parts (POP)
822051647	SPRING PIN 5 X16	Piaggio spare parts (POP)
17701	SPRING PIN 6X 50	Piaggio spare parts (POP)
8847	SPRING PIN 6X24	Piaggio spare parts (POP)
B006882	SPRING PLATE	Piaggio spare parts (POP)
E40006450	SPRING PLATE	Piaggio spare parts (POP)
8080	SPRING PLATE	Piaggio spare parts (POP)
CM017409	SPRING PLATE	Piaggio spare parts (POP)
248419	SPRING PLATE	Piaggio spare parts (POP)
254485	SPRING PLATE (M6)	Piaggio spare parts (POP)
2410122016	SPRING PLATE LOWER	Piaggio spare parts (POP)
A01G140003	Spring pressure relief Valve	Piaggio spare parts (POP)
ESP650DFP005	SPRING RETAINER	Piaggio spare parts (POP)
E87007421	SPRING RETAINER	Piaggio spare parts (POP)
LG7980077	SPRING RETAINER	Piaggio spare parts (POP)
KD7980077	SPRING RETAINER	Piaggio spare parts (POP)

E87007420	SPRING RETAINER	Piaggio spare parts (POP)
E500641040	SPRING RETAINER PLATE BOTTOM	Piaggio spare parts (POP)
E500640030	SPRING RETAINER TOP	Piaggio spare parts (POP)
B041162	SPRING REVERSE RATAIN	Piaggio spare parts (POP)
137026	SPRING RING	Piaggio spare parts (POP)
L1175064	SPRING RING	Piaggio spare parts (POP)
1004601016	SPRING RING	Piaggio spare parts (POP)
L1175063	SPRING RING	Piaggio spare parts (POP)
L1175075	SPRING RING	Piaggio spare parts (POP)
L1175078	SPRING RING	Piaggio spare parts (POP)
L1175079	SPRING RING	Piaggio spare parts (POP)
6652	SPRING RING (52x56,2x2)	Piaggio spare parts (POP)
6647	SPRING RING 47x50.5x1.75	Piaggio spare parts (POP)
KD5755128	SPRING ROCK ARM COVER	Piaggio spare parts (POP)
L1862155	SPRING SEAT	Piaggio spare parts (POP)
L1862164	SPRING SEAT	Piaggio spare parts (POP)
03G160850	spring seat bias	Piaggio spare parts (POP)
03G160851	spring seat bias reverse/5th	Piaggio spare parts (POP)
03G160837	spring seat into gear detent	Piaggio spare parts (POP)
03G160833	spring seat reverse detent	Piaggio spare parts (POP)
03G160809	spring seat upper	Piaggio spare parts (POP)
KD5600039	SPRING STOP LEVER 15LD	Piaggio spare parts (POP)
E500568044	SPRING STOP LEVER RETURN	Piaggio spare parts (POP)
116088	SPRING SUPPORTING JAWS	Piaggio spare parts (POP)
1E002772	Spring torsion	Piaggio spare parts (POP)
E26756503	SPRING WASHER	Piaggio spare parts (POP)
E250755504	SPRING WASHER	Piaggio spare parts (POP)
E1756507	SPRING WASHER	Piaggio spare parts (POP)
L7701238	SPRING WASHER	Piaggio spare parts (POP)
LG7565069	Spring Washer	Piaggio spare parts (POP)
L7701221	SPRING WASHER	Piaggio spare parts (POP)
L7701222	SPRING WASHER	Piaggio spare parts (POP)
L7701225	SPRING WASHER	Piaggio spare parts (POP)
L7701223	SPRING WASHER	Piaggio spare parts (POP)
78307	SPRING WASHER	Piaggio spare parts (POP)
436695	SPRING WASHER	Piaggio spare parts (POP)
E50005625006	SPRING WASHER	Piaggio spare parts (POP)
2918740005	SPRING WASHER	Piaggio spare parts (POP)
343658	SPRING WASHER	Piaggio spare parts (POP)
658259	SPRING WASHER (M 12)	Piaggio spare parts (POP)
940212	Spring Washer (SM-AR-172)	Piaggio spare parts (POP)
LG5715099	SPRING WASHER 20X10,2X1,5	Piaggio spare parts (POP)
KD7565007	SPRING WASHER D14.2/8.2 1.6 TH	Piaggio spare parts (POP)
KD7701223	SPRING WASHER D8.15/14.85 2.2	Piaggio spare parts (POP)
929941	Spring Washer for M6-K-0101-08-030	Piaggio spare parts (POP)
ESK5700	SPRING WASHER FOR PULSOR COIL	Piaggio spare parts (POP)
16410	SPRING WASHER M10	Piaggio spare parts (POP)

809001047	SPRING WASHER M10	Piaggio spare parts (POP)
809001243	SPRING WASHER M12	Piaggio spare parts (POP)
16404	SPRING WASHER M4	Piaggio spare parts (POP)
568721	SPRING WASHER M4	Piaggio spare parts (POP)
809000548	SPRING WASHER M5	Piaggio spare parts (POP)
16405	SPRING WASHER M5	Piaggio spare parts (POP)
16406	SPRING WASHER M6	Piaggio spare parts (POP)
12536	SPRING WASHER M6	Piaggio spare parts (POP)
16408	SPRING WASHER M8	Piaggio spare parts (POP)
12540	SPRING WASHER M8	Piaggio spare parts (POP)
940187	Spring Washer(K-0101-08-030)	Piaggio spare parts (POP)
932264	Spring (R-8106-160) Paxx 200 LPG	Piaggio spare parts (POP)
932236	SPRING(K-0102-02-VII-160)Paxx200	Piaggio spare parts (POP)
925780	SPRING(R-8104-230)	Piaggio spare parts (POP)
932216	SPRING(R-8110-IV-240)Paxx200	Piaggio spare parts (POP)
932213	SPRING(R-8110-V-140)Paxx200	Piaggio spare parts (POP)
D9004501455	SPRING, COMPRESSION	Piaggio spare parts (POP)
662445	SPRING, FRONT SUSPENSION	Piaggio spare parts (POP)
614055	SPRING, SHIFT LEVER RETURN.	Piaggio spare parts (POP)
D9004508281	SPRING, TORSION	Piaggio spare parts (POP)
D9004508350	SPRING, TORSION	Piaggio spare parts (POP)
D9004508351	SPRING, TORSION	Piaggio spare parts (POP)
632745	SPRING,TORSIO	Piaggio spare parts (POP)
E1414613002	SPRING-DELIVERY VALVE	Piaggio spare parts (POP)
E5005801462	SPRING-EXCESS FUEL	Piaggio spare parts (POP)
929935	Spring-K-0101-04-080	Piaggio spare parts (POP)
E87008220C	SPRINGOIL RELIEF	Piaggio spare parts (POP)
569150	SPRING-STEERING LOCK (MODIFIED)	Piaggio spare parts (POP)
03G160332	SPRING-SYNCHRONISER DETENT	Piaggio spare parts (POP)
882197	SPROCKET	Piaggio spare parts (POP)
L6480074	SPROCKET FOR TIMING BELT	Piaggio spare parts (POP)
925776	SRV. SUB ASSLY.(R-8104-13)	Piaggio spare parts (POP)
658186	STABILIZER BAR ASSY, FR	Piaggio spare parts (POP)
B002102	STABILIZER BAR, ASSY (APE MINI)	Piaggio spare parts (POP)
652233	STABILIZER TIE ROD	Piaggio spare parts (POP)
893751	Staffe batteria (Parts for 5 RSV4)	Piaggio spare parts (POP)
668686	STAND SPRING HOOKING PIN	Piaggio spare parts (POP)
E87018052	STAP WATER PIPE	Piaggio spare parts (POP)
E203754004	Star Washer	Piaggio spare parts (POP)
6A000216	starp, cylinder mtg	Piaggio spare parts (POP)
KD6961120	START PULLEY	Piaggio spare parts (POP)
LG6961122	START PULLEY LGA280/340 INDIA	Piaggio spare parts (POP)
LG5840237	START. MOTOR. 260 24 561	Piaggio spare parts (POP)
B011745	STARTER MOTOR	Piaggio spare parts (POP)
1107024	STARTER ASSLY 1.1 KW	Piaggio spare parts (POP)
SM26024561	Starter assy	Piaggio spare parts (POP)
632646	STARTER CABLE GROUP	Piaggio spare parts (POP)

567484	STARTER CABLE GROUP	Piaggio spare parts (POP)
1A012686	Starter Cover	Piaggio spare parts (POP)
B015888	Starter cover	Piaggio spare parts (POP)
1A006751	STARTER COVER	Piaggio spare parts (POP)
B015942	STARTER COVER GASKET	Piaggio spare parts (POP)
1A006858	Starter cover gasket	Piaggio spare parts (POP)
SP1A007045	STARTER COVER WITH I.P. - SPD	Piaggio spare parts (POP)
SP1A012685	Starter Cover with I.P. _SPD	Piaggio spare parts (POP)
LG4126125	Starter Jet No.60	Piaggio spare parts (POP)
KD58402668	STARTER MOT.1.1KW 15LD44	Piaggio spare parts (POP)
E50005413	STARTER MOTOR	Piaggio spare parts (POP)
E87005425	STARTER MOTOR	Piaggio spare parts (POP)
B012153	Starter Motor	Piaggio spare parts (POP)
E2725840142	STARTER MOTOR	Piaggio spare parts (POP)
F002G20318	STARTER MOTOR	Piaggio spare parts (POP)
E40015406	Starter motor – 1 kw (Lucas)	Piaggio spare parts (POP)
B074084	STARTER MOTOR - 1.4Kw (LUCAS)	Piaggio spare parts (POP)
F002G20868	Starter Motor (ape mini)	Piaggio spare parts (POP)
E40005420	STARTER MOTOR 0.7 KW	Piaggio spare parts (POP)
E40005419	STARTER MOTOR 07. KW	Piaggio spare parts (POP)
L5840210	STARTER MOTOR 12V 1.1 KW MICO	Piaggio spare parts (POP)
82697R	STARTER MOTOR ASSY	Piaggio spare parts (POP)
F000CD0301	Starter motor assy12V Greaves CDS	Piaggio spare parts (POP)
E10G140001	STARTER MOTOR CF60 BSIV	Piaggio spare parts (POP)
925715	STARTER MOTOR KIT FOR 1.0 TON.	Piaggio spare parts (POP)
E40001797	STARTER MOUNTING PLATE	Piaggio spare parts (POP)
E40001773	STARTER PLATE	Piaggio spare parts (POP)
ED11510	Starter plate	Piaggio spare parts (POP)
E270905503	STARTER PLUG	Piaggio spare parts (POP)
895481	Starter relay	Piaggio spare parts (POP)
888274	STARTER RING GEAR	Piaggio spare parts (POP)
KD4055045	STARTER ROPE	Piaggio spare parts (POP)
B024686	STARTER SAFETY RELAY (PAX 200)	Piaggio spare parts (POP)
661436	STARTER SAFETY SWITCH	Piaggio spare parts (POP)
B076115	STARTER SAFETY SWITCH ASSLY.	Piaggio spare parts (POP)
B002101	STARTER SAFETY SWITCH ASSLY.	Piaggio spare parts (POP)
6D001161	STARTER SOLENOID, PIGTAIL	Piaggio spare parts (POP)
LG9700170	Starter Valve Assembly	Piaggio spare parts (POP)
B024741	STARTER/IGN SWITCH ASSLY WITH KEY	Piaggio spare parts (POP)
B024740	STARTER/IGN SWITCH ASSLY WITH KEYCNG/LPG	Piaggio spare parts (POP)
B024739	STARTER/IGN SWITCH ASSLYWITH KEY PLASTIC	Piaggio spare parts (POP)
1D000425R	STARTING MOTOR	Piaggio spare parts (POP)
642264	STARTING MOTOR	Piaggio spare parts (POP)
E43507655	Starting Pully	Piaggio spare parts (POP)
E500405518	STARTING ROPE	Piaggio spare parts (POP)
192020017	STARTING ROPE	Piaggio spare parts (POP)
E50007626	STARTINGPULLEY	Piaggio spare parts (POP)

E07515402	STARTOR MOTOR	Piaggio spare parts (POP)
1197013	STARTOR MOTOR	Piaggio spare parts (POP)
F002G20252	STARTOR MOTOR	Piaggio spare parts (POP)
A01G140002	STARTOR MOTOR (0001.198.012-6YE)	Piaggio spare parts (POP)
F002G70111	STARTOR MOTOR (PORTOR 1000)	Piaggio spare parts (POP)
F002G20986	STARTOR MOTOR (PORTOR 600)	Piaggio spare parts (POP)
1005001342	STATOR	Piaggio spare parts (POP)
L8565099	STATOR	Piaggio spare parts (POP)
ED42188	STATOR	Piaggio spare parts (POP)
E10G030001	STATOR - BSIV	Piaggio spare parts (POP)
L8900592	STATOR & MOTOR SUPPORT	Piaggio spare parts (POP)
ED23732	STATOR (LPG/CNG)	Piaggio spare parts (POP)
KD85651148	STATOR 19A 2WIRES INEL 15LD441	Piaggio spare parts (POP)
E40015456	STATOR ASSEMBLY	Piaggio spare parts (POP)
680075	STATOR ASSY	Piaggio spare parts (POP)
E40005497	STATOR ASSY WITH PICK UP COIL	Piaggio spare parts (POP)
F002G20513	STATOR FRAME	Piaggio spare parts (POP)
F002G20784	Stator Frame with brush holder	Piaggio spare parts (POP)
SST96030	Stator support plt Oil Seal Press dolley	Piaggio spare parts (POP)
652011	STAY STEERING COLUMN UPPER	Piaggio spare parts (POP)
D5532687202	STAY, STEERING COLUMN, UP	Piaggio spare parts (POP)
6C000034	STAY, STEERING COLUMN, UPR	Piaggio spare parts (POP)
KD5201286	STD GOVERNOR LEVEL 15LD225-400	Piaggio spare parts (POP)
KD8026275	STD OIL RING OD.86,00	Piaggio spare parts (POP)
SST94064	STEAMSEAL PRESSING TOOL	Piaggio spare parts (POP)
B042582	STEEL BALL 6MM	Piaggio spare parts (POP)
925724	STEEL BALL(V-5404-050)	Piaggio spare parts (POP)
6C000555	STEEL INSERT NUT (M14X1.5)	Piaggio spare parts (POP)
925759	STEEL TUBE WITH PVC SHILDING(K-0122-01-0	Piaggio spare parts (POP)
E1965140021	STEEL WASHER	Piaggio spare parts (POP)
567720	STEER.COMUMN	Piaggio spare parts (POP)
660757	STEERING ARM CENTER BALL BEARING PRESSIN	Piaggio spare parts (POP)
660760	STEERING ARM CENTER NEEDLE BRG. PULLER	Piaggio spare parts (POP)
660754	STEERING ARM CENTER NUT TIGHTENING TOOL	Piaggio spare parts (POP)
B002707	STEERING BRACKET AND TUBE ASSLY.	Piaggio spare parts (POP)
B073462	STEERING COLUM WITH I.P.	Piaggio spare parts (POP)
660153	STEERING COLUM WITH I.P.	Piaggio spare parts (POP)
B008116	STEERING COLUM WITH I.P.	Piaggio spare parts (POP)
660498SP	STEERING COLUMN ASSLY (NRB) -501 REG SPD	Piaggio spare parts (POP)
B076873SP	STEERING COLUMN ASSLY (NRB) -501 STD SPD	Piaggio spare parts (POP)
B008177SP	STEERING COLUMN ASSLY (NRB)- APE PAX-SPD	Piaggio spare parts (POP)
B076876SP	STEERING COLUMN ASSLY (NRB)-APE CITY STD	Piaggio spare parts (POP)
B001376SP	STEERING COLUMN ASSLY (NRB)-APE CITY-SPD	Piaggio spare parts (POP)
B041722SP	STEERING COLUMN ASSLY (NRB)-EUROCITY SPD	Piaggio spare parts (POP)
B073667SP	STEERING COLUMN ASSLY (NRB)-PAX UPGR SPD	Piaggio spare parts (POP)
B076872SP	STEERING COLUMN ASSLY COMPL -501 STD SPD	Piaggio spare parts (POP)
659883SP	STEERING COLUMN ASSLY COMPL.501 LD -SPD	Piaggio spare parts (POP)

660499SP	STEERING COLUMN ASSLY COMPL.501 REG -SPD	Piaggio spare parts (POP)
B001375SP	STEERING COLUMN ASSLY COMPL-APE CITY-SPD	Piaggio spare parts (POP)
B008170SP	STEERING COLUMN ASSLY COMPL-APE PAX-SPD	Piaggio spare parts (POP)
B078679SP	STEERING COLUMN ASSLY COMPL-PAX UPGR SPD	Piaggio spare parts (POP)
B076865	STEERING COLUMN ASSY (APE CITY DSL BSIV)	Piaggio spare parts (POP)
6C000475SP	STEERING COLUMN COMP WITH SUSP.ARM STD	Piaggio spare parts (POP)
B001376	STEERING COLUMN COMP. WITH SUSP ARM(NRB)	Piaggio spare parts (POP)
605348	STEERING COLUMN COVER	Piaggio spare parts (POP)
6B003028	STEERING COLUMN COVER(PALE BROWN)	Piaggio spare parts (POP)
441045	STEERING COLUMN LOCK NUT TIGHTING TOOL	Piaggio spare parts (POP)
B075694	STEERING COLUMN TUBE -IP (UPG PAXX BSIV)	Piaggio spare parts (POP)
B075682	STEERING COLUMN TUBE WITH I.P. (PAXX BS3	Piaggio spare parts (POP)
B076920	STEERING COLUMN TUBE WITH IP (EUROPA E4)	Piaggio spare parts (POP)
B076986	STEERING COLUMN WITH I.P (CLASSIS EURO4)	Piaggio spare parts (POP)
B076859	STEERING COLUMN WITH I.P. (501 STD)	Piaggio spare parts (POP)
B075692	STEERING COLUMN WITH I.P. (501)	Piaggio spare parts (POP)
B006685	STEERING COLUMN WITH IP (APE CITY)	Piaggio spare parts (POP)
6C000465SP	STEERING COLUMN WITH SUSP ARM	Piaggio spare parts (POP)
B008177	STEERING COLUMN WITH SUSP ARM PAX (NRB)	Piaggio spare parts (POP)
660498	STEERING COLUMN.COMPLETE WITH SUSP.ARM	Piaggio spare parts (POP)
KIT95022R	STEERING CONE SET (LOWER)	Piaggio spare parts (POP)
KIT95022	STEERING CONE SET (LOWER)	Piaggio spare parts (POP)
KIT95021R	STEERING CONE SET (UPPER)	Piaggio spare parts (POP)
KIT95021	STEERING CONE SET (UPPER)	Piaggio spare parts (POP)
B001903	STEERING CONTROL ASSEMBLY	Piaggio spare parts (POP)
645043R	STEERING GEAR ASSY	Piaggio spare parts (POP)
B001878	STEERING GEAR BOX	Piaggio spare parts (POP)
660761	STEERING KNUCKLE BALL BEARING PULLER	Piaggio spare parts (POP)
660753	STEERING KNUCKLE BEARING PUNCH	Piaggio spare parts (POP)
660762	STEERING KNUCKLE HUB NEEDLE ROLLER BEARI	Piaggio spare parts (POP)
660758	STEERING KNUCKLE NRB PRESSING TOOL	Piaggio spare parts (POP)
B002310	STEERING LINK RH	Piaggio spare parts (POP)
B002178	STEERING LINK LH	Piaggio spare parts (POP)
567734	STEERING LOCK	Piaggio spare parts (POP)
661230	STEERING LOCK HOUSING	Piaggio spare parts (POP)
B001561	STEERING LOCK WITH KEY (NEW)	Piaggio spare parts (POP)
644997	STEERING POST ASSY.	Piaggio spare parts (POP)
B003028	STEERING POST-COVER	Piaggio spare parts (POP)
652234	STEERING TUBE ARM	Piaggio spare parts (POP)
661829	STEERING TUBE ASSLY	Piaggio spare parts (POP)
645149	STEERING TUBE ASSLY	Piaggio spare parts (POP)
602436	STEERING TUBE ASSY	Piaggio spare parts (POP)
B075882	Steering Wheel	Piaggio spare parts (POP)
632648	STEERING WHEEL (DIA. 325) ASSLY.	Piaggio spare parts (POP)
660756	STEERING WHEEL PULLER	Piaggio spare parts (POP)
661720	STEERING WHEEL SHAFT ASSEMBLY	Piaggio spare parts (POP)
567710	STEERING WHEEL SHAFT ASSLY	Piaggio spare parts (POP)

1A001916	STEM	Piaggio spare parts (POP)
1A001786	STEM	Piaggio spare parts (POP)
1A007850	STEM	Piaggio spare parts (POP)
1A010007	STEM	Piaggio spare parts (POP)
1A006687	STEM	Piaggio spare parts (POP)
1A016826	STEM	Piaggio spare parts (POP)
1A012181	STEM	Piaggio spare parts (POP)
123021012	STEM GEAR OPERATING	Piaggio spare parts (POP)
523021018	STEM GEAR OPERATING	Piaggio spare parts (POP)
1A013330	STEM GEAR OPERATING	Piaggio spare parts (POP)
B002136	STEM- GEAR OPERATING	Piaggio spare parts (POP)
123022016	STEM GUIDE (GEAR OPERATING)	Piaggio spare parts (POP)
E50006342	STEM SEAL	Piaggio spare parts (POP)
ED41440	STEM SEAL INLET	Piaggio spare parts (POP)
SST94196	Stemseal press. tool for CH I/T,Val.Guid	Piaggio spare parts (POP)
1A014959	STEPPER ENGINE KIT	Piaggio spare parts (POP)
B024732	STG LOCK ASSLY WITH KEY	Piaggio spare parts (POP)
940014	Stg. column Assembly (truk plus)	Piaggio spare parts (POP)
940122	STG. LOCK ASSLY. WITH KEY	Piaggio spare parts (POP)
632684	STICHER FUSE	Piaggio spare parts (POP)
B075364	STICKER - ON OFF VALVE	Piaggio spare parts (POP)
B075362	STICKER - REFILLING VALVE	Piaggio spare parts (POP)
B006771	STICKER - WINDSHIELD BOTTOM	Piaggio spare parts (POP)
B006454	STICKER (BS III) - FOR TAILGATE	Piaggio spare parts (POP)
661449	STICKER (MARK I) - APE TRUK FOR TAILGATE	Piaggio spare parts (POP)
632433	STICKER- AIR FILTER	Piaggio spare parts (POP)
B074509	STICKER -APE AUTO D 5 S	Piaggio spare parts (POP)
6B000131	STICKER APE AUTO DXL	Piaggio spare parts (POP)
6B000377	STICKER APE CITY XTRA (FRONT PANEL)	Piaggio spare parts (POP)
B075746	STICKER APE ROMANZA	Piaggio spare parts (POP)
661523	STICKER APE TRUK FOR TAILGATE (YELLOW)	Piaggio spare parts (POP)
B073220	STICKER BSIV FOR IDENTIFICATION	Piaggio spare parts (POP)
B041520	STICKER- CRDS	Piaggio spare parts (POP)
B024192	STICKER FOR "PIAGGIO" LOGO.(VE)	Piaggio spare parts (POP)
632138	STICKER FOR CHOKE INSTRUCTION	Piaggio spare parts (POP)
B041583	STICKER FOR CNG	Piaggio spare parts (POP)
B042046	STICKER FOR DIESEL	Piaggio spare parts (POP)
B041584	STICKER FOR LPG	Piaggio spare parts (POP)
661695	STICKER FOR PIAGGIO LOGO.	Piaggio spare parts (POP)
B006291	STICKER- FUSES PROTECTION	Piaggio spare parts (POP)
6H000146	STICKER FX	Piaggio spare parts (POP)
6H000159	STICKER FX	Piaggio spare parts (POP)
6A000622	STICKER LPG	Piaggio spare parts (POP)
660793	STICKER ON LOAD BODY XTRA LD	Piaggio spare parts (POP)
B076800	STICKER- PIAGGIO	Piaggio spare parts (POP)
B041516	STICKER- PIAGGIO	Piaggio spare parts (POP)
661522	STICKER PIAGGIO LOGO (YELLOW)	Piaggio spare parts (POP)

B041500	STICKER- PORTER 1000	Piaggio spare parts (POP)
B041514	STICKER- PORTER 600	Piaggio spare parts (POP)
B075988	STICKER- PORTER 700	Piaggio spare parts (POP)
B003101	STICKER -RUNNING IN INSTRUCTION APE CITY	Piaggio spare parts (POP)
632685	STICKER RUNNING INSTRUCTI	Piaggio spare parts (POP)
B077141	STICKER VEHICLE START INSTRUCTIONS	Piaggio spare parts (POP)
643850	STICKER(VANAZ PT NO K-0101-15)	Piaggio spare parts (POP)
643882	STICKER(VANAZ PT NO K-0401-13)	Piaggio spare parts (POP)
B003211	STICKER-APE MINI FOR FRONT PANEL.	Piaggio spare parts (POP)
B003206	STICKER-APE MINI FOR FR. DOOR LH (White	Piaggio spare parts (POP)
B009292	STICKER-APE MINI FOR FR. DOOR LH (Black)	Piaggio spare parts (POP)
B009291	STICKER-APE MINI FOR FR. DOOR RH (Black)	Piaggio spare parts (POP)
B003207	STICKER-APE MINI FOR FR. DOOR RH (White)	Piaggio spare parts (POP)
661731	STICKER-APE TRUK FOR FRONT PANEL.	Piaggio spare parts (POP)
661697	STICKER-APE TRUK FOR FR. DOOR LH	Piaggio spare parts (POP)
661470	STICKER-APE TRUK FOR FR. DOOR LH (WHITE)	Piaggio spare parts (POP)
661696	STICKER-APE TRUK FOR FR. DOOR RH	Piaggio spare parts (POP)
661471	STICKER-APE TRUK FOR FR. DOOR RH (WHITE)	Piaggio spare parts (POP)
661698	STICKER-APE TRUK FOR TAIL GATE	Piaggio spare parts (POP)
B001757	STICKER-APE TRUK PLUS FOR FRONT & TAIL	Piaggio spare parts (POP)
B002157	STICKER-APE TRUK PLUS FR DOOR LH (BLUE)	Piaggio spare parts (POP)
B002155	STICKER-APE TRUK PLUS FR DOOR LH (WHITE)	Piaggio spare parts (POP)
B002156	STICKER-APE TRUK PLUS FR DOOR LH (YELLOW	Piaggio spare parts (POP)
B002160	STICKER-APE TRUK PLUS FR DOOR RH (BLUE)	Piaggio spare parts (POP)
B002158	STICKER-APE TRUK PLUS FR DOOR RH (WHITE)	Piaggio spare parts (POP)
B002159	STICKER-APE TRUK PLUS FR DOOR RH (YELLOW	Piaggio spare parts (POP)
B001755	STICKER-APE TRUK PLUS FR. DOOR LH	Piaggio spare parts (POP)
B001756	STICKER-APE TRUK PLUS FR. DOOR RH	Piaggio spare parts (POP)
567750	STICKER-NON POLLUTING LAW	Piaggio spare parts (POP)
660801	STICKER-PIAGGIO LOGO-TAIL GATE	Piaggio spare parts (POP)
B041578	STICKER-PORTER	Piaggio spare parts (POP)
6B000977	STICKER-PORTER 700 VX	Piaggio spare parts (POP)
652172	STIFFENING PLATE-DASHBOARD(GEAR SELECTOR	Piaggio spare parts (POP)
117273	STILL	Piaggio spare parts (POP)
569697	STIRRUP	Piaggio spare parts (POP)
613330	STIRRUP	Piaggio spare parts (POP)
568148	STOP BELT FOR DOOR	Piaggio spare parts (POP)
568148R	STOP BELT FOR DOOR	Piaggio spare parts (POP)
632287	STOP BELT OF DOOR	Piaggio spare parts (POP)
B074173	STOP BELT OF THE DOOR	Piaggio spare parts (POP)
B003557	STOP BELT OF THE DOOR	Piaggio spare parts (POP)
662343	STOP CABLE 'QI 870'	Piaggio spare parts (POP)
CM013202	STOP CABLE/PIPE SPRING	Piaggio spare parts (POP)
KD2750526	STOP CONTROL COVER ASSY.	Piaggio spare parts (POP)
602331	STOP ENGINE CONTROL CABLE ASSLY (PASS)	Piaggio spare parts (POP)
632354	STOP ENGINE CONTROL CABLE ASSLY CARGO (L	Piaggio spare parts (POP)
E87015126	STOP LEVER	Piaggio spare parts (POP)

E870051127	STOP LEVER ASSY INTERNAL	Piaggio spare parts (POP)
KD5202331	Stop lever external	Piaggio spare parts (POP)
E500520260	STOP LEVER INTERNAL	Piaggio spare parts (POP)
F002G21509	STOP RING	Piaggio spare parts (POP)
B016394	STOP SCREW AND SPRING	Piaggio spare parts (POP)
1A010102	STOP SCREW AND SPRING	Piaggio spare parts (POP)
L1755094	STOP SCREW M 5X20	Piaggio spare parts (POP)
L1755091	STOP SCREW M 5X20	Piaggio spare parts (POP)
616507	STOP SWITCH SUPPORT	Piaggio spare parts (POP)
SM26254728	Stop Washer	Piaggio spare parts (POP)
B001887	STOPPER ASSLY	Piaggio spare parts (POP)
604690	STOPPER ASSLY LH	Piaggio spare parts (POP)
604689	STOPPER ASSLY RH	Piaggio spare parts (POP)
D3358687Z01	STOPPER CONT.SHIFT LEVER	Piaggio spare parts (POP)
B023967	STOPPER FOR GEAR SHIFTER	Piaggio spare parts (POP)
B073793	STOPPER PLATE	Piaggio spare parts (POP)
128306015	STOPPER PLATE R.C.LEVER	Piaggio spare parts (POP)
B006632	STOPPER THK=1.0	Piaggio spare parts (POP)
132244	STOPPER THK=1.0	Piaggio spare parts (POP)
616942	STORAGE COMPARTMENT	Piaggio spare parts (POP)
616943	STORAGE COMPARTMENT COVER	Piaggio spare parts (POP)
605394	STORAGE COMPARTMENT COVER	Piaggio spare parts (POP)
605002	STOREGE COMPARTMENT	Piaggio spare parts (POP)
1413100021	STRAIGHT PIN	Piaggio spare parts (POP)
6C000047	STRAP	Piaggio spare parts (POP)
E87016041	STRAP DIPSTICK	Piaggio spare parts (POP)
6A001216	STRAP ASSEMBLY, 20L CYLINDER	Piaggio spare parts (POP)
6A001217	STRAP ASSEMBLY, 20L CYLINDER	Piaggio spare parts (POP)
632415	STRAP ASSLY	Piaggio spare parts (POP)
B009290	STRAP ASSLY	Piaggio spare parts (POP)
B075621	STRAP ASSLY (CNG)	Piaggio spare parts (POP)
B075622	STRAP ASSLY (LPG)	Piaggio spare parts (POP)
632183	STRAP ASSLY (LPG)	Piaggio spare parts (POP)
B073823	STRAP ASSLY APE CITY CARGO LPG	Piaggio spare parts (POP)
604958	STRAP ASSLY.	Piaggio spare parts (POP)
569177	STRAP ASSLY.(366000)	Piaggio spare parts (POP)
B002208	STRAP WITH PIN SPARE WHEEL MTG	Piaggio spare parts (POP)
6A001632	STRAP, BATTERY DOCK	Piaggio spare parts (POP)
6B001517	STRIKER ASSLY	Piaggio spare parts (POP)
929933	String-K-0101-04-030	Piaggio spare parts (POP)
B023945	STRIP (60X16X1) WINDSHIELD & DOME	Piaggio spare parts (POP)
L6275188	STRIP FIXING FOR SECURING STATOR	Piaggio spare parts (POP)
6C000224	STRIPE	Piaggio spare parts (POP)
B003008	STRUT	Piaggio spare parts (POP)
B003012	STRUT	Piaggio spare parts (POP)
B076221	STRUT BAR BKT ASSLY LH	Piaggio spare parts (POP)
B076220	STRUT BAR BKT ASSLY RH	Piaggio spare parts (POP)

B042698	Strut Bracket Flexible Hose	Piaggio spare parts (POP)
B003002	STRUT SPRING LH	Piaggio spare parts (POP)
B003011	STRUT SPRING RH	Piaggio spare parts (POP)
ESP650DLB010	STUB PIPE Ø11	Piaggio spare parts (POP)
ESP650DLB009	STUB PIPEØ8	Piaggio spare parts (POP)
E40000548	STUD	Piaggio spare parts (POP)
E53000541	STUD	Piaggio spare parts (POP)
ESK4336	STUD	Piaggio spare parts (POP)
E500676035	STUD	Piaggio spare parts (POP)
E53000542	STUD	Piaggio spare parts (POP)
L6780181	STUD	Piaggio spare parts (POP)
B010577	STUD	Piaggio spare parts (POP)
889896	STUD	Piaggio spare parts (POP)
889895	STUD	Piaggio spare parts (POP)
ED41208	STUD	Piaggio spare parts (POP)
B010934	STUD	Piaggio spare parts (POP)
1A012402	Stud	Piaggio spare parts (POP)
E87000570	STUD CYLINDER	Piaggio spare parts (POP)
A01B020001	STUD - CYLINDER HEAD	Piaggio spare parts (POP)
01B020001	STUD INJECTOR CLAMP	Piaggio spare parts (POP)
E87000538	STUD (LONG) M8 X	Piaggio spare parts (POP)
B002432	STUD (M8X 55) -MT510	Piaggio spare parts (POP)
920048	Stud (R-8105-650)	Piaggio spare parts (POP)
B017636	Stud bolt	Piaggio spare parts (POP)
01B160110	STUD BOLT	Piaggio spare parts (POP)
LG6760109	STUD BOLT M6X16 UNI 5914	Piaggio spare parts (POP)
LG6760047	STUD BOLT M6X16 UNI 5914	Piaggio spare parts (POP)
ESP650DNB006	STUD C M6x1x70IS:1862-P-10.9	Piaggio spare parts (POP)
E43500539	STUD CYL.HEAD	Piaggio spare parts (POP)
E271685025	Stud cylinder head	Piaggio spare parts (POP)
E07500510	Stud engine feet Alternator Side	Piaggio spare parts (POP)
E07500518	Stud F.W.E M8x1.25x35	Piaggio spare parts (POP)
E07500508	Stud F.W.E M8x1.25x37	Piaggio spare parts (POP)
E271678054	STUD F.W.E. SIDE	Piaggio spare parts (POP)
E87000536	STUD FIP MOUNTING	Piaggio spare parts (POP)
B001323	STUD M10 BRAKE DRUM	Piaggio spare parts (POP)
E7500507	STUD M10 X 1.5X43	Piaggio spare parts (POP)
E03B020001	STUD M10X1.5X 90	Piaggio spare parts (POP)
ESP650DNB025	STUD M10X1.5X15X23	Piaggio spare parts (POP)
E43521732	STUD M6X1 FOR BRACKET EGR SWITCH	Piaggio spare parts (POP)
ESP650DNB005	STUD M6x1X35IS:1862-P10.9	Piaggio spare parts (POP)
KD6760059	STUD M6x25 UNI5914 8G ZN.PL.	Piaggio spare parts (POP)
KD6760119	STUD M6x25 UNI5914 8G ZN.PL.	Piaggio spare parts (POP)
KD6760097	STUD M6X30 UNI5914 CLASS 8.8	Piaggio spare parts (POP)
815064025	STUD M6x40	Piaggio spare parts (POP)
LG6760104	STUD M6x40-5914-8.8+Zn.B	Piaggio spare parts (POP)
B041475	STUD M7 FOR EMC SHAFT MOUNTING	Piaggio spare parts (POP)

E7500508	STUD M8 X 1.25	Piaggio spare parts (POP)
B002431	STUD M8 X30	Piaggio spare parts (POP)
LG6780182	STUD M8-16/4/12 32 LONG	Piaggio spare parts (POP)
E7500509	STUD M8X1.25	Piaggio spare parts (POP)
E07500509	STUD M8X1.25	Piaggio spare parts (POP)
E7500520	STUD M8X1.25X44	Piaggio spare parts (POP)
E07500520	Stud M8x1.25x44	Piaggio spare parts (POP)
LG6780049	STUD M8X20	Piaggio spare parts (POP)
KD6780012	STUD M8X25	Piaggio spare parts (POP)
LG676R003	STUD M8x35-5914-8.8+Zn.B	Piaggio spare parts (POP)
KD676R003	STUD M8x35-5914-8.8+Zn.B	Piaggio spare parts (POP)
KD67802070	STUD M8x35-5914-8.8+Zn.B	Piaggio spare parts (POP)
815084025	STUD M8x40	Piaggio spare parts (POP)
815084520	STUD M8x45	Piaggio spare parts (POP)
L6870036	STUD SCREW	Piaggio spare parts (POP)
L6870035	STUD SCREW	Piaggio spare parts (POP)
B010565	STUD SCREW	Piaggio spare parts (POP)
B010773	STUD SCREW	Piaggio spare parts (POP)
B011250	STUD SCREW	Piaggio spare parts (POP)
889670	STUD SCREW	Piaggio spare parts (POP)
B014755	STUD SCREW	Piaggio spare parts (POP)
KD6800050	STUD SCREW M10X23	Piaggio spare parts (POP)
L6870040	STUD SCREW M6X18	Piaggio spare parts (POP)
L6870039	STUD SCREW M8X40	Piaggio spare parts (POP)
E87000564	STUD(M8)PEDESTAL	Piaggio spare parts (POP)
E40000549	STUD, AIR INTAKE	Piaggio spare parts (POP)
E5406850106	STUD.CYL.HEAD	Piaggio spare parts (POP)
E5406850108	STUD.CYL.HEAD	Piaggio spare parts (POP)
E50000506	STUD.ENGINE FEET	Piaggio spare parts (POP)
E43500540	STUDCYL HEAD ROCKER SHAFT	Piaggio spare parts (POP)
E87000558A	STUDCYLINDERHEAD	Piaggio spare parts (POP)
E40000565	STUDFORPULLEY	Piaggio spare parts (POP)
E87000576	STUDLIFTING HOOK	Piaggio spare parts (POP)
ESP650DNB012	STUD-LUB OIL ADAPTOR	Piaggio spare parts (POP)
E10B120002	STUD-M10X1.5 EXHAUST BSIV	Piaggio spare parts (POP)
ESP650DNB003	STUDM12x1.5	Piaggio spare parts (POP)
ESP650DNB024	STUD-M6x1x37	Piaggio spare parts (POP)
E43500578	Studm8	Piaggio spare parts (POP)
E43500573	STUDM8X1.25X77 (INTAKE SIDE)	Piaggio spare parts (POP)
A01B010009	STUD-WINDOW COVER (M6X1)	Piaggio spare parts (POP)
B003507	SUB ASSLY BRACKET RR FUEL TANK	Piaggio spare parts (POP)
B006364	SUB ASSY SPACER AND V.E. BKT.	Piaggio spare parts (POP)
929932	Subassly of Seat-K-0101-04-03	Piaggio spare parts (POP)
E500174501	SUCTION BULB	Piaggio spare parts (POP)
E50008883	SUCTION BULB ASSY.	Piaggio spare parts (POP)
ED41534	Suction Tube	Piaggio spare parts (POP)
B010941	SUMP PAN ASSY	Piaggio spare parts (POP)

B011190	SUMP PAN ASSY	Piaggio spare parts (POP)
B003034	SUN VISOR	Piaggio spare parts (POP)
B001612	SUN VISOR ASSLY LH	Piaggio spare parts (POP)
B076318	SUN VISOR ASSLY LH CUTOUT	Piaggio spare parts (POP)
B001611	SUN VISOR ASSLY RH	Piaggio spare parts (POP)
B076317	SUN VISOR ASSLY RH CUT OUT	Piaggio spare parts (POP)
6B000536	SUPER POWER CNG STICKER	Piaggio spare parts (POP)
6B000537	SUPER POWER LPG STICKER	Piaggio spare parts (POP)
645917	SUPPORT S/A REAR ENGINE MOUNTING	Piaggio spare parts (POP)
926605	SUPP.FOR ASSLY BRGS.ON GB/COVER	Piaggio spare parts (POP)
B002559	SUPPORT S/A PROTECT. RH - CED	Piaggio spare parts (POP)
E270861520	Support	Piaggio spare parts (POP)
L8900617	SUPPORT	Piaggio spare parts (POP)
644978	SUPPORT - JACK MTG. BRACKET ASSLY.	Piaggio spare parts (POP)
587533	SUPPORT ARM ENGINE RR SUB-ASSLY WITH IP	Piaggio spare parts (POP)
614093	SUPPORT ASSEMBLY PEDAL	Piaggio spare parts (POP)
E07506502	Support bracket	Piaggio spare parts (POP)
B003303	SUPPORT BRACKET FOR NUMBER PLATE ASSY.	Piaggio spare parts (POP)
B006574	SUPPORT BRACKET FOR PEDAL ASSY	Piaggio spare parts (POP)
604804	SUPPORT BRACKET FUEL TANK MOUNTING	Piaggio spare parts (POP)
652552CED	SUPPORT BRACKET S/A CED COATED	Piaggio spare parts (POP)
652552	SUPPORT BRACKET S/A FOR BULKHEAD	Piaggio spare parts (POP)
661602	SUPPORT BRACKET S/A WITH ADD. SUPPORT	Piaggio spare parts (POP)
1A008077	SUPPORT BRACKET STARTER MOTOR CABLE	Piaggio spare parts (POP)
1A011461	SUPPORT BRACKET STARTER MOTOR CABLE	Piaggio spare parts (POP)
644446	SUPPORT DOOR HEAD LAMP LH	Piaggio spare parts (POP)
644447	SUPPORT DOOR HEAD LAMP RH	Piaggio spare parts (POP)
441039	SUPPORT FOR BEARING ON G. B. COVER	Piaggio spare parts (POP)
ED33400	Support for feed pump	Piaggio spare parts (POP)
644030	SUPPORT FUSE BOX S/A	Piaggio spare parts (POP)
B010734	SUPPORT GASKET EGR	Piaggio spare parts (POP)
E40009644	SUPPORT GOVERNOR LEVER	Piaggio spare parts (POP)
602484	SUPPORT HEADLAMP R.H.	Piaggio spare parts (POP)
605450	SUPPORT LAMP PLATE	Piaggio spare parts (POP)
E40020639	SUPPORT OIL COOLER BRACKET	Piaggio spare parts (POP)
KD8836210	SUPPORT OIL PUMP CAP	Piaggio spare parts (POP)
6A000959	SUPPORT PIPE, CNG PROTECTION GUARD	Piaggio spare parts (POP)
604785	SUPPORT PLATE	Piaggio spare parts (POP)
LG8546277	SUPPORT PLATE FOR HEAT E	Piaggio spare parts (POP)
B042791	SUPPORT PLATE S/A FAREMETER	Piaggio spare parts (POP)
568325	SUPPORT PLATE S/A FAREMETER	Piaggio spare parts (POP)
B042989	SUPPORT PROTECTION LH	Piaggio spare parts (POP)
B042990	SUPPORT PROTECTION RH	Piaggio spare parts (POP)
B002842	SUPPORT ROD-SPARE WHEEL CARRIER	Piaggio spare parts (POP)
646301	SUPPORT S/A FR SUSPENSION	Piaggio spare parts (POP)
662355	SUPPORT S/A JACK SET	Piaggio spare parts (POP)
614095	SUPPORT S/A PEDAL(RHD)	Piaggio spare parts (POP)

644704	SUPPORT S/A PROTECTION LH	Piaggio spare parts (POP)
B002558	SUPPORT S/A PROTECTION LH - CED	Piaggio spare parts (POP)
657962	SUPPORT S/A PROTECTION LH-870	Piaggio spare parts (POP)
657962ED	SUPPORT S/A PROTECTION LH-870 CED	Piaggio spare parts (POP)
644705	SUPPORT S/A PROTECTION RH	Piaggio spare parts (POP)
657964	SUPPORT S/A PROTECTION RH-870	Piaggio spare parts (POP)
657964ED	SUPPORT S/A PROTECTION RH-870 CED	Piaggio spare parts (POP)
614995	SUPPORT S/A RR BUMPER	Piaggio spare parts (POP)
B002985	SUPPORT SPARE WHEEL	Piaggio spare parts (POP)
614438	SUPPORT SPARE WHEEL	Piaggio spare parts (POP)
B002111	SUPPORT SUB.ASSLY. FRONT SUSP.	Piaggio spare parts (POP)
B006920	SUPPORT WHEEL DISC LH	Piaggio spare parts (POP)
B006919	SUPPORT WHEEL DISC RH	Piaggio spare parts (POP)
F002H308014	Supporting plate	Piaggio spare parts (POP)
E40020664	SUPPORT-OIL COOLER BRACKET	Piaggio spare parts (POP)
B076169	SUSPENSION ARM S/A, LWR LH W/BUSH	Piaggio spare parts (POP)
B076170	SUSPENSION ARM S/A, LWR RH W/BUSH	Piaggio spare parts (POP)
B006870	SUSPENSION S/A FR, RH (MINI TRUK)	Piaggio spare parts (POP)
B006871	SUSPENSION S/A FR, LH (MINI TRUK)	Piaggio spare parts (POP)
646308	SUSPENSION S/A FRONT , LH	Piaggio spare parts (POP)
646308SP	SUSPENSION S/A FRONT, LH - SPD	Piaggio spare parts (POP)
646307	SUSPENSION S/A FRONT, RH	Piaggio spare parts (POP)
646307SP	SUSPENSION S/A FRONT, RH - SPD	Piaggio spare parts (POP)
B006871SP	SUSPENSION S/A FRT, LH (MINI TRUK)-SPD	Piaggio spare parts (POP)
B006870SP	SUSPENSION S/A FRT, RH (MINI TRUK)-SPD	Piaggio spare parts (POP)
652082	SWITCH	Piaggio spare parts (POP)
B073478R	SWITCH (LIGHT) - APE CITY	Piaggio spare parts (POP)
03G160819	switch reverse light	Piaggio spare parts (POP)
B073636R	SWITCH (NEW)-CABIN HEATER(3WH)	Piaggio spare parts (POP)
B073481R	SWITCH (NEW)-HAZARD (3WH)	Piaggio spare parts (POP)
B073481	SWITCH (NEW)-HAZARD (3WH)-GALACTIC	Piaggio spare parts (POP)
B073478	SWITCH (NEW)-LIGHTS (3WH)-GALACTIC	Piaggio spare parts (POP)
B073479	SWITCH (NEW)-WIPER (3WH)-GALACTIC	Piaggio spare parts (POP)
B076567	SWITCH (NEW)-WIPER/WASHER -(PAVNA)	Piaggio spare parts (POP)
587974	SWITCH , WIPER MOTOR	Piaggio spare parts (POP)
B073479R	SWITCH _(WIPER)_ APE CITY	Piaggio spare parts (POP)
632696	SWITCH ASSLY, IGNITION	Piaggio spare parts (POP)
186454	SWITCH ASSLY.	Piaggio spare parts (POP)
D8423087504	SWITCH ASSY, COURTESY LAMP	Piaggio spare parts (POP)
D8434087201	SWITCH ASSY, STOP LA	Piaggio spare parts (POP)
645243R	SWITCH CABIN HEATER - APE 601 HBAR	Piaggio spare parts (POP)
B000745	SWITCH CLUTCH	Piaggio spare parts (POP)
632262	SWITCH HAZARD SWITCH	Piaggio spare parts (POP)
882367	SWITCH PRESSURE OIL	Piaggio spare parts (POP)
651928	SWITCH SUB-ASSY	Piaggio spare parts (POP)
B024580	SWITCH SUPPORT BKT	Piaggio spare parts (POP)
587670	SWITCH THREE POSITION	Piaggio spare parts (POP)

587974R	SWITCH WIPER MOTOR	Piaggio spare parts (POP)
B000744	SWITCH, BRAKE	Piaggio spare parts (POP)
6D000365	SWITCH, EMERGENCY	Piaggio spare parts (POP)
6D000544	SWITCH, MICRO	Piaggio spare parts (POP)
6D000364	SWITCH, RNFB	Piaggio spare parts (POP)
B073900	SWITCH-HAZARD WARNING	Piaggio spare parts (POP)
B074460	SWITCH-HEAD LAMP LEVELLING	Piaggio spare parts (POP)
645242R	SWITCH-LIGHTS	Piaggio spare parts (POP)
6A001003	SWIVEL CLAMP	Piaggio spare parts (POP)
6A001081	SWIVEL CLIP (?? DIA 10-12)	Piaggio spare parts (POP)
6A001145	SWIVEL SPACER CLAMP	Piaggio spare parts (POP)
03G160331	SYNCHONISER STRUT	Piaggio spare parts (POP)
03G160312	SYNCHRONISER CONE	Piaggio spare parts (POP)
03G160311	synchroniser hub	Piaggio spare parts (POP)
03G160309	synchroniser sleeve	Piaggio spare parts (POP)
1F000583	SYNCHRONIZER BUSH	Piaggio spare parts (POP)
889230	SYNCHRONIZER BUSH	Piaggio spare parts (POP)
1F000688	SYNCHRONIZER BUSH	Piaggio spare parts (POP)
889225	SYNCHRONIZER BUSH	Piaggio spare parts (POP)
889219	SYNCHRONIZER BUSH	Piaggio spare parts (POP)
B042584	SYNCHRONIZER RING	Piaggio spare parts (POP)
SST94137	SYSTEMS & PROCEDURE MANUAL	Piaggio spare parts (POP)
E40005498	T C I Unit with damper	Piaggio spare parts (POP)
B011051	T- CONNECTION	Piaggio spare parts (POP)
6A000472	T CONNECTOR ID-3X3X3	Piaggio spare parts (POP)
894300	T Shirt jersey di cotton racing L	Piaggio spare parts (POP)
894320	T Shirt jersey di cotton yellow L	Piaggio spare parts (POP)
930101653	T.GREEN TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
129012013	TAB WASHER	Piaggio spare parts (POP)
B002998	TAIL BOARD MOUNT SIDE PROFILE LEFT	Piaggio spare parts (POP)
B002999	TAIL BOARD MOUNT SIDE PROFILE RIGHT	Piaggio spare parts (POP)
B075969ED	TAIL DOOR ASSLY - P&C EXPORT_ED	Piaggio spare parts (POP)
B075969	TAIL DOOR ASSLY-P&c EXPORT	Piaggio spare parts (POP)
B024402ED	TAIL GATE ASSLY APE PAX-CED	Piaggio spare parts (POP)
662265	TAIL GATE ASSLY.(HI-DECK)	Piaggio spare parts (POP)
B002855	TAIL GATE ASSLY.(HI-DECK) (CED)	Piaggio spare parts (POP)
B075531ED	TAIL GATE ASSY	Piaggio spare parts (POP)
940123	TAIL GATE LOCK WITH KEY	Piaggio spare parts (POP)
B024742	TAIL GATE LOCK WITH KEY(WITH NUT M6)	Piaggio spare parts (POP)
B073526ED	TAIL GATE PANEL ASSLY APE CITY CARGO-CED	Piaggio spare parts (POP)
B042505ED	TAIL GATE PANEL DTL 501 PICK UP/LD-CED	Piaggio spare parts (POP)
6D000385	TAIL LAMP , RH (GREY COLOR)	Piaggio spare parts (POP)
B076209	TAIL LAMP _ASSLY _LH CITY UPGRADE	Piaggio spare parts (POP)
B076210	TAIL LAMP _ASSLY _RH CITY UPGRADE	Piaggio spare parts (POP)
B024643	TAIL LAMP ASSLY (PAX 200) - LH	Piaggio spare parts (POP)
B024642	TAIL LAMP ASSLY (PAX 200) - RH	Piaggio spare parts (POP)
B024643CB	TAIL LAMP ASSLY (EURO CITY)-LH-C.BLUE	Piaggio spare parts (POP)

B024643WR	TAIL LAMP ASSLY (EURO CITY)-LH-W.RED	Piaggio spare parts (POP)
B024642CB	TAIL LAMP ASSLY (EURO CITY)-RH-C.BLUE	Piaggio spare parts (POP)
B024642WR	TAIL LAMP ASSLY (EURO CITY)-RH-W.RED	Piaggio spare parts (POP)
643704	TAIL LAMP ASSLY LH	Piaggio spare parts (POP)
182149	REAR MUDGUARD	Piaggio spare parts (POP)
604672	TAIL LAMP ASSLY LH	Piaggio spare parts (POP)
643705	TAIL LAMP ASSLY RH	Piaggio spare parts (POP)
660348	SHIFT CONTROL CABLE WITH TERMINAL	Piaggio spare parts (POP)
604671	TAIL LAMP ASSLY RH	Piaggio spare parts (POP)
B024537R	TAIL LAMP ASSLY-(LH) WITH REFLEX REF	Piaggio spare parts (POP)
6D000900R	TAIL LAMP ASSLY,RH	Piaggio spare parts (POP)
661369	TAIL LAMP ASSLY. LH - NEOLITE	Piaggio spare parts (POP)
661368	TAIL LAMP ASSLY. RH - NEOLITE	Piaggio spare parts (POP)
6D000899R	TAIL LAMP ASSY(LH) WITH REVERSE LIGHT	Piaggio spare parts (POP)
920081	Tail Lamp assy. Gasket	Piaggio spare parts (POP)
925604	TAIL LAMP GLASS - LH (LUMAX)	Piaggio spare parts (POP)
925605	TAIL LAMP GLASS - RH (LUMAX)	Piaggio spare parts (POP)
925606	TAIL LAMP GLASS SCREW (LUMAX)	Piaggio spare parts (POP)
940200	Tail Lamp Guards (Pair) – ape city 200SS	Piaggio spare parts (POP)
940108	Tail Lamp Guards (Pair) – Ape' City 200	Piaggio spare parts (POP)
925607	TAIL LAMP HOUSING (LUMAX)	Piaggio spare parts (POP)
925691	TAIL LAMP LENS	Piaggio spare parts (POP)
932292	Tail lamp Lens (Paxx 200)	Piaggio spare parts (POP)
932291	Tail lamp Lens (Stop/Tail Paxx 200)	Piaggio spare parts (POP)
932290	Tail lamp Lens (turn signal Paxx 200)	Piaggio spare parts (POP)
925510	TAIL LAMP LENSE LH	Piaggio spare parts (POP)
925582	TAIL LAMP LENSE LH(GSR-400)	Piaggio spare parts (POP)
925583	TAIL LAMP LENSE RH(GSR-400)	Piaggio spare parts (POP)
925595	TAIL LAMP LENSE SCREW	Piaggio spare parts (POP)
6D000563	TAIL LAMP LH E.V (BLUE)	Piaggio spare parts (POP)
6D000564	TAIL LAMP RH E.V (BLUE)	Piaggio spare parts (POP)
6D000386	TAIL LAMP, LH (GREY COLOR)	Piaggio spare parts (POP)
6D000199	TAIL LAMP_ASSLY LH_W/O REV FUNCTION	Piaggio spare parts (POP)
B002822	TAILGATE LW PANEL ASSLY (PICK UP/LD) CED	Piaggio spare parts (POP)
643831	TAILGATE LW PANEL ASSLY(PICK-UP FOLDING)	Piaggio spare parts (POP)
B042452ED	TAILGATE PANEL RR BODY,DTL PORTER 600-ED	Piaggio spare parts (POP)
6D001104	TAILLAMP LH W / REV FUNCTION(ALU GREY)	Piaggio spare parts (POP)
6D001105	TAILLAMP RH W / REV FUNCTION(ALU GREY)	Piaggio spare parts (POP)
652338	TANDEM MASTER CYLINDER	Piaggio spare parts (POP)
604615	TANDEM MASTER CYLINDER ASSLY	Piaggio spare parts (POP)
604880	TANDEM MASTER CYLINDER ASSLY.	Piaggio spare parts (POP)
614953	TANK FUEL S/A	Piaggio spare parts (POP)
B076480	TANK & SPARE WHEEL C/M	Piaggio spare parts (POP)
B073613	TANK SIDE DECAL -APE JALDOOT	Piaggio spare parts (POP)
567878R	TANK UNIT	Piaggio spare parts (POP)
6D000010	TANK UNIT	Piaggio spare parts (POP)
567878	TANK UNIT	Piaggio spare parts (POP)

6D000666	TANK UNIT	Piaggio spare parts (POP)
644950	TANK UNIT	Piaggio spare parts (POP)
660859	TANK UNIT (MINDA)	Piaggio spare parts (POP)
6D000340	TANK UNIT ASSLY	Piaggio spare parts (POP)
6A001004	TANK VALVE	Piaggio spare parts (POP)
E270842001	Taper pin	Piaggio spare parts (POP)
ED41978	Taper pin	Piaggio spare parts (POP)
E209842012	Taper pin	Piaggio spare parts (POP)
KD8430061	TAPER PIN 'D	Piaggio spare parts (POP)
126004015	TAPER PIN (FOR LEVER)	Piaggio spare parts (POP)
KD8430004	TAPER PIN 3x12 DIN 1481	Piaggio spare parts (POP)
1F000670	TAPER ROLLER BEARING	Piaggio spare parts (POP)
889300	TAPER ROLLER BEARING	Piaggio spare parts (POP)
874125	TAPER THREAD	Piaggio spare parts (POP)
411311	TAPER THREAD PLUG	Piaggio spare parts (POP)
B010682	TAPER THREAD PLUG	Piaggio spare parts (POP)
L9080246	TAPER THREADED PLUG	Piaggio spare parts (POP)
KD9080246	TAPER THREADED PLUG M8X1	Piaggio spare parts (POP)
LG9080246	TAPER THREADED PLUG M8X1	Piaggio spare parts (POP)
E870051114	TAPPET	Piaggio spare parts (POP)
L7215136	TAPPET	Piaggio spare parts (POP)
LG7215136	TAPPET	Piaggio spare parts (POP)
E87106854	TAPPET & ROLLER ASSEMBLY	Piaggio spare parts (POP)
E87000487	TAPPET ADJUSTING SCREW	Piaggio spare parts (POP)
A01A060011	TAPPET ASSEMBLY INLET & EXHAUST*	Piaggio spare parts (POP)
ESP650DCH003	TAPPET ASSEMBLY SET	Piaggio spare parts (POP)
A01A060009	TAPPET ASSEMBLY SET	Piaggio spare parts (POP)
A01A060014	TAPPET ASSEMBLY SET -FOR M8 BOLT TAPPET	Piaggio spare parts (POP)
ED41330	Tappet assy.	Piaggio spare parts (POP)
E07502282	Tappet assy. Set	Piaggio spare parts (POP)
ESP650DKT006	Tappet Assy. Set	Piaggio spare parts (POP)
020854Y	TAPPET FOR VALVE	Piaggio spare parts (POP)
020853Y	TAPPET FOR VALVE	Piaggio spare parts (POP)
A01G060008	Tappet guide Allen head bolt Gen 3.3	Piaggio spare parts (POP)
E87000230	TAPPET NUT	Piaggio spare parts (POP)
E87015144	TAPPET SET (CONSIST OF SR. N	Piaggio spare parts (POP)
441029	TAPPET SETTING TOOL	Piaggio spare parts (POP)
970300611	TAPPET SHIM DISASSEMBLY TOOL	Piaggio spare parts (POP)
KD7215155	TAPPET VALVE COMMAND	Piaggio spare parts (POP)
KD72151558	TAPPET VALVE COMMAND	Piaggio spare parts (POP)
15900	TAPPING CUP HEAD SCREW	Piaggio spare parts (POP)
568058	tappo per plan	Piaggio spare parts (POP)
613814	TAPPO SERB. CON CHIAVE	Piaggio spare parts (POP)
E40015401	TATOR ASSY	Piaggio spare parts (POP)
E40005442	TCI UNIT	Piaggio spare parts (POP)
E34A130001	TCI UNIT WC BSIV(CNG/LPG)	Piaggio spare parts (POP)
6A000600	T-CONNECTOR M12*1	Piaggio spare parts (POP)

6D000521	TCU ASSLY	Piaggio spare parts (POP)
CM312602	TECHNICAL GEARBOX (APE 501 PASSENGER)	Piaggio spare parts (POP)
6A001020	TEE CONNECTOR M12 X 1, ASSEMBLY	Piaggio spare parts (POP)
6D000957	TELEMATIC UNIT	Piaggio spare parts (POP)
587647	TELL TALES CLUSTER	Piaggio spare parts (POP)
660144	TEMP . GAUGE	Piaggio spare parts (POP)
652389	TEMP GUAGE	Piaggio spare parts (POP)
6D000872	TEMP SEN & CRANK SEN POSITION PIGTAIL	Piaggio spare parts (POP)
658247	TEMP SENSOR	Piaggio spare parts (POP)
658247R	TEMP SENSOR (APE 4 WH)	Piaggio spare parts (POP)
B078338	TEMP. SWITCH (80-72) 501 (WC)	Piaggio spare parts (POP)
B012001	TEMPERATURE SENSOR	Piaggio spare parts (POP)
1F000775	TEMPERATURE SENSOR	Piaggio spare parts (POP)
882356	TEMPERATURE SENSOR	Piaggio spare parts (POP)
F002H22041	Temperature sensor	Piaggio spare parts (POP)
E07509713	Temperature switch	Piaggio spare parts (POP)
E34G130002	TEMPERATURE SWITCH	Piaggio spare parts (POP)
E07509716	Temperature switch	Piaggio spare parts (POP)
LG4110043	TENSION PULLEY LGA 280	Piaggio spare parts (POP)
6D000361	TENSION ROD	Piaggio spare parts (POP)
568290	TENSION ROD	Piaggio spare parts (POP)
B075966	TENSION ROD	Piaggio spare parts (POP)
604954	TENSION ROD	Piaggio spare parts (POP)
B075967	TENSION ROD - JACK	Piaggio spare parts (POP)
B077884	TENSION ROD - LONG	Piaggio spare parts (POP)
6D000252	TENSION ROD (BATTERY PART)	Piaggio spare parts (POP)
B077885	TENSION ROD -ASSEMBLY	Piaggio spare parts (POP)
B079345	TENSION ROD -ASSEMBLY	Piaggio spare parts (POP)
632508	TENSION ROD ASSEMBLY : BATTERY MOUNTING	Piaggio spare parts (POP)
6D000362	TENSION ROD ASSLY, BATTERY MTG	Piaggio spare parts (POP)
B011415	TENSIONER ARM	Piaggio spare parts (POP)
ESP650DCR003	TENSIONER LEVER ALTERNATOR MTG.	Piaggio spare parts (POP)
ED42909	Tensioner lever for alternator	Piaggio spare parts (POP)
A01M140002	TENTIONER BRACKET	Piaggio spare parts (POP)
6B001947	TERMINAL	Piaggio spare parts (POP)
661847	TERMINAL	Piaggio spare parts (POP)
B024855	TERMINAL	Piaggio spare parts (POP)
119278	TERMINAL	Piaggio spare parts (POP)
190465	TERMINAL	Piaggio spare parts (POP)
E50000452	TERMINAL	Piaggio spare parts (POP)
B042483	TERMINAL Ø10 X 14 (GUNDY)	Piaggio spare parts (POP)
SM26257333	Terminal Base Assy	Piaggio spare parts (POP)
ESK5236	Terminal M8x1.25	Piaggio spare parts (POP)
020680Y	TEXA NAVIGATOR	Piaggio spare parts (POP)
E43526171	THERMAL INSULATION 120 X 50 X 8	Piaggio spare parts (POP)
B042340	THERMAL SW (JPT) _ BY M/s.SENSING TECH.	Piaggio spare parts (POP)
925672	THERMAL SWITCH	Piaggio spare parts (POP)

B006563	THERMAL SWITCH	Piaggio spare parts (POP)
640485	THERMIC SENSOR	Piaggio spare parts (POP)
L9195111	THERMISTOR	Piaggio spare parts (POP)
L9195136	THERMISTOR	Piaggio spare parts (POP)
ED42841	THERMO SENSER M14	Piaggio spare parts (POP)
L9195110	THERMOSTAT	Piaggio spare parts (POP)
L9195124	THERMOSTAT (IMPORTED)	Piaggio spare parts (POP)
A01G100001	THERMOSTAT ASSEMBLY	Piaggio spare parts (POP)
ESP650DCH001	THERMOSTAT ASSEMBLY	Piaggio spare parts (POP)
ED31807	THERMOSTAT ASSY.	Piaggio spare parts (POP)
888775	THERMOSTAT COOLANT	Piaggio spare parts (POP)
E87011785A	THERMOSTAT COVER	Piaggio spare parts (POP)
1A016126	THERMOSTAT COVER	Piaggio spare parts (POP)
ESP650DCH010	THERMOSTAT COVER ASSEMBLY	Piaggio spare parts (POP)
L2610092	Thermostat cover with I P	Piaggio spare parts (POP)
ESP650DGS001	THERMOSTAT GASKET('O'RING)	Piaggio spare parts (POP)
A01M100002	THERMOSTAT HOUSING (MACHINED)	Piaggio spare parts (POP)
L4990193	THIRD SPEED GEAR	Piaggio spare parts (POP)
L4990231	THIRD SPEED GEAR	Piaggio spare parts (POP)
B011862	THREAD PLUG	Piaggio spare parts (POP)
950300406	THREAD SEALANT	Piaggio spare parts (POP)
B011983	THREAD TAPER PLUG	Piaggio spare parts (POP)
B012102	THREAD TAPER PLUG	Piaggio spare parts (POP)
1A020579	THREADED BUSH	Piaggio spare parts (POP)
1A008091	THREADED CAP	Piaggio spare parts (POP)
B041280	THREADED PLUG	Piaggio spare parts (POP)
888675	THREADED PLUG	Piaggio spare parts (POP)
L9080254	THREADED PLUG	Piaggio spare parts (POP)
970606106	Threaded Plug For Gearbox (PAX EX	Piaggio spare parts (POP)
1A011246	THREADED TAPER PLUG	Piaggio spare parts (POP)
644824	THREE WAY Y- CONNECTOR	Piaggio spare parts (POP)
643692	THREE WAY UNION	Piaggio spare parts (POP)
615022	THREE WAY UNION	Piaggio spare parts (POP)
E40006454	THROTTLE ADJUSTER	Piaggio spare parts (POP)
1A013157	THROTTLE BODY	Piaggio spare parts (POP)
1A012003	THROTTLE BODY	Piaggio spare parts (POP)
1A019310	THROTTLE BODY	Piaggio spare parts (POP)
882510	THROTTLE BODY	Piaggio spare parts (POP)
1A017576	THROTTLE BODY / AIR BOX COUPLING	Piaggio spare parts (POP)
1A008379	Throttle body assy Ø28	Piaggio spare parts (POP)
1A017575	THROTTLE BODY/AIR BOX PIPE	Piaggio spare parts (POP)
109635	THROTTLE CONTROL LEVER WITH I.P.	Piaggio spare parts (POP)
GU01603480	THROTTLE CONTROL SLEEVE WITH GRIP	Piaggio spare parts (POP)
1C002152	THROTTLE CONTROL TRANSMISSION	Piaggio spare parts (POP)
E43521761	THROTTLE COVER ASSY FOR FRONT MTG ENGINE	Piaggio spare parts (POP)
E07528053	THROTTLE LEVER	Piaggio spare parts (POP)
E5005200293	THROTTLE LEVER	Piaggio spare parts (POP)

E60018090	THROTTLE LEVER 600CC	Piaggio spare parts (POP)
E87115163	THROTTLE LEVER ASSEMBLY - INTERNAL	Piaggio spare parts (POP)
E870051133	THROTTLE LEVER ASSY	Piaggio spare parts (POP)
E50005145	THROTTLE LEVER INTERNAL	Piaggio spare parts (POP)
E43521746	THROTTLE LEVER-BSIII	Piaggio spare parts (POP)
E87103406	THROTTLE POSITION SENSOR	Piaggio spare parts (POP)
E10G130001	THROTTLE POSITION SENSOR (CW-TYPE)	Piaggio spare parts (POP)
SST94087	Throttle position setting tool_BSIV 3W	Piaggio spare parts (POP)
E40006447	THROTTLE SPRING	Piaggio spare parts (POP)
1A010097	THROTTLE VALVE	Piaggio spare parts (POP)
B016391	THROTTLE VALVE	Piaggio spare parts (POP)
B016827	THROTTLE VALVE	Piaggio spare parts (POP)
LG7850052	Throttle Valve Type N30	Piaggio spare parts (POP)
AP8118537	Throttle+hand grip	Piaggio spare parts (POP)
1A011547R	THRUST BEARING	Piaggio spare parts (POP)
1A004644	THRUST BEARING	Piaggio spare parts (POP)
L4896405	THRUST BEARING GROUP	Piaggio spare parts (POP)
L48965530	THRUST BEARING GROUP (200 KG)	Piaggio spare parts (POP)
SM26256329	Thrust Collar	Piaggio spare parts (POP)
129019011R	THRUST PLATE	Piaggio spare parts (POP)
B042476	THRUST PLATE	Piaggio spare parts (POP)
129019011	THRUST PLATE (SINTERED) (41928)	Piaggio spare parts (POP)
E87010614A	THRUST PLATEVALVE CAMSHAFT	Piaggio spare parts (POP)
1A017708	THRUST RING	Piaggio spare parts (POP)
SM26240010	Thrust Shim	Piaggio spare parts (POP)
E500125708A	THRUST WASHER	Piaggio spare parts (POP)
E500125708	THRUST WASHER	Piaggio spare parts (POP)
ESP650DNB022	THRUST WASHER	Piaggio spare parts (POP)
L6410119	THRUST WASHER	Piaggio spare parts (POP)
KD60R0220	THRUST WASHER	Piaggio spare parts (POP)
KD60R088	Thrust washer	Piaggio spare parts (POP)
1A009593	THRUST WASHER KIT	Piaggio spare parts (POP)
KD1257271	THRUST WASHER PTO side	Piaggio spare parts (POP)
E60000329	THRUSTWASHER	Piaggio spare parts (POP)
KD12572718	THURST WASHER PTO side 15ld401	Piaggio spare parts (POP)
652310	TIE ROD	Piaggio spare parts (POP)
B042953R	TIE ROD ASSEMBLY	Piaggio spare parts (POP)
B042953	TIE ROD ASSEMBLY	Piaggio spare parts (POP)
604890	TIE ROD ASSEMBLY -BATTERY	Piaggio spare parts (POP)
E270924531	Tie rod speeder lever	Piaggio spare parts (POP)
L2610083	TIMING BELT COVER	Piaggio spare parts (POP)
L2610088	TIMING BELT COVER	Piaggio spare parts (POP)
LG2165135	TIMING BELT GUARD	Piaggio spare parts (POP)
1A001114R	TIMING CHAIN	Piaggio spare parts (POP)
B011980	TIMING CHAIN	Piaggio spare parts (POP)
882194	TIMING CHAIN	Piaggio spare parts (POP)
KIT95008	TIMING CHAIN & GUIDE SET	Piaggio spare parts (POP)

KIT95008R	TIMING CHAIN & GUIDE SET	Piaggio spare parts (POP)
1A015692	TIMING CHAIN SOUNDLESS TYPE	Piaggio spare parts (POP)
B011920	TIMING COVER ASSEMBLY	Piaggio spare parts (POP)
B018613	TIMING CROWN	Piaggio spare parts (POP)
1A002358	TIMING CROWN	Piaggio spare parts (POP)
1A012434	Timing crown	Piaggio spare parts (POP)
020865Y	TIMING GEAR BRACKET	Piaggio spare parts (POP)
B015017	TIMING PINION	Piaggio spare parts (POP)
1A012433	Timing Pinion	Piaggio spare parts (POP)
1A007565	TIMING PINION	Piaggio spare parts (POP)
L9820215	TIMING SCREW	Piaggio spare parts (POP)
L6480072	TIMING SPROCKET WITH I.M.	Piaggio spare parts (POP)
L7100437	TIMING SYSTEM BELT PULLEY	Piaggio spare parts (POP)
441017	TIMING TOOL	Piaggio spare parts (POP)
B011088	TIMING WHEEL	Piaggio spare parts (POP)
970300501	TIMINIG REFERENCE TOOL (CAM SHAFT)	Piaggio spare parts (POP)
932312	TJ Boot kit DRIVE SHAFT P1000	Piaggio spare parts (POP)
605122	TMC ASSLY (DIA. 19.5)(KBX P7017102)	Piaggio spare parts (POP)
6C000443	TMC ASSLY WITH INTEGRATED RESERVOIR	Piaggio spare parts (POP)
B075485	TMC ASSY (19.05)	Piaggio spare parts (POP)
662449	TMC ASSY. (DIA 19.05)	Piaggio spare parts (POP)
B003738	TMC ASSY. (DIA 19.05)	Piaggio spare parts (POP)
B042719	TMC ASSY. (DIA 19.05) 4W	Piaggio spare parts (POP)
B073789	TMC ASSY.(19.05)	Piaggio spare parts (POP)
B077154	TMC ASSY.(19.05) WITH TH. RESEVOIR	Piaggio spare parts (POP)
B042395	TMC ASSY.(19.05) WITH BKT & FILLER UNION	Piaggio spare parts (POP)
B042396	TMC ASSY.(19.05) WITH RESEVOIR	Piaggio spare parts (POP)
1E001224	TMC Ø20.6 / BOOSTER 6.5"	Piaggio spare parts (POP)
B075950	TMC SHIELD MTG. BKT.	Piaggio spare parts (POP)
920603	TOLL FOR ENGINE SIDE COVER REMOVAL	Piaggio spare parts (POP)
889317	TONE WHEEL	Piaggio spare parts (POP)
1F000728	TONE WHEEL	Piaggio spare parts (POP)
ESP650DST001	TONE WHEEL	Piaggio spare parts (POP)
F002H301554	Tool	Piaggio spare parts (POP)
020890Y	TOOL	Piaggio spare parts (POP)
020884Y	TOOL	Piaggio spare parts (POP)
020883Y	TOOL	Piaggio spare parts (POP)
B006688	TOOL BAG	Piaggio spare parts (POP)
B041876	TOOL BAG	Piaggio spare parts (POP)
604707	TOOL BAG	Piaggio spare parts (POP)
662525	TOOL BAG	Piaggio spare parts (POP)
660047	TOOL BOX (CUT PART)	Piaggio spare parts (POP)
646143	TOOL BOX RH	Piaggio spare parts (POP)
AP8140199	Tool carrying panel	Piaggio spare parts (POP)
020898Y	Tool carrying panel nameplate	Piaggio spare parts (POP)
020880Y	Tool carrying panel nameplate	Piaggio spare parts (POP)
MS422620	TOOL CRANK BUSH REMOVAL	Piaggio spare parts (POP)

SST94204	TOOL DISMANTLING DIFF. CAGE FROM GB/CVR	Piaggio spare parts (POP)
970300562	Tool for & 5mm dowep fitting of finger	Piaggio spare parts (POP)
T09000063	TOOL FOR COMPRESSING VALVE SPRING	Piaggio spare parts (POP)
970300542	Tool for crank bush removal	Piaggio spare parts (POP)
970300588	TOOL FOR EXHAUST FLANGE TIGHTEING 16MM	Piaggio spare parts (POP)
970300537	TOOL FOR FR. SUSPENSION BUSH REPLACEMENT	Piaggio spare parts (POP)
MS432865	Tool for linkage setting of kobra engine	Piaggio spare parts (POP)
970300571	Tool for linkage setting of kobra engine	Piaggio spare parts (POP)
970300590	TOOL FOR MEASUREMENT OF BELT TENSION	Piaggio spare parts (POP)
441018	TOOL FOR MIN MAX GOVERNOR 9SOCKET 505MM)	Piaggio spare parts (POP)
020858Y	TOOL FOR PISTON	Piaggio spare parts (POP)
970300589	TOOL FOR PISTON FITMENT	Piaggio spare parts (POP)
SST94195	Tool for remo. valve guide for Cyl. Head	Piaggio spare parts (POP)
970300560	Tool for support tube clutch fitting	Piaggio spare parts (POP)
970300619	TOOL FOR SUPPORTING VALVES IN ASSLY	Piaggio spare parts (POP)
KD1460254	TOOL KIT BOX 15LD440	Piaggio spare parts (POP)
LG1460312	TOOL KIT BOX LGA AUTOMOTIVE	Piaggio spare parts (POP)
661457	TOOL SET	Piaggio spare parts (POP)
644295	TOOL SET, STD L/JACK	Piaggio spare parts (POP)
MS454041	TOOL-BELLOW GUIDE PIECE FOR PROP/SHAFT	Piaggio spare parts (POP)
920401	TOOL-DISMANTLING DIFF.CAGE FROM GB/COVER	Piaggio spare parts (POP)
970300569	Toolfor rear support & front support mou	Piaggio spare parts (POP)
020663Y	TOOLS	Piaggio spare parts (POP)
020664Y	TOOLS	Piaggio spare parts (POP)
020665Y	TOOLS	Piaggio spare parts (POP)
020660Y	TOOLS	Piaggio spare parts (POP)
020659Y	TOOLS	Piaggio spare parts (POP)
644425	TOOLS BOX RH.	Piaggio spare parts (POP)
567583	TOOLS KIT	Piaggio spare parts (POP)
020661Y	TOOLS KIT	Piaggio spare parts (POP)
B042703_BS6	TOOLS KIT (APE PAXX PETROL/CNG/LPG BS6)	Piaggio spare parts (POP)
B042703	TOOLS KIT (APE PAXX PETROL/CNG/LPG)	Piaggio spare parts (POP)
B042700	TOOLS KIT 501ALL MODELS	Piaggio spare parts (POP)
B042700_BS6	TOOLS KIT 501ALL MODELS BS6 (W/O ROPE)	Piaggio spare parts (POP)
L2440402	TOOTHED BELT OF TIMING CONTROL	Piaggio spare parts (POP)
1A018036	Toothed Crown electric Starter with I.P.	Piaggio spare parts (POP)
1A018038	Toothed Crown electric Starter with I.P.	Piaggio spare parts (POP)
B017055	TOOTHED CROWN ELECTRIC STARTER WITH I.P.	Piaggio spare parts (POP)
1A001187R	TOOTHED CROWN ELECTRIC STARTER WITH I.P.	Piaggio spare parts (POP)
645097	TOP BRKT LSPV	Piaggio spare parts (POP)
B016393	TOP COMPLETE	Piaggio spare parts (POP)
1A010101	TOP COMPLETE	Piaggio spare parts (POP)
970300600	TOP DEADCENTER CONTROL/ CHECK TOOL	Piaggio spare parts (POP)
615604	TOP PLATE	Piaggio spare parts (POP)
645115	TOP PLATE FRAME ASSLY RADIATOR	Piaggio spare parts (POP)
B009510	TOP PLATE-APE MINI	Piaggio spare parts (POP)
E40006816	TOP..	Piaggio spare parts (POP)

L1780148	TORNILLO M10x25	Piaggio spare parts (POP)
KD8576124	TORQUE ADAPTOR	Piaggio spare parts (POP)
960660003	TORQUE WRENCH 10-50NM (SL1)	Piaggio spare parts (POP)
960660005	TORQUE WRENCH 20-100NM (SL2)	Piaggio spare parts (POP)
960660004	TORQUE WRENCH 5-25NM (SLO)	Piaggio spare parts (POP)
L5600053	TORSION SPRING	Piaggio spare parts (POP)
E87008217	TORSION SPRING	Piaggio spare parts (POP)
1A001073	TORX HEAD SCREW M5x16	Piaggio spare parts (POP)
1A014986	TORX HEAD SCREW M5x21	Piaggio spare parts (POP)
1A013159	TORX HEAD SCREW M5x22	Piaggio spare parts (POP)
1A017864	TORX HEAD SCREW M6x20	Piaggio spare parts (POP)
1A005607	TORX SCREW WITH CONVEX HEAD	Piaggio spare parts (POP)
116839	TOW HOOK	Piaggio spare parts (POP)
894874	TOWEL MOTO MANA	Piaggio spare parts (POP)
6B001599	TOWER BOLT ASSLY	Piaggio spare parts (POP)
1A014958	TPS/O-RING KIT	Piaggio spare parts (POP)
109065	TRACK	Piaggio spare parts (POP)
615070	TRACK ASSY FR SEAT LH	Piaggio spare parts (POP)
615069	TRACK ASSY FR SEAT RH	Piaggio spare parts (POP)
255450014	TRAILING ARM ASSLY. LH	Piaggio spare parts (POP)
255060015	TRAILING ARM ASSLY. RH	Piaggio spare parts (POP)
652356	TRAILING SHOE COMP. (FRT)	Piaggio spare parts (POP)
652360	TRAILING SHOE COMP. WITH HBL LH	Piaggio spare parts (POP)
643859	TRANSIENT SUPPORT UNIT(VANAZ PT NO K-011	Piaggio spare parts (POP)
616778	TRANSM. ASSLY.FOR ODOMETER FROM SPLITTER	Piaggio spare parts (POP)
652028	TRANSMISSION	Piaggio spare parts (POP)
587812	TRANSMISSION CABLE FOR ODOMETER	Piaggio spare parts (POP)
B077339	TRAY, BATTERY	Piaggio spare parts (POP)
567520	TRAY, BATTERY	Piaggio spare parts (POP)
882232	TRIGGER WHEEL	Piaggio spare parts (POP)
B041217	TRIM PAD SIDE PANEL LH	Piaggio spare parts (POP)
B041118	TRIM PAD SIDE PANEL RH	Piaggio spare parts (POP)
B042878	TRIPLE PLUS TYRE- 4x8 4PR (E-MARK)	Piaggio spare parts (POP)
E87015125	TROTTLE LEVER	Piaggio spare parts (POP)
B001216SY	TRUK PLUS BODY RR - SAHARA YELLOW	Piaggio spare parts (POP)
662159WR	TRUK PLUS CHASSIS (W/O DOOR)-WEST RED	Piaggio spare parts (POP)
662159SY	TRUK PLUS CHASSIS (W/O DR)-SAHARA YELLOW	Piaggio spare parts (POP)
662160CB	TRUK PLUS CHASSIS (WITH DOOR)-C BLUE	Piaggio spare parts (POP)
662160SY	TRUK PLUS CHASSIS (WITH DOOR)-S YELLOW	Piaggio spare parts (POP)
662160WR	TRUK PLUS CHASSIS (WITH DOOR)-WEST RED	Piaggio spare parts (POP)
LG1257192	TRUST WASHER 30X42X0.25 C67	Piaggio spare parts (POP)
B076177	TUBE	Piaggio spare parts (POP)
569489	TUBE	Piaggio spare parts (POP)
616824	TUBE	Piaggio spare parts (POP)
652060	TUBE	Piaggio spare parts (POP)
611782	TUBE	Piaggio spare parts (POP)
605479	TUBE	Piaggio spare parts (POP)

615209	TUBE	Piaggio spare parts (POP)
615650	TUBE	Piaggio spare parts (POP)
587621	TUBE	Piaggio spare parts (POP)
611774	TUBE	Piaggio spare parts (POP)
605082	TUBE	Piaggio spare parts (POP)
889878	TUBE - DIPSTICK	Piaggio spare parts (POP)
B012443	TUBE - DIPSTICK	Piaggio spare parts (POP)
615004	TUBE FR BRAKE LH	Piaggio spare parts (POP)
643908	TUBE FROM SOLENOID VALVE TO PRESS REGUL	Piaggio spare parts (POP)
661534	TUBE , MASTER CYLINDER - PRIMARY	Piaggio spare parts (POP)
661535	TUBE , MASTER CYLINDER - SECONDARY	Piaggio spare parts (POP)
B075634	TUBE 12"	Piaggio spare parts (POP)
B024916	TUBE 12"	Piaggio spare parts (POP)
B023800	TUBE 5 WAY TO 3 WAY	Piaggio spare parts (POP)
661536	TUBE 5 WAY TO 3 WAY	Piaggio spare parts (POP)
614109	TUBE 5 WAY TO VALVE	Piaggio spare parts (POP)
613715	TUBE AIR FILTER-LUMAX	Piaggio spare parts (POP)
E87011618	TUBE ASSEMBLY WITH FLANGE	Piaggio spare parts (POP)
643998	TUBE ASSLY. CNG VALVE TO FILLER VALVE (Piaggio spare parts (POP)
B078029	TUBE ASSLY. GEAR CONTROL	Piaggio spare parts (POP)
6C000573	TUBE ASSY,TMC SECONDARY TO T-CONNECTOR	Piaggio spare parts (POP)
568161	TUBE BETWEEN TMC & FRT WHEEL	Piaggio spare parts (POP)
B073791	TUBE BRAKE OIL TANK TO TMC	Piaggio spare parts (POP)
B073790	TUBE- BRAKE OIL TANK TO TMC	Piaggio spare parts (POP)
889911	TUBE CLIP	Piaggio spare parts (POP)
6C000038	TUBE CONNECTOR BRAKE BOOSTER	Piaggio spare parts (POP)
1E001081	TUBE CONNECTOR BRAKE BOOSTER	Piaggio spare parts (POP)
615005	TUBE FR BRAKE RH	Piaggio spare parts (POP)
616793	TUBE FROM BRAKE PUMP TO F	Piaggio spare parts (POP)
661758	TUBE FROM JUNCTION BLOCK TO SOLENOID VAL	Piaggio spare parts (POP)
B003116	TUBE FUEL TANK FILLER	Piaggio spare parts (POP)
B003115	TUBE FUEL TANK FILLER ASSLY	Piaggio spare parts (POP)
645622	TUBE INLET FUEL TANK FILLER SIDE S/A	Piaggio spare parts (POP)
B074901	TUBE LSPV BYPASS, 3 WAY TO LSPV	Piaggio spare parts (POP)
614108	TUBE MASTER CYLINDER	Piaggio spare parts (POP)
B075488	TUBE NO-1-BRAKE OIL TANK TO TMC	Piaggio spare parts (POP)
B075489	TUBE NO-2 -BRAKE OIL TANK TO TMC	Piaggio spare parts (POP)
E87027144	TUBE PUSH ROD	Piaggio spare parts (POP)
ESP650DCH022	Tube push rod protection	Piaggio spare parts (POP)
E273952019	Tube push rod protection	Piaggio spare parts (POP)
B074899	TUBE REAR, 5 WAY TO LSPV IN	Piaggio spare parts (POP)
B074900	TUBE REAR, LSPV OUT TO REAR HOSE	Piaggio spare parts (POP)
646033	TUBE REINFORCEMENT LH	Piaggio spare parts (POP)
646032	TUBE REINFORCEMENT RH	Piaggio spare parts (POP)
B023799	TUBE RR BRAKE LH	Piaggio spare parts (POP)
615008	TUBE RR BRAKE LH	Piaggio spare parts (POP)
615009	TUBE RR BRAKE RH	Piaggio spare parts (POP)

B023798	TUBE RR BRAKE RH	Piaggio spare parts (POP)
662589	TUBE S/ A FUEL 2 (STRAINER - FEED PUMP	Piaggio spare parts (POP)
662588	TUBE S/A FUEL 1 (TANK - STAINER)	Piaggio spare parts (POP)
662590	TUBE S/A FUEL 3 (FEED PUMP TO FUEL FILT	Piaggio spare parts (POP)
662591	TUBE S/A FUEL 4 (ENGINE-TANK)	Piaggio spare parts (POP)
B007746	TUBE S/A INSTALLATION BNA	Piaggio spare parts (POP)
662161	TUBE S/A INSTALLATION 'NQP 870'	Piaggio spare parts (POP)
B075814	TUBE SUB ASSLY. GEAR CONTROL	Piaggio spare parts (POP)
6A000197	TUBE SUB ASSY WITH PARTS	Piaggio spare parts (POP)
6A000212	TUBE VACCUME	Piaggio spare parts (POP)
614247	TUBE VALVE TO UNION	Piaggio spare parts (POP)
127451	TUBE WITH TERMINAL S/A	Piaggio spare parts (POP)
614107	TUBE, MASTER CYLINDER	Piaggio spare parts (POP)
6A001165	TUBE, MFV TO PR. REGULATOR	Piaggio spare parts (POP)
615007	TUBE,VALVE TO RR HOSE	Piaggio spare parts (POP)
B074897	TUBE-1 FRONT RH, 5 WAY TO 3 WAY	Piaggio spare parts (POP)
B074898	TUBE-2 FRONT RH, 3 WAY TO RH HOSE	Piaggio spare parts (POP)
888223	TUBE-MANIFOLD WATER INLET/THERMOSTAT HO	Piaggio spare parts (POP)
E43507330	TUBEPUSH ROD	Piaggio spare parts (POP)
B011033	TURBOCHARGER GASKET	Piaggio spare parts (POP)
925693	TURN SIGNAL LAMP LENS.	Piaggio spare parts (POP)
SM26257359	Twin Brush Assy	Piaggio spare parts (POP)
L7330344	TWO WAY BANJO	Piaggio spare parts (POP)
6C000201	TWO WAY CONNECTOR	Piaggio spare parts (POP)
A186000270	TYPE LOCTITE 270	Piaggio spare parts (POP)
A186002701	TYPE LOCTITE 2701	Piaggio spare parts (POP)
A186000573	TYPE LOCTITE 573	Piaggio spare parts (POP)
A186007063	TYPE LOCTITE 7063	Piaggio spare parts (POP)
A186000055	TYPE MOLYKOTE 55 (DOW CORNING)	Piaggio spare parts (POP)
6C000664R	TYRE	Piaggio spare parts (POP)
604941	TYRE	Piaggio spare parts (POP)
6C000551	TYRE - 4X8 INCH	Piaggio spare parts (POP)
B001317	TYRE & TUBE ASSLY	Piaggio spare parts (POP)
B024915	TYRE 12"	Piaggio spare parts (POP)
B075633	TYRE 12"(Radial)	Piaggio spare parts (POP)
587971	TYRE 4.50 X 10 8 PR	Piaggio spare parts (POP)
B001315	TYRE 4x8 4 PR	Piaggio spare parts (POP)
B003145	TYRE LT - APE MINITRUK	Piaggio spare parts (POP)
940015	U J Assembly(truk plus)	Piaggio spare parts (POP)
889228	UB 5th-R SPEED	Piaggio spare parts (POP)
616888	UBEE (NOT METALLIC)	Piaggio spare parts (POP)
B042087	U-BOLT	Piaggio spare parts (POP)
B009681	U-BOLT SHACKLE PLATE	Piaggio spare parts (POP)
E07537135	UEL PIPE : FUEL FILTER TO FIP (MT 510	Piaggio spare parts (POP)
950300409	UNDER BODY COATING (RUST PREVENTIVE -1	Piaggio spare parts (POP)
1E002719	UNDER DASHBOARD COVER RH	Piaggio spare parts (POP)
KD7260057	Union	Piaggio spare parts (POP)

B075242	UNION ASSLY	Piaggio spare parts (POP)
644514	UNION ASSY	Piaggio spare parts (POP)
LG5953082	UNION FOR OIL FILTER M16X1.5P	Piaggio spare parts (POP)
925733	UNION NUT(K-0109-02-030)	Piaggio spare parts (POP)
925732	UNION NUT(K-0801-04-040)	Piaggio spare parts (POP)
6C000190	UPPER BALL CAGE (VE)	Piaggio spare parts (POP)
B074476	UPPER BRACKET, SUPPORT FUSE BOX	Piaggio spare parts (POP)
925738	UPPER CASE(K-0401-18-010)	Piaggio spare parts (POP)
152025	UPPER CLAMP OF L.H. AIR REFLECTOR	Piaggio spare parts (POP)
660251	UPPER CLAMP OF L.H. AIR REFLECTOR (SS-30	Piaggio spare parts (POP)
108800	UPPER CLAMP OF RIGHT AIR DEFLECTOR	Piaggio spare parts (POP)
660248	UPPER CLAMP OF RIGHT AIR DEFLECTOR (SS-3	Piaggio spare parts (POP)
B017456	UPPER CUP	Piaggio spare parts (POP)
L7980083	UPPER CUP SPRING SEAT with semiconical c	Piaggio spare parts (POP)
L3585063	UPPER ELEMENT OF COWLING	Piaggio spare parts (POP)
602300	UPPER GASKET	Piaggio spare parts (POP)
E5005200777	UPPER LEVER WITH PIN	Piaggio spare parts (POP)
E5205200777	UPPER LEVER WITH PIN	Piaggio spare parts (POP)
183077	UPPER PACKING R.H. DOOR RABBET	Piaggio spare parts (POP)
LG8430121	UPPER PIN	Piaggio spare parts (POP)
L7980087	UPPER SPRING CAP	Piaggio spare parts (POP)
B073603	UPPER STRIP (CANOPY MOUNTING)	Piaggio spare parts (POP)
602485	UPPORT HEADLAMP L.H.	Piaggio spare parts (POP)
LG5302691	USE MAINTENANCE FOR LGA280/340	Piaggio spare parts (POP)
B073812	UTILITY BOX	Piaggio spare parts (POP)
940189	V 4 IN 1 DRESSER 1000 (DRESSER POLISH)	Piaggio spare parts (POP)
E87006429	V BELT	Piaggio spare parts (POP)
940190	V DRY KLEEN 1000 (DRYKLEEN WATERLESS)	Piaggio spare parts (POP)
940191	V EXPERT PERFO. CLOTH HG (MFC)-Pink	Piaggio spare parts (POP)
940188	V EXPERT PERFORMANCE CLOTH HG (MFC)-Blue	Piaggio spare parts (POP)
661290	V.E - WIRING HARNESS - FRAME	Piaggio spare parts (POP)
661289	V.E - WIRING HARNESS - INST. PANEL	Piaggio spare parts (POP)
661307	V.E WIRING HARNESS - FRAME (ONLY FOR DE	Piaggio spare parts (POP)
B003741R	V.E.WIPER MOTOR - APE MINI TRUK	Piaggio spare parts (POP)
B003741	V.E.WIPER MOTOR (VARROC) - MINI TRUK	Piaggio spare parts (POP)
970300573	V.G.Removing tool for cyl head kobra	Piaggio spare parts (POP)
6A001358	VACCUM HOSE	Piaggio spare parts (POP)
6A000489	VACCUME HOSE	Piaggio spare parts (POP)
1E001080	VACUUM HOSE	Piaggio spare parts (POP)
B073100	VACUUM HOSE NO2	Piaggio spare parts (POP)
B073101	VACUUM HOSE NO3	Piaggio spare parts (POP)
ESP650DFP007	VACUUM MODULATOR	Piaggio spare parts (POP)
01G070005	VACUUM MODULATOR	Piaggio spare parts (POP)
888379	VACUUM PUMP	Piaggio spare parts (POP)
E87106852	VACUUM PUMP ASSEMBLY	Piaggio spare parts (POP)
889912	VACUUM PUMP OIL FEED PIPE	Piaggio spare parts (POP)
B073102	VACUUME PIPE NO2	Piaggio spare parts (POP)

897443	VALV.COVER/TAPPET PACKING	Piaggio spare parts (POP)
E40006817	VALVE	Piaggio spare parts (POP)
AP8104614	Valve	Piaggio spare parts (POP)
B012275	VALVE - EGR - PADMINI	Piaggio spare parts (POP)
889664	VALVE LASH ADJUSTMENT COVER	Piaggio spare parts (POP)
889973	VALVE LASH ADJUSTMENT COVER GASKET	Piaggio spare parts (POP)
KD9695022	VALVE 15LD -40°	Piaggio spare parts (POP)
B017323	VALVE ADJUSTMENT SCREW	Piaggio spare parts (POP)
B018242	VALVE ASSY	Piaggio spare parts (POP)
889553	VALVE BRIDGE	Piaggio spare parts (POP)
E87016057	VALVE CAM SHAFT WITH KEY	Piaggio spare parts (POP)
ESP650DFP002	VALVE CAMSHAFT WITH GEAR	Piaggio spare parts (POP)
ESP650DCH025	VALVE COLLET(MULTI GROOVE)	Piaggio spare parts (POP)
E870022109	VALVE COLLETS	Piaggio spare parts (POP)
1A010090	VALVE COMPLETE FLOAT	Piaggio spare parts (POP)
B016386	VALVE COMPLETE FLOAT	Piaggio spare parts (POP)
LG9850158	Valve Controller	Piaggio spare parts (POP)
LG8057017	VALVE COTTER	Piaggio spare parts (POP)
KD8057017	VALVE COTTER	Piaggio spare parts (POP)
E87018329A	VALVE EXHAUST	Piaggio spare parts (POP)
ED33791	VALVE EXHAUST	Piaggio spare parts (POP)
ED33454	VALVE EXHAUST	Piaggio spare parts (POP)
882203	VALVE EXHAUST	Piaggio spare parts (POP)
L9680047	VALVE FOR PISTON COOLING	Piaggio spare parts (POP)
L4845257	VALVE GUIDE	Piaggio spare parts (POP)
L4845266	VALVE GUIDE	Piaggio spare parts (POP)
LG4845265	VALVE GUIDE (SEMIFINI	Piaggio spare parts (POP)
E87022209	VALVE GUIDE (STD) FINISHED S	Piaggio spare parts (POP)
E87022208	VALVE GUIDE ? INLET & EXHAUS	Piaggio spare parts (POP)
970300608	VALVE GUIDE ASSEMBLY-DISASSEMBLY TOOL	Piaggio spare parts (POP)
E40018357	VALVE GUIDE EXHAUST	Piaggio spare parts (POP)
KD4845219	VALVE GUIDE EXHAUST F	Piaggio spare parts (POP)
KD48452820	VALVE GUIDE EXHAUST F	Piaggio spare parts (POP)
E40018356	VALVE GUIDE INLET	Piaggio spare parts (POP)
441010	VALVE GUIDE INSTALLER EXHAUST VALVE	Piaggio spare parts (POP)
441009	VALVE GUIDE INSTALLER INLET VALVE	Piaggio spare parts (POP)
KD4845218	VALVE GUIDE INTAKE F	Piaggio spare parts (POP)
970300610	VALVE GUIDE OIL SEAL ASSLY TOOL	Piaggio spare parts (POP)
SST94056	VALVE GUIDE REMOVAL	Piaggio spare parts (POP)
441008	VALVE GUIDE REMOVAL TOOL	Piaggio spare parts (POP)
E18A060006	VALVE GUIDE SET	Piaggio spare parts (POP)
KIT1U000021	VALVE GUIDE SET	Piaggio spare parts (POP)
1U000021	VALVE GUIDE SET	Piaggio spare parts (POP)
E40012249	VALVE GUIDE SET	Piaggio spare parts (POP)
E40012270	VALVE GUIDE SET G400AG	Piaggio spare parts (POP)
L2145066	VALVE HOOD	Piaggio spare parts (POP)
882202	VALVE INLET	Piaggio spare parts (POP)

E87018332A	VALVE INLET	Piaggio spare parts (POP)
ED33637	VALVE INLET	Piaggio spare parts (POP)
E40028329	VALVE INTAKE BIMETALLIC-MULTI GROOVE	Piaggio spare parts (POP)
970300575	Valve lifting tool 500 serises	Piaggio spare parts (POP)
SST94063	VALVE LIFTING TOOLLLLL	Piaggio spare parts (POP)
E50006811	VALVE PLATE ASSLY WITH RUBBER GASKET	Piaggio spare parts (POP)
83053R	VALVE SEAL RING	Piaggio spare parts (POP)
83054R	VALVE SEAL RING	Piaggio spare parts (POP)
436438	VALVE SEAL RING	Piaggio spare parts (POP)
843307	VALVE SEAL RING	Piaggio spare parts (POP)
1A015321	VALVE SEAT	Piaggio spare parts (POP)
B017542	VALVE SEAT	Piaggio spare parts (POP)
83055R	VALVE SEAT AND GUIDE GROUP	Piaggio spare parts (POP)
E07508366	Valve seat exhaust	Piaggio spare parts (POP)
E40012260	VALVE SEAT EXHAUST	Piaggio spare parts (POP)
KD8000219	VALVE SEAT EXHAUST	Piaggio spare parts (POP)
E40012239	VALVE SEAT EXHAUST	Piaggio spare parts (POP)
E43518358	Valve Seat Inlet	Piaggio spare parts (POP)
E07508367	Valve seat inlet	Piaggio spare parts (POP)
KD8000218	VALVE SEAT INLET	Piaggio spare parts (POP)
E40012238	VALVE SEAT INLET	Piaggio spare parts (POP)
E40012259	VALVE SEAT INTAKE	Piaggio spare parts (POP)
E87022239	VALVE SEAT SET (SEMI FINISHE	Piaggio spare parts (POP)
ED43410	VALVE SERVICE KIT	Piaggio spare parts (POP)
KIT95020	VALVE SERVIE KIT_GL435 BSIII	Piaggio spare parts (POP)
E43522238	VALVE SET	Piaggio spare parts (POP)
E07502273	Valve set	Piaggio spare parts (POP)
E40012250	VALVE SET	Piaggio spare parts (POP)
1U000020	VALVE SET	Piaggio spare parts (POP)
E87012273	VALVE SET	Piaggio spare parts (POP)
E40022216	VALVE SET CONSISTING OF SR NO 15 & 16	Piaggio spare parts (POP)
E40012271	VALVE SET MULTIGROOVE	Piaggio spare parts (POP)
ESP650DKT004	VALVE SET WITH STEM SEAL	Piaggio spare parts (POP)
A01A060008	VALVE SET WITH STEM SEAL	Piaggio spare parts (POP)
MS254007	VALVE SPR COMPRESSOR	Piaggio spare parts (POP)
E500575545	VALVE SPRING	Piaggio spare parts (POP)
KD5755155	VALVE SPRING	Piaggio spare parts (POP)
E07508216	Valve spring	Piaggio spare parts (POP)
E87000943	VALVE SPRING	Piaggio spare parts (POP)
882204	VALVE SPRING	Piaggio spare parts (POP)
ESP650DCH018	VALVE SPRING	Piaggio spare parts (POP)
B014705	VALVE SPRING (EXHAUST)	Piaggio spare parts (POP)
B014706	VALVE SPRING (INTAKE)	Piaggio spare parts (POP)
SST94168	Valve spring compression tool	Piaggio spare parts (POP)
441046	VALVE SPRING COMPRESSOR	Piaggio spare parts (POP)
1A012403	Valve Spring exhaust-inlet	Piaggio spare parts (POP)
E43502703	VALVE SPRING RETAINER	Piaggio spare parts (POP)

KD6400100	VALVE SPRING RETAINER	Piaggio spare parts (POP)
LG6400096	VALVE SPRING RETAINER	Piaggio spare parts (POP)
LG6400083	VALVE SPRING WASHER	Piaggio spare parts (POP)
LG4535015	VALVE STEM SEAL	Piaggio spare parts (POP)
KD4535015	VALVE STEM SEAL	Piaggio spare parts (POP)
441007	VALVE STEM SEAL INSRALLER	Piaggio spare parts (POP)
970300529	VALVE TAPPET PRESSING TOOL	Piaggio spare parts (POP)
970300505	VALVE TAPPET REPLACEMENT TOOL	Piaggio spare parts (POP)
KIT95011	VALVE SEAL RING SET	Piaggio spare parts (POP)
KIT95011R	VALVE SEAL RING SET	Piaggio spare parts (POP)
6A000583	VALVE, PURGE CONTROL	Piaggio spare parts (POP)
E43518363	VALVEINLETG435	Piaggio spare parts (POP)
857043	Valves cover gasket	Piaggio spare parts (POP)
857074	Valves cover gasket	Piaggio spare parts (POP)
LG1567264	VARIABLE SPARK IGNITION COIL	Piaggio spare parts (POP)
LG1567256	VARIABLE SPARK IGNITION COIL	Piaggio spare parts (POP)
LG1567265	Variable Spark Ignition Coil(For Petrol)	Piaggio spare parts (POP)
LG1567267	Variable Spark Ignition Coil(ForCNG/LPG)	Piaggio spare parts (POP)
L2440405	V-BELT AV10D L=628 +2/-2	Piaggio spare parts (POP)
652527	VCI ANTICORROSION ROLL (1M X 100M)	Piaggio spare parts (POP)
B042180	VEHICLE ASSLY CNG KIT BSIII	Piaggio spare parts (POP)
661912	VENT HOSE (VANAZ P.NO.K-0401-19-010)	Piaggio spare parts (POP)
660197	VENT HOSE ASSLY-1	Piaggio spare parts (POP)
660196	VENT HOSE ASSLY-2	Piaggio spare parts (POP)
925765	VENT HOSE(K-0401-19-010)	Piaggio spare parts (POP)
925767	VENT HOSE(K-0418-10-010)	Piaggio spare parts (POP)
SM26242516	Vent Plug -C.E. Brkt.	Piaggio spare parts (POP)
SM26242622	Vent Plug -Fix Brkt.	Piaggio spare parts (POP)
6A001166	VENTILATION AND DUCT HOSE	Piaggio spare parts (POP)
6A000619	VENTILATION HOSE ASSLY.	Piaggio spare parts (POP)
925801	VENTILATION PIPE	Piaggio spare parts (POP)
930101206	VERDE GREEN TOUCH UP SPRAY	Piaggio spare parts (POP)
B002305	VERTICAL PIPE BODY REAR CORNER ASSLY LH	Piaggio spare parts (POP)
B002309	VERTICAL PIPE BODY REAR CORNER ASSLY RH	Piaggio spare parts (POP)
LG8636238	VIBRAT.DAMPER D.30X30 70	Piaggio spare parts (POP)
LG8636249	VIBRATION DAMPER D30*30	Piaggio spare parts (POP)
AP8121520	Vibration damping weight trailing	Piaggio spare parts (POP)
B001312	VIN PLATE FOR APE TRUK MARK I	Piaggio spare parts (POP)
6B000861	VIN PLATE-FOR BANGLADESH	Piaggio spare parts (POP)
D7431087202	VISOR ASSY	Piaggio spare parts (POP)
B025672	VISUAL ASSY BARRIER	Piaggio spare parts (POP)
B077327	VISUAL BARRIER	Piaggio spare parts (POP)
B075102	VISUAL BARRIER - APE CITY CARGO	Piaggio spare parts (POP)
6B000951	VISUAL BARRIER ASSLY WITH FOOT STEP	Piaggio spare parts (POP)
6B000573	VISUAL BARRIER MOUNT BRACKET	Piaggio spare parts (POP)
KD9765162	VITE STEI 10X1 CONICA DIN 906	Piaggio spare parts (POP)
KD992R0460	VITE/SCREW	Piaggio spare parts (POP)

KD7200276	VITE/SCREW	Piaggio spare parts (POP)
ESK9249	VOLTAGE REGULATOR	Piaggio spare parts (POP)
1D000671R	VOLTAGE REGULATOR	Piaggio spare parts (POP)
ED33204	VOLTAGE REGULATOR	Piaggio spare parts (POP)
B024965	VOLTAGE REGULATOR	Piaggio spare parts (POP)
830667	VOLTAGE REGULATOR	Piaggio spare parts (POP)
1A018272	VOLTAGE REGULATOR	Piaggio spare parts (POP)
930101641	W.RED TOUCHUP SPRAY PAINT	Piaggio spare parts (POP)
B075333	W/H INST PANEL WITH H/L COUPLER-(CITY P)	Piaggio spare parts (POP)
B002564	W/HS - FRAME (APE CITY PETROL)	Piaggio spare parts (POP)
B024555R	W/HS - INST. PANEL - (PAX 200 CNG/LPG)	Piaggio spare parts (POP)
B024555	W/HS - INST. PANEL - (PAX 200 CNG/LPG)	Piaggio spare parts (POP)
B024554	W/HS - INST. PANEL - (PAX 200 PETROL)	Piaggio spare parts (POP)
B024554R	W/HS - INST. PANEL - (PAX 200 PETROL)	Piaggio spare parts (POP)
B002177	W/HS - INST. PANEL (APE CITY PETROL)	Piaggio spare parts (POP)
B024259	W/Hs MAIN (PAX 200 CNG)	Piaggio spare parts (POP)
B024261	W/Hs MAIN (PAX 200 LPG)	Piaggio spare parts (POP)
B023986	W/Hs MAIN (PAX 200 PETROL)	Piaggio spare parts (POP)
B073617	W/Hs MAIN (APE CITY 200 CNG - UPGRADE)	Piaggio spare parts (POP)
B073778	W/Hs MAIN (APE CITY 200 PETROL-UPGRADE)	Piaggio spare parts (POP)
B073854	W/Hs MAIN(APE CITY 200 LPG-UPGRADE)	Piaggio spare parts (POP)
B074213	W/Hs MAIN_CITY CARGO (PETROL)	Piaggio spare parts (POP)
B079090	W/Hs MAIN_LPG (MID BODY)	Piaggio spare parts (POP)
B073207	W/Hs MAIN_NEUTRAL SW(CITY 200 CNG)	Piaggio spare parts (POP)
B073205	W/Hs MAIN_NEUTRAL SW(CITY 200 LPG)	Piaggio spare parts (POP)
B073203	W/Hs MAIN_NEUTRAL SW(CITY 200 PETROL)	Piaggio spare parts (POP)
B042523R	W/Hs MAIN_UPDTD (CITY 200 CNG)	Piaggio spare parts (POP)
B042525R	W/Hs MAIN_UPDTD (CITY 200 LPG)	Piaggio spare parts (POP)
B042520R	W/Hs MAIN_UPDTD (CITY 200 PETROL)	Piaggio spare parts (POP)
B041833	W/Hs - PUMP & CLUTCH (JALDOOT)	Piaggio spare parts (POP)
B041833R	W/Hs - PUMP & CLUTCH (JALDOOT)	Piaggio spare parts (POP)
B042722	W/Hs COWL (PORTER - 600)	Piaggio spare parts (POP)
B024687	W/Hs COWL (PORTER -MINI)	Piaggio spare parts (POP)
B073618	W/Hs ENGINE (PAX 200 PETROL)	Piaggio spare parts (POP)
B023968	W/Hs ENGINE (PAX 200 PETROL)	Piaggio spare parts (POP)
B024847	W/Hs ENGINE (PORTER MINI)	Piaggio spare parts (POP)
661454R	W/Hs FRAME (V.E - CNG - GL 400 AG)	Piaggio spare parts (POP)
B002037	W/HS FRAME FOR DV (WITH SAFETY STARTER	Piaggio spare parts (POP)
B006893	W/HS FRAME FOR DV (GL 435)	Piaggio spare parts (POP)
B006893R	W/HS FRAME FOR DV (GL 435)	Piaggio spare parts (POP)
B001516	W/HS FRAME FOR XTRA LD (WITH STARTER SAF	Piaggio spare parts (POP)
B002636	W/HS FRAME(CNG-GL 400AG)-APE CNG XTRA LD	Piaggio spare parts (POP)
B075332	W/Hs I/P W/O BCS_W H/L CONN(PAX 200 GAS)	Piaggio spare parts (POP)
B023815	W/Hs I/P WITH H/L CONN(ALL 501 DIESEL)	Piaggio spare parts (POP)
B075329	W/Hs I/P WITH H/L CONN.(APE CLASSIC NEW)	Piaggio spare parts (POP)
B074249	W/Hs I/P(CITY 200 GAS)_W/O BCS	Piaggio spare parts (POP)
B079400	W/Hs INST PANEL (ALL 501 DIESEL)	Piaggio spare parts (POP)

B003270	W/Hs INST PANEL -APE CITY -GAS	Piaggio spare parts (POP)
6D000334	W/Hs INST. PANEL_APE MID BODY PETROL	Piaggio spare parts (POP)
6D000335R	W/Hs INST. PANEL_APE MID BODY(DSL)	Piaggio spare parts (POP)
B075248	W/Hs INST. PANEL_CITY CARGO (GAS)	Piaggio spare parts (POP)
B077754	W/Hs INST. PANEL_CITY PETROL(NEUTRAL)	Piaggio spare parts (POP)
B073978	W/Hs INST. PANEL_CITY PETROL(UPGRADE)	Piaggio spare parts (POP)
B073202	W/Hs INST. PANEL_NTRAL SW(CITY 200 PET)	Piaggio spare parts (POP)
B042521	W/Hs INST. PANEL_UPDTD (CITY 200 PETROL)	Piaggio spare parts (POP)
B077755	W/Hs INST.PANEL_CITY GAS(NEUTRAL)	Piaggio spare parts (POP)
B073979	W/Hs INST.PANEL_CITY GAS(UPGRADE)	Piaggio spare parts (POP)
B073206	W/Hs INST.PANEL_NEUTRAL SW(CITY 200 GAS)	Piaggio spare parts (POP)
B073204	W/Hs INST.PANEL_NEUTRAL SW(CITY 200 LPG)	Piaggio spare parts (POP)
B042522	W/Hs INST.PANEL_UPDTD (CITY 200 CNG/LPG)	Piaggio spare parts (POP)
B075334	W/Hs INSTRUMENT PANEL WITH H/L COUPLER	Piaggio spare parts (POP)
6D000312	W/Hs MAIN APE CALESSINO E4	Piaggio spare parts (POP)
B074250	W/Hs MAIN(CITY 200 CNG)_W/O BCS	Piaggio spare parts (POP)
B074251	W/Hs MAIN(CITY 200 LPG)_W/O BCS	Piaggio spare parts (POP)
B075957R	W/Hs_INST. PANEL_501_BS-IV(STD)	Piaggio spare parts (POP)
B075957	W/Hs_INST. PANEL_501_BS-IV(STD)- (VISON)	Piaggio spare parts (POP)
B079386	W/Hs_INST. PANEL_CITY DIESEL(UPGRADE)	Piaggio spare parts (POP)
B073980	W/Hs_INST. PANEL_CITY DIESEL(UPGRADE)	Piaggio spare parts (POP)
B073977	W/Hs_MAIN_CITY DIESEL(UPGRADE)	Piaggio spare parts (POP)
1E002750	WARD FOR LEVER	Piaggio spare parts (POP)
632397	WARNING INDICATOR LIGHT GROUP LEFT SIDE	Piaggio spare parts (POP)
632396	WARNING INDICATOR LIGHT GROUP RIGHT-SIDE	Piaggio spare parts (POP)
SST94138	WARRANTY POLICY GUIDELINES MANUAL	Piaggio spare parts (POP)
SST94146	WARRANTY POLICY GUIDELINES POSTER	Piaggio spare parts (POP)
01B120009	WASHER	Piaggio spare parts (POP)
D9451101200	WASHER	Piaggio spare parts (POP)
E5207625223	WASHER	Piaggio spare parts (POP)
269134	WASHER	Piaggio spare parts (POP)
567592	WASHER	Piaggio spare parts (POP)
E250755503	WASHER	Piaggio spare parts (POP)
E87000696	WASHER	Piaggio spare parts (POP)
E27762505	WASHER	Piaggio spare parts (POP)
E250755507	WASHER	Piaggio spare parts (POP)
1A011500	WASHER	Piaggio spare parts (POP)
E260762503	WASHER	Piaggio spare parts (POP)
E40000687	WASHER	Piaggio spare parts (POP)
224664	WASHER	Piaggio spare parts (POP)
E206762519	Washer	Piaggio spare parts (POP)
E87000185	WASHER	Piaggio spare parts (POP)
E90762561	WASHER	Piaggio spare parts (POP)
LG7495014	Washer	Piaggio spare parts (POP)
13935	WASHER	Piaggio spare parts (POP)
E1755507	WASHER	Piaggio spare parts (POP)
127927	WASHER	Piaggio spare parts (POP)

888920	WASHER	Piaggio spare parts (POP)
E070762562	Washer	Piaggio spare parts (POP)
L7701263	WASHER	Piaggio spare parts (POP)
D9461410600	WASHER	Piaggio spare parts (POP)
16195	WASHER	Piaggio spare parts (POP)
270216	WASHER	Piaggio spare parts (POP)
LG7495015	Washer	Piaggio spare parts (POP)
643764	WASHER	Piaggio spare parts (POP)
D9461211001	WASHER	Piaggio spare parts (POP)
74456	WASHER	Piaggio spare parts (POP)
B017178	WASHER	Piaggio spare parts (POP)
16661	WASHER	Piaggio spare parts (POP)
L7625306	WASHER	Piaggio spare parts (POP)
L7701236	WASHER	Piaggio spare parts (POP)
12533	WASHER	Piaggio spare parts (POP)
E270770069	Washer	Piaggio spare parts (POP)
485703	WASHER	Piaggio spare parts (POP)
D8518687Z03	WASHER	Piaggio spare parts (POP)
B019047	WASHER	Piaggio spare parts (POP)
D9004202038	WASHER	Piaggio spare parts (POP)
D9004209143	WASHER	Piaggio spare parts (POP)
D9004209144	WASHER	Piaggio spare parts (POP)
246976	WASHER	Piaggio spare parts (POP)
1A007501	WASHER	Piaggio spare parts (POP)
E87000315	WASHER	Piaggio spare parts (POP)
L7701226	WASHER	Piaggio spare parts (POP)
D9451201200	WASHER	Piaggio spare parts (POP)
ED40642	WASHER	Piaggio spare parts (POP)
1A017362	WASHER	Piaggio spare parts (POP)
B018356	WASHER	Piaggio spare parts (POP)
1A011217	WASHER	Piaggio spare parts (POP)
L7352056	WASHER	Piaggio spare parts (POP)
B016148	WASHER	Piaggio spare parts (POP)
L7701219	WASHER	Piaggio spare parts (POP)
120204015	WASHER	Piaggio spare parts (POP)
197101	WASHER	Piaggio spare parts (POP)
B016144	WASHER	Piaggio spare parts (POP)
178790	WASHER	Piaggio spare parts (POP)
D8518687Z02	WASHER	Piaggio spare parts (POP)
L7625305	WASHER	Piaggio spare parts (POP)
L7701212	WASHER	Piaggio spare parts (POP)
1000101040	WASHER	Piaggio spare parts (POP)
L7701269	WASHER	Piaggio spare parts (POP)
120204015R	WASHER	Piaggio spare parts (POP)
644890	WASHER	Piaggio spare parts (POP)
LG7495013	Washer	Piaggio spare parts (POP)
1A013440	WASHER	Piaggio spare parts (POP)

L7701218	WASHER	Piaggio spare parts (POP)
L7701217	WASHER	Piaggio spare parts (POP)
KD76253728	WASHER 9.5X19X4 15LD401	Piaggio spare parts (POP)
03G160838	washer cross gate lever support	Piaggio spare parts (POP)
03G160828	washer sealing reverse switch	Piaggio spare parts (POP)
ESP650DNB026	WASHER (24x13x3mmTHK.FOR CYL.HEAD)	Piaggio spare parts (POP)
660030	WASHER (SS)	Piaggio spare parts (POP)
E500762590	WASHER 0.1 MM	Piaggio spare parts (POP)
B041776	WASHER 1.5 MM	Piaggio spare parts (POP)
L7701201	WASHER 1.75	Piaggio spare parts (POP)
L7701202	WASHER 1.83	Piaggio spare parts (POP)
L7701203	WASHER 1.91	Piaggio spare parts (POP)
L7701204	WASHER 1.99	Piaggio spare parts (POP)
AP9150472	WASHER 10,5X17X1,5	Piaggio spare parts (POP)
L7701205	WASHER 2.07	Piaggio spare parts (POP)
L7701206	WASHER 2.15	Piaggio spare parts (POP)
L7701207	WASHER 2.23	Piaggio spare parts (POP)
L7701208	WASHER 2.31	Piaggio spare parts (POP)
229524	WASHER 21X14.3X2	Piaggio spare parts (POP)
B016192	WASHER 6.2x20x2	Piaggio spare parts (POP)
220575	WASHER 65X3	Piaggio spare parts (POP)
658851	WASHER 8,4 X 15	Piaggio spare parts (POP)
E87000311	WASHER ADJUSTING LINK BOLT	Piaggio spare parts (POP)
E40000711	WASHER BEARING	Piaggio spare parts (POP)
L4670120	WASHER COPPER	Piaggio spare parts (POP)
B011016	WASHER COPPER	Piaggio spare parts (POP)
882611	WASHER COPPER - TURBO OIL FEED	Piaggio spare parts (POP)
KD7626051	Washer D.6	Piaggio spare parts (POP)
ED41421	WASHER DC SHAFT	Piaggio spare parts (POP)
E87000304	WASHER -FIP CAMSHAFT	Piaggio spare parts (POP)
E87000681	WASHER FIP/VALVE CAMSHAFT	Piaggio spare parts (POP)
B002403	WASHER FOR CLUTCH ASSLY.	Piaggio spare parts (POP)
129011019	WASHER FOR CLUTCH ASSLY.	Piaggio spare parts (POP)
A01B060004	Washer for Gen 3.3 tappet bolt	Piaggio spare parts (POP)
108873	WASHER FOR HOLDING UPPER BEARING OF STG.	Piaggio spare parts (POP)
3054	Washer for tail lamp (4,3X8)	Piaggio spare parts (POP)
B009433	WASHER ID8.5 x 2	Piaggio spare parts (POP)
LG771A111	WASHER ISO7089-18-200	Piaggio spare parts (POP)
932303	Washer K-0418-03-020	Piaggio spare parts (POP)
B002791	WASHER M-10 (30 06 008 0)	Piaggio spare parts (POP)
B078263	WASHER M8	Piaggio spare parts (POP)
03G160407	Washer M8/L1.6	Piaggio spare parts (POP)
109404	WASHER OF RABBET (41737)	Piaggio spare parts (POP)
E87000686	WASHER PIN(SUPPORT BRACKET)	Piaggio spare parts (POP)
L7625309	WASHER PLAIN	Piaggio spare parts (POP)
L7625310	WASHER PLAIN	Piaggio spare parts (POP)
L7625308	WASHER PLAIN 8,4x15x1,5	Piaggio spare parts (POP)

E260756505	WASHER SPRING	Piaggio spare parts (POP)
109066	WASHER WITH PROTECTION FOR BEARING	Piaggio spare parts (POP)
925747	WASHER(K-0101-04-100)	Piaggio spare parts (POP)
932233	WASHER(K-0101-04-100)Paxx200	Piaggio spare parts (POP)
932249	Washer(K-0101-05-020)Paxx200	Piaggio spare parts (POP)
925752	WASHER(K-0102-02-390)	Piaggio spare parts (POP)
932257	WASHER(K-0812-12-050)Paxx200	Piaggio spare parts (POP)
568135	WASHER(NI PLATED)	Piaggio spare parts (POP)
932214	WASHER(R-8106-210)Paxx200	Piaggio spare parts (POP)
932219	WASHER(R-8106-330)Paxx200v	Piaggio spare parts (POP)
932208	WASHER(R-8106-VI-040)Paxx200	Piaggio spare parts (POP)
940022	Washer(truk plus)	Piaggio spare parts (POP)
709069	WASHER, PLATE	Piaggio spare parts (POP)
D9461110800	WASHER, PLATE	Piaggio spare parts (POP)
D9461410800	WASHER, PLATE	Piaggio spare parts (POP)
D9461310800	WASHER, PLATE	Piaggio spare parts (POP)
615065	WASHER, PLATE	Piaggio spare parts (POP)
D9004201568	WASHER, PLATE	Piaggio spare parts (POP)
D9004201638	WASHER, PLATE	Piaggio spare parts (POP)
D9004201542	WASHER, PLATE	Piaggio spare parts (POP)
D9004210027	WASHER, SEAL	Piaggio spare parts (POP)
D9451100800	WASHER, SPRIN	Piaggio spare parts (POP)
D9004206048	WASHER, WAVE	Piaggio spare parts (POP)
D9453100800	WASHER, WAVE	Piaggio spare parts (POP)
E40000704	WASHER,SPRING	Piaggio spare parts (POP)
03G160878	WASHER-BREATHER	Piaggio spare parts (POP)
ED41573	WASHERCYLINDER	Piaggio spare parts (POP)
03G161714	washerGearBevel Differential pin	Piaggio spare parts (POP)
929936	Washer-K-0101-04-110	Piaggio spare parts (POP)
929930	Washer-K-0102-02-390	Piaggio spare parts (POP)
03G160214	WASHER-LOCKNUT	Piaggio spare parts (POP)
920008	Washer-R-8106-340	Piaggio spare parts (POP)
616959	WATER DELIVERY PIPE	Piaggio spare parts (POP)
B011823	WATER ELBOW BEND	Piaggio spare parts (POP)
6D000873	WATER IN FUEL SENSOR PIGTAIL	Piaggio spare parts (POP)
E87008851A	WATER INLET MANIFOLD	Piaggio spare parts (POP)
B011130	WATER MANIFOLD ASSEMBLY	Piaggio spare parts (POP)
SPB010530	WATER MANIFOLD ASSEMBLY	Piaggio spare parts (POP)
SPB011130	WATER MANIFOLD ASSEMBLY BNA SPD	Piaggio spare parts (POP)
E87008853A	WATER OUTLET	Piaggio spare parts (POP)
E07518630	Water outlet manifold	Piaggio spare parts (POP)
E40010865	WATER OUTLET MANIFOLD ASSEMBLY	Piaggio spare parts (POP)
ED32815	Water pump	Piaggio spare parts (POP)
E87005610	WATER PUMP	Piaggio spare parts (POP)
L6584480	Water Pump	Piaggio spare parts (POP)
ESP650DCS001	WATER PUMP ASSEMBLY	Piaggio spare parts (POP)
B010578	WATER PUMP ASSEMBLY	Piaggio spare parts (POP)

E60001859	Water Pump Assembly	Piaggio spare parts (POP)
B010665	WATER PUMP ASSEMBLY	Piaggio spare parts (POP)
E60001868	WATER PUMP ASSEMBLY-510	Piaggio spare parts (POP)
E4005616	WATER PUMP ASSLY (COSMIC PORT).	Piaggio spare parts (POP)
A01A100001	WATER PUMP Assly With Pulley	Piaggio spare parts (POP)
ED43330	Water pump assy.with flange & pulley	Piaggio spare parts (POP)
L7270213	WATER PUMP CONNECTOR I.P.	Piaggio spare parts (POP)
1A012689	Water Pump Cover	Piaggio spare parts (POP)
1A012688	WATER PUMP FAN	Piaggio spare parts (POP)
889470	WATER PUMP GASKET	Piaggio spare parts (POP)
E87008850A	Water pump mounting plate(Machined)	Piaggio spare parts (POP)
82991R	Water pump seal ring	Piaggio spare parts (POP)
ESP650DCS002	WATER PUMP WITH INTEGRATED PULLEY P-700	Piaggio spare parts (POP)
1A012450	WATER RADIATOR	Piaggio spare parts (POP)
1A019946R	WATER RADIATOR	Piaggio spare parts (POP)
1A019724	WATER RADIATOR	Piaggio spare parts (POP)
F002H22040	Water sensor	Piaggio spare parts (POP)
2911161261	WATER SEPARATOR	Piaggio spare parts (POP)
1A016180	Water tank gasket	Piaggio spare parts (POP)
1A021287R	WATER TEMPERATURE SENSOR	Piaggio spare parts (POP)
E87009709	WATER TEMPERATURE SENSOR WIT	Piaggio spare parts (POP)
847522	Water thermostat	Piaggio spare parts (POP)
645626	WAY, 3	Piaggio spare parts (POP)
645627	WAY, 5	Piaggio spare parts (POP)
B042671	WC mtg bolts & washer kit - RR	Piaggio spare parts (POP)
D6821387502	WEATHER STRIP FR DOOR , OUTER RH	Piaggio spare parts (POP)
D6786587504	WEATHER STRIP , FR DOOR , LWR	Piaggio spare parts (POP)
569334	WEATHERSTRIP	Piaggio spare parts (POP)
D6786387503	WEATHERSTRIP FR DOOR , NO 2 RH	Piaggio spare parts (POP)
D6821487502	WEATHERSTRIP FR DOOR , OUTER LH	Piaggio spare parts (POP)
260850	WEATHERSTRIP FR DOOR GLASS, INNER	Piaggio spare parts (POP)
B077867	WEATHERSTRIP FR DOOR GLASS, INNER	Piaggio spare parts (POP)
B003225	WEATHERSTRIP WINDSCREEN	Piaggio spare parts (POP)
660335	WEATHERSTRIP WINDSCREEN	Piaggio spare parts (POP)
D6483187Z01	WEATHERSTRIP, BACK DOOR	Piaggio spare parts (POP)
B003276	WEATHERSTRIP, BACK WINDOW	Piaggio spare parts (POP)
260858	WEATHERSTRIP, FR DOOR GLASS, OUTER LH	Piaggio spare parts (POP)
B077869	WEATHERSTRIP, FR DOOR GLASS, OUTER LH	Piaggio spare parts (POP)
260851	WEATHERSTRIP, FR DOOR GLASS, OUTER RH	Piaggio spare parts (POP)
B077868	WEATHERSTRIP, FR DOOR GLASS, OUTER RH	Piaggio spare parts (POP)
D6786187Z01	WEATHERSTRIP, FR DOOR RH	Piaggio spare parts (POP)
D5612187Z01	WEATHERSTRIP, WINDSHIELD	Piaggio spare parts (POP)
AP8140146	Weight for tool oil seal assy	Piaggio spare parts (POP)
6D000907	WELD NUT, M3	Piaggio spare parts (POP)
03G160414	Welded sub assy reverse fork	Piaggio spare parts (POP)
B002593	WHEEL CYLINDER ASSLY (DIA. 19.05)	Piaggio spare parts (POP)
B041708	WHEEL ASSLY - EURO CITY	Piaggio spare parts (POP)

652027R	WHEEL ASSLY 501	Piaggio spare parts (POP)
659916	WHEEL ASSLY 601 (HB)	Piaggio spare parts (POP)
B001405	WHEEL ASSLY APE CITY	Piaggio spare parts (POP)
661404	WHEEL ASSY 13	Piaggio spare parts (POP)
B024919	WHEEL ASSY-12"	Piaggio spare parts (POP)
616526	Wheel axle	Piaggio spare parts (POP)
6C000060	WHEEL AXLE	Piaggio spare parts (POP)
6C000576	WHEEL AXLE	Piaggio spare parts (POP)
644899	WHEEL AXLE	Piaggio spare parts (POP)
644899P	WHEEL AXLE	Piaggio spare parts (POP)
643547	Wheel axle	Piaggio spare parts (POP)
1E001228	WHEEL BEARING	Piaggio spare parts (POP)
B076304	WHEEL BOX ASSLY	Piaggio spare parts (POP)
632563	WHEEL BOX ASSLY (601)	Piaggio spare parts (POP)
569197	WHEEL BOX ASSLY (MODIFIED)	Piaggio spare parts (POP)
615025	WHEEL BRAKE CYLINDER ASSY.	Piaggio spare parts (POP)
615026	WHEEL BRAKE CYLINDER ASSY.	Piaggio spare parts (POP)
661478	WHEEL BRAKE CYLINDER ASSY.DIA 22.225	Piaggio spare parts (POP)
B041697	WHEEL CAP	Piaggio spare parts (POP)
B077481	WHEEL CAP	Piaggio spare parts (POP)
B001855	WHEEL CAP	Piaggio spare parts (POP)
B075292	WHEEL CAP SET - APE CITY	Piaggio spare parts (POP)
925599	WHEEL CAP SET (PAX 200)	Piaggio spare parts (POP)
940182	Wheel Cap Set for New Ape City Rim_ABSWH	Piaggio spare parts (POP)
940181	Wheel Cap Set for New Ape City Rim_ABSYW	Piaggio spare parts (POP)
940180	Wheel Cap Set for New Ape City Rim_PP SL	Piaggio spare parts (POP)
940179	Wheel Cap Set for New Ape City Rim_PP WH	Piaggio spare parts (POP)
940178	Wheel Cap Set for New Ape City Rim_PP YW	Piaggio spare parts (POP)
940183	Wheel Cap Set for New ApeCity Rim_ABS SL	Piaggio spare parts (POP)
940081	Wheel Cap Set with Bkt 501-ABS Silver	Piaggio spare parts (POP)
940082	Wheel Cap Set with Bkt 501-ABS Yellow	Piaggio spare parts (POP)
940083	Wheel Cap Set with Bkt 501-ABSWhite	Piaggio spare parts (POP)
940078	Wheel Cap Set with Bkt 501-PP Silver	Piaggio spare parts (POP)
940080	Wheel Cap Set with Bkt 501-PP White	Piaggio spare parts (POP)
940079	Wheel Cap Set with Bkt 501-PP Yellow	Piaggio spare parts (POP)
940088	Wheel Cap Set with Bkt-Ape City- ABS YW	Piaggio spare parts (POP)
940087	Wheel Cap Set with Bkt-Ape City-ABS SL	Piaggio spare parts (POP)
940089	Wheel Cap Set with Bkt-Ape City-ABS WH	Piaggio spare parts (POP)
940084	Wheel Cap Set with Bkt-Ape City-PP SL	Piaggio spare parts (POP)
940086	Wheel Cap Set with Bkt-Ape City-PP WH	Piaggio spare parts (POP)
940085	Wheel Cap Set with Bkt-Ape City-PP YW	Piaggio spare parts (POP)
B003268	WHEEL CARRIER ASSLY RH	Piaggio spare parts (POP)
B002173	WHEEL CARRIER WITH ASSLY	Piaggio spare parts (POP)
660752	WHEEL CENTERING TOOL	Piaggio spare parts (POP)
1A012157	WHEEL CLUTCH	Piaggio spare parts (POP)
1A019391	WHEEL CLUTCH	Piaggio spare parts (POP)
658485	WHEEL COVER	Piaggio spare parts (POP)

B003017	WHEEL CYLINDER ASSLY	Piaggio spare parts (POP)
632148	WHEEL CYLINDER ASSLY (DIA.25.4)	Piaggio spare parts (POP)
B073259	WHEEL CYLINDER ASSLY KIT-D220 RR BRAKE	Piaggio spare parts (POP)
B003014	WHEEL CYLINWHEEL CYLINDER ASSLY DIA 25.4	Piaggio spare parts (POP)
660931	WHEEL NUT (M 12 X 1.5)	Piaggio spare parts (POP)
652033	WHEEL NUT (VE) M12 X 1.5	Piaggio spare parts (POP)
644973R	WHEEL RIM ASSEMBLY	Piaggio spare parts (POP)
644973RP	WHEEL RIM ASSEMBLY	Piaggio spare parts (POP)
B077976	WHEEL RIM ASSEMBLY - TUBELESS (KLASSIC)	Piaggio spare parts (POP)
644973	WHEEL RIM ASSEMBLY (VE)	Piaggio spare parts (POP)
B073771	WHEEL RIM ASSLY (VAVE)-12"	Piaggio spare parts (POP)
B074588P	WHEEL RIM ASSLY INNER - PAINTED	Piaggio spare parts (POP)
B074588R	WHEEL RIM ASSLY INNER - PAINTED	Piaggio spare parts (POP)
B073472	WHEEL RIM ASSLY-12"	Piaggio spare parts (POP)
6C000430	WHEEL RIM ASSY	Piaggio spare parts (POP)
109579	WHEEL RIM ASSY	Piaggio spare parts (POP)
660863	WHEEL RIM ASSY	Piaggio spare parts (POP)
B074590R	WHEEL RIM OUTER - PAINTED	Piaggio spare parts (POP)
B074590P	WHEEL RIM OUTTER - PAINTED	Piaggio spare parts (POP)
KIT95129R	Wheel Rim set_ Ape City(Inner+Outer)	Piaggio spare parts (POP)
B041519R	WHEEL RIM-12"	Piaggio spare parts (POP)
B024920	WHEEL RIM-12"	Piaggio spare parts (POP)
660841	WHEEL S/A, STEERING	Piaggio spare parts (POP)
615059	WHEEL S/A, STEERING	Piaggio spare parts (POP)
652012	WHEEL SPANNER 17MM	Piaggio spare parts (POP)
6B002528	WHITE REFLECTIVE TAPE	Piaggio spare parts (POP)
B075439	WHs MAIN (CITY 200 PETROL) UPGRADE	Piaggio spare parts (POP)
B075441	WHs MAIN (CITY 200 CNG) UPGRADE	Piaggio spare parts (POP)
B075440	WHs MAIN (CITY 200 LPG) UPGRADE	Piaggio spare parts (POP)
B075831	WHs MAIN _ 501 BS IV _ PASS	Piaggio spare parts (POP)
B075831R	WHs MAIN _ 501 BS IV _ PASS/PKUP(BASE)	Piaggio spare parts (POP)
B075659	WHs MAIN _ CITY BS IV _ PETROL(SN)	Piaggio spare parts (POP)
B075659R	WHs MAIN _ CITY BS IV _ PETROL(SN)	Piaggio spare parts (POP)
B075661	WHs MAIN _ CITY BS IV _ CNG (SN)	Piaggio spare parts (POP)
B075661R	WHs MAIN _ CITY BS IV _ CNG (SN)	Piaggio spare parts (POP)
B075660	WHs MAIN _ CITY BS IV _ LPG (SN)	Piaggio spare parts (POP)
B075660R	WHs MAIN _ CITY BS IV _ LPG (SN)	Piaggio spare parts (POP)
B076547	WHs MAIN _ PASS 501 BS IV (STD) VISON	Piaggio spare parts (POP)
B077249	WHs MAIN_CITY CARGO BSIV (PETROL)	Piaggio spare parts (POP)
B079067	WHs MAIN_PETROL (MID BODY)	Piaggio spare parts (POP)
B077261	WHs _INST.PANEL_APE 501 GAS (WC)	Piaggio spare parts (POP)
B075443	WHs ENGINE (CITY 200) UPGRADE	Piaggio spare parts (POP)
B042840R	WHs FOR CABIN HEATER	Piaggio spare parts (POP)
B002510R	WHs INST PANEL(IG SW WITH COUPLER)	Piaggio spare parts (POP)
B002510	WHs INST PANEL(IG SW WITH COUPLER)-VISON	Piaggio spare parts (POP)
B078659	WHs INST.PANEL (CITY P - EURO 4)	Piaggio spare parts (POP)
B076548	WHs MAIN _LD 501 BS IV (STD)- VISON	Piaggio spare parts (POP)

B076535	WHs MAIN- CITY BS IV DIESEL (DLX)	Piaggio spare parts (POP)
B075662R	WHs MAIN- CITY DIESEL - BS IV	Piaggio spare parts (POP)
B075442	WHs MAIN (CITY DIESEL) UPGRADE	Piaggio spare parts (POP)
B075885R	WHs MAIN (501 BS IV)_LD(BASE)	Piaggio spare parts (POP)
B075885	WHs MAIN (501 BS IV)_LD	Piaggio spare parts (POP)
B078260	WHs MAIN _501 (CARGO LD) CNG(WC GCL ENG)	Piaggio spare parts (POP)
B078259	WHs MAIN _501 (CARGO LD) LPG(WC GCL ENG)	Piaggio spare parts (POP)
B077260	WHs MAIN _501(PASS) CNG (WC GCL ENG)	Piaggio spare parts (POP)
B078258	WHs MAIN _501(PASS) LPG (WC GCL ENG)	Piaggio spare parts (POP)
6D000206R	WHs MAIN CITY DIESEL BSIV (BASE)	Piaggio spare parts (POP)
B077845R	WHs MAIN PASS D+5	Piaggio spare parts (POP)
6D000019	WHs MAIN_501 (LDX PLUS) LPG(WC GCL ENG)	Piaggio spare parts (POP)
6D000018	WHs MAIN_501(LDX PLUS)CNG (WC GCL ENG)	Piaggio spare parts (POP)
B079089	WHs MAIN_CNG (MID BODY)	Piaggio spare parts (POP)
B079068	WHs MAIN_DIESEL (MID BODY)	Piaggio spare parts (POP)
B076483R	WHs_ MAIN_ APE CITY DSL BSIV STD	Piaggio spare parts (POP)
B075905	WHs_BATT.+VE (G700-BS-IV)	Piaggio spare parts (POP)
B075906	WHs_ENGINE_(MINDA)_ PORTER 700	Piaggio spare parts (POP)
B075904	WHs_MAIN_(MINDA)_ PORTER 700	Piaggio spare parts (POP)
B073647	WHs_MAIN_PORTER 1000 (W/O TRA)	Piaggio spare parts (POP)
B076773	WHs_PIGATIL_2ST_RELAY_SERVICE	Piaggio spare parts (POP)
A01G120010	WIF ASY- (fuel filter drain plug+sensor)	Piaggio spare parts (POP)
F002H23583	WIF SENSOR	Piaggio spare parts (POP)
602482	WIND SCREEN BAND	Piaggio spare parts (POP)
A01M110002	WINDOW COVER	Piaggio spare parts (POP)
64263	WINDOW FRICTION WASHER	Piaggio spare parts (POP)
B002760	WINDOW GLASS LH APE MINI	Piaggio spare parts (POP)
B002860	WINDOW GLASS PACKING	Piaggio spare parts (POP)
B002761	WINDOW GLASS RH APE MINI	Piaggio spare parts (POP)
B003556	WINDOW GLASS SUPPORT FOAM	Piaggio spare parts (POP)
B006884	WINDOW REGULATOR HANDLE	Piaggio spare parts (POP)
661445	WINDSCREEN FRAME ASSLY.	Piaggio spare parts (POP)
587891	WINDSHIELD ASSEMBLY WITH I.P.	Piaggio spare parts (POP)
6B000142BL	WINDSHIELD ASSLY - BL	Piaggio spare parts (POP)
6B000142BW	WINDSHIELD ASSLY - BW	Piaggio spare parts (POP)
6B000142CB	WINDSHIELD ASSLY - CB	Piaggio spare parts (POP)
6B000142ED	WINDSHIELD ASSLY - ED	Piaggio spare parts (POP)
6B000142EG	WINDSHIELD ASSLY - EG	Piaggio spare parts (POP)
6B000142GY	WINDSHIELD ASSLY - GY	Piaggio spare parts (POP)
6B000142NB	WINDSHIELD ASSLY - NB	Piaggio spare parts (POP)
6B000142WR	WINDSHIELD ASSLY - WR	Piaggio spare parts (POP)
B073602ED	WINDSHIELD ASSLY COMP PAX UPGRADE - CED	Piaggio spare parts (POP)
B073587	WINDSHIELD DOME CONNECTION BRACKET LH	Piaggio spare parts (POP)
B073588	WINDSHIELD DOME CONNECTION BRACKET RH	Piaggio spare parts (POP)
B076098ED	WINDSHIELD FRAME ASSLY APE 501 BSIV- SPD	Piaggio spare parts (POP)
B076098GY	WINDSHIELD FRAME ASSLY APE 501 BSIV-GY	Piaggio spare parts (POP)
109011	WINDSHIELD GLASS	Piaggio spare parts (POP)

6B001921	WINDSHIELD GLASS	Piaggio spare parts (POP)
B002500	WINDSHIELD GLASS (LAMINATED)	Piaggio spare parts (POP)
B076048ED	WINDSHIELD ORDINATE APE 501 BSIV SPD	Piaggio spare parts (POP)
B073970	WINDSHIELD PACKING	Piaggio spare parts (POP)
109012	WINDSHIELD PACKING	Piaggio spare parts (POP)
109012P	WINDSHIELD PACKING	Piaggio spare parts (POP)
B073626	WINDSHIELD PACKING	Piaggio spare parts (POP)
652077	WINDSHIELD WASHER TANK	Piaggio spare parts (POP)
652018	WINDSHIELD WASHER UNIT	Piaggio spare parts (POP)
B006593	WING NUT M6	Piaggio spare parts (POP)
E106320002	WING NUT M6x1	Piaggio spare parts (POP)
B077998	WING SCREW (M6x1)	Piaggio spare parts (POP)
569344	WIPER ARM	Piaggio spare parts (POP)
B073600	WIPER ARM & BLADE ASSLY	Piaggio spare parts (POP)
632292A	WIPER ARM & BLADE ASSLY.	Piaggio spare parts (POP)
652003	WIPER ARM E BLADE ASSEMBL	Piaggio spare parts (POP)
B076133	WIPER BLADE & ARM ASSY. LH (CO-DRIVER)	Piaggio spare parts (POP)
B076134	WIPER BLADE & ARM ASSY. RH (DRIVER)	Piaggio spare parts (POP)
B002342	WIPER BLADE ASSY.	Piaggio spare parts (POP)
645046	WIPER BLADE ASSY. LH.	Piaggio spare parts (POP)
587827	WIPER BLADE WITH ARM	Piaggio spare parts (POP)
B073682	WIPER BUNDY MOTOR TO WHEEL BOX(NEW W/SH)	Piaggio spare parts (POP)
B076574	WIPER MOT ASSY W/MTG BKT-501 BSIV (BASE)	Piaggio spare parts (POP)
632284	WIPER MOTOR ASSLY - RACK TYPE	Piaggio spare parts (POP)
6D000837	WIPER MOTOR ASSLY WITH MTG BKT	Piaggio spare parts (POP)
632995	WIPER MOTOR ASSY WITH MTG BKT -(501).	Piaggio spare parts (POP)
B073685	WIPER MOTOR ASSY WITH MTG BKT -(501).	Piaggio spare parts (POP)
6D000454	WIPER MOTOR ASSY WITH MTG BKT -EV	Piaggio spare parts (POP)
569166	WIPER MOTOR MTG. BKT ASSLY	Piaggio spare parts (POP)
652082R	WIPER/WASHER SWITCH - APE 601 HBAR	Piaggio spare parts (POP)
6D000435	WIRE ASSY (WITH REVERSE)LH & RH	Piaggio spare parts (POP)
6D000424	WIRE ASSY WITHOUT BULB	Piaggio spare parts (POP)
E07518642	Wire clamp	Piaggio spare parts (POP)
B006496	WIRE CLIP FOR CLUTCH RELEASE FORK	Piaggio spare parts (POP)
B003187	WIRE COWL	Piaggio spare parts (POP)
613982R	WIRE COWL (APE TRUK)	Piaggio spare parts (POP)
B008204	WIRE COWL APE TRUK PLUS BS-III -DTPL	Piaggio spare parts (POP)
662555	WIRE COWL 'QI 870'	Piaggio spare parts (POP)
B003851	WIRE COWL(870) DTPL (GALACTIC SWITCH)	Piaggio spare parts (POP)
B003847	WIRE COWL(APE TRUK) DTPL(GALACTIC SW)	Piaggio spare parts (POP)
B003187R	WIRE COWL-APE MINI 441	Piaggio spare parts (POP)
567703	WIRE EARTH LAMP TO BUITTON	Piaggio spare parts (POP)
B003186	WIRE ENGINE	Piaggio spare parts (POP)
613979R	WIRE ENGINE (APE TRUK)	Piaggio spare parts (POP)
662557R	WIRE ENGINE (APE TRUK PLUS)	Piaggio spare parts (POP)
B005957	WIRE ENGINE GROUND	Piaggio spare parts (POP)
613980R	WIRE ENGINE No. 2 (APE TRUK)	Piaggio spare parts (POP)

662556R	WIRE ENGINE No. 2 (APE TRUK PLUS)	Piaggio spare parts (POP)
B001998R	WIRE ENGINE No. 3 (APE TRUK)	Piaggio spare parts (POP)
662556	WIRE ENGINE NO.2 'QI 870'	Piaggio spare parts (POP)
662557	WIRE ENGINE 'QI 870'	Piaggio spare parts (POP)
B003186R	WIRE ENGINE-APE MINI 441	Piaggio spare parts (POP)
90511	WIRE GUIDE TERMINAL	Piaggio spare parts (POP)
932267	Wire Harness ,(K-0442-04) Paxx 200 LPG	Piaggio spare parts (POP)
B023621	WIRE HARNESS MAIN (BNA)	Piaggio spare parts (POP)
B023621R	WIRE HARNESS MAIN(BNA-BS-IV)	Piaggio spare parts (POP)
1A018167	WIRE HARNESS SUPPORT BRACKET	Piaggio spare parts (POP)
1A018166	WIRE HARNESS SUPPORT BRACKET	Piaggio spare parts (POP)
932245	Wire Harness(K-0180-03)Paxx200	Piaggio spare parts (POP)
643877	WIRE HARNESS(VANAZ PT NO K-0415-13)	Piaggio spare parts (POP)
587932	WIRE HARNESS, MAIN	Piaggio spare parts (POP)
587913	WIRE HARNESS-DASH BOARD	Piaggio spare parts (POP)
929944	Wire Harness-K-0122-IV-09	Piaggio spare parts (POP)
B001997R	WIRE ROOF (APE TRUK)	Piaggio spare parts (POP)
B011596	WIRE SUPPORT BRACKET	Piaggio spare parts (POP)
B011774	WIRE SUPPORT BRACKET	Piaggio spare parts (POP)
B011627	WIRE SUPPORT BRACKET	Piaggio spare parts (POP)
1F000482	WIRE SUPPORT BRACKET	Piaggio spare parts (POP)
B011781	WIRE SUPPORT BRACKET	Piaggio spare parts (POP)
B007852	WIRE TRANSMISSION GROUND	Piaggio spare parts (POP)
613982	WIRE, COWL	Piaggio spare parts (POP)
D8212387Z01	WIRE, ENGINE, NO.3	Piaggio spare parts (POP)
D8217187Z01	WIRE, ROOF	Piaggio spare parts (POP)
587803	WIRE,GEAR CONTROL WITH TREMINAL	Piaggio spare parts (POP)
932287	WIRING ASSLY WITH HOLDER(BNA)	Piaggio spare parts (POP)
B003963	WIRING H/s FRAME (APE CITY -LPG)VANAZ	Piaggio spare parts (POP)
E40015466	WIRING HARNESS	Piaggio spare parts (POP)
F002H22957	Wiring Harness	Piaggio spare parts (POP)
1D001405	WIRING HARNESS	Piaggio spare parts (POP)
660052	WIRING HARNESS - FRAME	Piaggio spare parts (POP)
B003236	WIRING HARNESS FRAME (435 - LD)	Piaggio spare parts (POP)
B003237	WIRING HARNESS FRAME (GL 435)	Piaggio spare parts (POP)
B001366	WIRING HARNESS - FRAME (APE CITY DIESEL	Piaggio spare parts (POP)
660101	WIRING HARNESS - FRAME (BATT . CHARGE I	Piaggio spare parts (POP)
B042628	WIRING HARNESS FRAME _APE CLASSIC NEW	Piaggio spare parts (POP)
660402	WIRING HARNESS - INST. PANEL (FOR APE -	Piaggio spare parts (POP)
660051	WIRING HARNESS - INST. PANEL .	Piaggio spare parts (POP)
661712	WIRING HARNESS (FRAME)	Piaggio spare parts (POP)
B041147	WIRING HARNESS ADAPTOR (CLUTCH)	Piaggio spare parts (POP)
B041146	WIRING HARNESS ADAPTOR (PUMP)	Piaggio spare parts (POP)
E87103502	WIRING HARNESS FOR ECU	Piaggio spare parts (POP)
B003269	WIRING HARNESS FRAME (APE CITY -CNG)	Piaggio spare parts (POP)
660806	WIRING HARNESS FRAME (BATTERY CHARGE)	Piaggio spare parts (POP)
660403	WIRING HARNESS FRAME (FOR APE - DELUX)	Piaggio spare parts (POP)

661694	WIRING HARNESS FRAME (FOR CNG - GL - 40	Piaggio spare parts (POP)
B002499	WIRING HARNESS FRAME (FOR STARTER SAFET	Piaggio spare parts (POP)
661482	WIRING HARNESS FRAME (FOR STARTER SAFET	Piaggio spare parts (POP)
661454	WIRING HARNESS FRAME (V.E - CNG - GL 40	Piaggio spare parts (POP)
661459R	WIRING HARNESS FRAME (V.E - LPG - GL 40	Piaggio spare parts (POP)
661459	WIRING HARNESS FRAME (V.E - LPG - GL 40	Piaggio spare parts (POP)
662569	WIRING HARNESS FRAME (FOR LPG- GL-400 AG	Piaggio spare parts (POP)
B009277R	WIRING HARNESS FRAME -BS-III ENGINE	Piaggio spare parts (POP)
B009277	WIRING HARNESS FRAME -BS-III ENGINE	Piaggio spare parts (POP)
661483	WIRING HARNESS INST. PANNEL (FOR SAFETY	Piaggio spare parts (POP)
E43518076	WIRING HARNESS(EGR GREAVES)	Piaggio spare parts (POP)
6D000278	WIRING HARNESS, BATT +VE CITY PET BSVI	Piaggio spare parts (POP)
6D000268	WIRING HARNESS, BATTERY +VE XTRA LD BSVI	Piaggio spare parts (POP)
6D000258	WIRING HARNESS, BATTERY D+5 DIESEL BSVI	Piaggio spare parts (POP)
6D000937	WIRING HARNESS, BATTERY TO JB	Piaggio spare parts (POP)
6D000279	WIRING HARNESS, ENGINE CITY CNG BSVI	Piaggio spare parts (POP)
6D000663	WIRING HARNESS, I.P	Piaggio spare parts (POP)
6D000274	WIRING HARNESS, I.P CITY PET BSVI	Piaggio spare parts (POP)
6D000257	WIRING HARNESS, I.P D5S BSVI	Piaggio spare parts (POP)
6D000271	WIRING HARNESS, I.P HI-TECH LPG BSIV	Piaggio spare parts (POP)
6D000269	WIRING HARNESS, I.P XTRA LD BSVI DIESEL	Piaggio spare parts (POP)
6D001065	WIRING HARNESS, INST. PANEL	Piaggio spare parts (POP)
6D001066	WIRING HARNESS, INST. PANEL	Piaggio spare parts (POP)
B079401R	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000353	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000725	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000684	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000730	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000722	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000723	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D001172	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000660	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000682	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000683	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000309	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000815	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000819	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000445	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000741	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000606	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000051	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000442	WIRING HARNESS, IP	Piaggio spare parts (POP)
6D000296	WIRING HARNESS, IP, HI-TECH CNG (BSVI)	Piaggio spare parts (POP)
6D000209R	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000210R	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000246R	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000209	WIRING HARNESS, MAIN	Piaggio spare parts (POP)

6D000055R	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000057R	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000820	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000742	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D001173	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000308	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000515	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000661	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000535	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000721	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000724	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D001292	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000688	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000689	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000546	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000811	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000545	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D001063	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000446	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000352	WIRING HARNESS, MAIN	Piaggio spare parts (POP)
6D000277	WIRING HARNESS, MAIN APE CITY PET BSVI	Piaggio spare parts (POP)
6D000354	WIRING HARNESS, TAIL LAMP	Piaggio spare parts (POP)
6D000810	WIRING HARNESS, TAIL LAMP	Piaggio spare parts (POP)
6D000809	WIRING HARNESS,IP	Piaggio spare parts (POP)
6D000744	WIRING HARNESS,IP	Piaggio spare parts (POP)
6D000998	WIRING HARNESS,IP,MONO-FUEL	Piaggio spare parts (POP)
6D000925	WIRING HARNESS,JUNCTION BOX	Piaggio spare parts (POP)
6D000821	WIRING HARNESS,MAIN	Piaggio spare parts (POP)
6D000923	WIRING HARNESS,MAIN	Piaggio spare parts (POP)
6D000807	WIRING HARNESS,MAIN	Piaggio spare parts (POP)
6D001169	WIRING HARNESS,MAIN	Piaggio spare parts (POP)
6D000999	WIRING HARNESS,MAIN,MONO-FUEL	Piaggio spare parts (POP)
6D001000	WIRING HARNESS,MAIN,MONO-FUEL	Piaggio spare parts (POP)
6D000806	WIRING HARNESS,TAIL LAMP	Piaggio spare parts (POP)
6D000508	WIRING HARNESS, MAIN (PREMIER SEAL)	Piaggio spare parts (POP)
267	WOODRUFF KEY	Piaggio spare parts (POP)
E87009117	WOODRUFF KEY	Piaggio spare parts (POP)
B042034	WOODRUFF KEY	Piaggio spare parts (POP)
L2280157	WOODRUFF KEY 3X3,7	Piaggio spare parts (POP)
L2280158	WOODRUFF KEY 5X6,5	Piaggio spare parts (POP)
E87009116	WOODRUFF KEY GEAR	Piaggio spare parts (POP)
604553	WORM CLAMP (25-45) : 45 A	Piaggio spare parts (POP)
604552	WORM CLAMP (32-52) : 2A	Piaggio spare parts (POP)
L3630187	WORM DRIVE CLIP 16-22 KL	Piaggio spare parts (POP)
L3630147	WORM DRIVE CLIP 16-22 KL	Piaggio spare parts (POP)
ESP650DNB015	WORM DRIVE HOSE CLIP	Piaggio spare parts (POP)
632668	WORM TYPE HOSE CLIP SIZE 22	Piaggio spare parts (POP)

L11600678	X CIRCLIP	Piaggio spare parts (POP)
B042529ED	XTRA 501 LD TRAY SIDE PANEL DTL-CED	Piaggio spare parts (POP)
B078873	XTRA LD STICKER (SIDE PANEL)	Piaggio spare parts (POP)
660299CED	XTRA LD TRAY SIDE PANEL - CED	Piaggio spare parts (POP)
6B002641	XTRA LDX STICKER (SIDE PANEL)	Piaggio spare parts (POP)
B078870	XTRA LDX STICKER (SIDE PANEL)	Piaggio spare parts (POP)
B078917	XTRA STICKER (SIDE PANEL)	Piaggio spare parts (POP)
B078927	XTRA X STICKER (SIDE PANEL)	Piaggio spare parts (POP)
661262	YELLOW REFLECTOR	Piaggio spare parts (POP)
1A009589	YOKE ASSLY	Piaggio spare parts (POP)
638733	Yuasa YTX14-BS	Piaggio spare parts (POP)
B073024	ZERO DEGREE LPG CYLINDER	Piaggio spare parts (POP)
A01G120012	Φ9.49 SAE QUICK DISCONNECT FITTING I/T	Piaggio spare parts (POP)
A01G120011	Φ9.89 SAE QUICK DISCONNECT FITTING O/T	Piaggio spare parts (POP)